

Wokic Non-Stick Baking Pan

User Manual

Thank you for choosing the Wokic Non-Stick Baking Pan!
To ensure optimal use and longevity, please read this manual carefully.

Product Features

Premium non-stick coating for easy food release and effortless cleaning.

Even heat distribution for consistent cooking results.

Compatible with ovens, microwaves, and similar appliances.

Usage Instructions

First Use:

Wash the pan with warm water and mild soap. Dry thoroughly.

Apply a thin layer of cooking oil to the surface.

Preheat oven to 180° C (350° F), bake the pan for 10 minutes, then let it cool completely before rinsing.

Daily Use:

No preheating required.

Avoid sharp utensils (e.g., metal spatulas, knives). Use silicone, wooden, or nylon tools.

Allow the pan to cool before cleaning.

Cleaning & Maintenance

Hand Wash Recommended:

Clean with warm water, a soft sponge, and mild detergent.

Dishwasher Safe (if needed):

Place on the top rack and use a gentle cycle.

Avoid:

Abrasive cleaners, steel wool, or scouring pads.

Storage:

Dry completely and store in a cool, dry place.

Important Notes

Never leave the pan empty in a heated oven.

Do not expose a hot pan to cold water.

Not suitable for stovetop or open-flame use.

Discontinue use if the coating peels or cracks.

Tips

The non-stick coating is food-safe and PFOA-free.

Adjust cooking time/temperature as needed.

For inquiries, contact [Brand Name] Customer Service:
Email: [353528099@qq.com]

Happy Baking!

Wokic