





Illustration of Installation

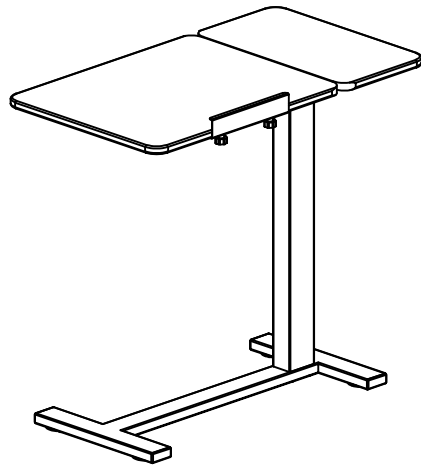








Caution: (Installed) in the parts table and hardware table means that it has been installed in the finished product, and is not in the hardware bag.



List of Parts

No.	Name	Graph	Size	Amt
1	Panel		700*400*75mm	1
2	Lift column		648*100*60mm	1
3	Base		614*311*20mm	1

List of Hardware

No.	Name	Graph	Size	Amt
A	Flower shaped handle		M6*10MM	2
B	Metal stopper		200*38*30mm	1
C	Hexagon socket head screw		M6*15mm	4
D	Hexagon socket head screw		M6*35mm	4
E	Hexagon wrench (installed)		M4*57MM	1
F	Metal frame (installed)		484*152*58MM	1
G	Gas spring (installed)			1
H	Riser column (installed)			1
I	Hidden casters		Ø51*26mm	4

This product has passed the wood inspection and paint inspection in full compliance with the national quality inspection standards. After passing the factory, it will be released from the factory and sold after confirming that the packaging is intact. For better service, please feel free to give us your opinions on after-sales service.


Name	Wood Furniture
Qua.	Pass
Grade	Class 1

Required Workers



Inspector


Step 1

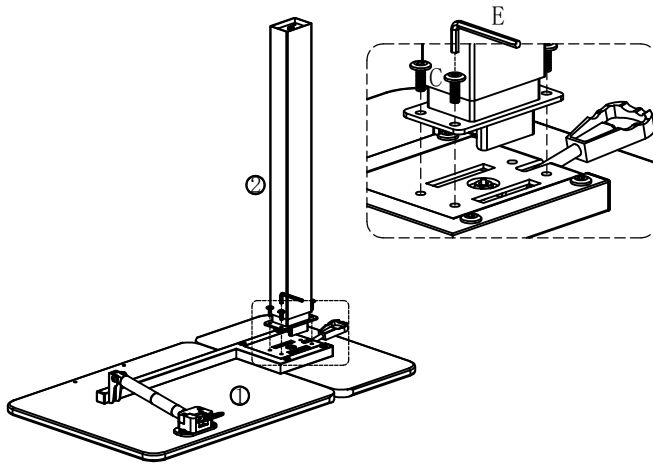

Caution: After unpacking, check the correct number of accessories against the instructions.


Assemble part 2 and part 1 using hardware C/E as shown.

Step 2

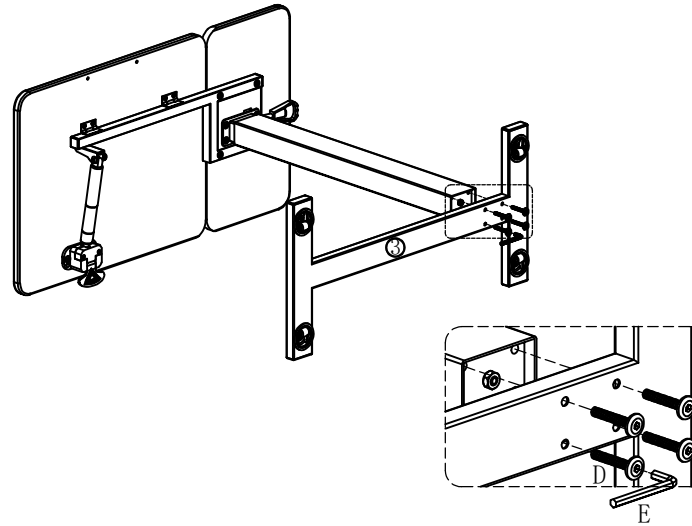


Assemble the components from step 1 with part 3 using hardware D/E.

Step 3

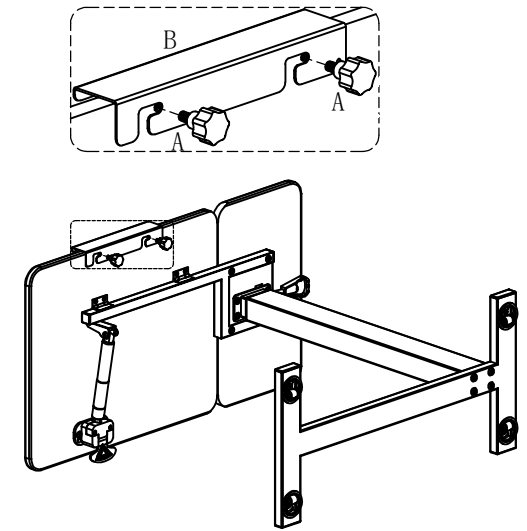

Place part B in the designated position, align part A with the hole in the panel of part 1, and tighten in a clockwise direction.

Step 4

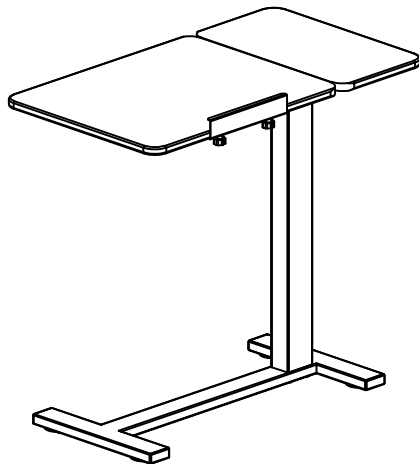

Assembly complete.

Step 5

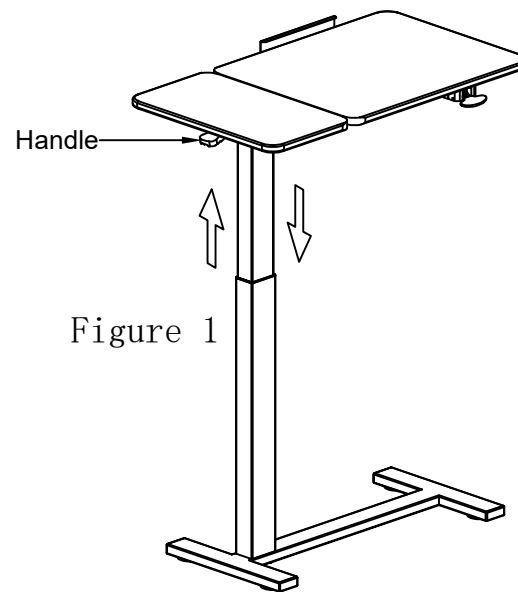


Figure 1

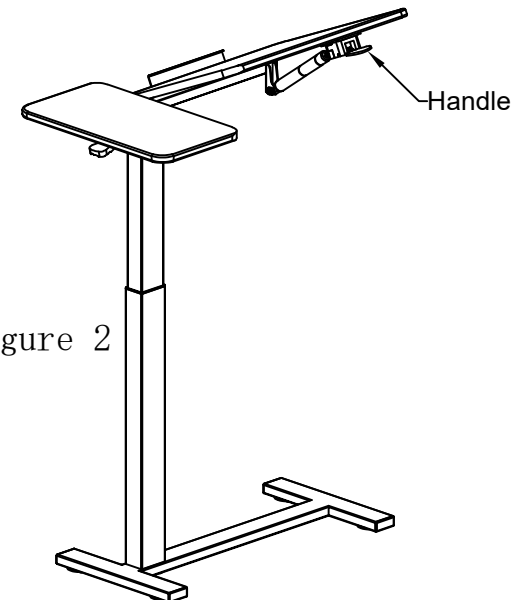


Figure 2

Lift the handle panel upwards to automatically raise the panel. Press the panel to lower it. Release the handle to set the panel height (Figure 1). Turn the handle to automatically rotate the panel. Press the panel to reset it to a horizontal position. Release the handle to set the panel angle (Figure 2).