

Artificial Christmas Tree

# INSTRUCTION MANUAL

Version 2.0

**Dear Customer:**

Thanks for choosing our trees! Please take care of your new tree! First, there are a few tips that you should follow to keep your tree long-lasting and more beautiful!

**Dear Customer:**

Thank you for your reference!

Wish you a happier family and a happier life with our Christmas tree!

---



Please remove the circular protector caps on the end of each of the poles before assembling.

1

Tabletop tree



2

Tabletop tree

**NOTICE**

Please retain these instructions for future reference.

- Do not place this tree in a wet location.
- Do not use or store this item in the proximity of open flame, flammable/combustible chemicals, or other strong heat sources.
- **BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN**
- Expand battery life by removing the batteries when not in use
- Store spare batteries securely. Dispose of used batteries immediately.
- Do not use old batteries, and mix with new batteries.
- The batteries must be recycled or disposed of in accordance with applicable regulations
- Do not touch broken or leaking batteries

UNLIT




PRE-LIT (WITH PLUG)



PRE-LIT (WITH BATTERY BOX)



Pre-lit artificial tree (1 PC)

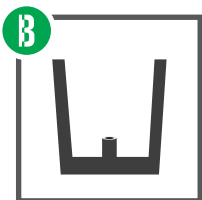

BASE (1 PC)



MANUAL


**NOTE:** Wires may come wrapped around frame pieces. Locate and unwrap wires before assembly.

**PRODUCT ASSEMBLY**


1. Assemble the Christmas tree.
2. Spread out the branches of the tree and rearrange them to your preference.

Note: Make sure sections are arranged in the correct order.


**Step 1** Insert 3 or 4 AA batteries (not included). Make sure batteries are arranged in the correct polarity (see diagram below).

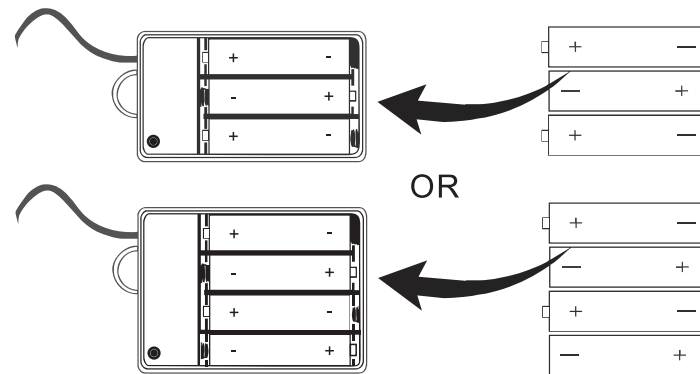

**Step 2** Securely close battery compartment cover.

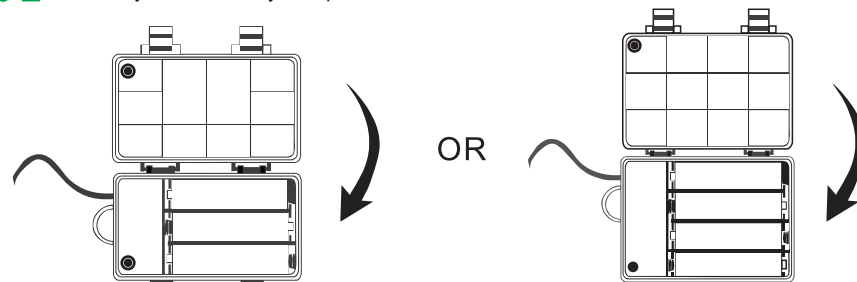

**Step 3** Press once for Timer (6 hours on, 18 hours off)  
Press twice to turn On permanently  
Press three times to turn Off permanently

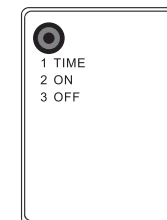

**WARNING**

- **BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN**
- Expand battery life by removing the batteries when not in use
- Store spare batteries securely. Dispose of used batteries immediately.
- Do not use old batteries, and mix with new batteries.
- The batteries must be recycled or disposed of in accordance with applicable regulations
- Do not touch broken or leaking batteries



1

# Christmas tree




Please remove the circular protector caps on the end of each of the poles before assembling.

## NOTICE


Please retain these instructions for future reference.

- Firmly secure all screws before use.
- Do not place this tree in a wet location.
- This seasonal product is not intended for permanent installation or use.
- Do not use or store this item in the proximity of open flame, flammable/combustible chemicals, or other strong heat sources.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

## 1. HARDWARE

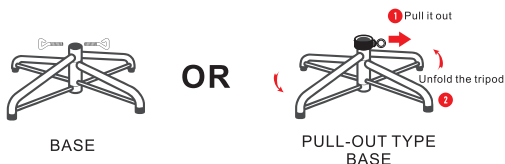

## 2. PARTS

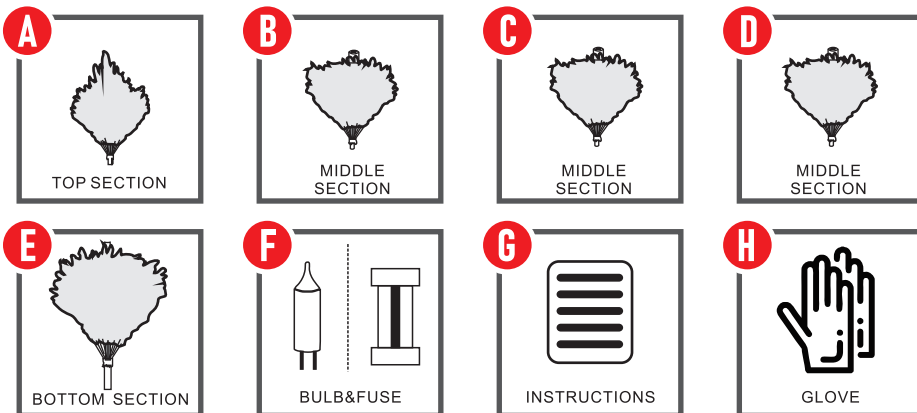

### lamp bulb

If some lights are off, please follow: **Step 1**



Release the latch located on the side of the bulb. Carefully pull the bulb out of the socket. Insert a new bulb and lock the latch.

2

# Christmas tree



Please remove the circular protector caps on the end of each of the poles before assembling.

## Assemble the Christmas tree.

**Note: Make sure sections are arranged in the correct order.**

A Christmas tree without lights does not include any electrical components.

The ones with lights need to be compatible with a connector to make the tree sparkle and shine!

The trees are differed by A, AB, ABC, ABCD or ABCDE sections.


 
The following is an diagram for reference only!

The final product is subject to the actual one you receive!

Two kinds power supply:




Two kinds connectors:

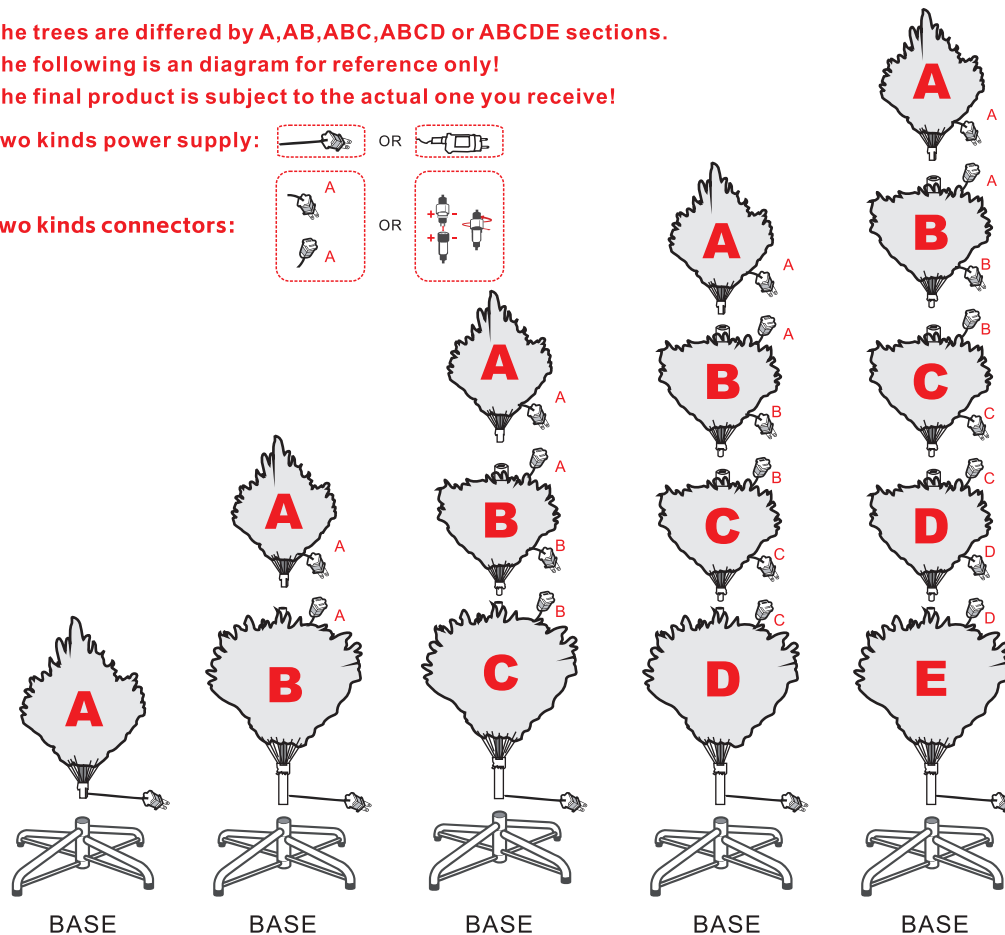

## Step 2

### fuse

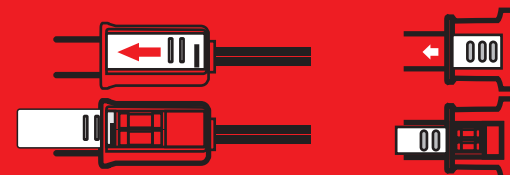

Push open the plug cover plate



3


# Christmas tree

HELP CENTER




Spread out the branches of the tree and rearrange them to your preference.

1

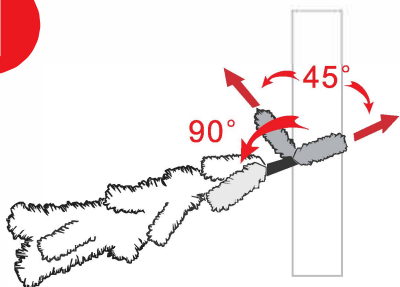


Make the innermost tips to be 90° to the branch and between-tips 45°

2

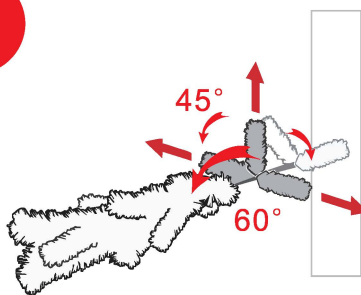


Make the next layer tips to be 60° to the branch and between-tips 45°

3

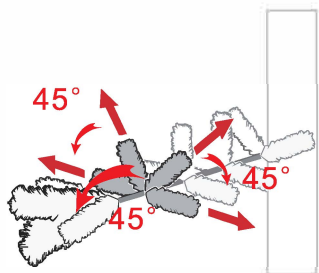

Make the next layer tips to be 45° to the branch and between-tips 45°

4

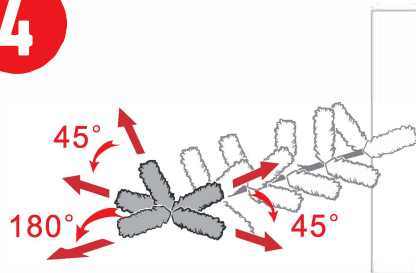

Make the outermost tips to be 5 direction as picture, the top one to be 180° to the branch.



# SUPPORT

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 30 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included.

All returns must be shipped back to our storehouse at the customer's expense. Please email to us.

Boxes for return shipping will not be provided by us, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged before its return.

**NOTE:** Wires may come wrapped around frame pieces. Locate and unwrap wires before assembly.



## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.