


Assembly Instructions

READ THIS MANUAL

Do not use this product until you read and understand the instructions in this manual.

KEEP THIS MANUAL FOR FUTURE REFERENCE.

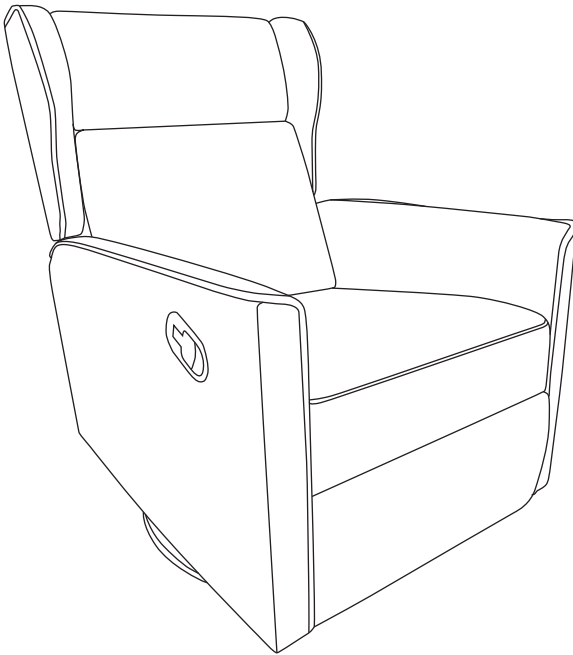

This manual is intended for installation and use. The pattern should be subject to the product you receive.

WARNING

ADULT ASSEMBLY REQUIRED

CHOKING HAZARD

- This product includes small parts, sharp points and sharp edges in its unassembled state.
- Keep unassembled parts away from children under 3 years of age, and animals.

SAFETY WARNINGS


- Follow the information on the warnings appearing on this manual.
- Do not allow children under 3 years of age to use the product.
- Do not use substitute parts. Contact the manufacturer for replacement parts.

USE, MAINTENANCE & ASSEMBLY

- Periodically check and ensure that the components are in their proper position, free from damage, and that all connectors are tight.
- Use on level surfaces only. Assemble on a soft level surface to avoid damage to unit or floor.
- Do not use this item if any components are missing or damaged.
- Only clean using damp cloth and mild detergent, do not use bleach or abrasive cleaners.


PARTS AND ACCESSORIES

◆ Please check and ensure all the things are in the package. Please contact us if something is not included. We will reply within 24 hours and try our best to solve it.

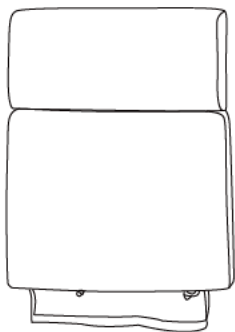


Ax1

Backrest

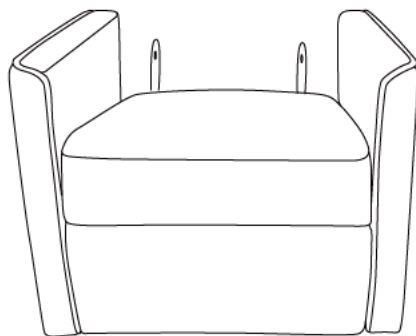

Bx1

Seat

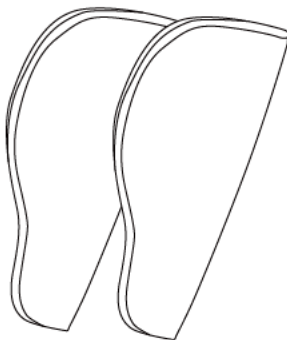

Cx1set


Backrest Ear Part

ASSEMBLY INSTRUCTIONS


CAUTION: At least two adults are required to safely assemble this recliner chair.




Other lifting attempts may risk back safety due to large and heavy part(s).

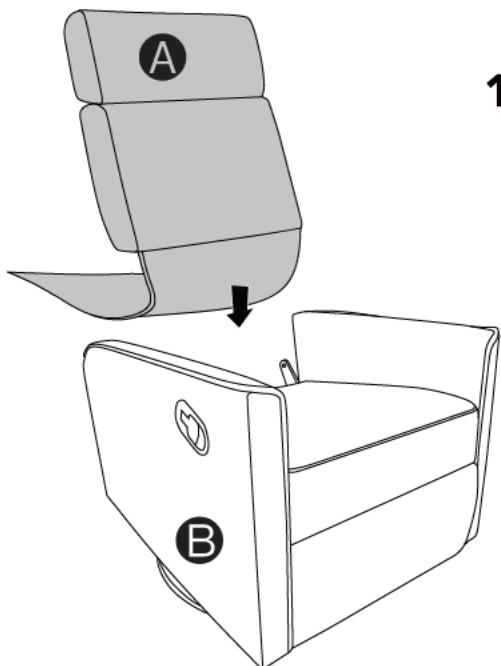




- 1.** Insert the metal bolts of the backrest to the seat as shown. Ensure that they are correctly installed in place.

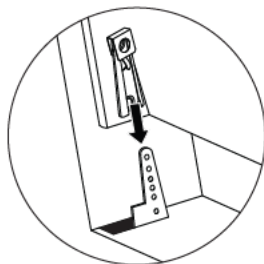

- 2.** Insert the metal bolts of the backrest ear parts to the backrest as shown. Ensure that they are correctly installed in place.

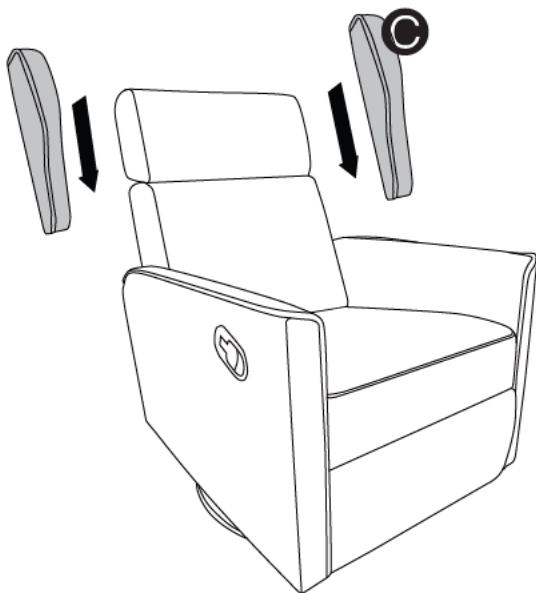


3. Cover the back fabric.

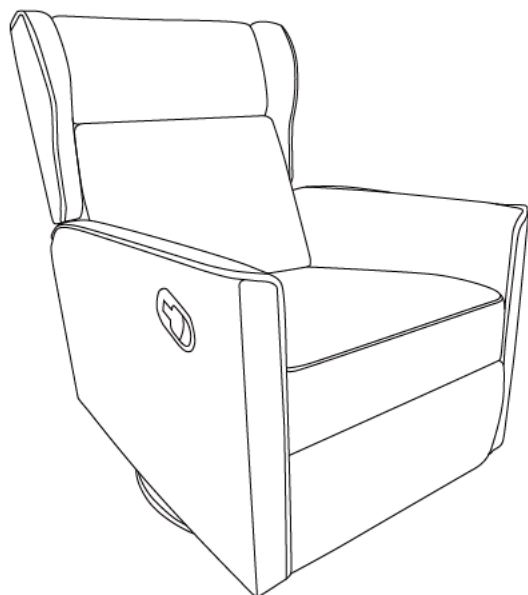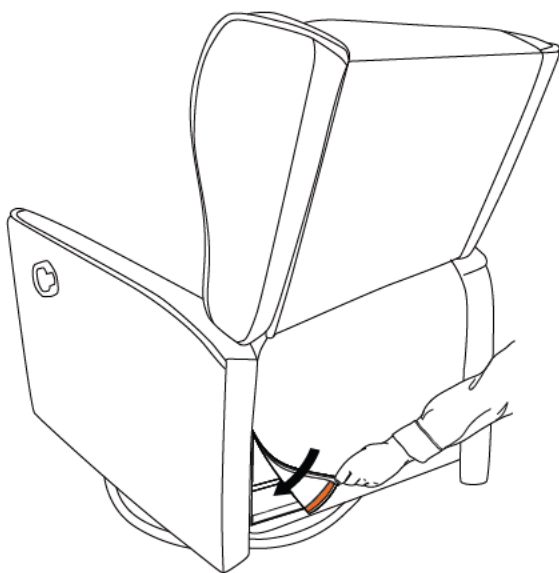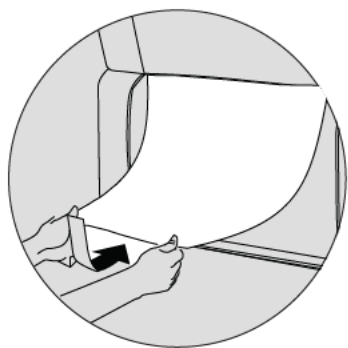

4. Assembly is complete.



RECLINE & FOOTREST OPERATING

A. How to recline ?

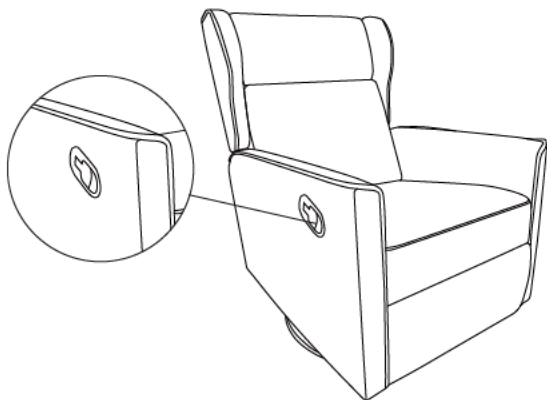


1. Pull the handle to lift the footrest separately.

2. Put some pressure onto the backrest to recline back.

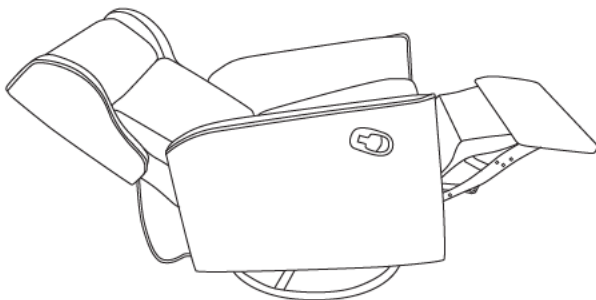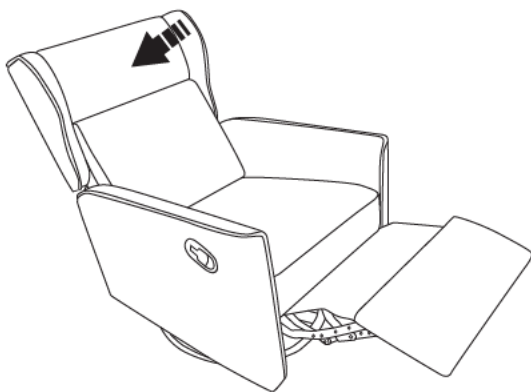



3. Have a relax.

B. How to get footrest pushed down?

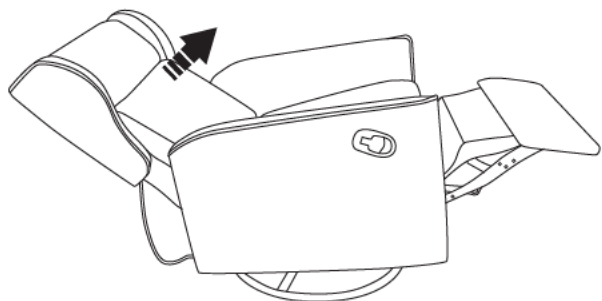

1. The backrest will return to the upright position by moving forward.

2. Accompany the footrest to the initial position by putting pressure with your legs.


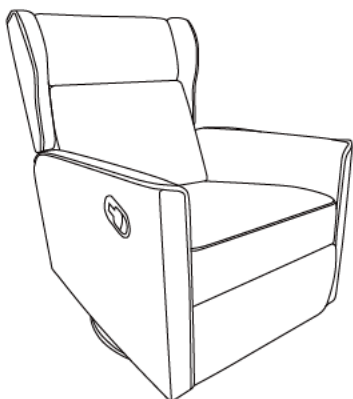
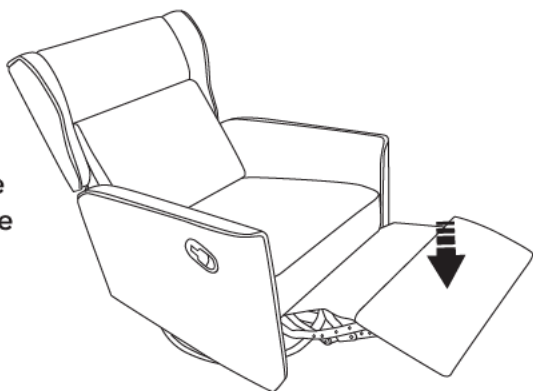


3. The recliner returns to the upright position.

USAGE


Leave
enough space
for reclining back

18inch

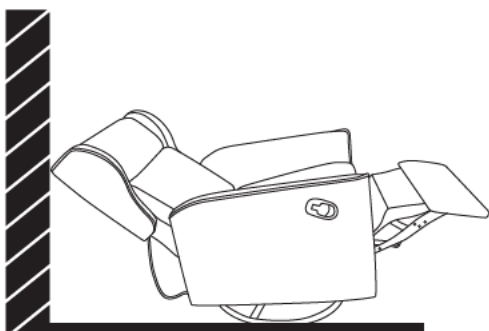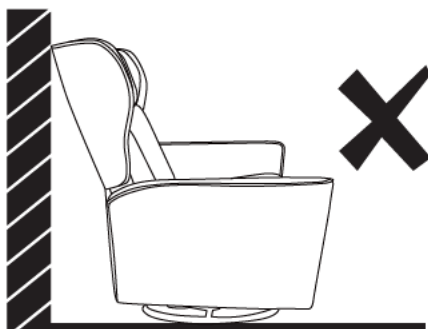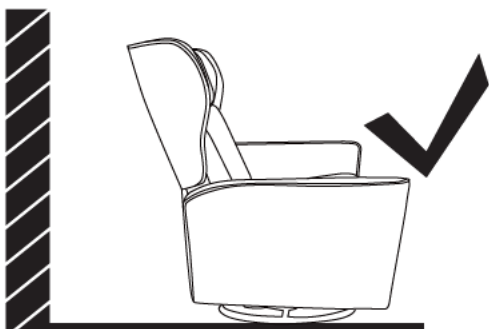

The recliner should be placed 18" away from the wall, and the reclining function can be used normally.


PROPER USAGE

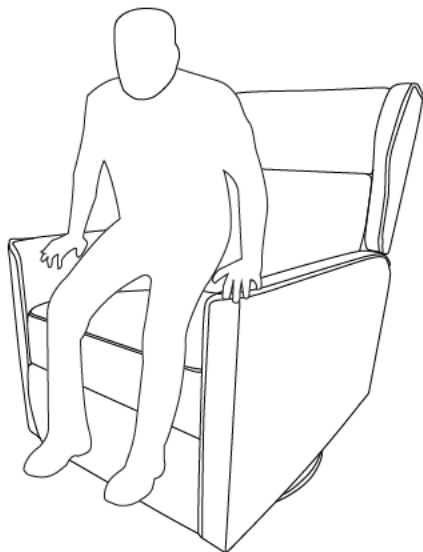

Steps to safely stand up from your Recliner Chair

1. Plant feet firmly on the ground.
2. Evenly distribute weight on both arms of the chair.
3. Slowly stand up from **closed** position.


As most parts of the chair can be moved, handle all parts with care when moving.

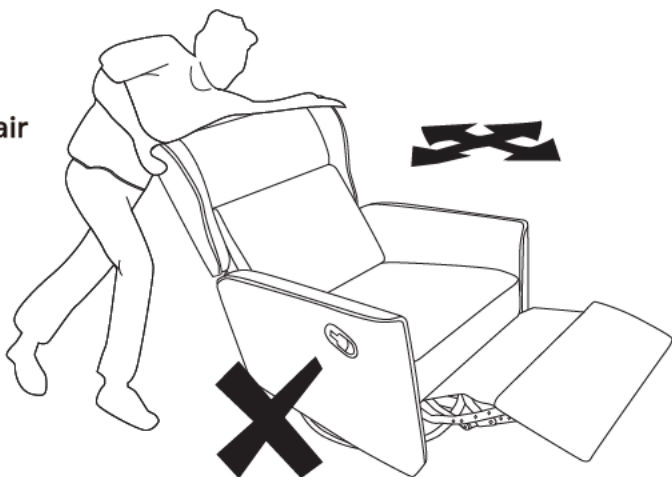


* Only move the recliner when it is in the 'initial position'. Never attempt to move the recliner when it is in any of the reclining position. Always use the armrests to move the recliner.

– DO NOT use the backrest or backrest ear parts to move the recliner.

The recliner with a gentle rocking motion moves back and forth horizontally and can swivel 360° (reclining angle can not be fixed).


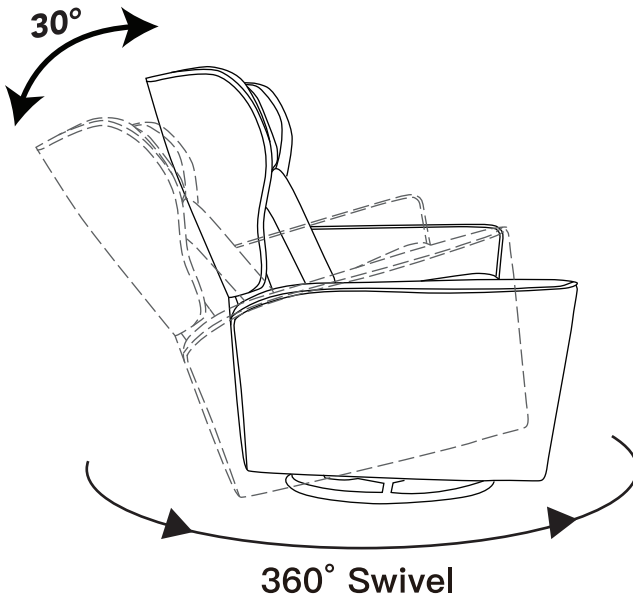


IMPROPER USAGE

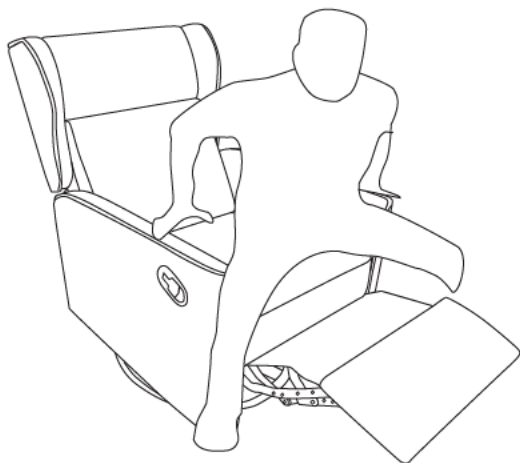

DO NOT stand up when the footrest is in the upright position.

DO NOT stand up from your recliner chair with uneven weight.

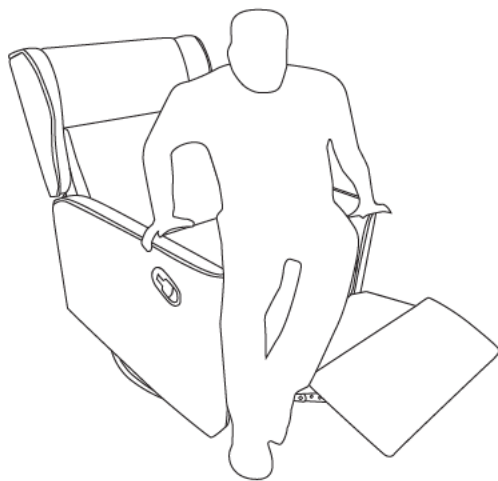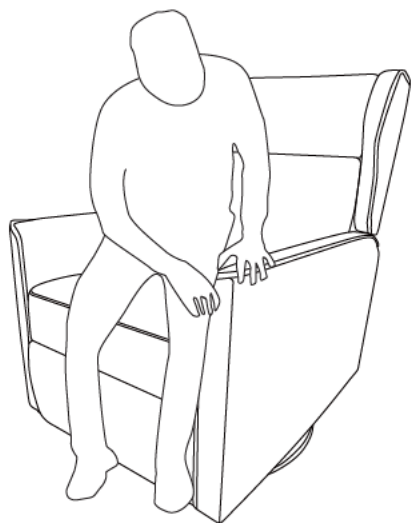

DO NOT stand up from your Recliner chair with only one arm.