 





ASSEMBLY INSTRUCTIONS

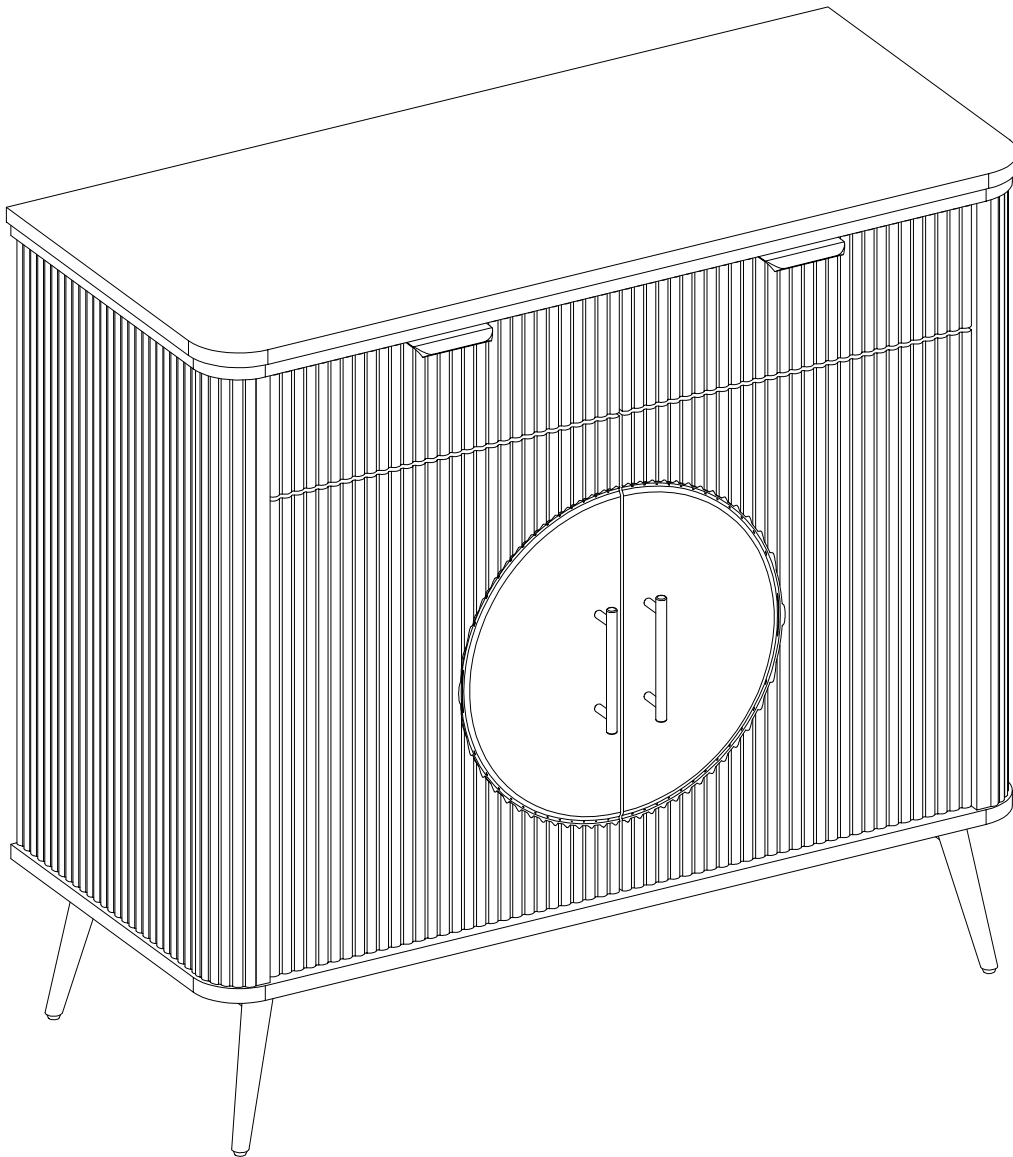

SAFETY TIPS: Static charge may cause dust on foam – clean with a dry or damp cloth. Small foam strands may be present – handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines.

Before You Start

   
1. Read through each step carefully and follow the proper order.
2. Separate and count all your parts and hardware.
3. Give yourself enough room for the assembly process.
4. Assemble this product on the empty carton or carpet to avoid scratching.
5. Two people are recommended for ease in the assembly of this product.
6. Keep all small parts of this product away from children. They may cause serious injury.
7. Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer.

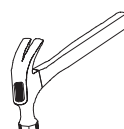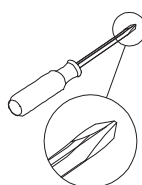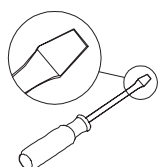

8. Note: Power tools should not be recommended to assemble this product. If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when the screw is tight. Failure to do so may result in stripping the screw.



HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

 1. Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure the Cam Bolt goes into the pre-drilled hole on the end of the panel for the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of the Cam Lock points towards the Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
4. Use the sticker to conceal the Cam.

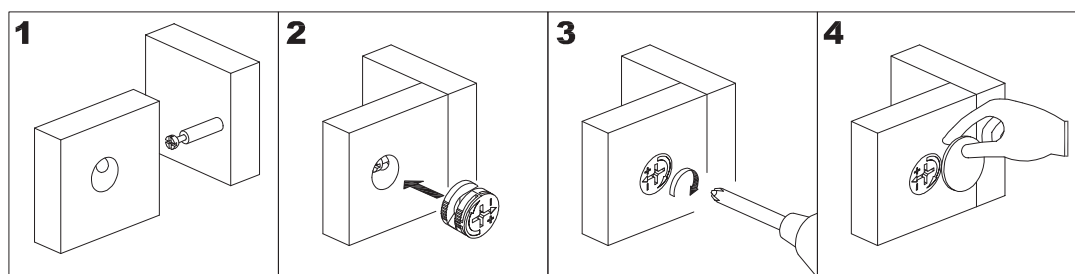


How do I get the two doors to align flat by adjusting the hinges?

  1

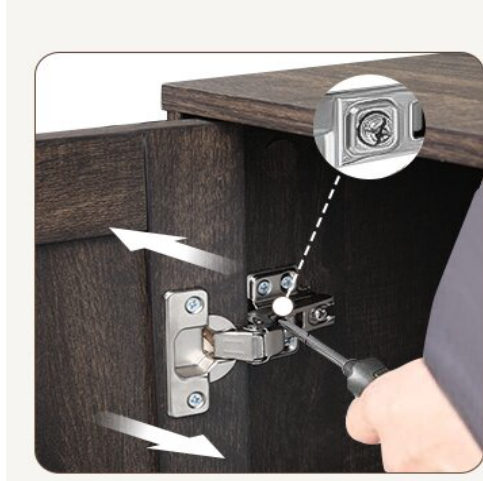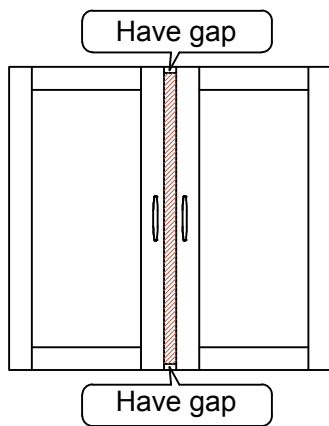

Turn the screw to the right can make the door approach inside.


 
2

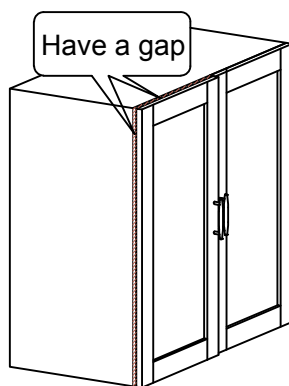

1. Rotate the screws to the left
2. Push the door to the cabinet
3. Rotate the screws to the right



Please take the following steps to adjust first.

  3

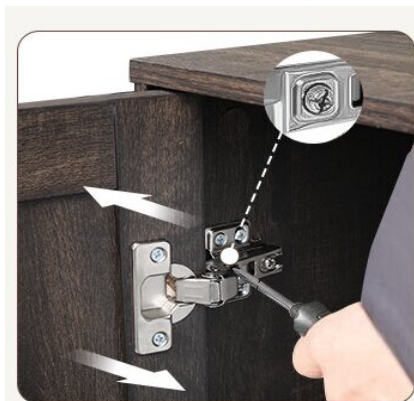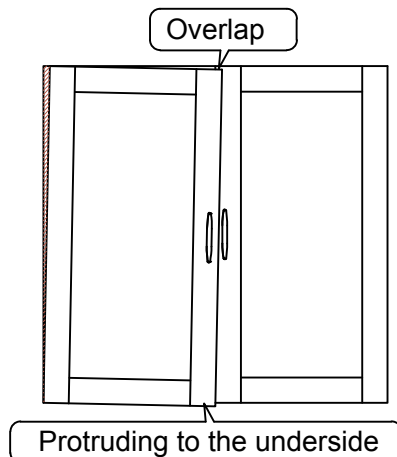


Turn the screw to the left can make the top of the door tilted outward.

  4






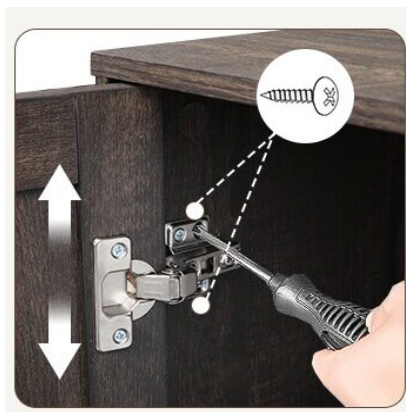
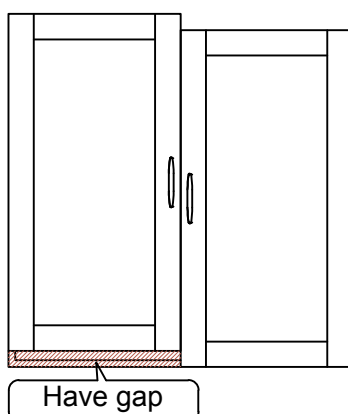


1. Turn the screw to the left
2. Lower the door's height so that 2 doors are of the same height
3. Turn the screw to the right

 
PARTS LIST

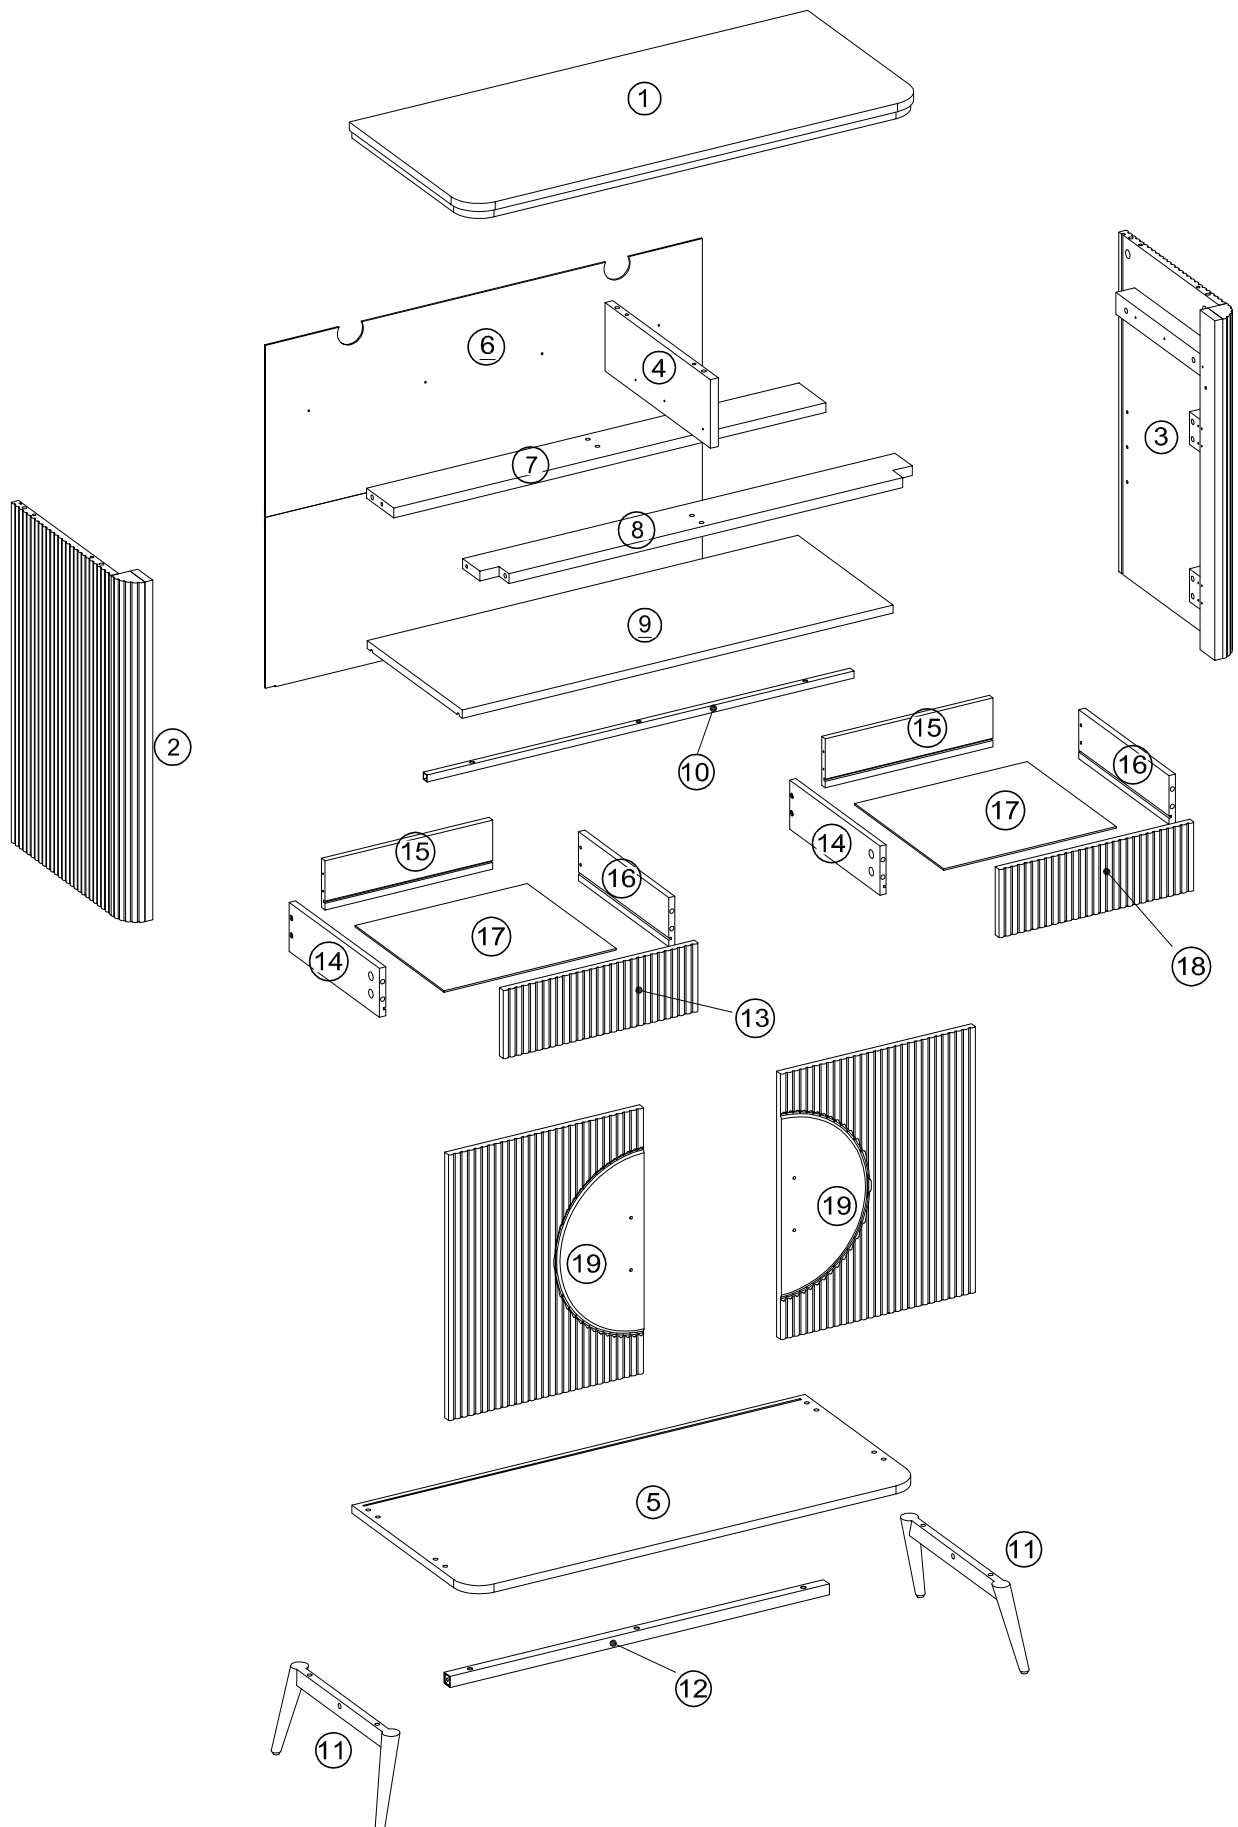


HARDWARE LIST

       A		Ø6x35mm	Cam bolt	18 pcs
B		Ø15x9mm	Cam lock	18 pcs
C		Ø30mm	Cam cover	18 pcs
D		Ø6x30mm	Wooden dowel	16 pcs
E			Pull	2 pcs
F		Ø3.5x12mm	Screw	28 pcs
G		Ø4x38mm	Screw	8 pcs
H		M 4	Hex key	1 pc
I			Glue tube	1 pc
J		Ø6x50mm	Screw	6 pcs
K		12"	Left cabinet member	2 pcs
L		12"	Right cabinet member	2 pcs
M		12"	Left drawer runner	2 pcs
N		12"	Right drawer runner	2 pcs
O		Ø6x22mm	Bolt	3 pcs
P		Ø6x40mm	Bolt	6 pcs
Q		Ø6x30mm	Bolt	3 pcs
R			Tipping restraint	2 set
S			Plastic wedge	8 pcs
T		Ø3x17mm	Flat-head screw	8 pcs
U		Ø3.5x12mm	Screw	4 pcs


 
HARDWARE LIST

V		Ø35mm	Europe Hinge	4 pcs
W		Ø3.5x14mm	Hinge Screw	24 pcs
X		Ø5x16mm	Shelf support	4 pcs
Y			Handle	2 pcs
Z		Ø4x22mm	Handle Bolt	4 pcs

 STEP 1



Ax18

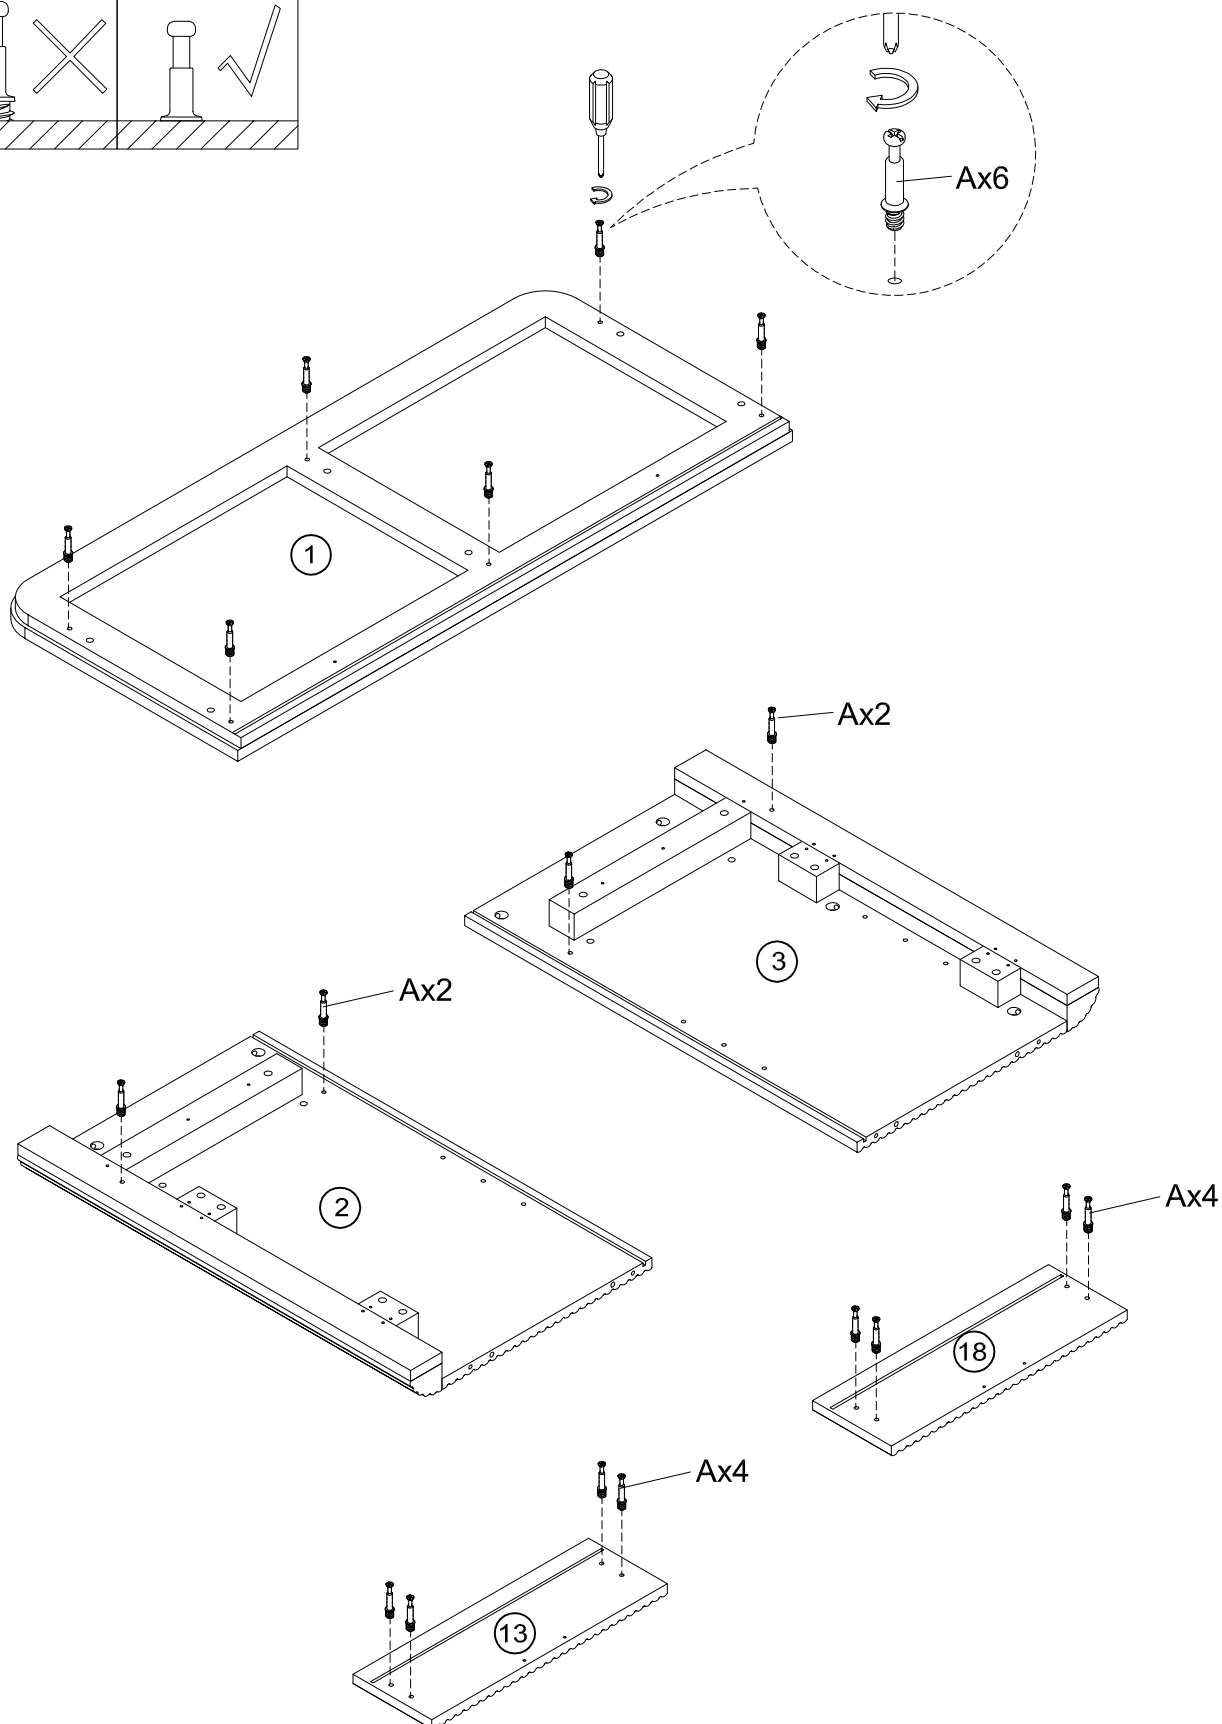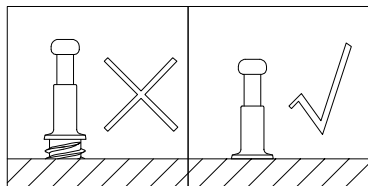  

STEP 2



Kx1




Lx1





Fx6

 Note the CL or CR stamped label on the track !

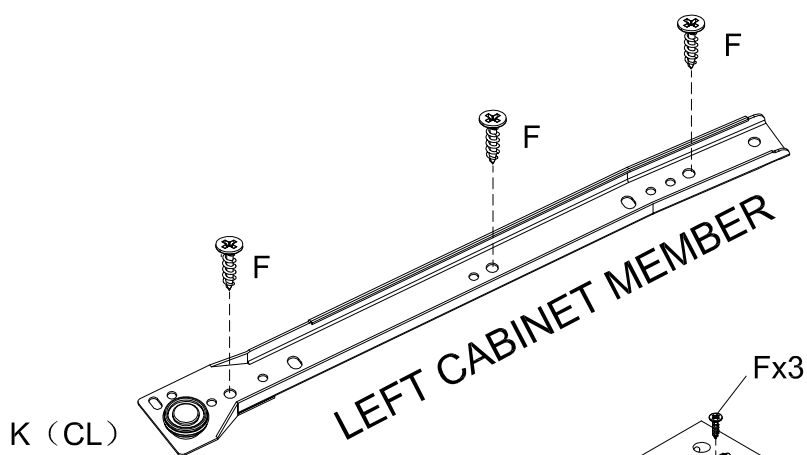

Note the hole direction.

  Finished edge

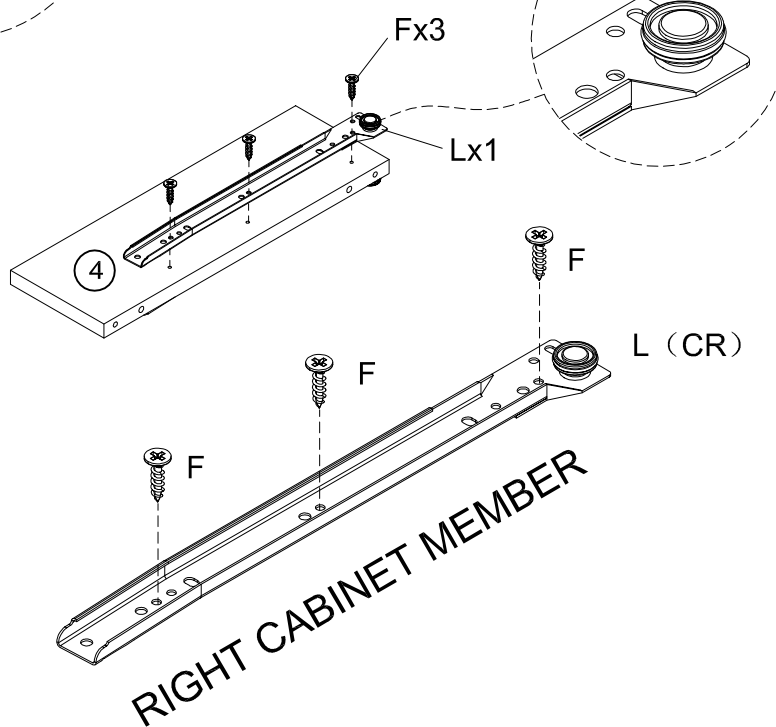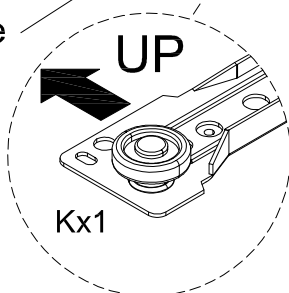

STEP 3




Kx1




Lx1




 
Fx6

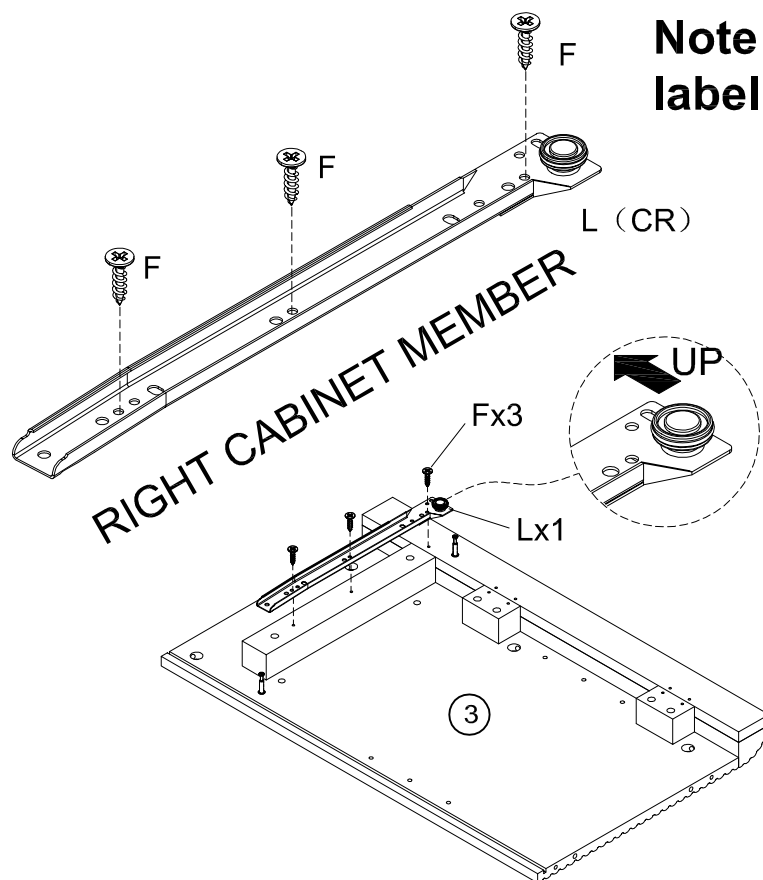

 
Note the CL or CR stamped label on the track !

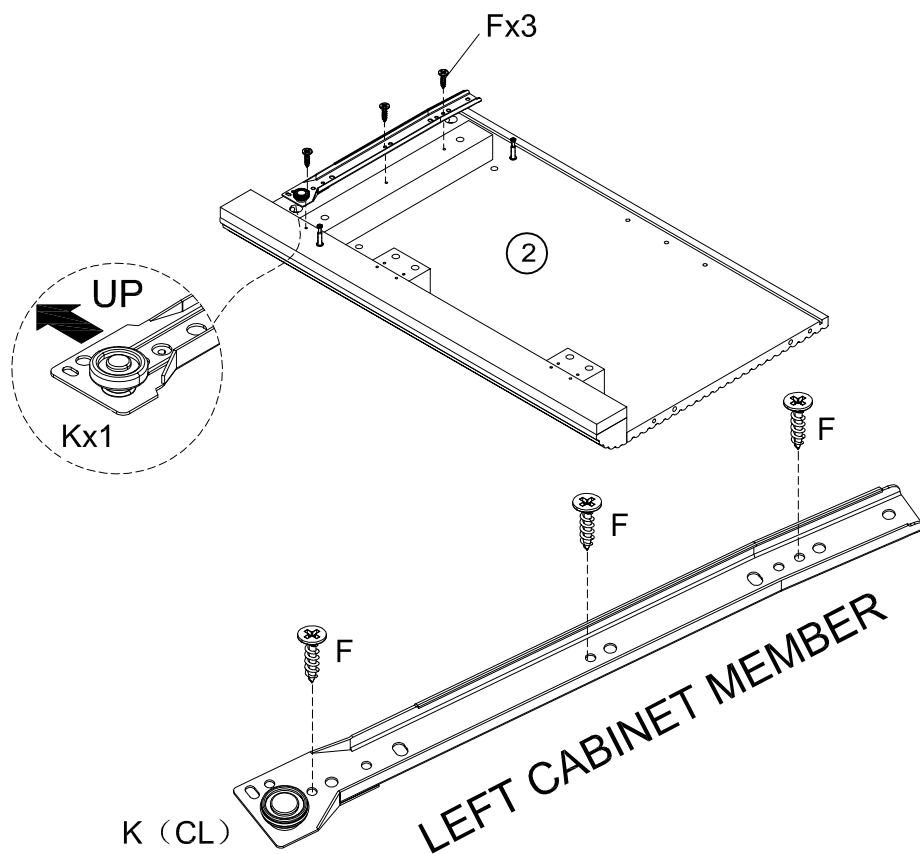

  STEP 4

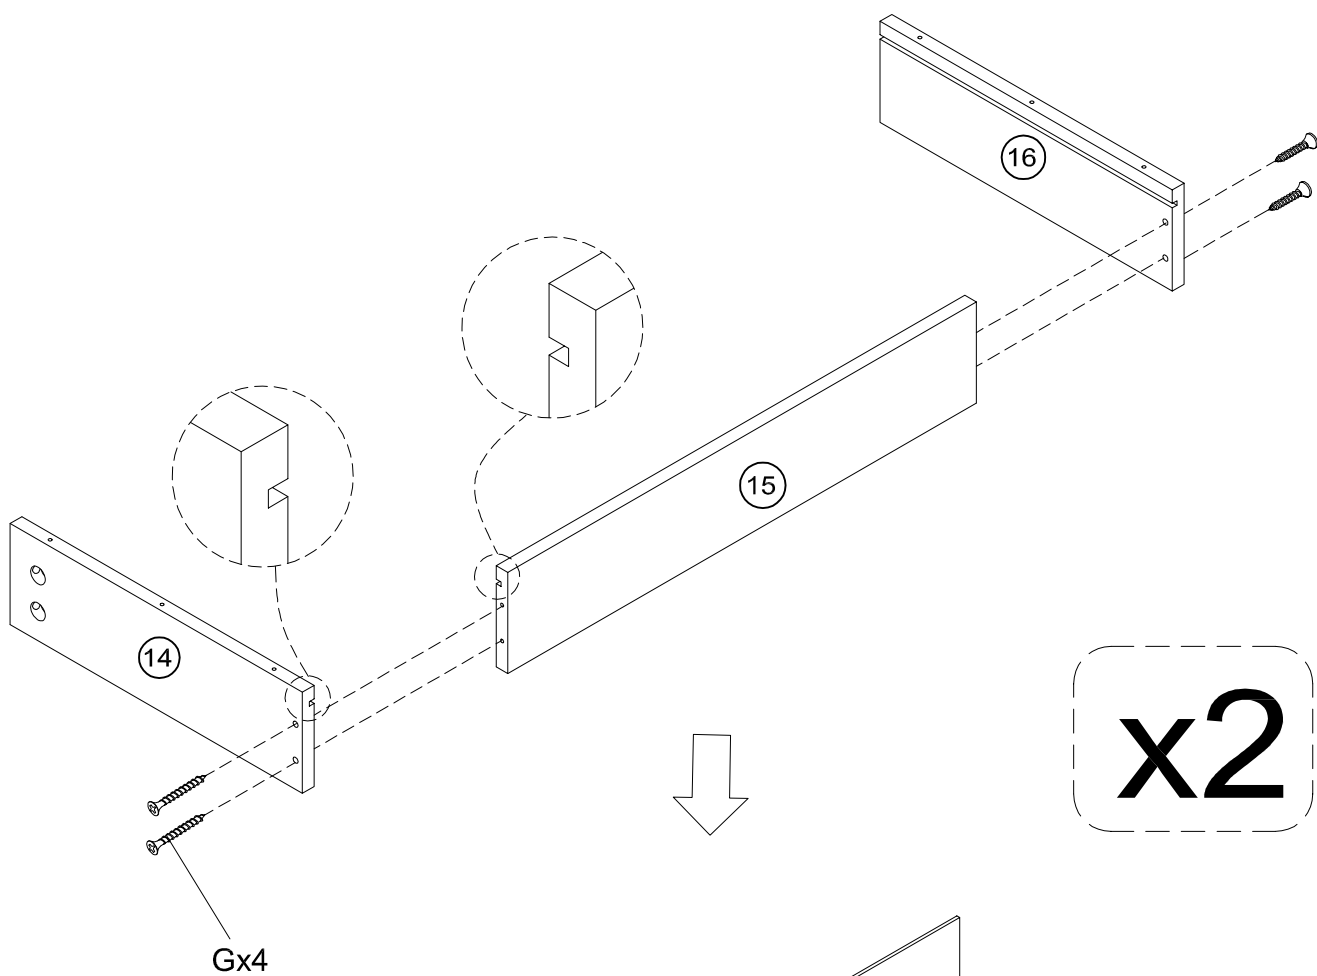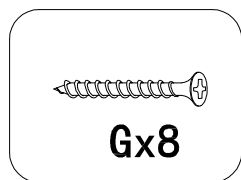

x2

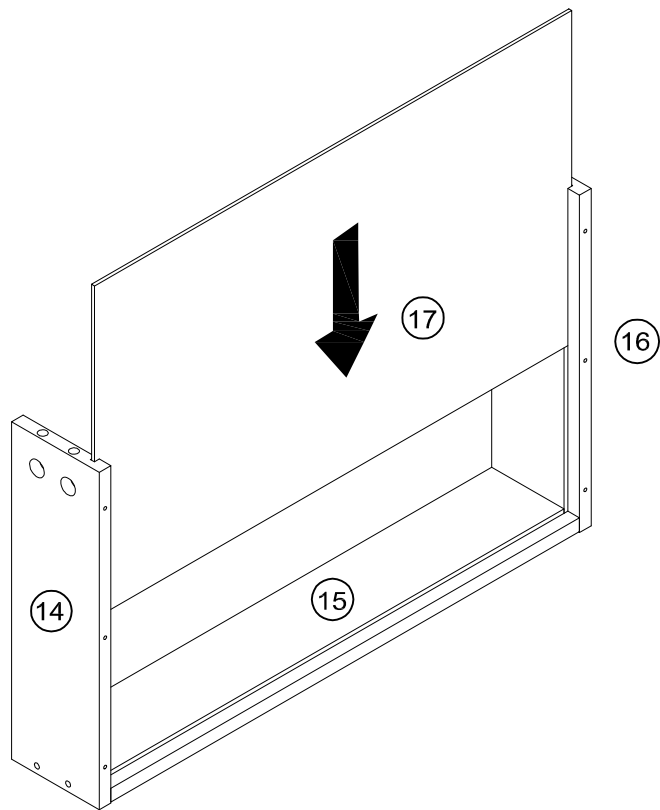 

STEP 5








Bx8

Ex2




Fx16

Mx2

       Nx2

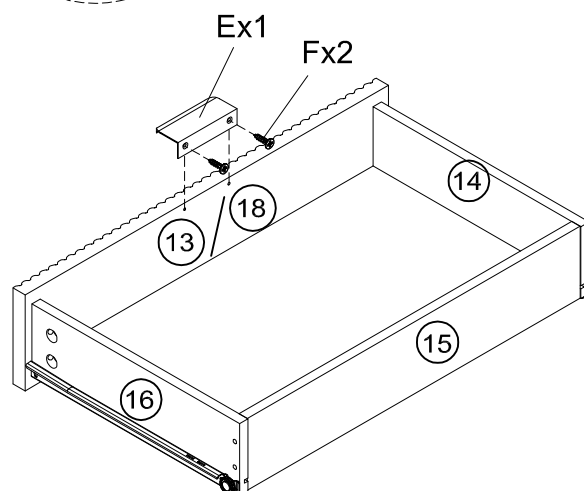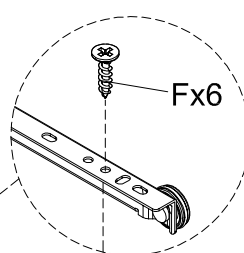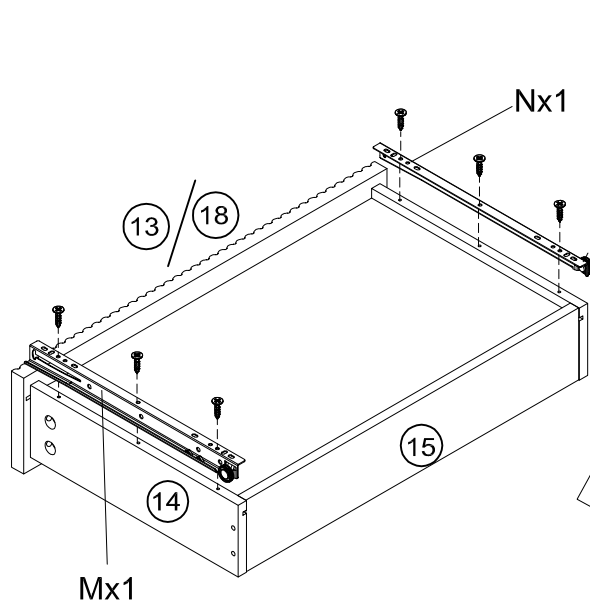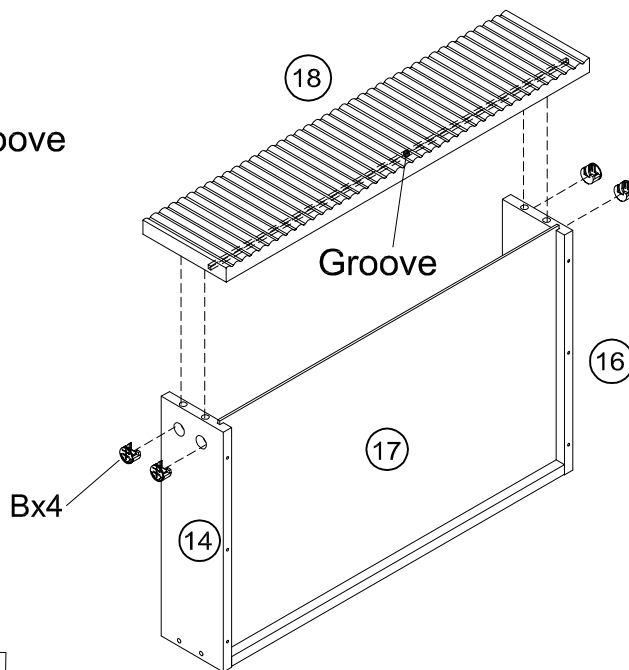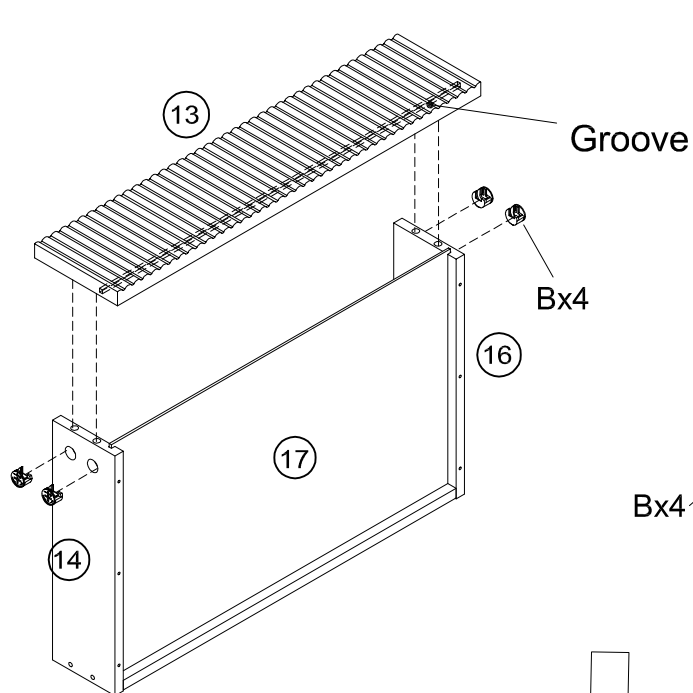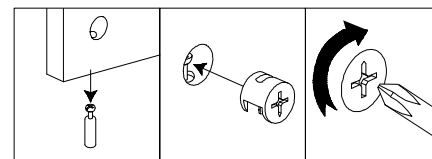

   
STEP 6

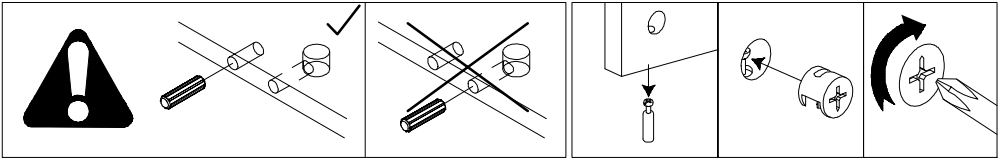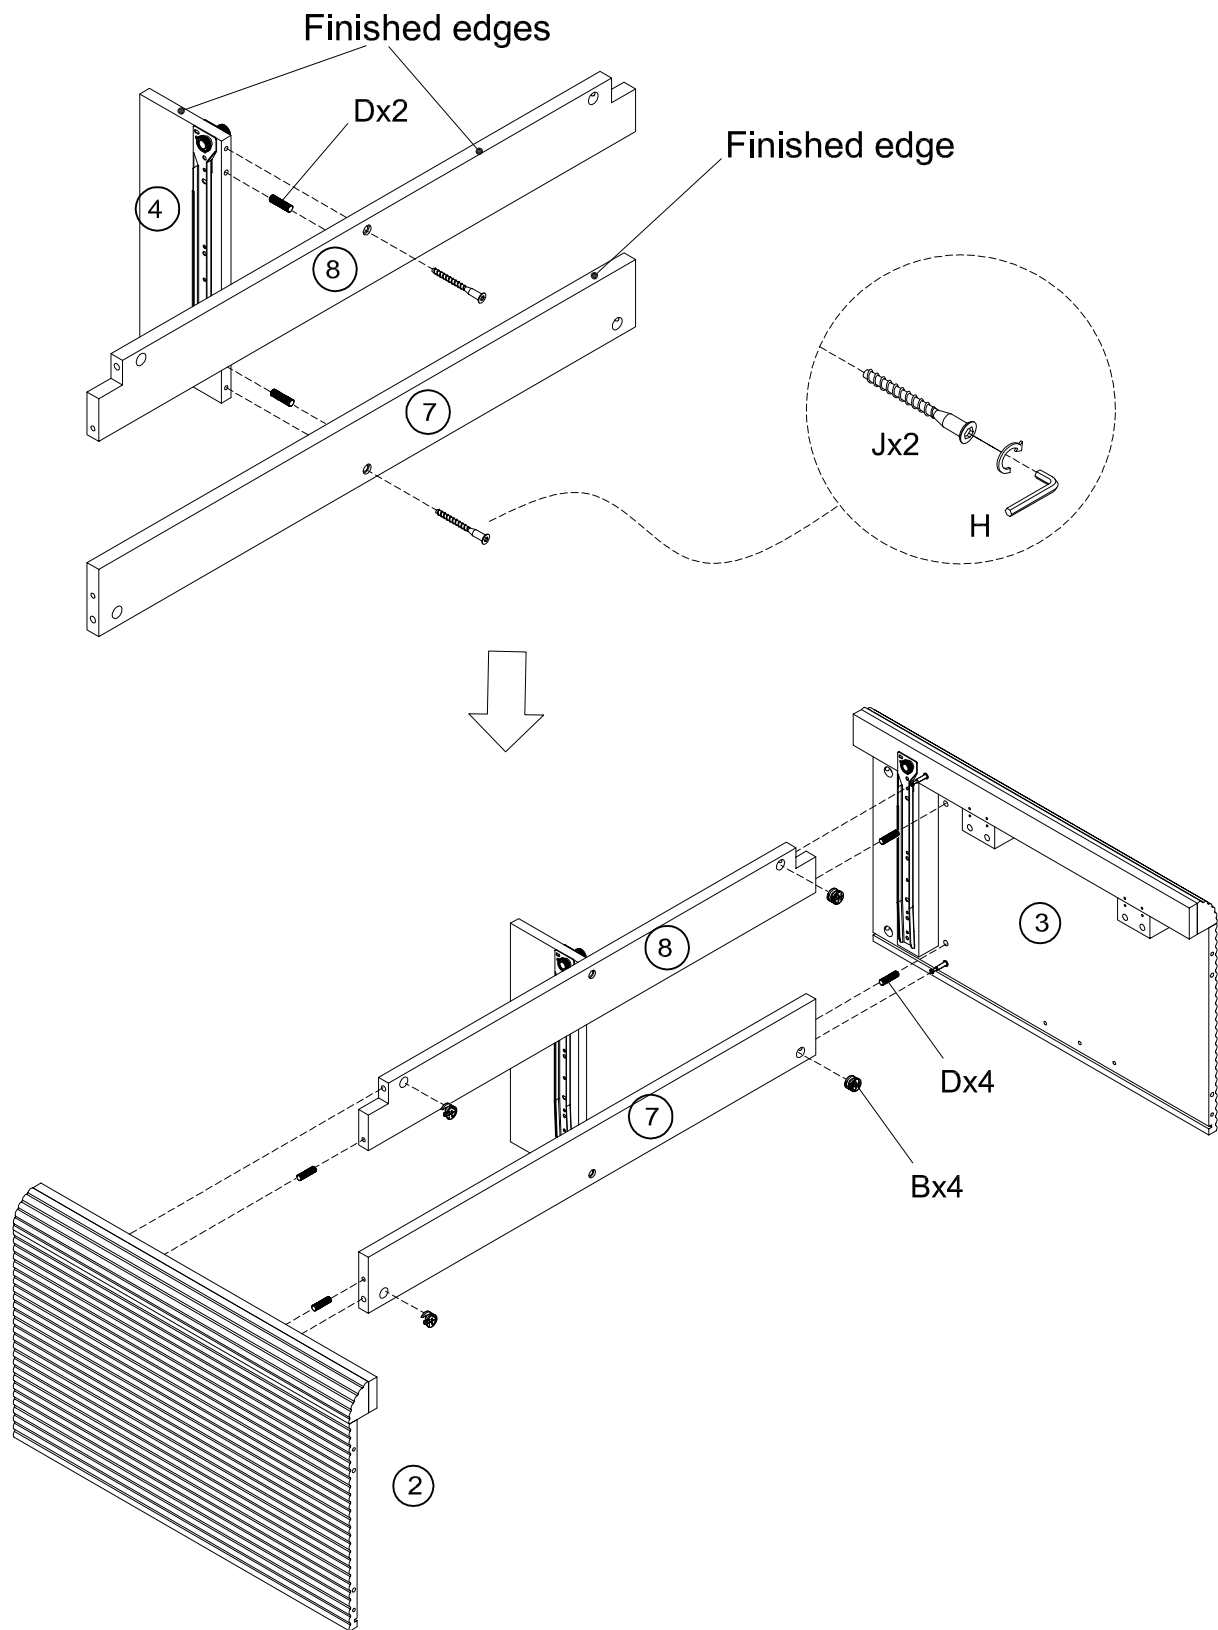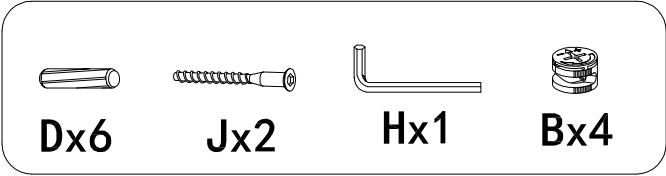


STEP 7



 Dx4



Jx4

 


Px2




Hx1

 The round corner should be upward.

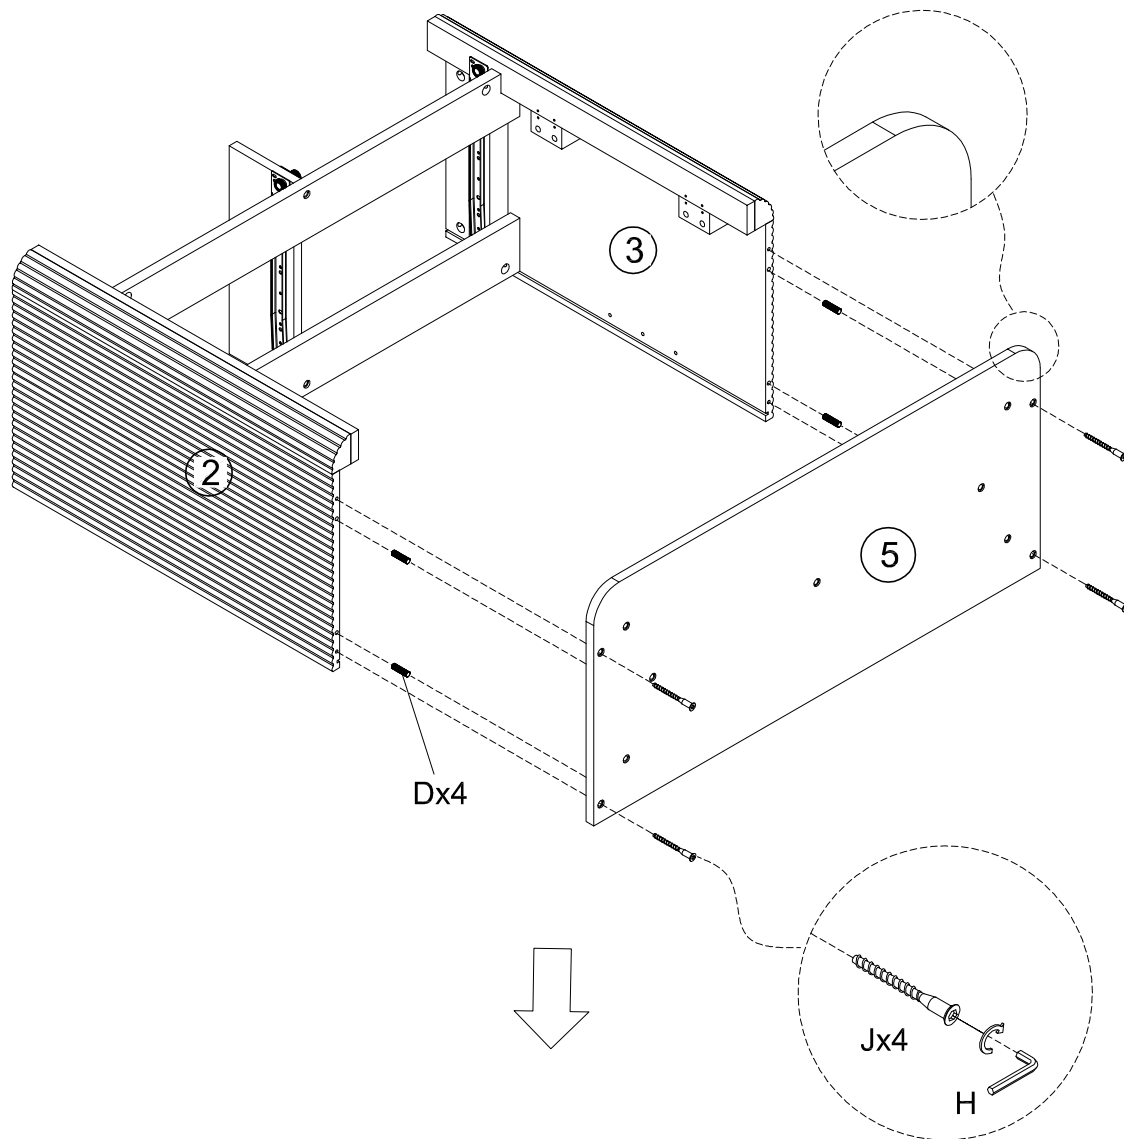

Noted: **DO NOT** Tighten those bolts to secure the assembly successfully in this step.

 The end of the metal leg splays outwards.

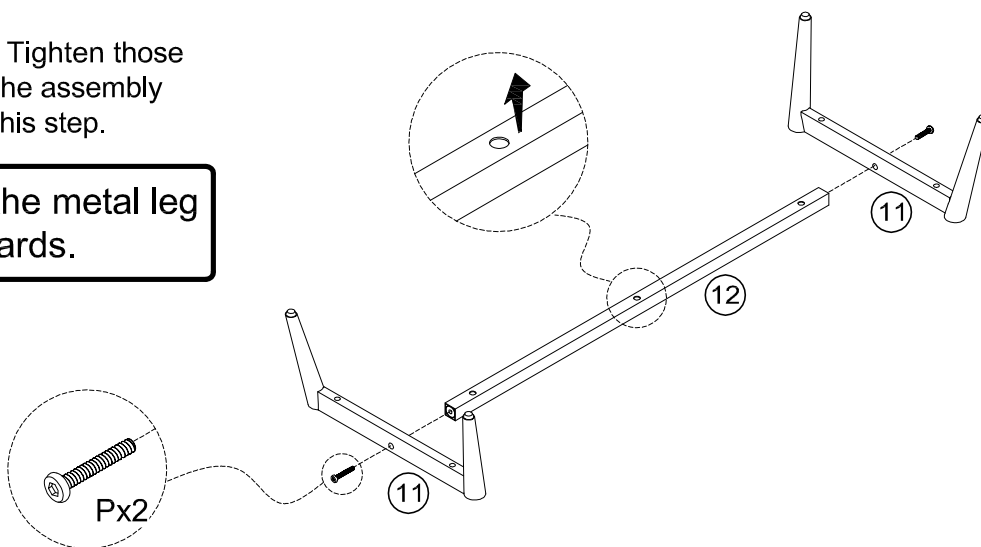



STEP 8

Qx3


Px4

Hx1

  An assistance is required with this step.

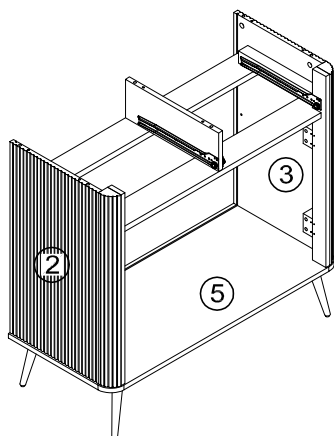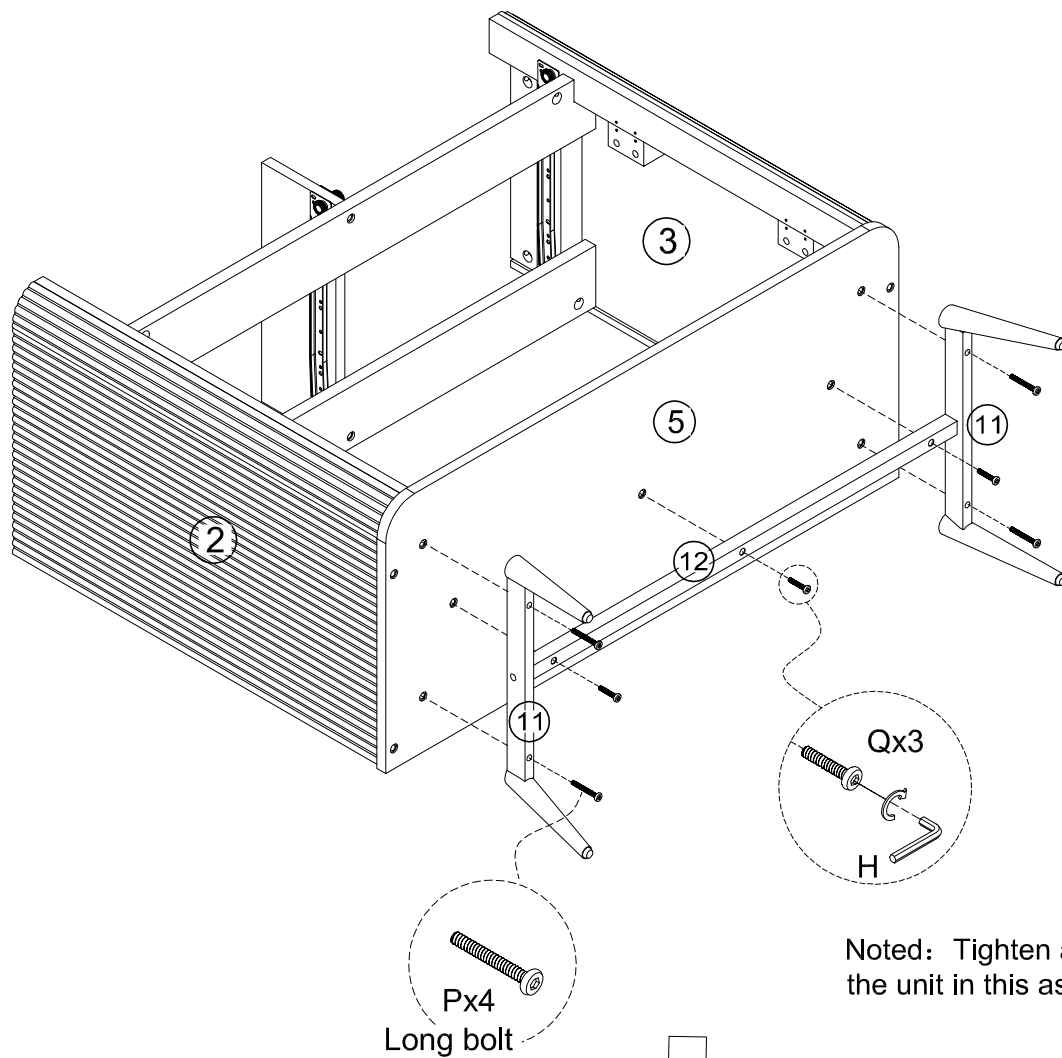

180°






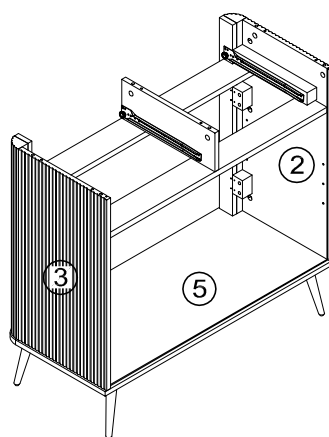 


STEP 9


Xx4

Ox3

      Hx1

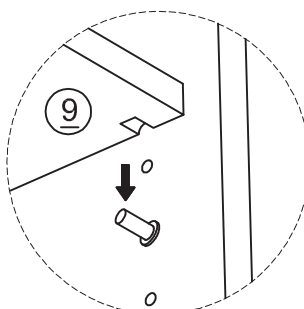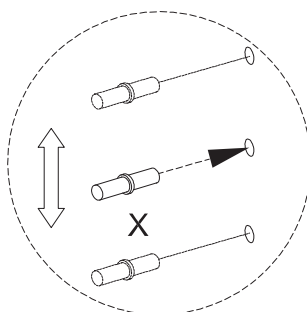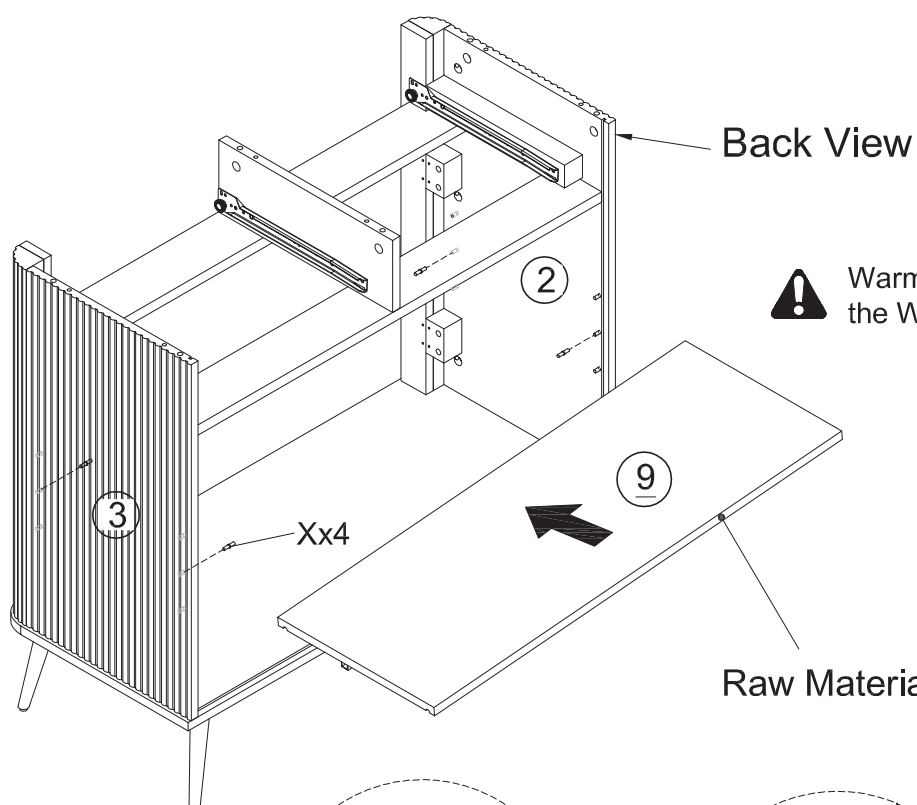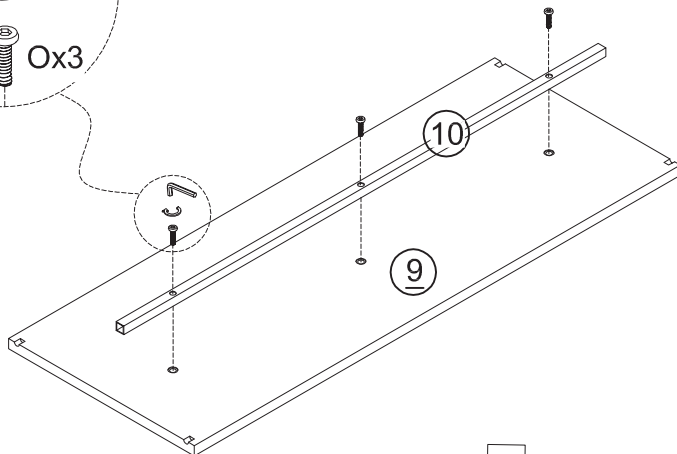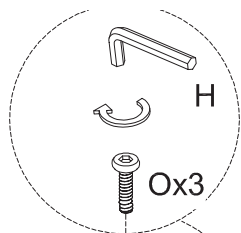

 STEP 10

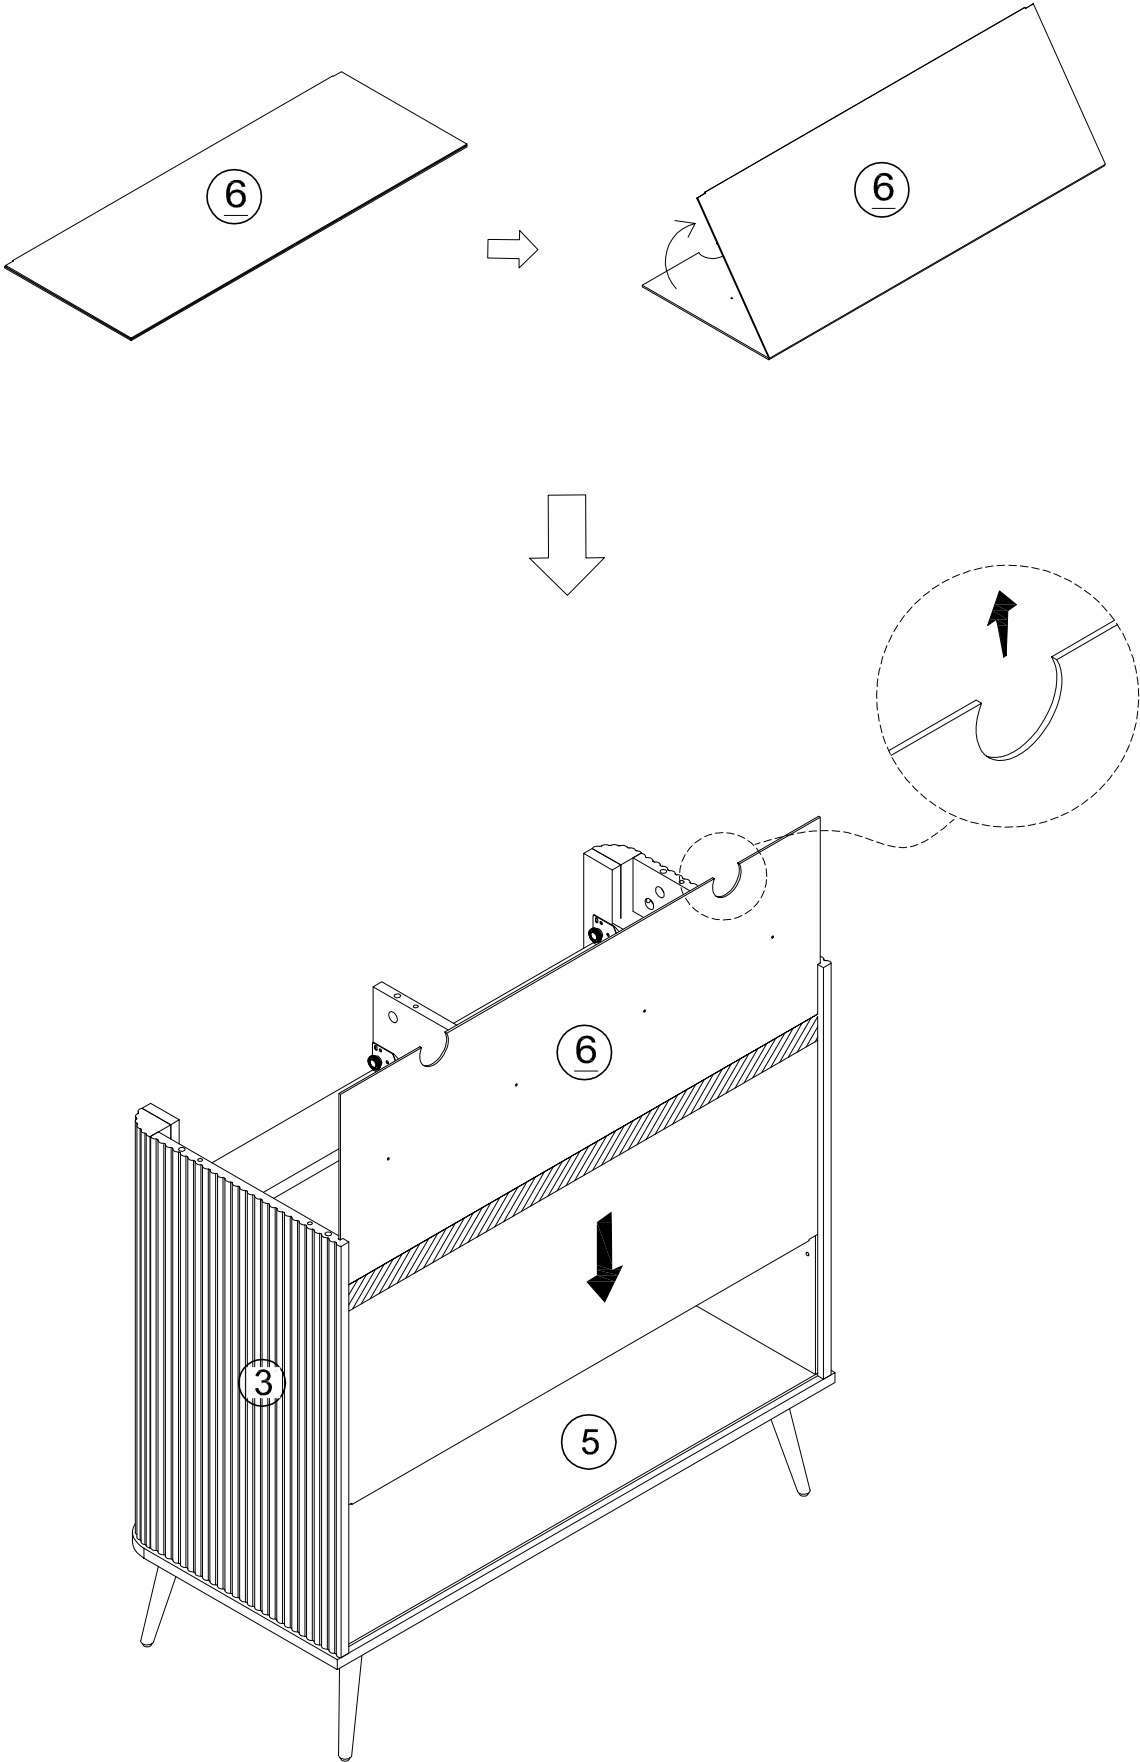


STEP 11

Bx6

Dx6

 
Rx2

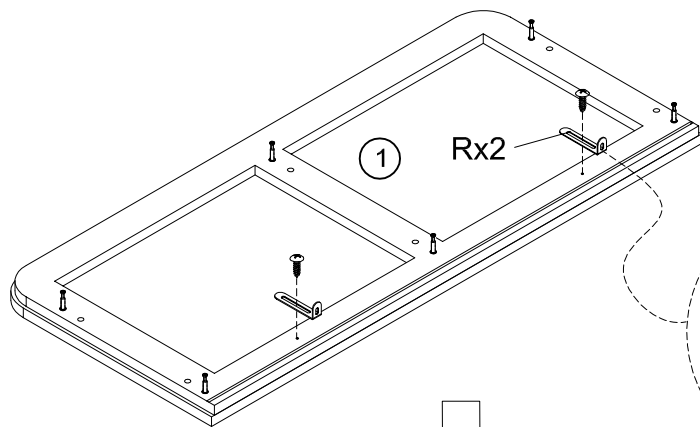

Short screw



Do not tighten

 L shape bracket

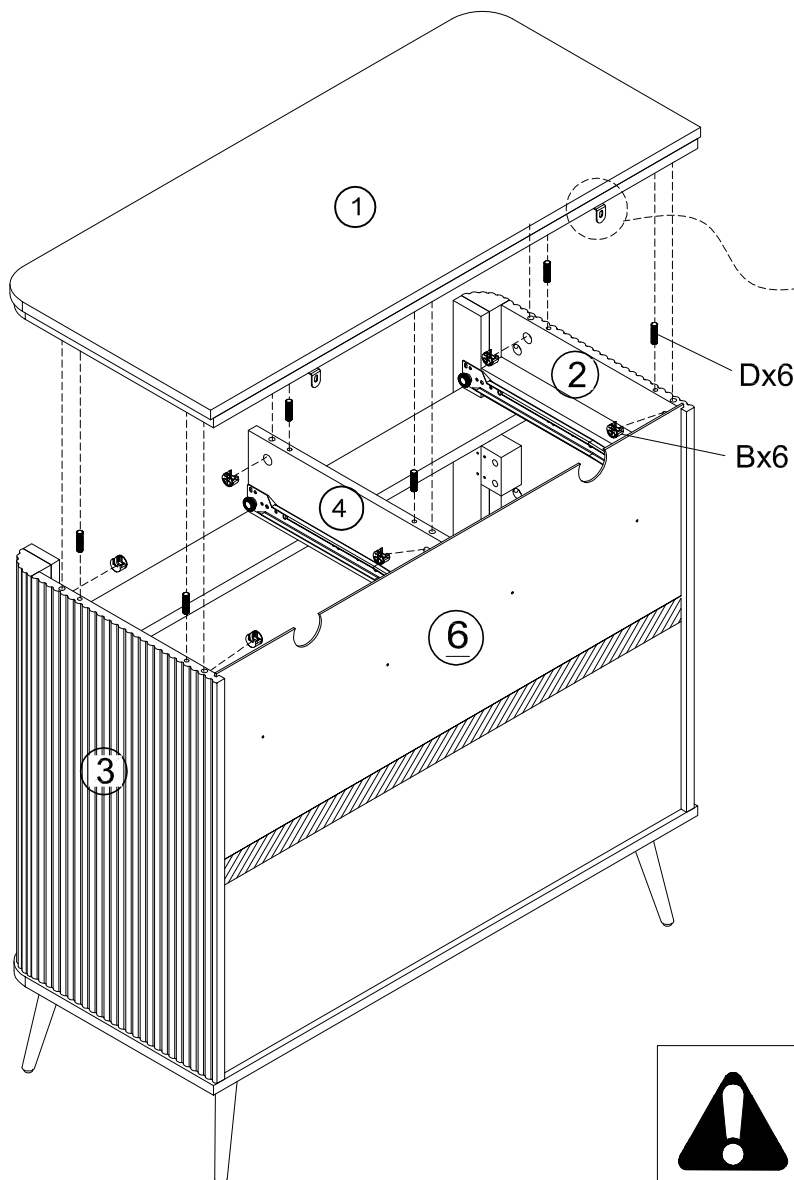

Dx6

  Bx6

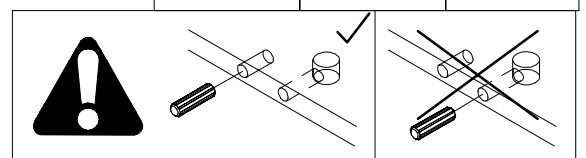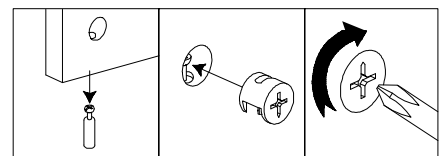

STEP 12




Sx8



Tx8




 Ux4

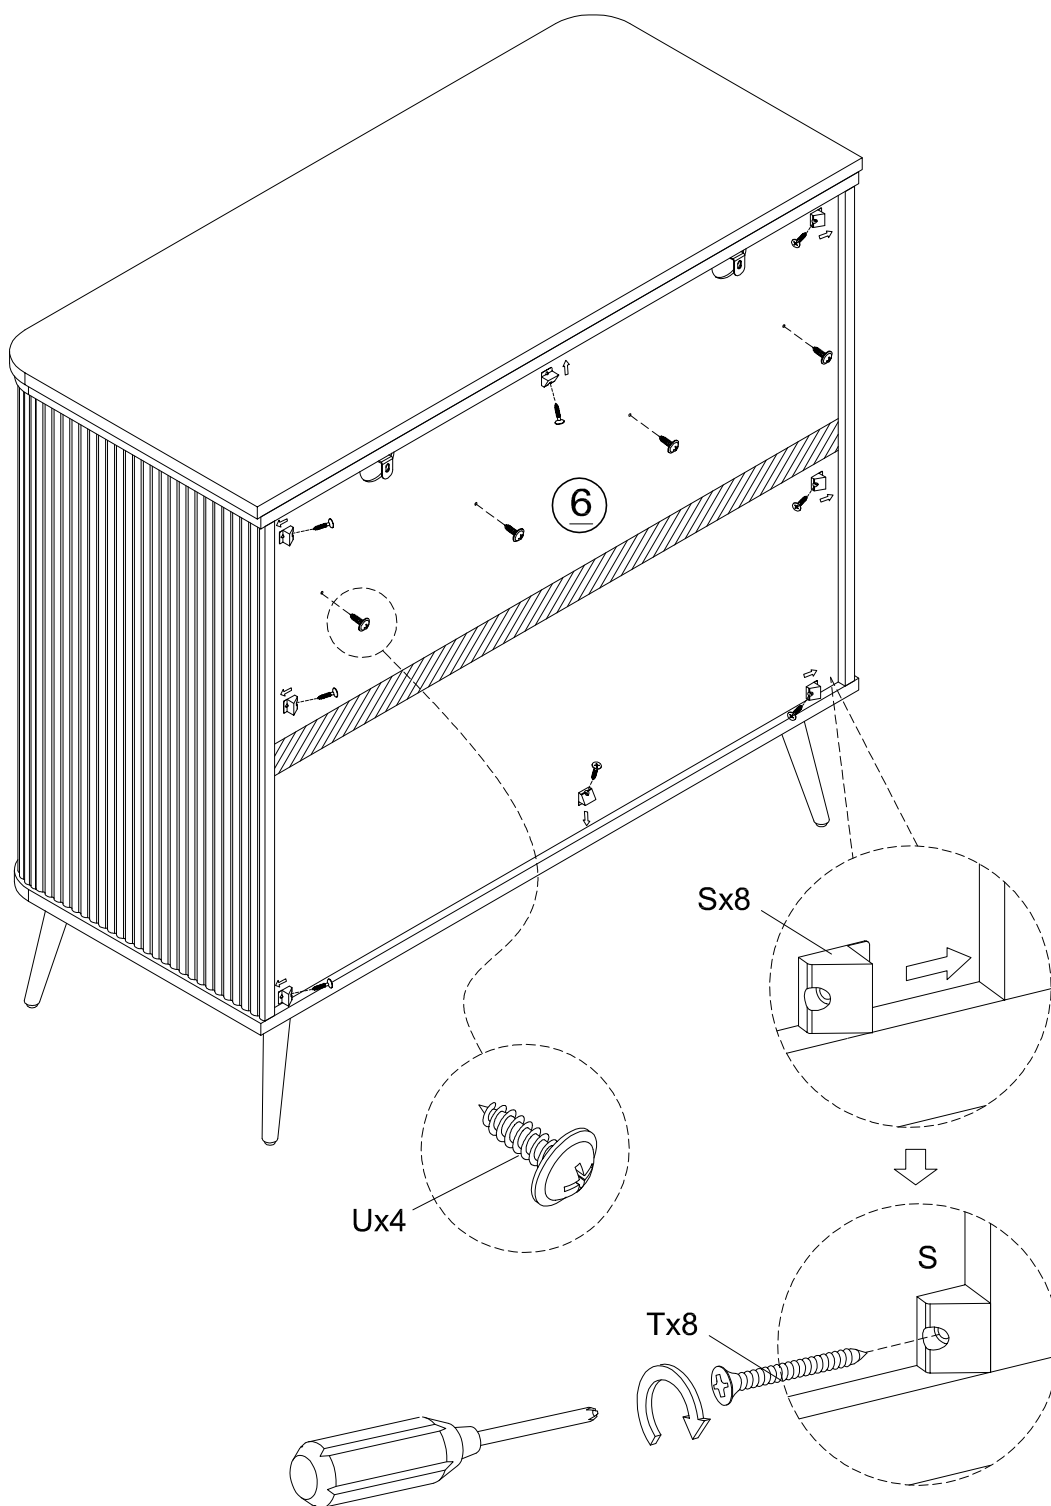

Before attaching the back panel make sure that it is square to the unit .



 
STEP 13



Rx2




WARNING

   Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

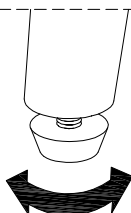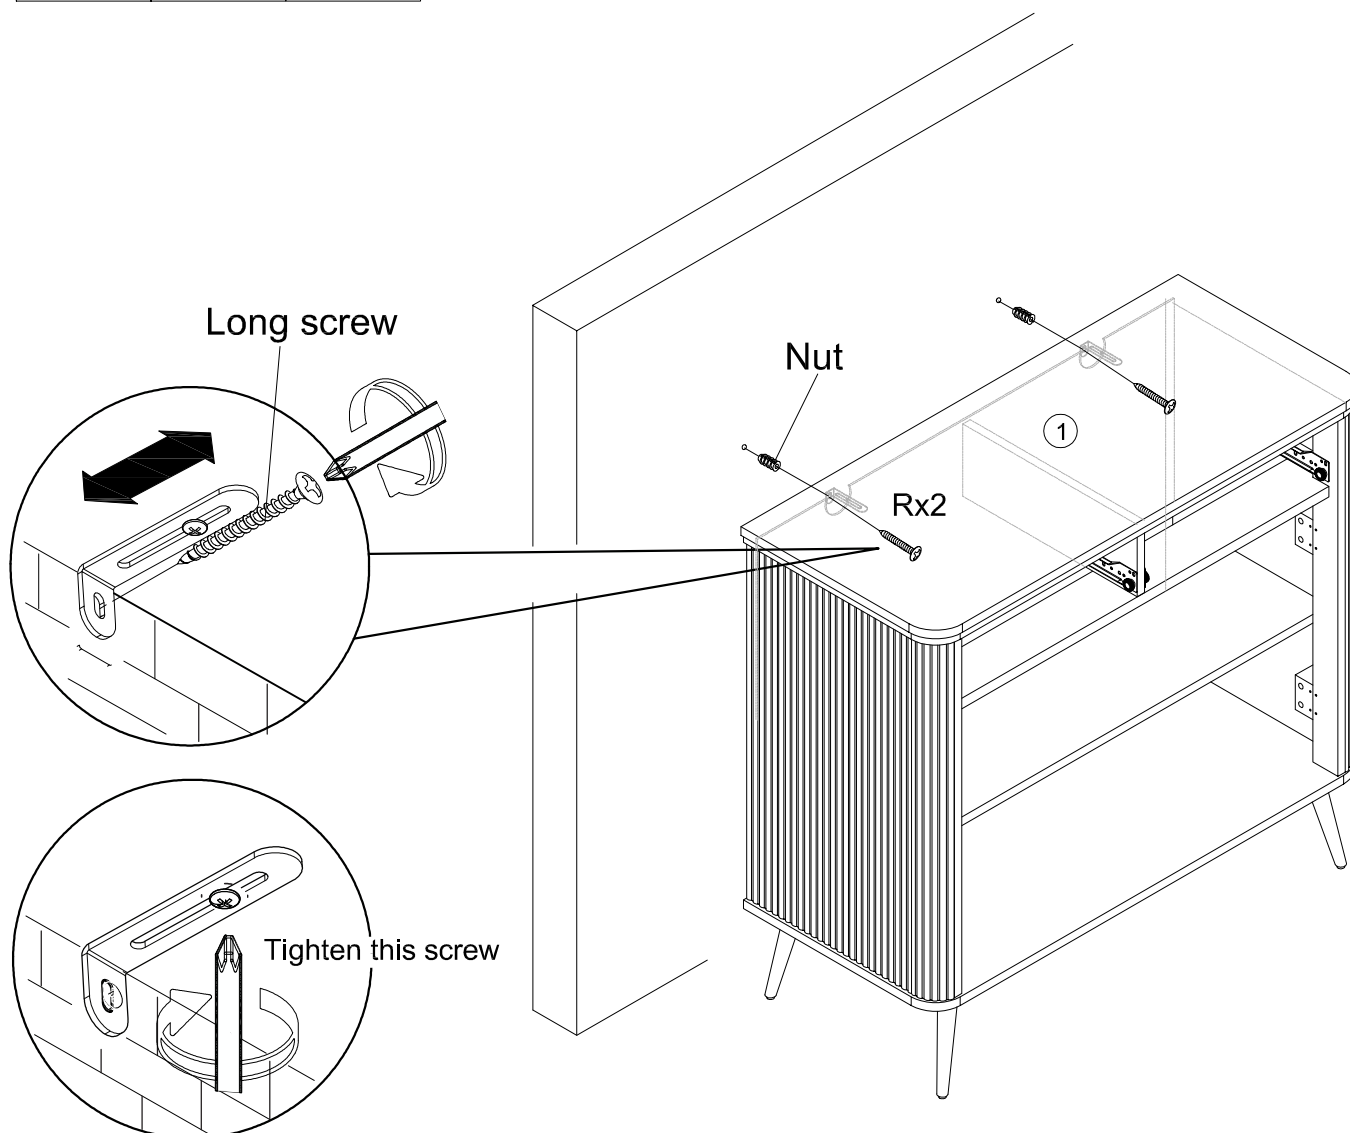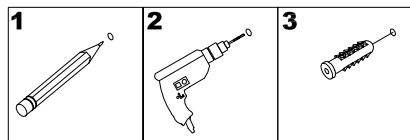


If the ground or foot is uneven, adjust the foot levelers by rotating them to your preferred height. Once the unit is standing and the levelers are adjusted, make sure the unit does not wobble.

   STEP 14

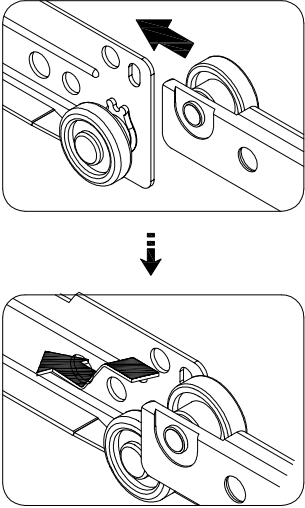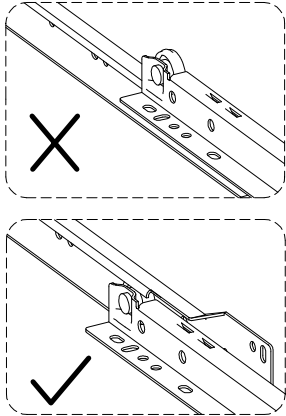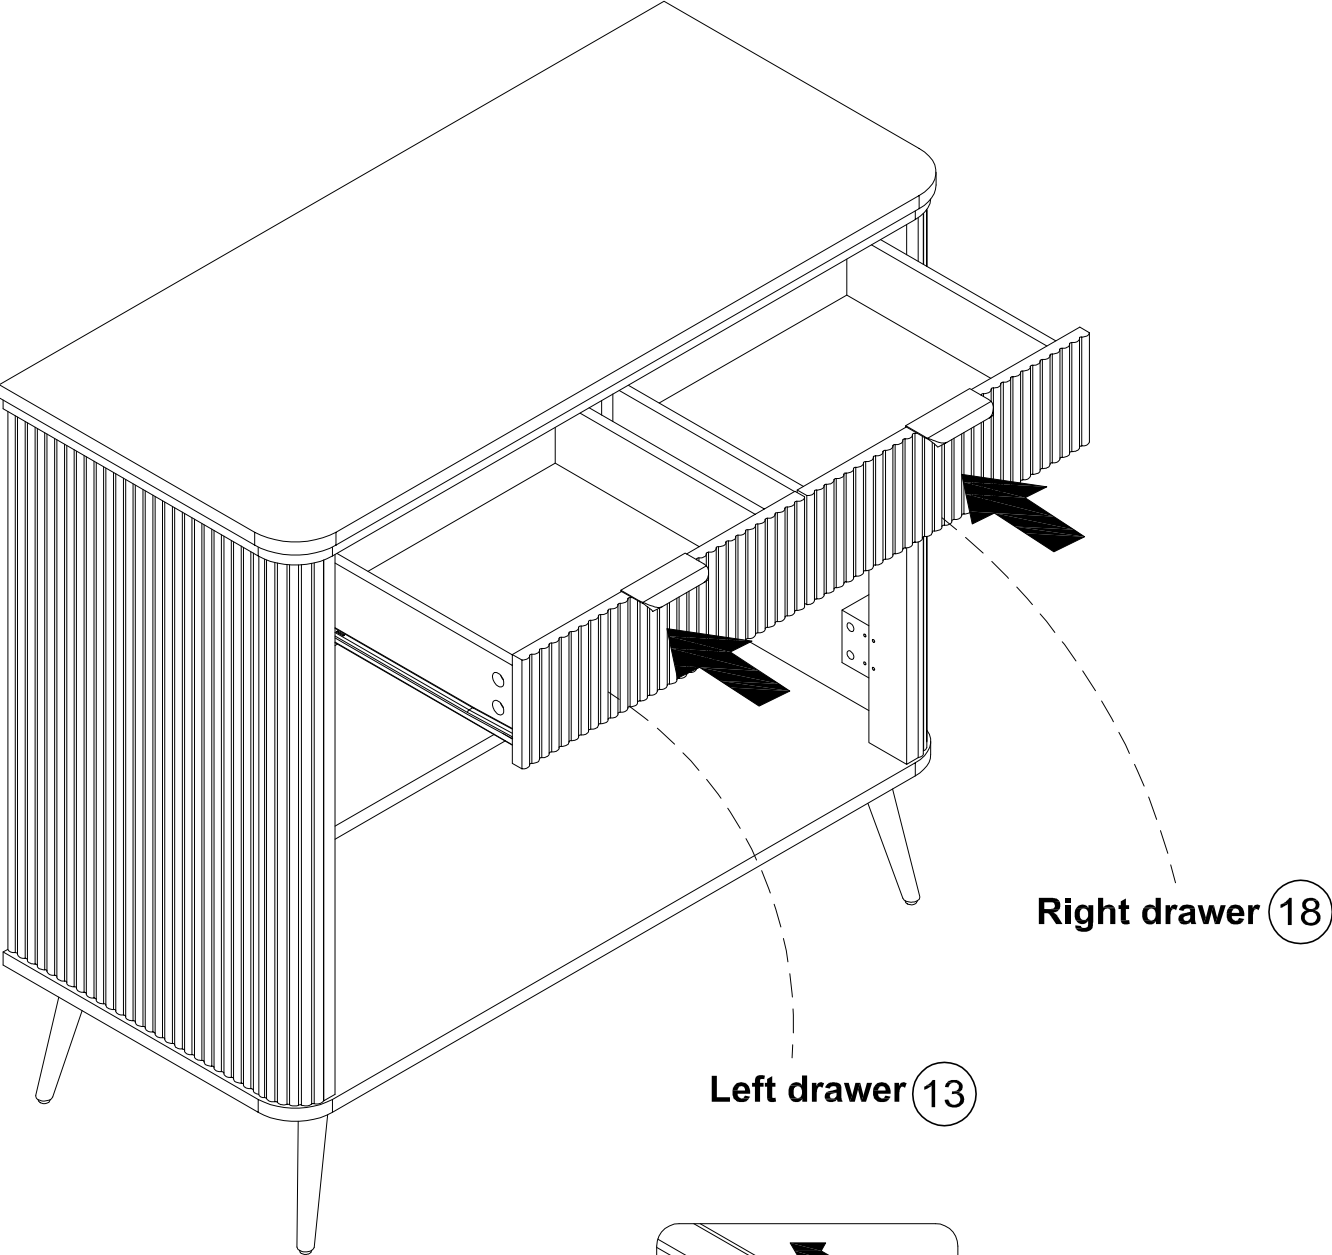

 STEP 15



Vx4



Wx8





Yx2



Zx4

  
Power tools should not be used to assemble and adjust the doors.

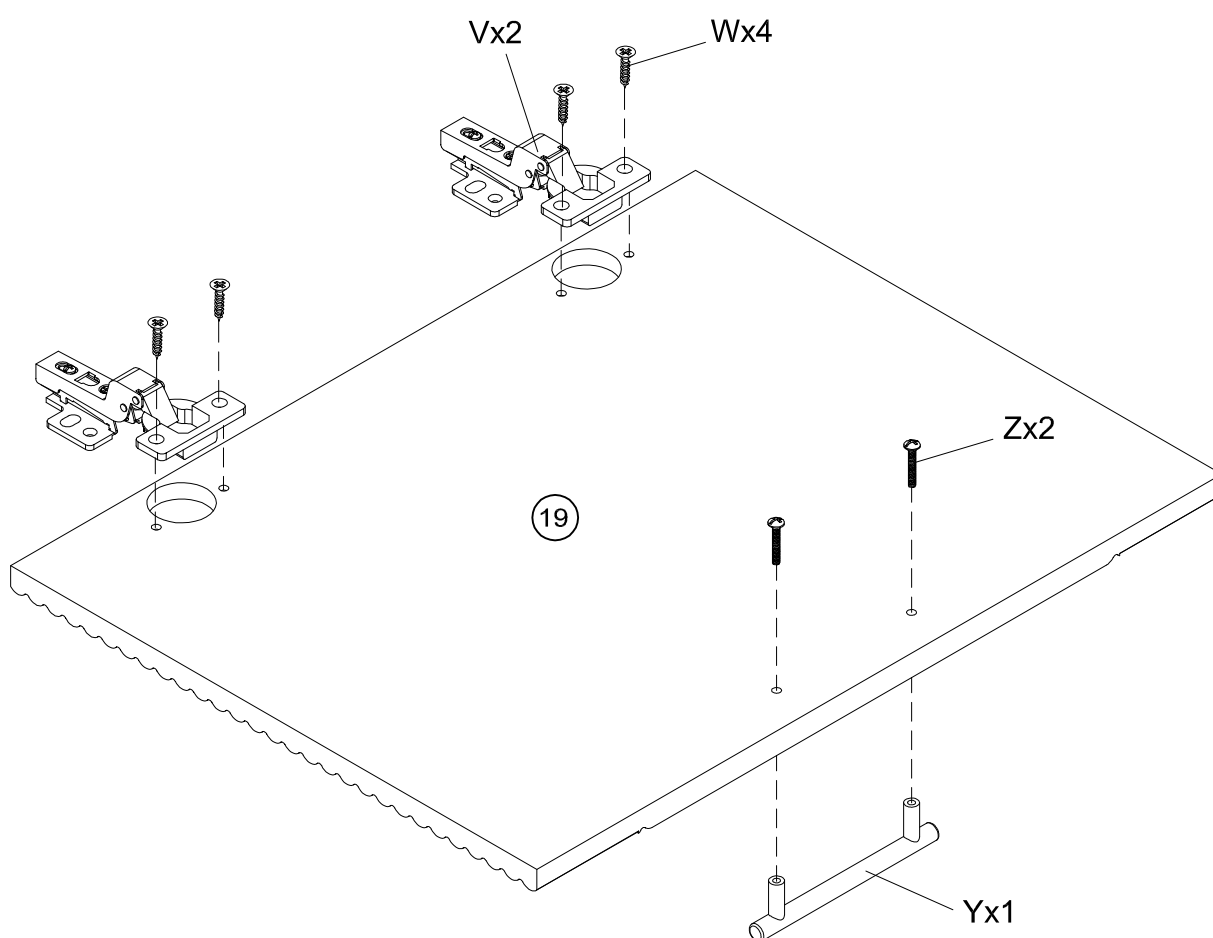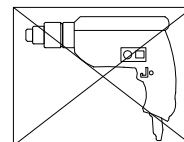

x2


STEP 16

 Wx16

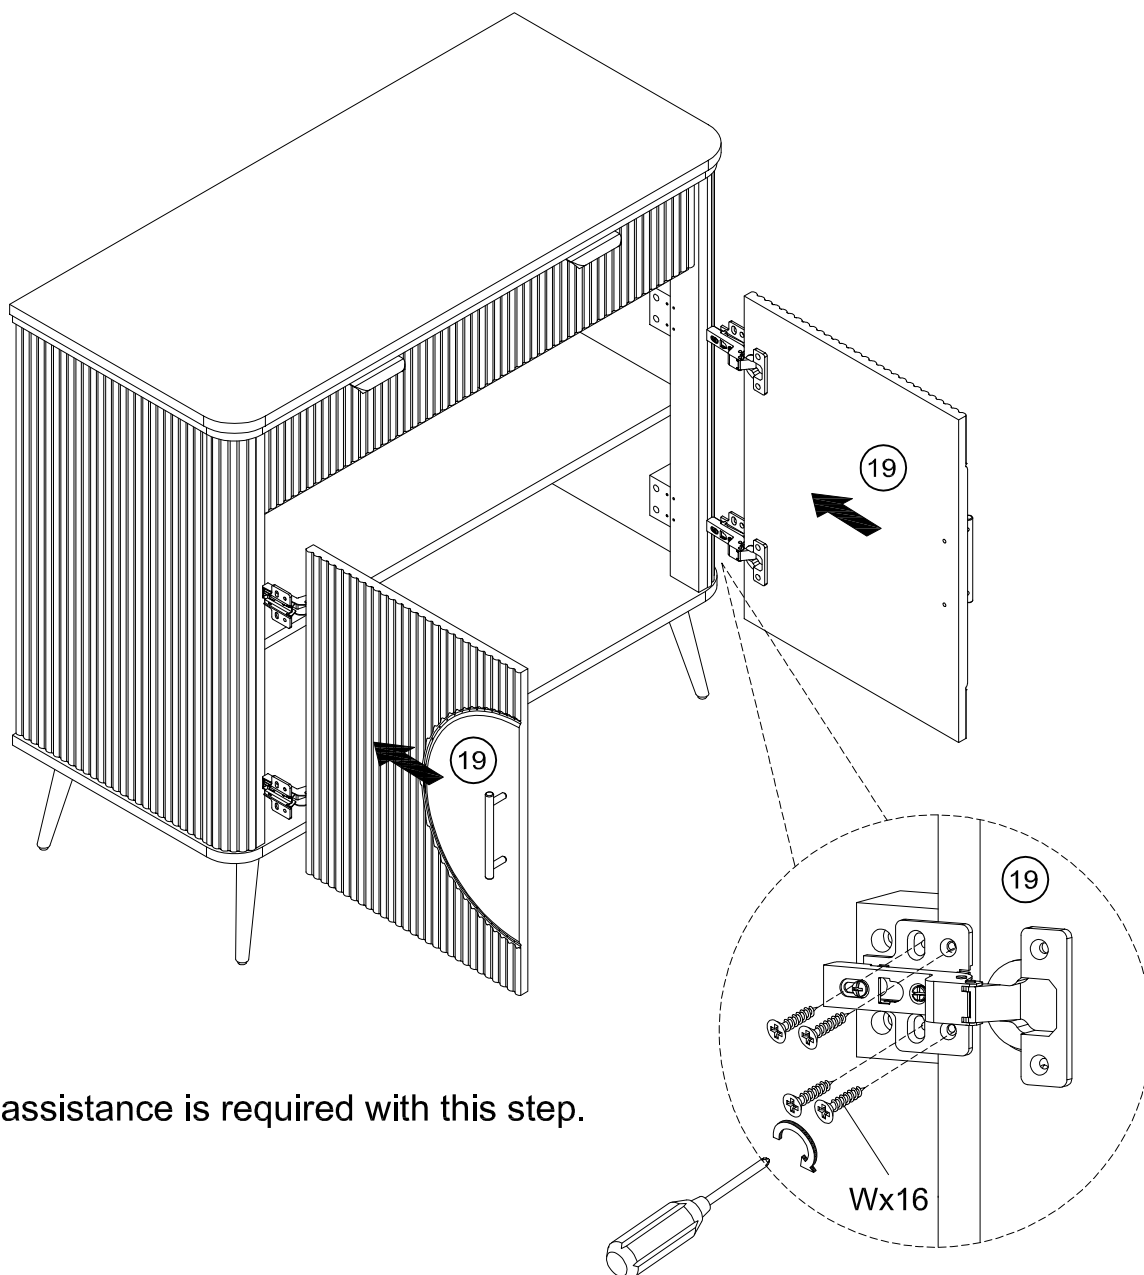


An assistance is required with this step.

 
Concealed hinges are three-way adjustable.

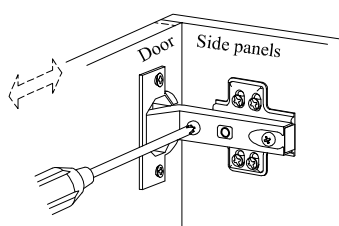

Horizontal
by screw adjustment

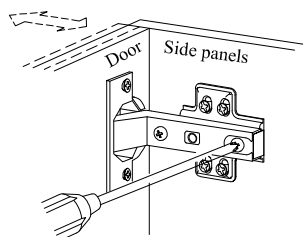 


 
In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

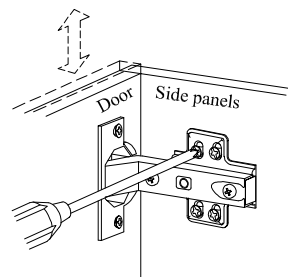

Vertical
Via slots in the mounting
plate or via cam adjustment

STEP 17

  
Cx18

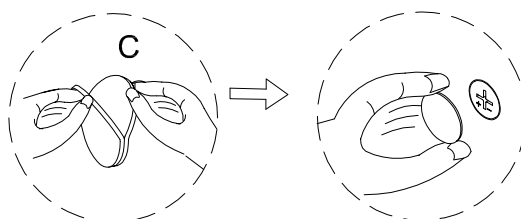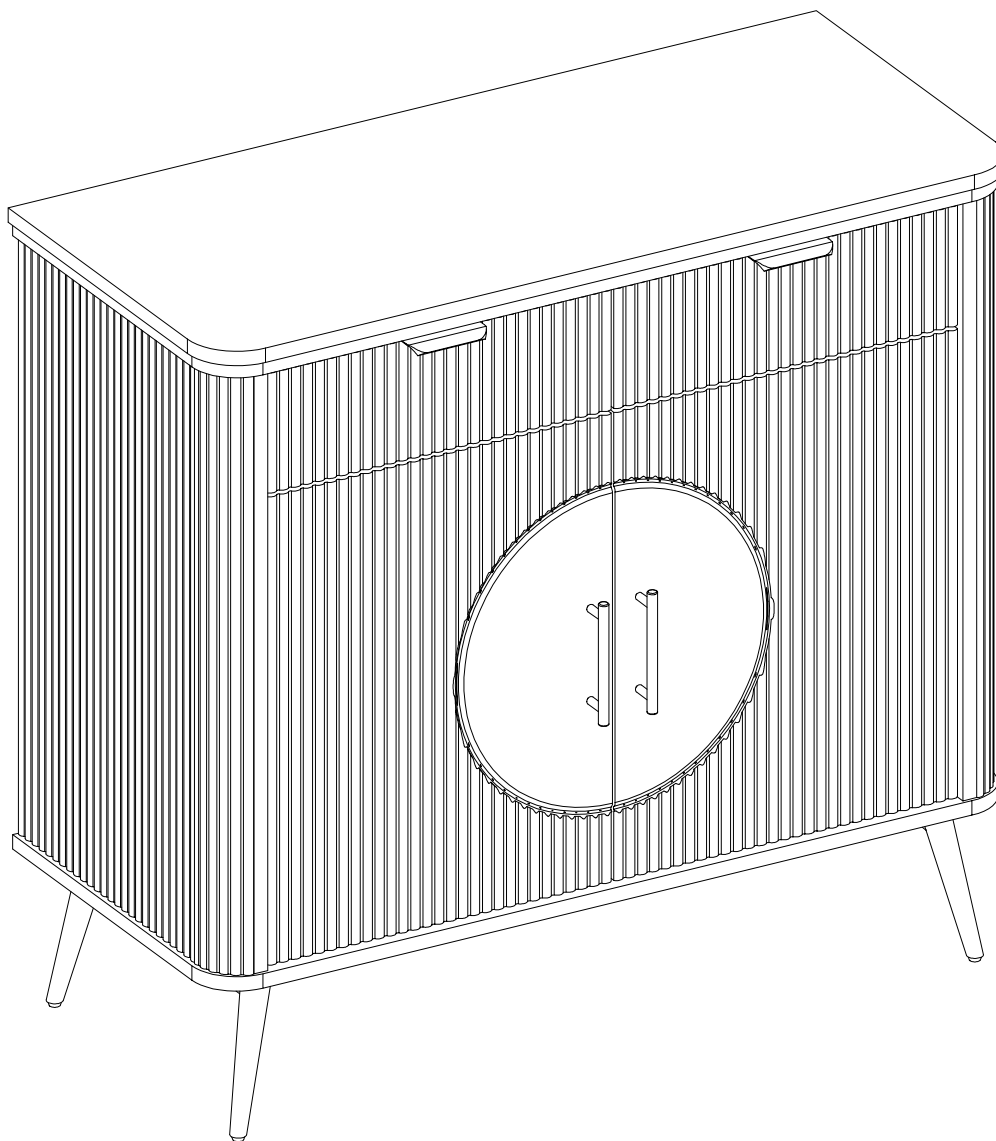

· Stick stickers (C) on cam locks (B).

Final Assembly