
 
 
ılleadzm

CEILING WALL MOUNT TMC-7004

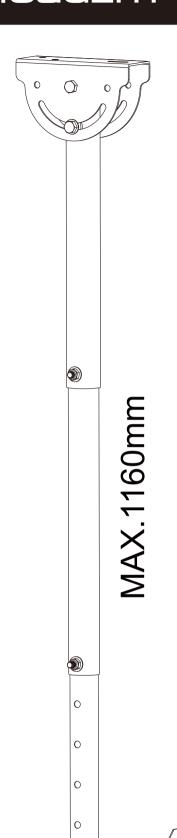

Α	7x55mm	3PCS
В	10x60mm	3PCS
С	8x65mm	2PCS
D	8x55mm	3PCS
E1	4x20mm	4PCS
E2	5x20mm	4PCS
F1	6x20mm	4PCS
F2	8x30mm	4PCS
G1	8x18mm	16PCS
G2	5x14mm	4PCS
G3	8x10mm	4PCS
H1	8x16mm	2PCS
H2	8x12mm	2PCS
Н3	M8	7PCS
11	M8	1PCS
12	10x2mm	4PCS
13		1PCS





MAX. VESA: 200*200



WARNING:

- 1. Please ask qualified applicators to install the equipment on the wall. The inadequate application may cause the fall of a LCD color TV, resulting in injury.
- 2. The wall for installing the PL ASTHMA/LCD wall mount bracket must be installed on concrete wall, solid brick wall or equivalent which can afford the weight of the PLASMA/LCD wall mount bracket and the TV itself.
- 3. Do not mount any equipment other than the specified product. This wall mount bracket is designed for PLASMA/LCD Dangers may occur if the wall mount bracket is overweight, like toppling of the PL .ASTHMA/LCD.
- 4. Use a track level bar to balance the PL ASMA/LCD wall mount bracket during installation for stability. Be sure to install the TV Bracket on a wall that is both perpendicular and flat.
- 5. Check the space and distances for installation, avoid covering the view of important information (ie. traffic information) behind the panel.
- 6. Make sure enough space is available for the mounting, swiveling and tilting of the PL ASMA/LCD wall mount bracket.
- 7. Do not remove screws, after mounting the TV. Do not disassemble or make alterations to the parts of the wall mount bracket.
- 8. Be sure to tighten the screws securely in the designated position.
- 9. After proper installation of the TV bracket, secure the cables properly.Do not allow the AC power cord or the connecting cable to be pinched.
- 10. Do not install at places near the vent of air conditioner or frequently vibrate, or places directly blown by moisture, dust, smoke or steam (stove, electric cooker, humidifier etc.). Otherwise may cause fire orelectric shock.
- 11. Specialist is required for the maintenance of the PL ASMA/LCD wall mount bracket. Lubricating oil in hinges is needed for maintenance and the proper functioning of the product. Do not handle the product with excessive force during cleaning or maintenance.

