

FRASER HILL FARM®

Thank you for your purchase!

With proper use and care, this product will provide you with years of enjoyment. If you have any questions, please contact us directly.

✉ **Holiday@FraserHillFarm.com** (Anytime)
☎ **855-591-7451**

(9AM to 9PM Eastern Time, Monday - Friday)
(9AM to 5PM Saturday - Sunday)

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

Please do not return this item to the retailer.

Please call our toll-free number 1 (855) 591-7451 or email us at Holiday@FraserHillFarm.com and a customer service representative will assist you.

ENJOY YOUR HOLIDAY!

SET-UP / OPERATING INSTRUCTIONS FOR DANCING & SINGING SANTA

Note: Your figure may be different than the item pictured for demonstration



1. Carefully remove the figures head, body/base and AC low voltage adapter

2. To make the figures to stand upright first push down on the knob then turn the knob until the figure is fully extended and standing securely



3. Attach the head by aligning the tabs in the head with the slots on the neck connector. Turn the head gently until it clicks into place. Make sure the face is positioned to face forward.

4. Insert the DC plug into the socket on the base. Plug the adapter into a standard 110V or 240V household power outlet. Adapter specifications:
Input: 110-240V, 50/60Hz
Output: DC 5v 1000mA

5. To turn the figure ON, first straighten the costume and position the arms as desired. Turn the switch on the base to "ON". Set the ON/OFF trigger switch to the middle position. Do not block the speaker while the item is operating.

• IMPORTANT •

TO AVOID POSSIBLE DAMAGE WHEN COLLAPSING, DO NOT DROP. REMOVE HEAD. GRASP NECK HANDLE BEFORE PUSHING RELEASE BUTTON. THEN EASE FIGURE DOWN.

SEE NEXT PAGE FOR GENERAL INSTRUCTIONS.

GENERAL INSTRUCTIONS FOR "COLLAPSIBLE" ANIMATED DISPLAY FIGURES

Deluxe, dancing, and musical display figures:

Basic Operations:

1. Carefully remove from box. Do not pull figure out by arms.
2. See illustrated set-up instructions and photos on reverse side.
3. This figure is supplied with a low voltage adapter. Plug one end into a standard 110 or 240 volt household outlet.
4. The power ON / OFF switch is located next to adapter jack on base. Turn ON, Will dance and sing.

Safety Instructions:

1. Read all instructions before this figure is operated and retain them for future reference.
2. All warnings in these operating instructions should be followed.
3. DO NOT use near water; such as bathtub, laundry tub, kitchen sink, wet basement or swimming pool, etc.
4. DO NOT place figure near any heat source such as radiators, stoves, fireplaces, etc.
5. This figure should be serviced by a qualified service person only. DO NOT attempt to service this unit beyond what is described in the operating instructions.
6. Take extra care when displaying any figure that may contain small parts around small children.
7. Do not restrict arm, head or waist motions. Figure have slip gears to prevent damage, however, prolonged restriction of moving parts may result in gear damage.
8. Display this figure on a steady level surface. **FOR INDOOR USE ONLY.**
9. When posing arms, ensure the adapter is unplugged from outlet.

READ CAREFULLY & RETAIN FOR FUTURE REFERENCE!

FRASER HILL FARM®

Register your product today!

Congratulations on your new Fraser Hill Farm product! Register your item using the link below to activate your warranty and stay updated with product news, helpful tips, troubleshooting support, maintenance advice, and any important recall or safety notices.

<https://fraserhillfarm.com/register-your-product>



Warranty Information

Fraser Hill Farm provides a one-year Limited Warranty from the purchase date, covering repair or replacement of defective components. This warranty applies only to the original purchaser and requires the original sales receipt with the purchase date and location. Warranty coverage for replacements defaults to the original purchase date.

Contact Warranty Services at: 1-855-591-7451

Email us at: *Holiday@FraserHillFarm.com*

www.FraserHillFarm.com

1-YEAR LIMITED WARRANTY

"Limited" Warranty Program

For a period of one (1) year after purchase, Fraser Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items maybe charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER FRASER HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

Holiday@FraserHillFarm.com