 




USER MANUAL

Air Purifier

Model: HAP-604

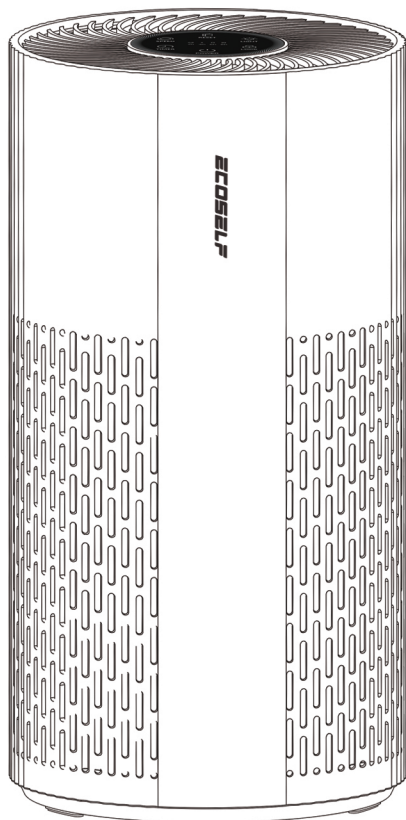

PLEASE KEEP THIS MANUAL CAREFULLY FOR FUTURE REFERENCE.
FOR HOUSEHOLD USE ONLY.

REGISTER
NOW!

for an additional
12 months
Warranty

As a special thank-you for registering your ECOSELF unit, you'll automatically receive an additional 12 months added to your limited manufacturer's warranty!

All you need to do is send your order ID to our Email: support@myecoself.com, or enter your order ID to activate the extended warranty online at www.myecoself.com/?vipwarranty.

This warranty only cover orders from authorized brand online stores and our official website. We are not responsible for any purchases from other distribution channels.



Any questions, please REACH OUT to ECOSELF before returning it, as we provide hassle-free after-sales support.



FREE upgrade to FULL Replacement Guarantee - no need to return.



Once registered, you will be ensured that if anything goes wrong with your product, we will either send you a brand new unit as a replacement (Absolutely FREE) or provide a FULL refund of your order.



Just send your Amazon Order ID to Email support@myecoself.com or scan the QR code to activate the extended warranty.



Send:

support@myecoself.com

Subject:

Warranty

Order ID:



NOTE: Must register within 7 days after receiving your new product.

TABLE OF CONTENTS

General Safety 01

Product Map 02

Controls & Display 03

What' s in The Box 04

Getting Started 04

Using Your Air Purifier 06

About The Filter 07

Care & Maintenance 07

Specifications 08



Troubleshooting 09

Warranty 10

General Safety

- ECOSELF HAP-604 Air Purifier is electrical appliance for indoor use only.
- Take the necessary precautions to reduce the risk of fire, electric shock or injury.
- **READ AND SAVE THESE INSTRUCTIONS.**
- **WARNING** - To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Air Purifier With Any Solid-State Speed Control Device.
- Only use your air purifier as described in this manual.
- Do not use without removing the plastic wrap from the filter. The air purifier will not filter air and may overheat, causing a fire hazard.
- Keep your air purifier away from water, and wet or damp areas. Never place in water or liquid.
- Do not use in excessively humid areas.
- Keep the appliance, including the power cable, at a safe distance from heated surfaces and open fire.
- Do not use where combustible gases, vapors, metallic dust, aerosol (spray) products, or fumes from industrial oil are present.
- Keep 5 ft / 1.5 m away from where oxygen is being administered.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not allow children to play with the plastic packaging. Immediately discard the plastic after unwrapping the filter.
- Do not place anything into any opening on the air purifier.
- Do not sit or place heavy objects on the air purifier.
- Always unplug your air purifier before servicing (such as changing the filter).
- Do not use your air purifier if it is damaged or not working correctly, or if the cord or plug is damaged. Do not try to repair it yourself.
- Children should not clean or perform maintenance on the air purifier without supervision.
- Never clean with gasoline, chemical solvents, or corrosive materials as these agents may damage the air purifier.
- Do not cover the cord with a rug, carpet, or other covering. Do not place the cord under furniture or appliances.
- Keep the cord out of areas where people walk often. Place the cord where it will not be tripped over.
- This air purifier is only to be used with the power supply adapter provided with the air purifier.

  Product Map

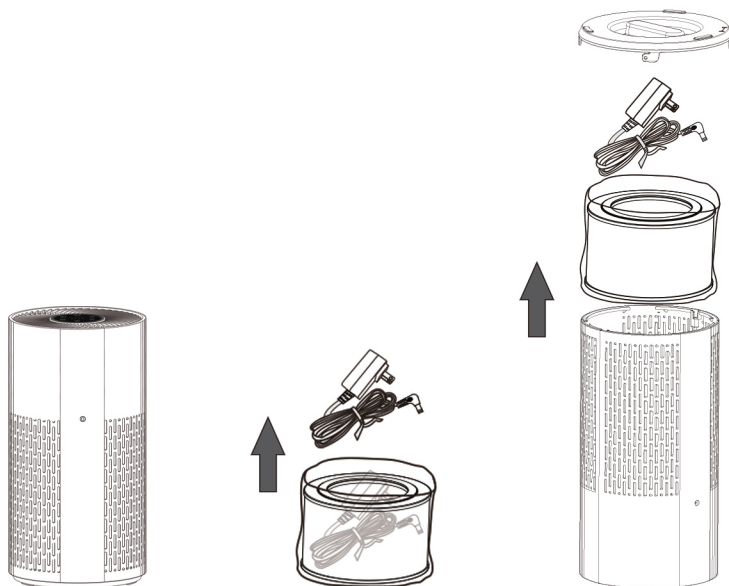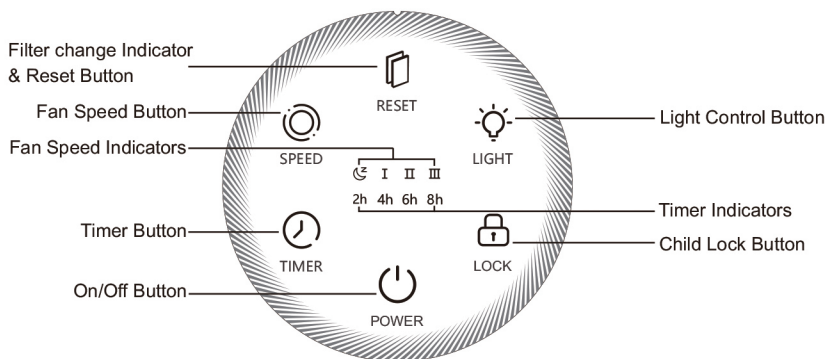

Controls & Display

 RESET	Filter change Indicator & Reset Button • Lights up red when the filter should be changed. • To reset the Filter Life (after changing filter), press and hold for 5 seconds. The Indicator will flash and beep for 2 times, and turn off.
 SPEED	Fan Speed Button & Indicators • Cycles through fan speeds: low (I will light up), medium (II), high (III), and sleep ().
2h 4h 6h 8h  TIMER	Timer Button & Indicators • Tap  to repeatedly to select a time, the timer indicator will light up with the corresponding timer selected (2h/4h/6h/8h). • Once the timer has finished, the air purifier will turn off. • To cancel a timer, tap  until all timer indicators are off.
 POWER	On/Off Button • Turns the air purifier on/off.
 LOCK	Child Lock Button • Prevents current settings from being changed. Press and hold for 3 seconds to lock and unlock the Control Panel.
 LIGHT	Light Control Button • Tap  to change 4 modes of ambient light, cycle between Ambient Cycle - Blue - Green - Purple - Off - Ambient Cycle -

What's in The Box

1x Air Purifier

 
1x Filter (Pre-installed, protected by plastic wrap, it must be removed before first use.)

1x Adapter (Placed inside the filter.)


1x User Manual

Getting Started

1. Flip the air purifier over. Twist the filter cover counterclockwise and remove it.

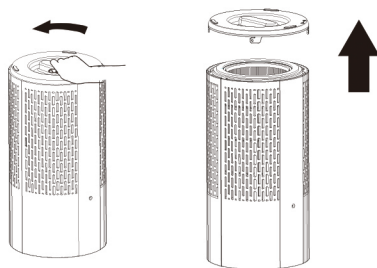


 2. Remove adapter from filter, then remove the filter from its plastic packaging and place the filter back into the air purifier (Regardless of direction).

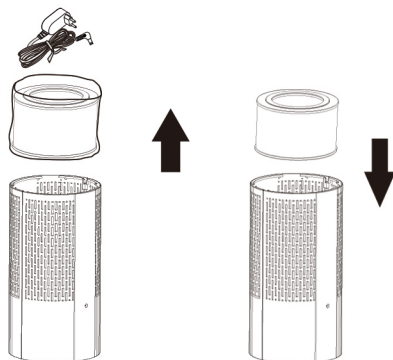

Note: Be sure to remove the filter packaging before use. Otherwise the air purifier will not filter air and may overheat, causing a fire.

 3. Replace the filter cover and twist clockwise to lock.

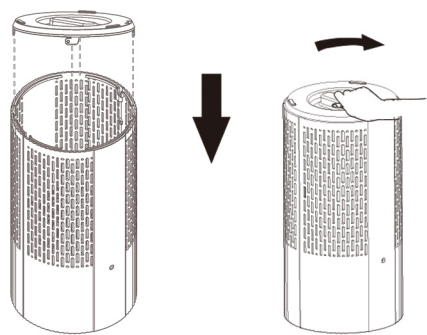

Using Your Air Purifier

1. Place the air purifier on a flat, stable surface such as the floor. Allow at least 12 inches/30 cm of clearance on all sides of the air purifier. Keep away from anything that would block airflow, such as curtains.
2. Plug in and tap  to turn on the air purifier. The fan will start on low (**I**).
3. Tap  to change fan speed between low (**I**), medium (**II**), high (**III**), and sleep ().

Tips:

- High fan speed (**III**) is the loudest, but cleans air the quickest.
- For best results, or to address a specific air quality issue such as smoke, run the air purifier on High fan speed (**III**) for 15–20 minutes before using a lower speed.
- To effectively clean air, keep windows and doors closed while the air purifier is on.

Sleep Mode

Sleep Mode operates quietly by using a fan speed lower than speed low (**I**).

1. Tap  to switch to sleep mode (indicator  lights up.).
2. Sleep mode will turn off the ambient light and display after 3 seconds if no other buttons are tapped.

Note:

When the display is turned off, tap any button to turn the display back on. If you don't tap another button, the display will turn off again after 3 seconds.

Timer

You can set a timer for 2, 4, 6, or 8 hours.

1. Tap  repeatedly to select a time. The timer will start automatically.

Note:

The timer indicators will light up when active.

2. Once the timer has finished, the air purifier will turn off.
3. To cancel a timer, tap  until all timer indicators are off.

Child Lock

Locking the display prevents any accidental changes to the settings. The buttons won't respond when tapped.

1. Tap and hold  for 3 seconds to lock/unlock the display.

About The Filter

Humidity

Moisture may damage the filter. This air purifier should be used in an area with a humidity level below 85% RH. If you use the air purifier in excessively humid areas, the surface of the filter will become moldy.

Note: Water or moisture will allow mold to grow. To solve a mold problem, get rid of the source of the moisture and clean up the mold.

Essential Oils

Do not add essential oils to the air purifier or its filter. The oils can damage the filter and cause it to release an unpleasant smell over time. Also, avoid using oil diffusers close to the air purifier.

Care & Maintenance

Cleaning the Air Purifier

- Unplug before cleaning.
- Wipe the outside of the air purifier with a soft, dry cloth. If necessary, wipe the housing with a damp cloth, then immediately dry.
- Vacuum the inside of the air purifier.
- Do not clean with abrasive chemicals or flammable cleaning agents.

Cleaning the Pre-Filter

- The outer Pre-Filter should be cleaned every 2-4 weeks to increase efficiency and extend the life of your filter. Clean the pre-filter using a soft brush or vacuum hose to remove hair, dust, and large particles.

Note:

- **Do not** clean the filter with water or other liquids.
- **Do not** clean the True HEPA and Activated Carbon Filters.
- Moisture may damage the filter. This air purifier should be used in an area with a humidity level below 85% RH. Using the air purifier in very humid conditions can cause mold to form on the filter surface.
- **Do not** add essential oils to the air purifier or filter. The filter will become damaged by the oil and will eventually release an unpleasant smell.
- **Do not** use oil diffusers near the air purifier.

Replacing the Filter

1. Unplug the air purifier, twist the filter cover counterclockwise and remove it. (see **Getting Started 1.**)
 2. Remove the old filter from the air purifier.
 3. Clean out any remaining dust or hair inside the air purifier using a vacuum hose.
- Note:** Do not use water or liquids to clean the air purifier.
4. Remove the plastic packaging from the new filter and place the filter inside the air purifier (**Regardless of direction**). (see **Getting Started 2.**)
 5. Replace the filter cover.
 6. Plug in and turn on the air purifier.
 7. **Reset the Filter Life.**

Press and hold  for 5 seconds. The indicator will flash and beep for 2 times, and turn off, filter life successfully reset.

Storage

If not using the air purifier for an extended period of time, wrap both the air purifier and the filter in plastic packaging and store in a dry place to avoid moisture damage.

Specifications

Model	HAP-604
Power supply (input)	AC100-240V, 50/60Hz, 0.5A
Power supply (output)	DC12V, 1.2A
Product Dimensions	352*182*182MM
Net Weight	1.45KG

Troubleshooting

Problem	Reasons	Possible Solutions
Air purifier cannot be turned on or no respond to button controls.	No electricity.	Check that the unit is properly plugged into an electrical outlet.
	The air purifier malfunctioned.	Contact ECOSELF: support@myecoself.com
	Power cord is damaged.	
	The outlet is damaged.	Try a different outlet.
Airflow is significantly reduced.	The airflow is blocked by plastic wrap of filter. Note: Air filter was pre-installed protected by plastic wrap.	The plastic wrap of filter must be removed before first use.
	There is no enough clearance for the air comes in.	1)Leave 12inch / 30cm clearance on all sides of the air purifier. 2)Keep air purifier away from anything that would block airflow, such as curtains.
	The Pre-filter maybe clogged by large particles so that the airflow is blocked.	Clean the Pre-filter or replace the filter. Refer to Care & Maintenance .
Air purifier makes an unusual noise while the fan is on.	The airflow is blocked by plastic wrap of filter.	The plastic wrap of filter must be removed before first use.
	Appliance is on uneven place.	Make sure the air purifier is operating on a hard, flat, even surface.
	Appliance may be damaged, or foreign object inside.	Contact ECOSELF: support@myecoself.com
Strange smell comes from the purifier.	It is time to clean/replace the filter.	Clean the Pre-filter or replace the filter. Refer to Care & Maintenance .
	Appliance worked in an area with a humidity level above 85% RH. The surface of the filter will become moldy.	1)This air purifier should be used in an area with a humidity level below 85% RH. 2)Replace your filter.
Poor air purification quality.	A low speed is used when air is in the high pollution.	Increase the fan speed.
	1) The airflow is blocked by plastic wrap of filter. 2)The airflow of inlet/outlet is blocked.	1) The plastic wrap of filter must be removed before first use. 2)Make sure no objects are blocking the front or top of the air purifier (the inlet or outlet).
	Windows or doors not closed.	Keep windows and doors closed while the air purifier is on.

 is still on after replacing the filter.	Forget to reset the air purifier.	Long press the  button for 5 seconds to reset the filter life.
 has not turned on after 9 months.	The appliance is run infrequently or the air is in the high quality so that it takes longer to inform you.	The indicator will turn on based on how much the air purifier has been used. If you don't use your air purifier often, it will take longer to turn on.
 turned on before 6 months.	The appliance is run frequently or the air is in the high pollution so that it takes shorter to inform you.	Replace the filters.

Warranty

We are delighted that you have chosen the ECOSELF air purifier and hope you have a fun with it. The manufacturer's warranty covers the product for a period of 12 months from the date of purchase against manufacturing faults.

If you have any questions about the device and about spare parts/accessories, contact the customer service department via:



support@myecoself.com



www.myecoself.com



facebook.com/Ecoself.Official

Through the following channels,
you can quickly contact us.



support@myecoself.com



www.myecoself.com



facebook.com/Ecoself.Official