

# **INSTALLATION**

## *Product Manual*



### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.





### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

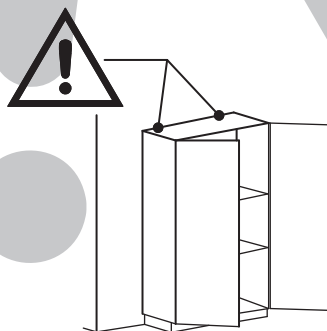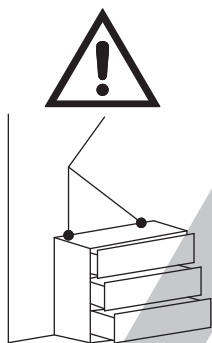

### **ANTI-TOPPLE WARNING !**

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




Please prepare the following tools

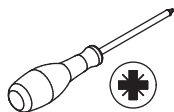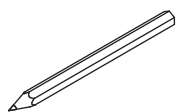

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 76

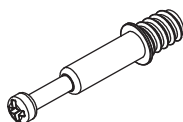


M6 x 35 mm

B x 80



Ø 12 x 9.5 mm

 C x 60

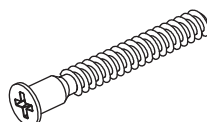


M5 x 40 mm

D x 24



M3 x 12 mm

 E x 52




M3.5 x 14 mm

F x 6




DWJL

 G x 3

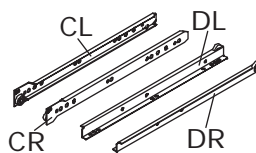


HG-30

 H x 4

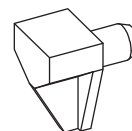


CBT

 J x 4

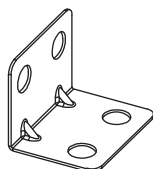


JM-13

 K x 2



Ø 6 x 68 mm

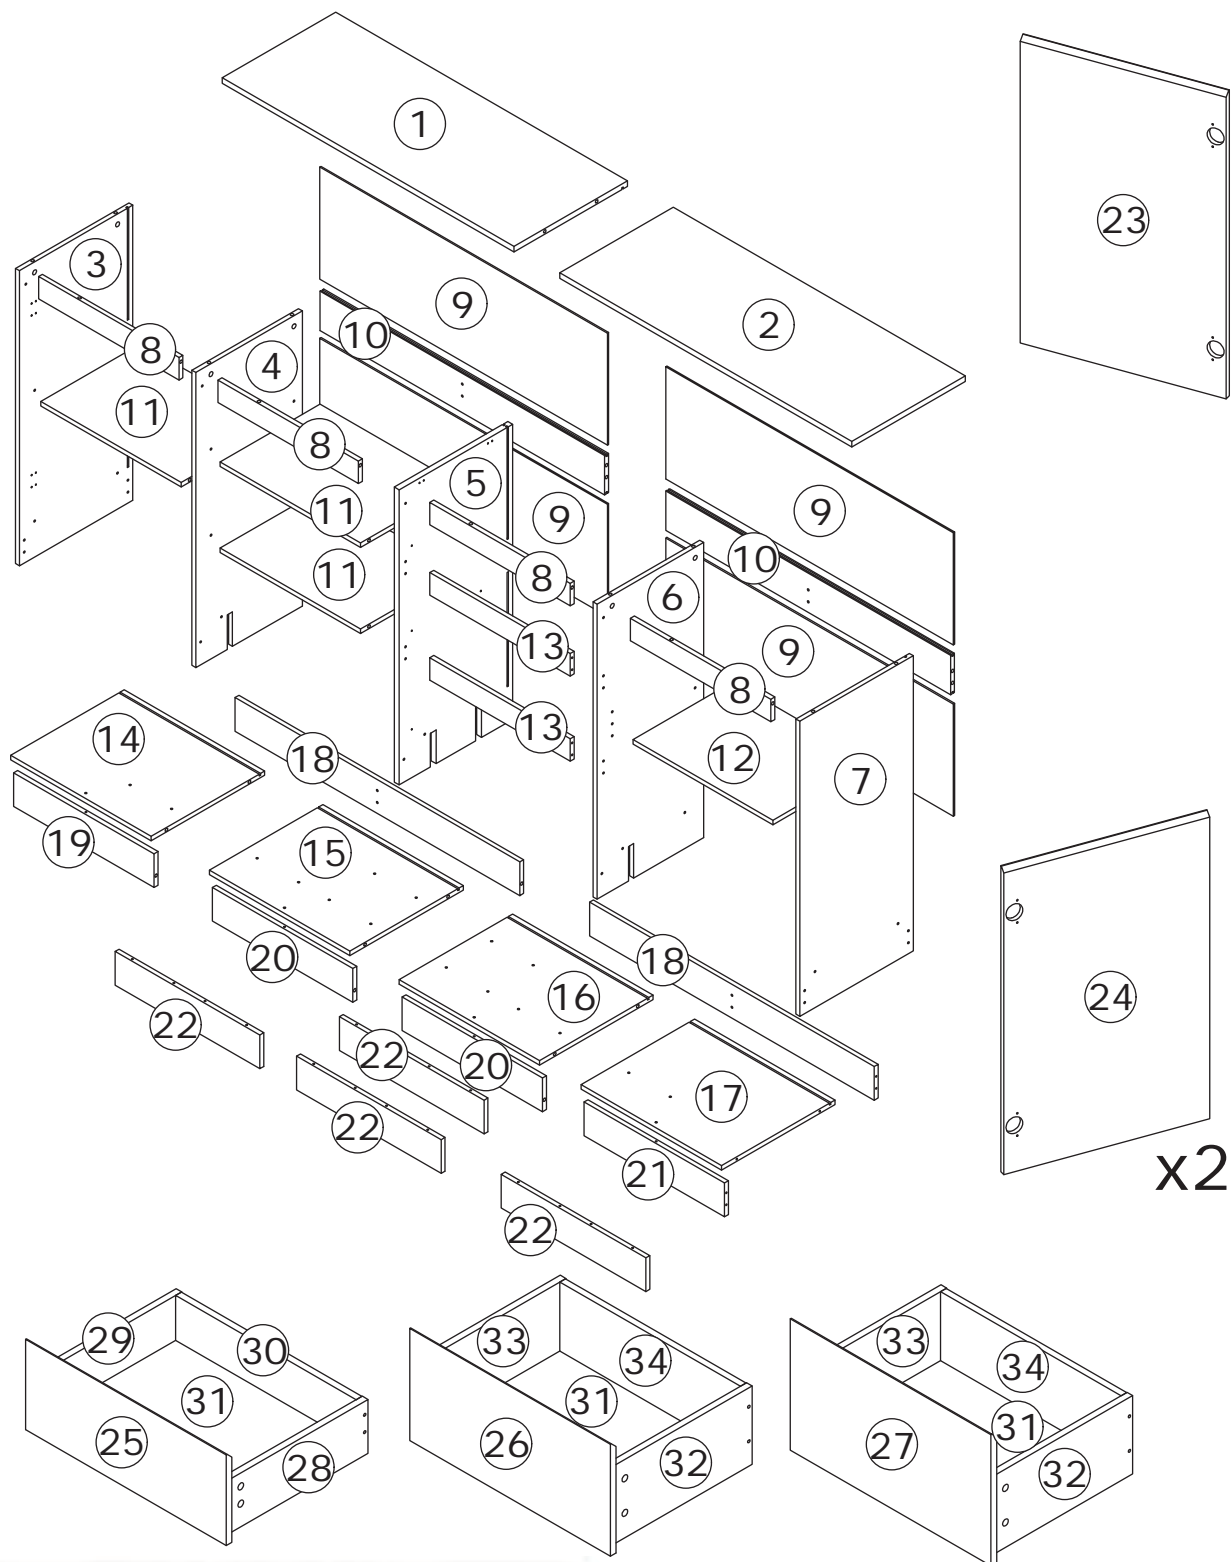 


## ⚠ WARNING



**Children have died from furniture tipover. To reduce the risk of furniture tipover:**




- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.  
Do not remove!*




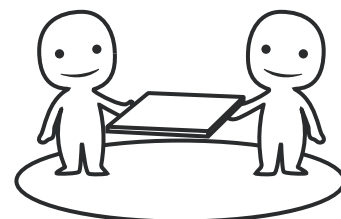


ASSEMBLED BY 2 ADULTS

   1

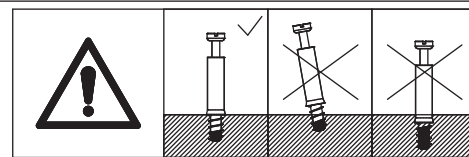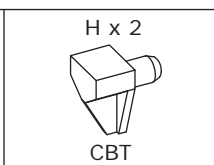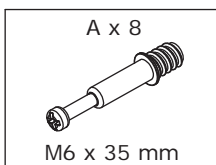

    Screw eccentric rod(A) into board 3 and 7,  
insert layer pin(H) into board 7 as shown.

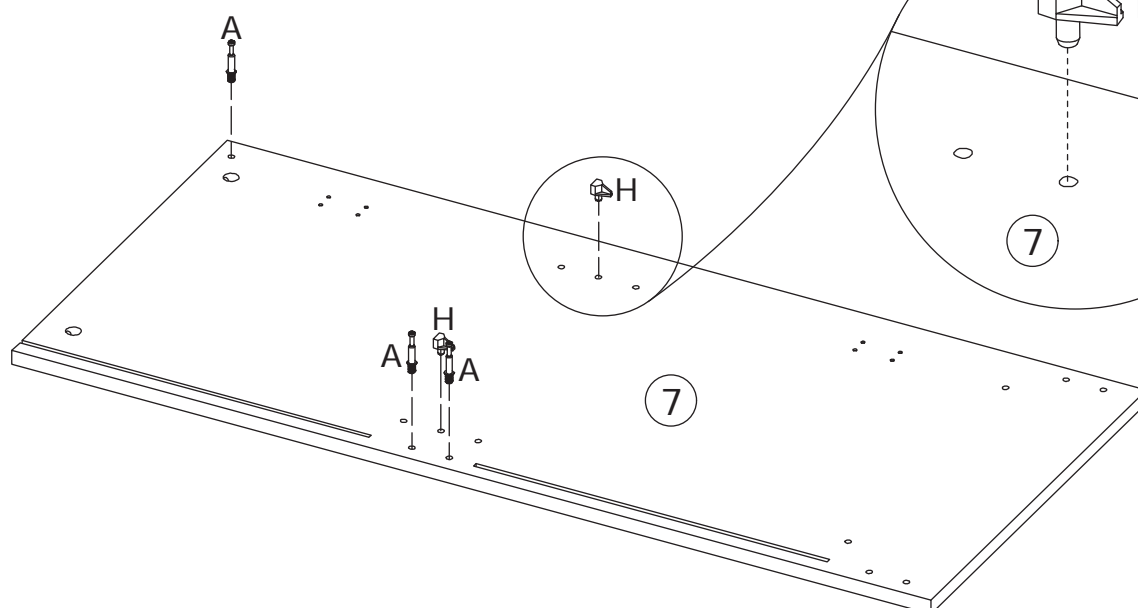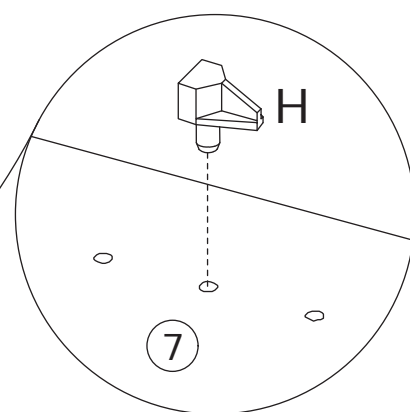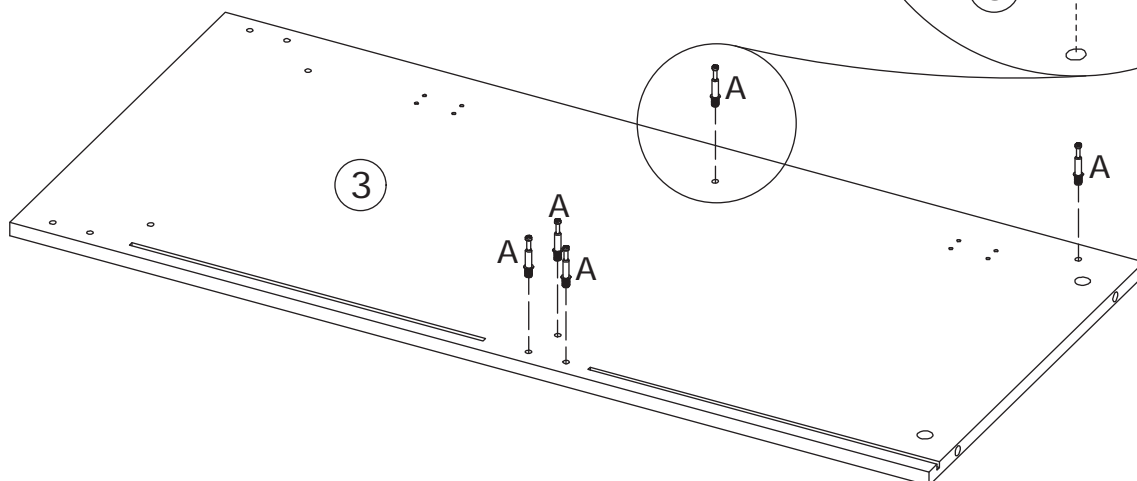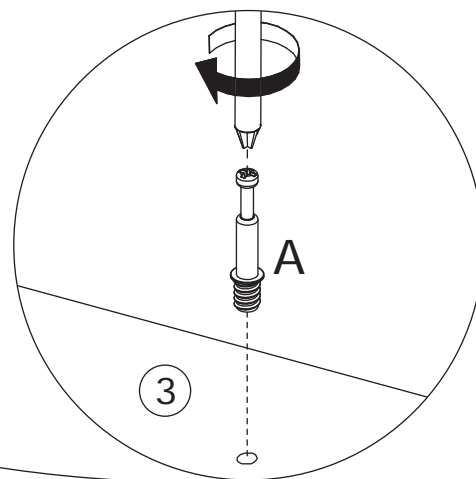




2

A x 8  
M6 x 35 mm


D x 6  
M3 x 12 mm

G x 3  
HG-30  
CR

    H x 2  
CBT

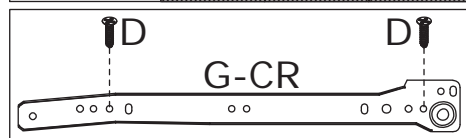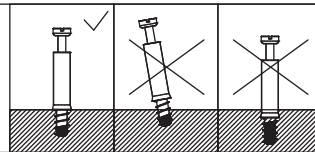 

 
 

 





Screw eccentric rod(A) and insert layer pin(H) into board 6 at first.

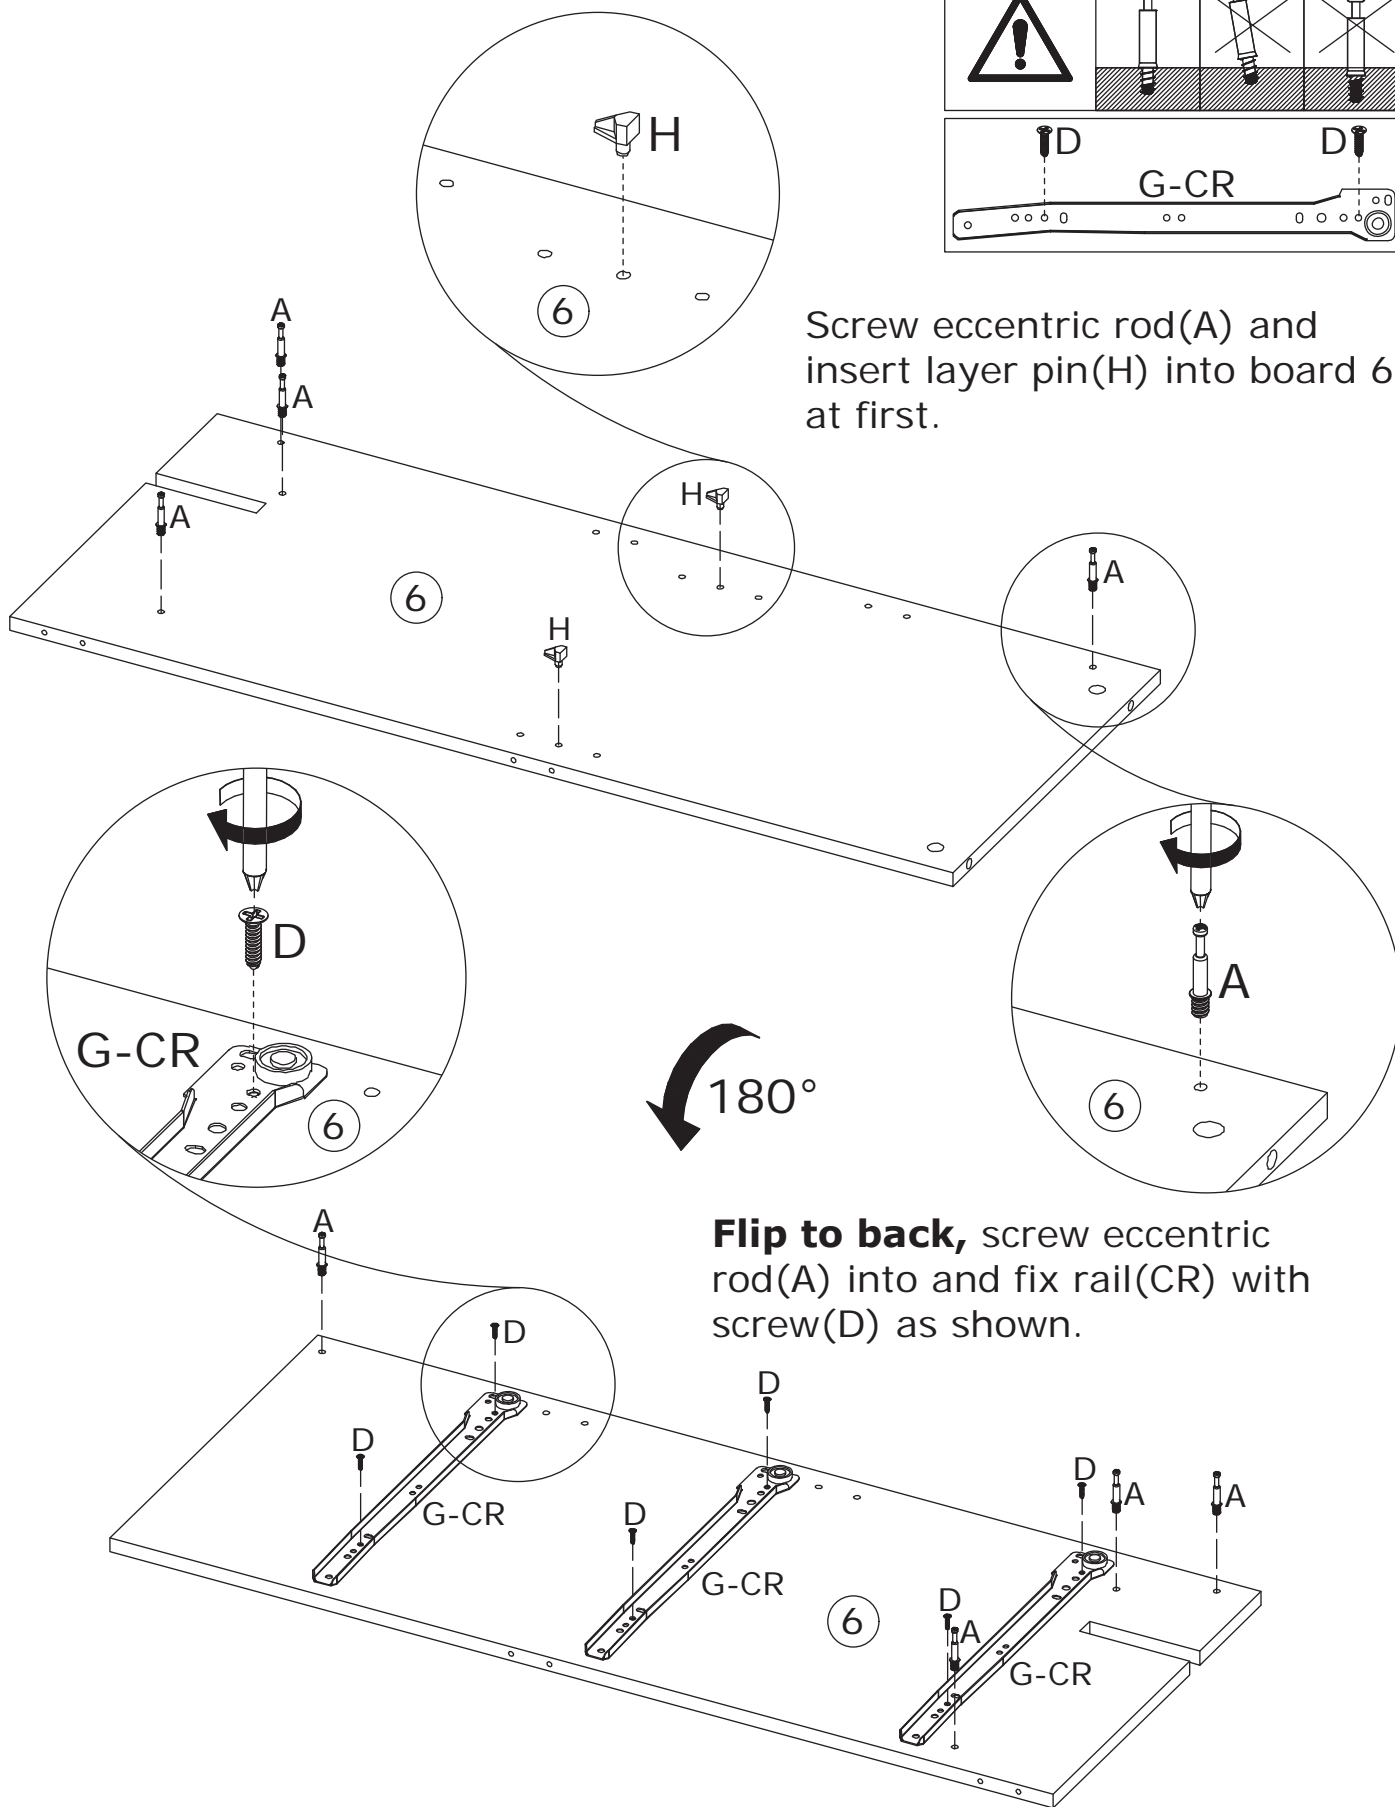

**Flip to back**, screw eccentric rod(A) into and fix rail(CR) with screw(D) as shown.


# 3
   
<p>A x 18</p>  <p>M6 x 35 mm</p>	<p>D x 6</p>  <p>M3 x 12 mm</p>	<p>E x 8</p>  <p>M3.5 x 14 mm</p>	<p>G x 3</p>  <p>CL HG-30</p>	<p>J x 4</p>  <p>JM-13</p>	
---	--	--	---	---	---



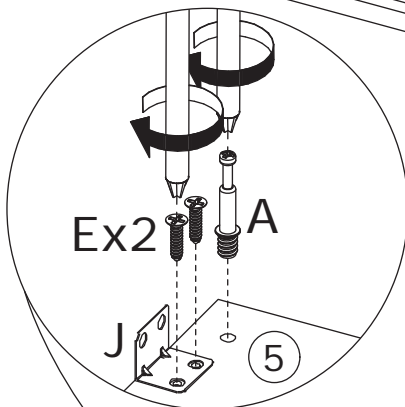
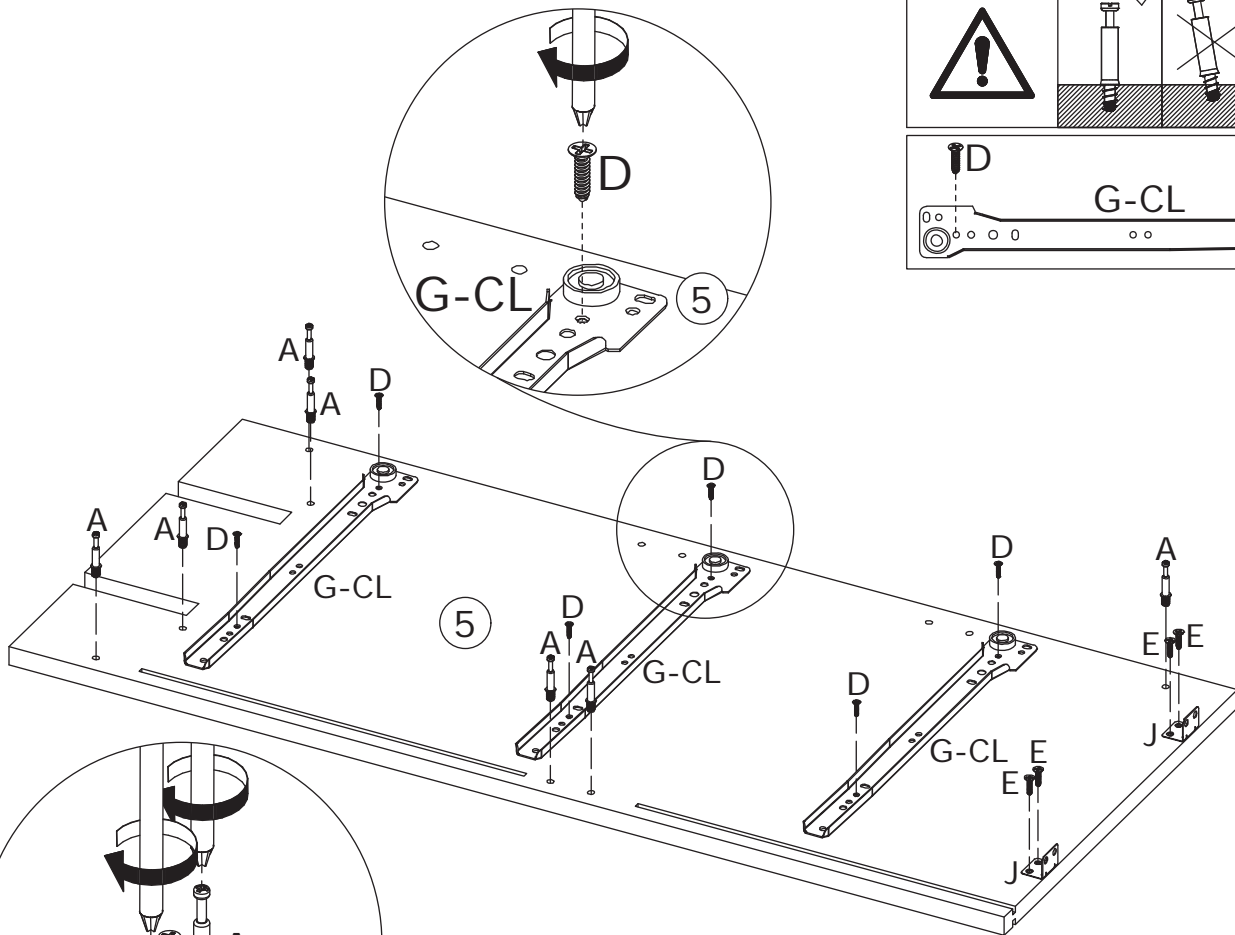
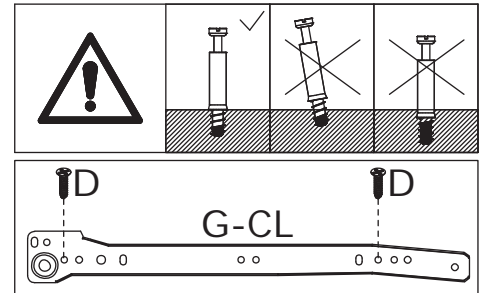


Screw eccentric rod(A) into board 5, fix rail(CL) and part(J) with screw(D) and (E) at first.

 
**Flip to back,** screw eccentric rod(A) into and fix part(J) with screw(E) as shown.

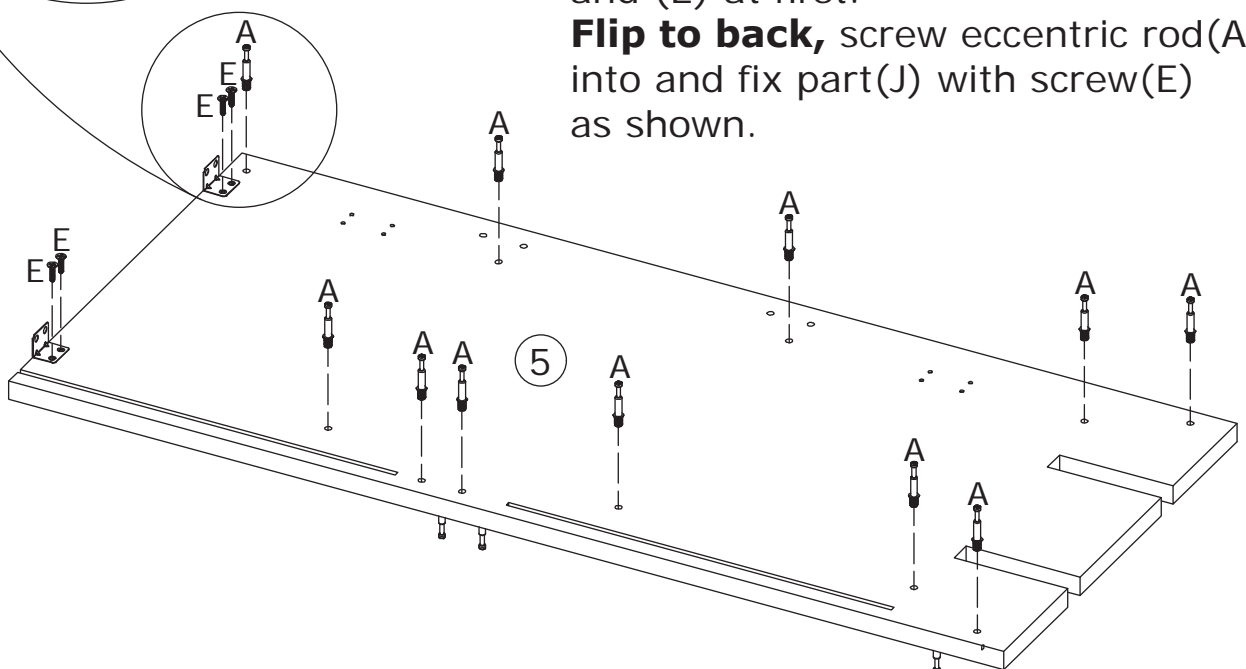

4


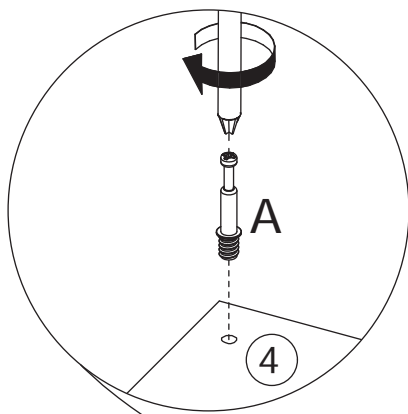 
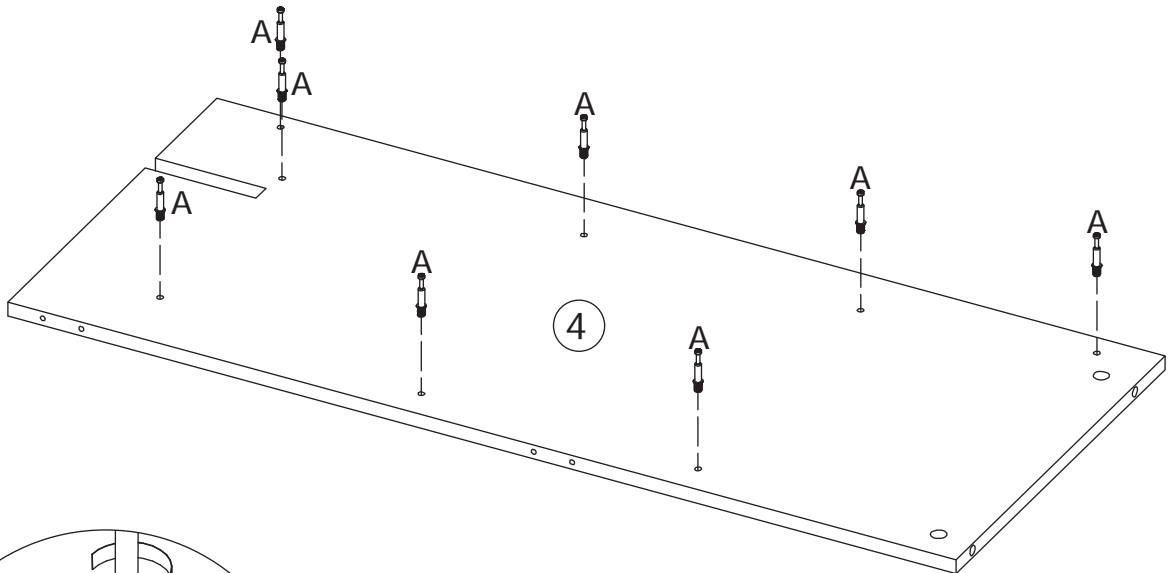 
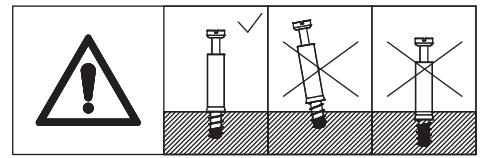 
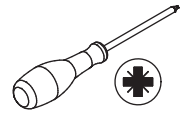
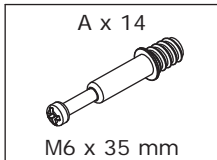 


 Screw eccentric rod(A) into board 4 at first.  
**Flip to back,** screw eccentric rod(A) into as shown.

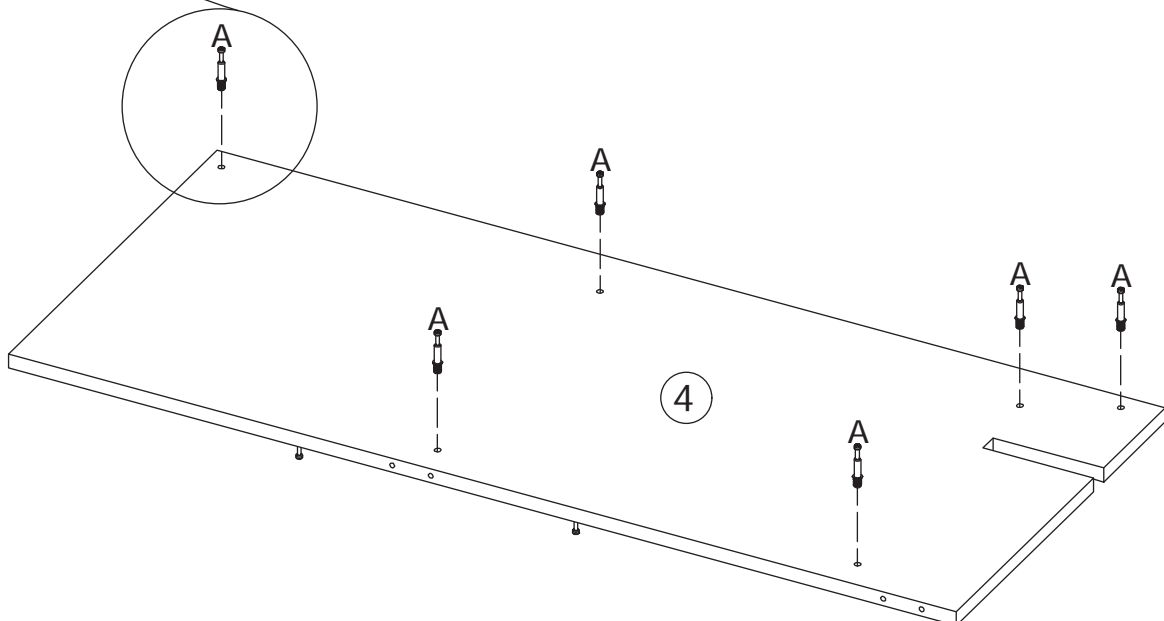








5

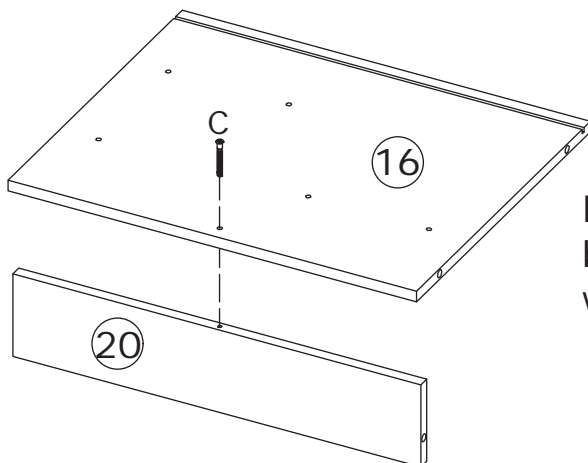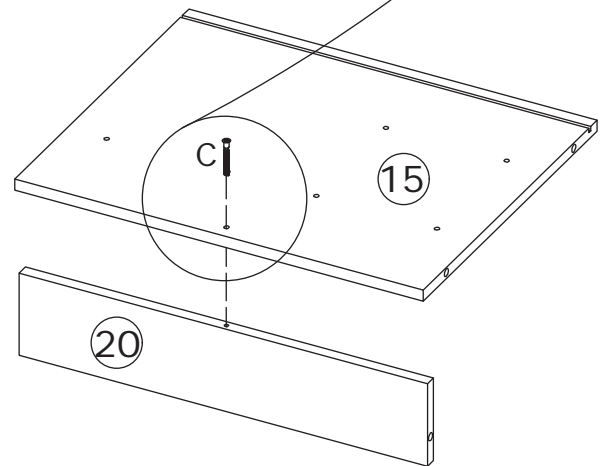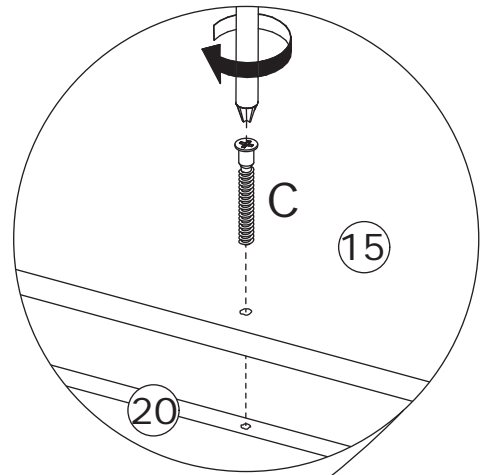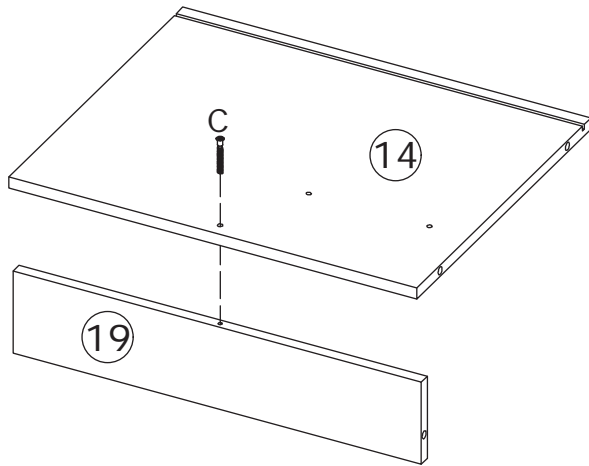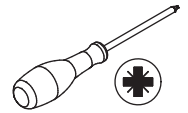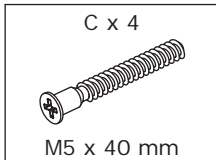     

 
Fix board 19 to board 14; board 20 to board 15 and 16; board 21 to board 17 with screw(C) as shown.

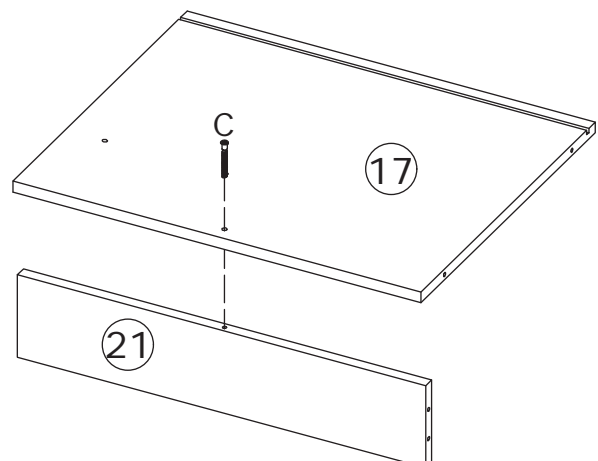




6

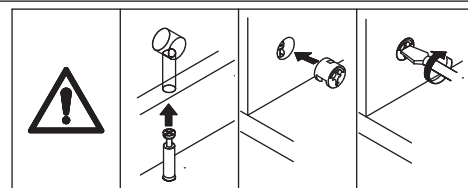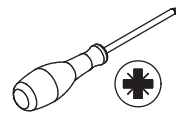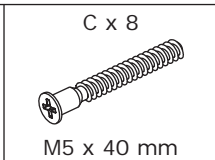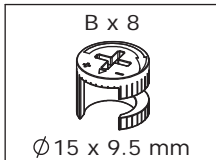   

 
Connect board 6 and 5 to board 8,16 and 20, add cam lock(B) into board 8,16,20 and turn clockwise to tighten as shown.  
Fix board 5 and 6 to board 13 with screw(C) as shown.

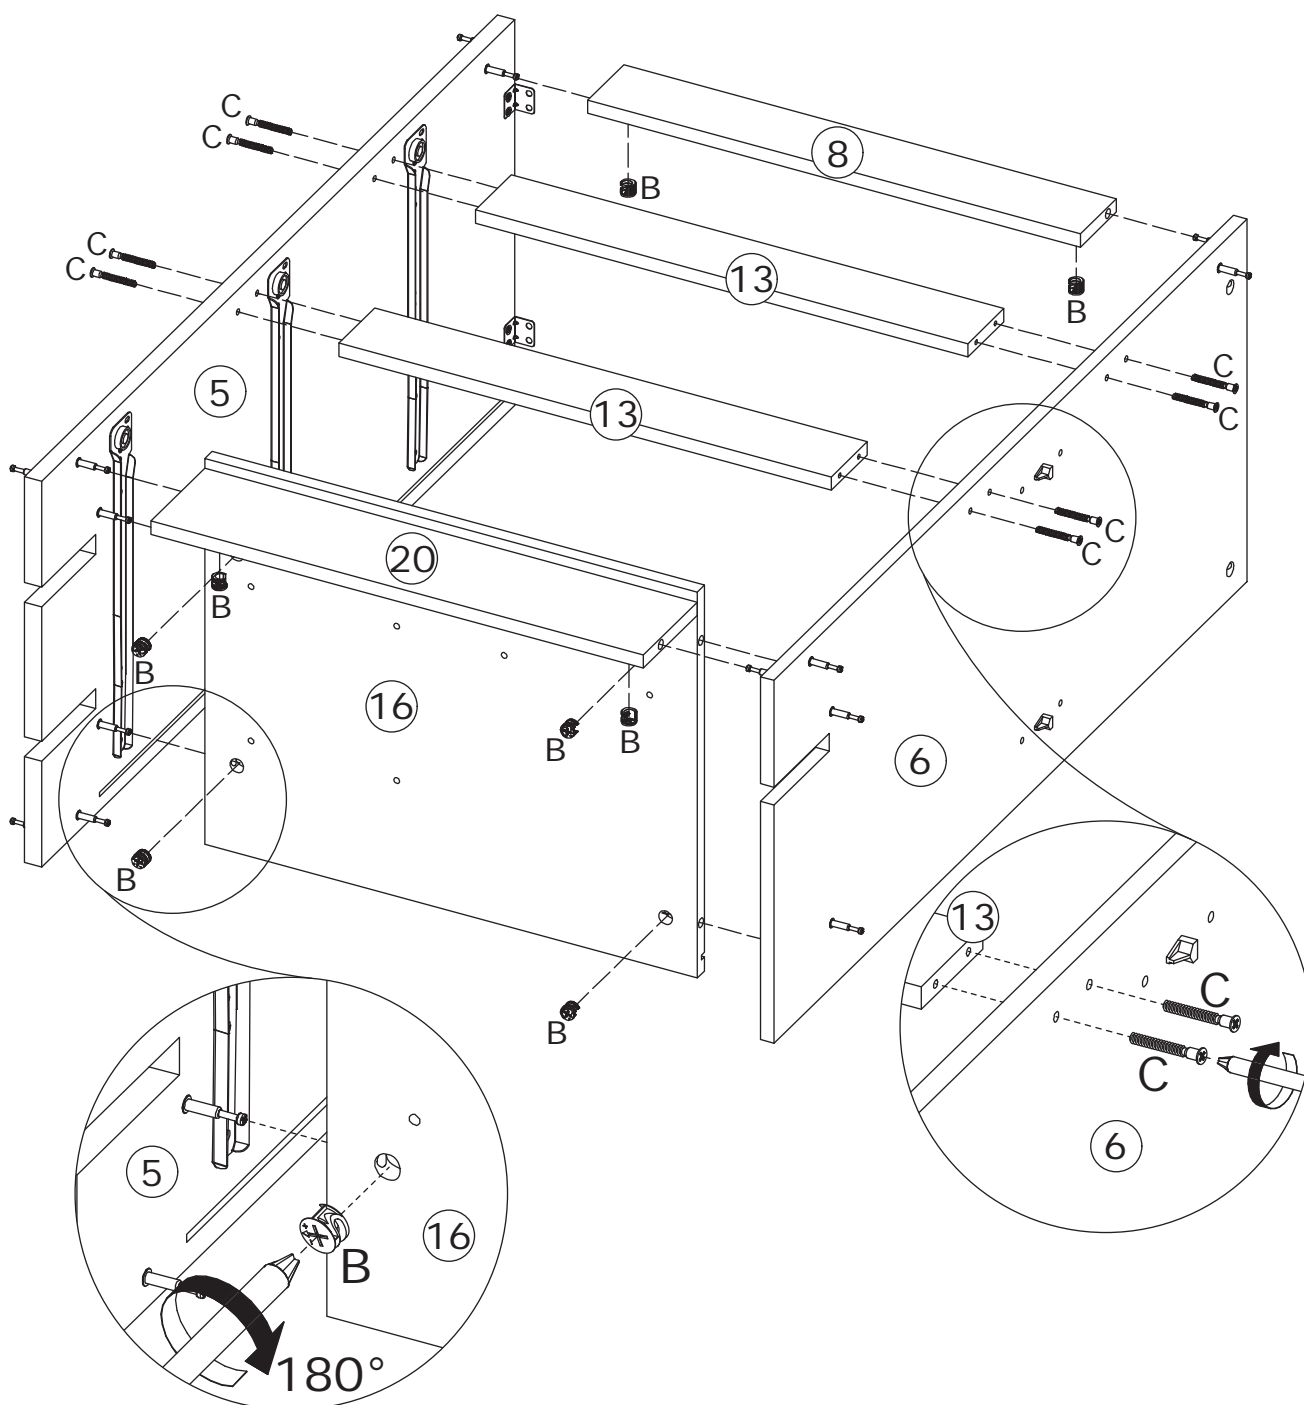




7

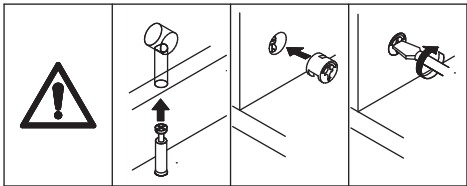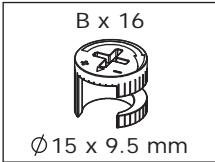   

 
Connect board 4 and 5 to board 8, 11, 15 and 20, add cam lock(B) into and turn clockwise to tighten as shown.

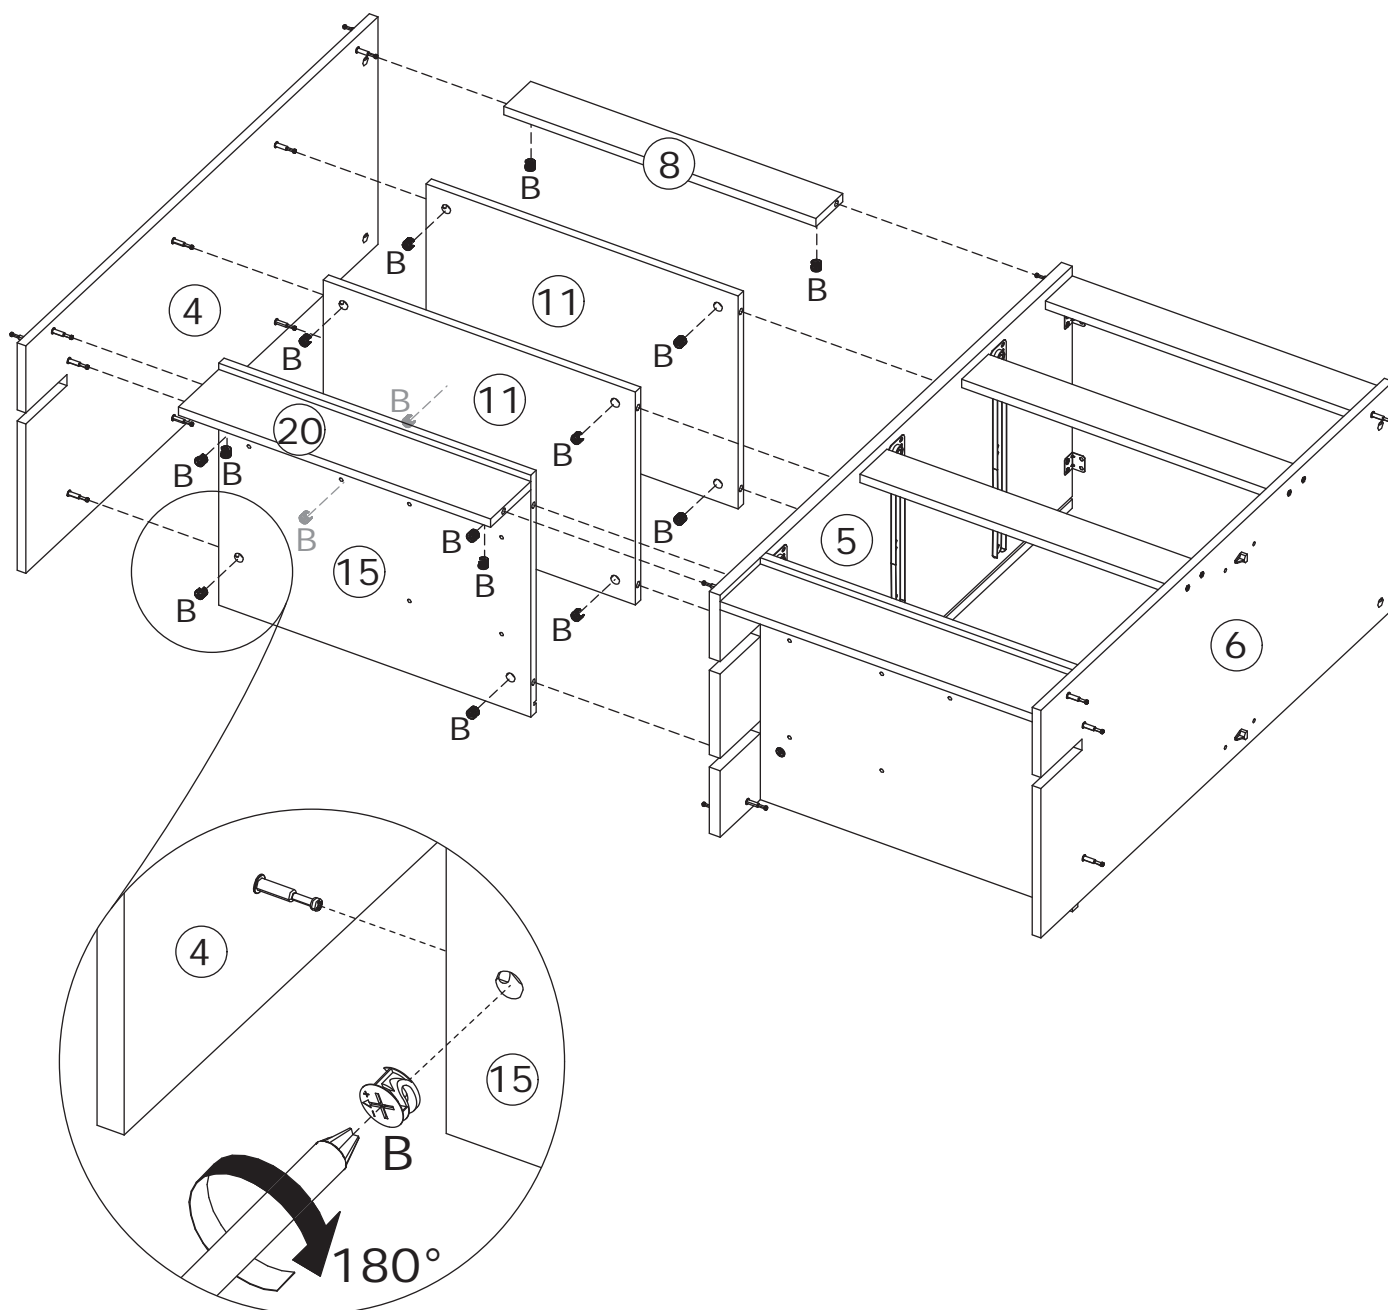



8

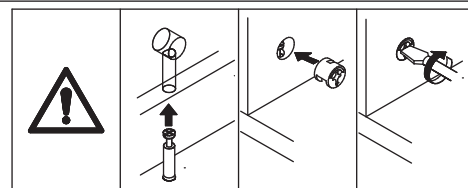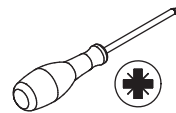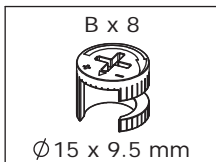  

 
Attach board 11, 19 and 14 to board 4;  
board 17 and 21 to board 6, add cam  
lock(B) into and turn clockwise to tighten  
as shown.

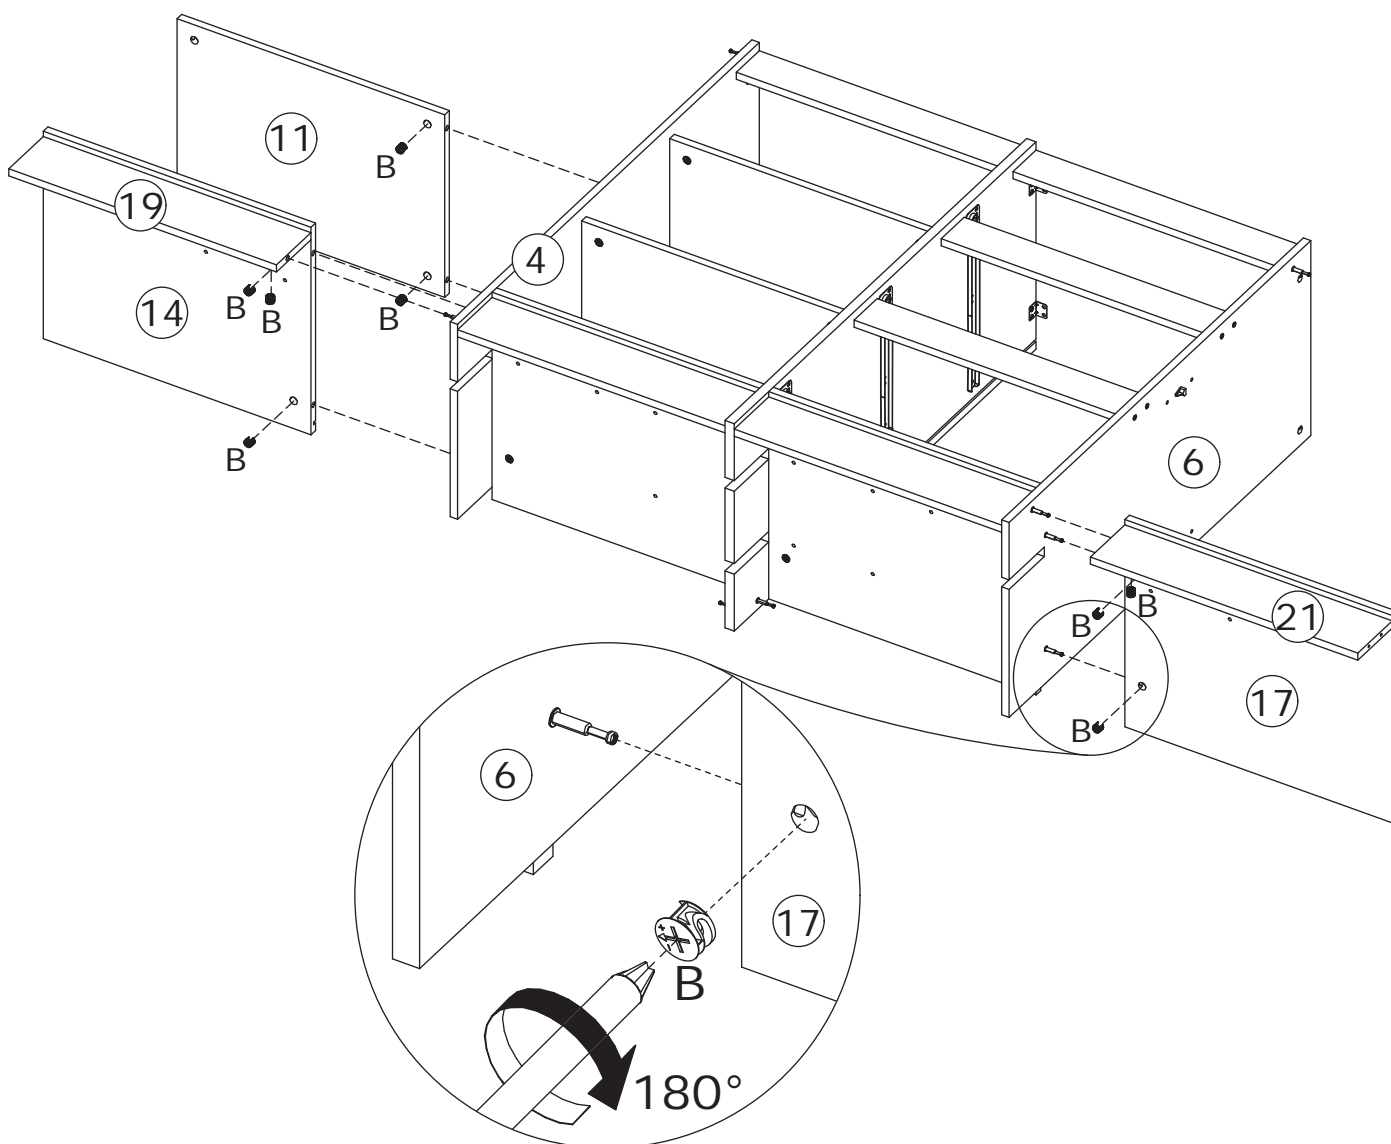




9

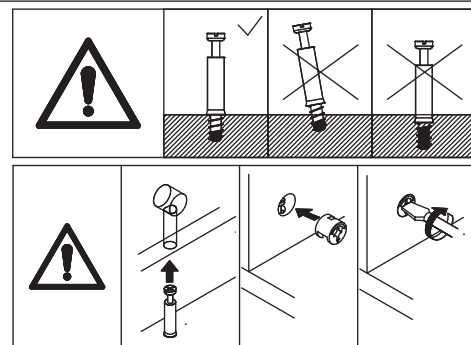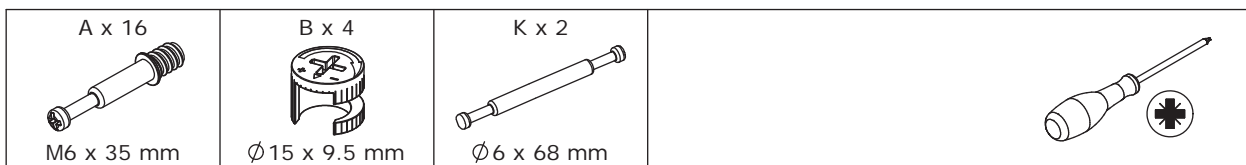  

 Screw eccentric rod(A) into board 1 and 2 at first. Connect board 1 to board 2 with rod(K), add cam lock(B) into and turn clockwise to tighten as shown.

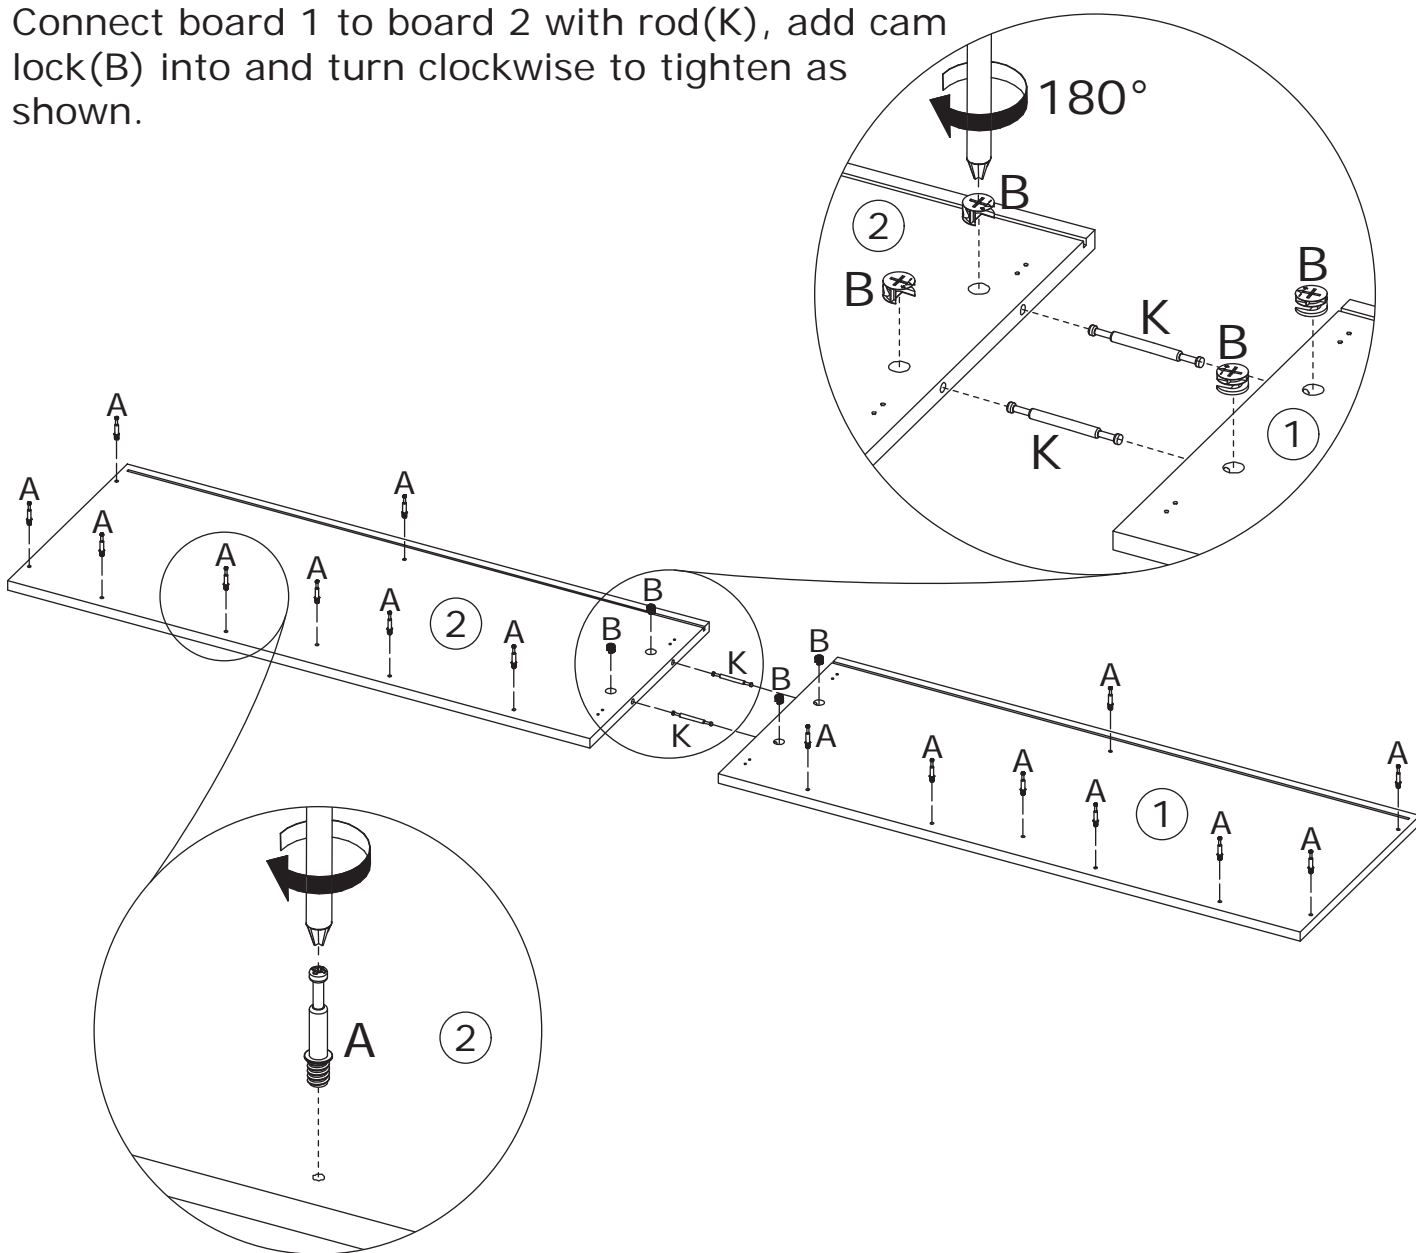

10

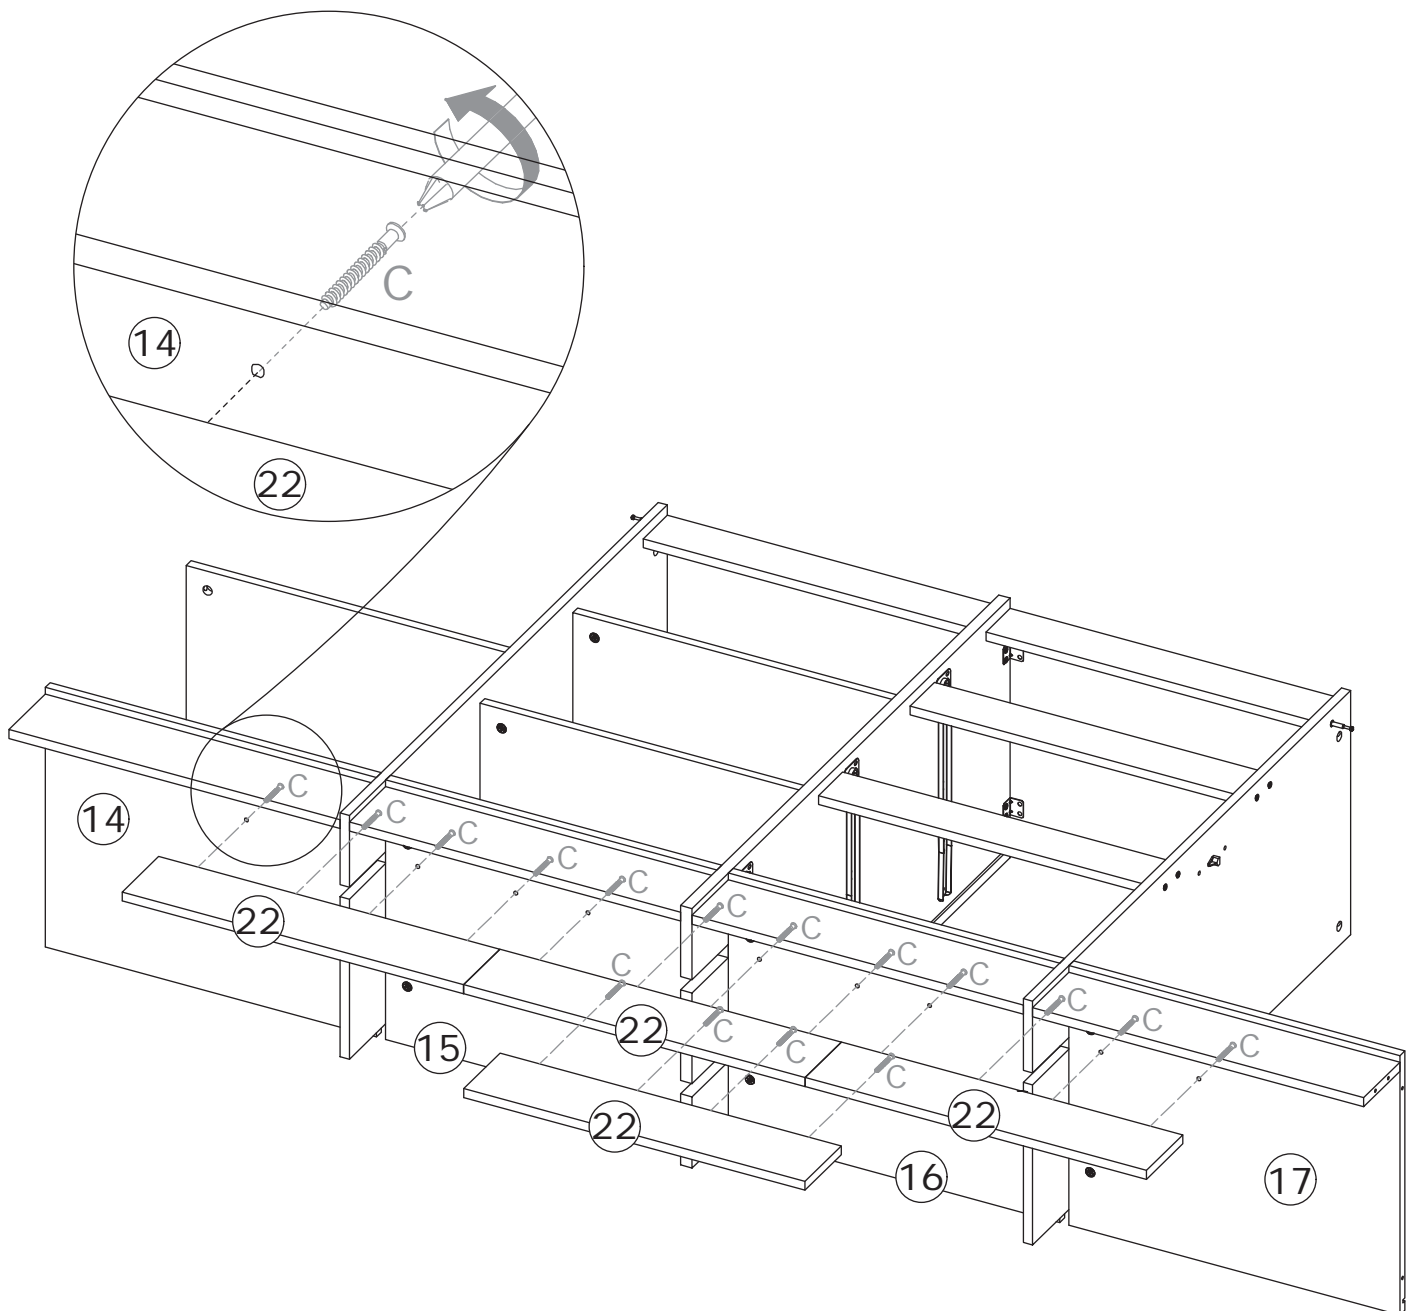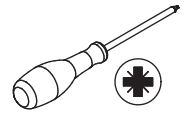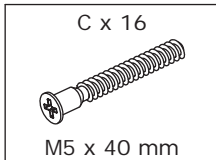  

Fix board 22 to the unit with screw(C) as shown.


# 11

 B x 9




Ø 15 x 9.5 mm

C x 6






M5 x 40 mm

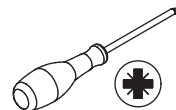 

Attach board 10 and 18 to board 5, add cam lock(B) into and turn clockwise to tighten as shown.

Insert back board 9 along available grooves. Attach board 3 and 8 to board 4, 10 and 11, add cam lock(B) into and turn clockwise to tighten as shown.

   Fix board 3 to board 14,18 and 19 with screw(C) as shown.

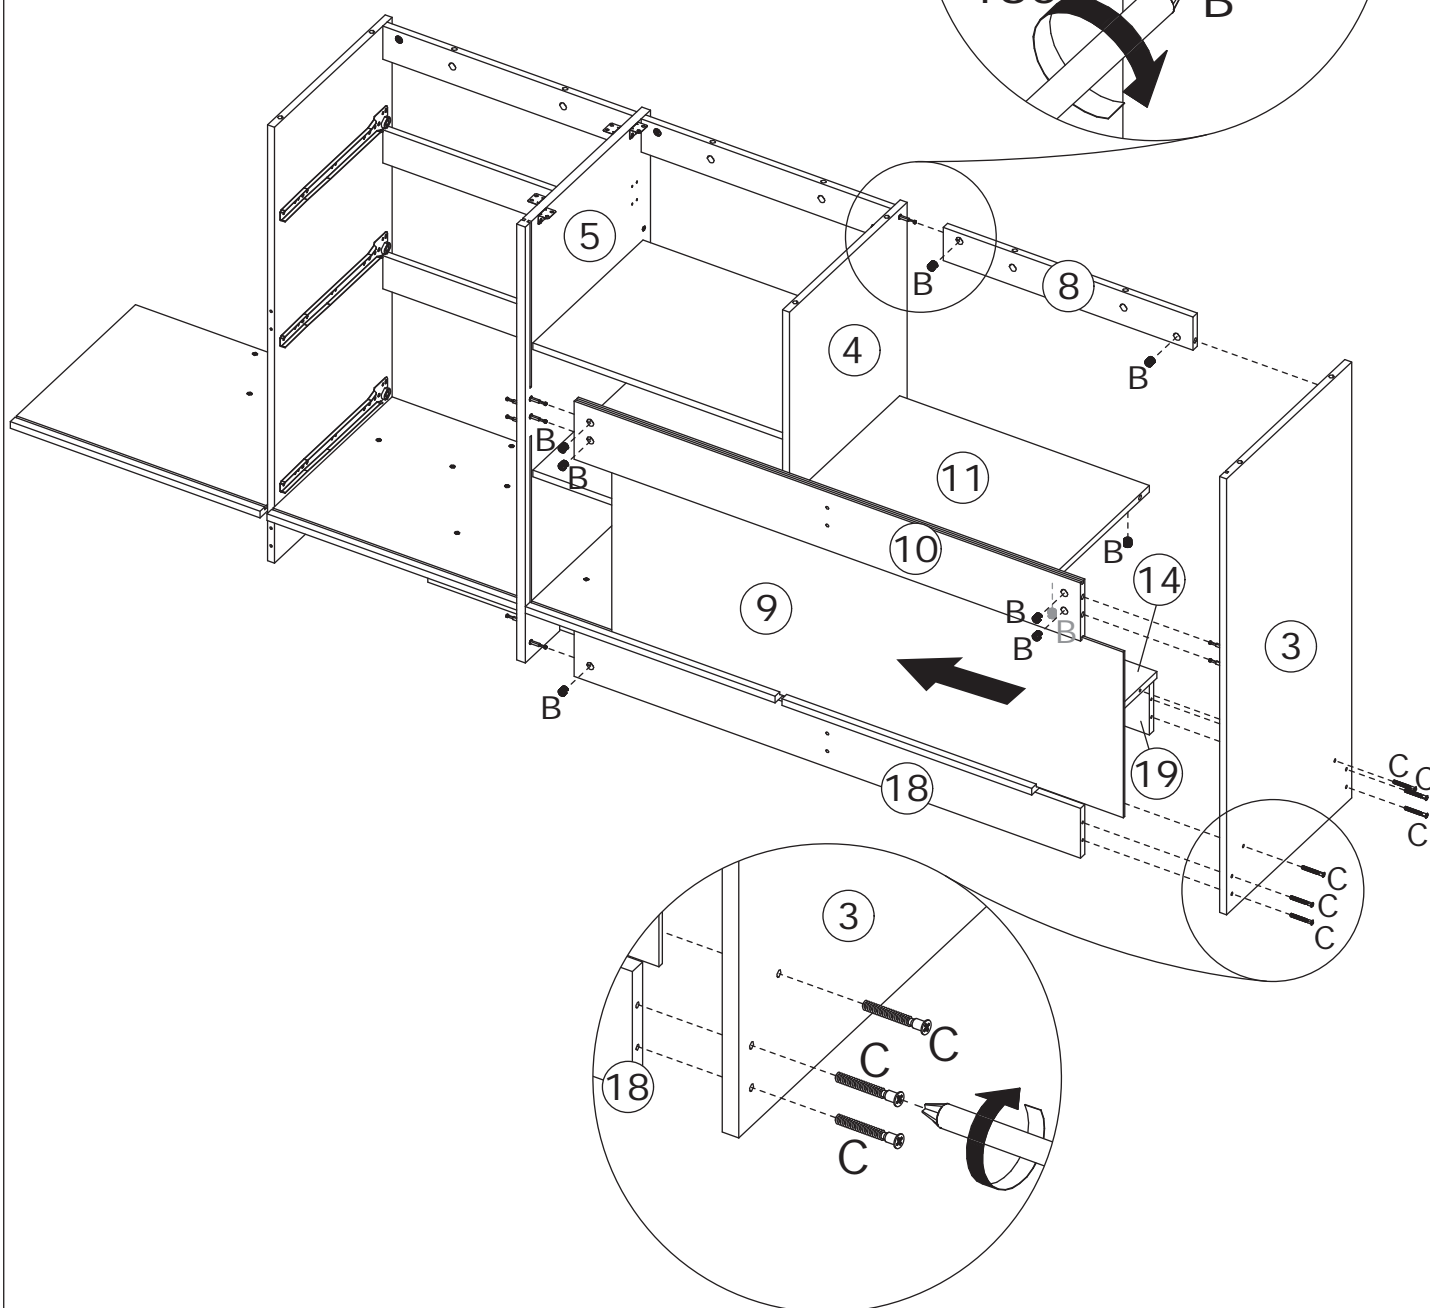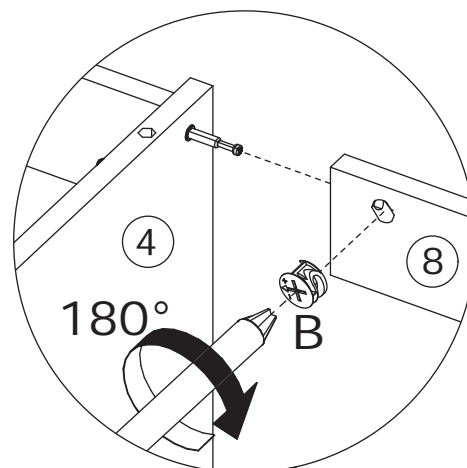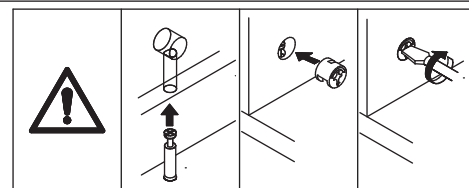


# 12

B x 7






Ø 15 x 9.5 mm

 
C x 6



M5 x 40 mm

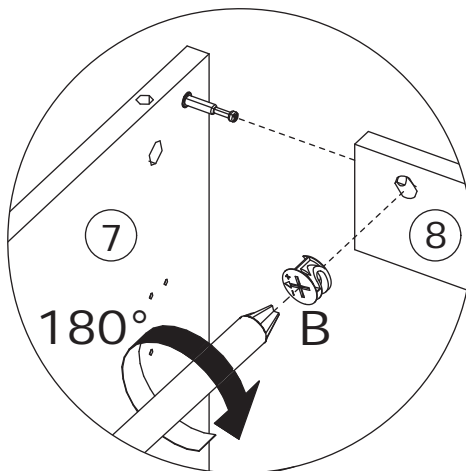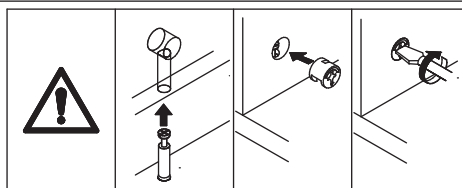   

 
 
 
 
Attach board 10 and 18 to board 5, add cam lock(B) into and turn clockwise to tighten as shown.

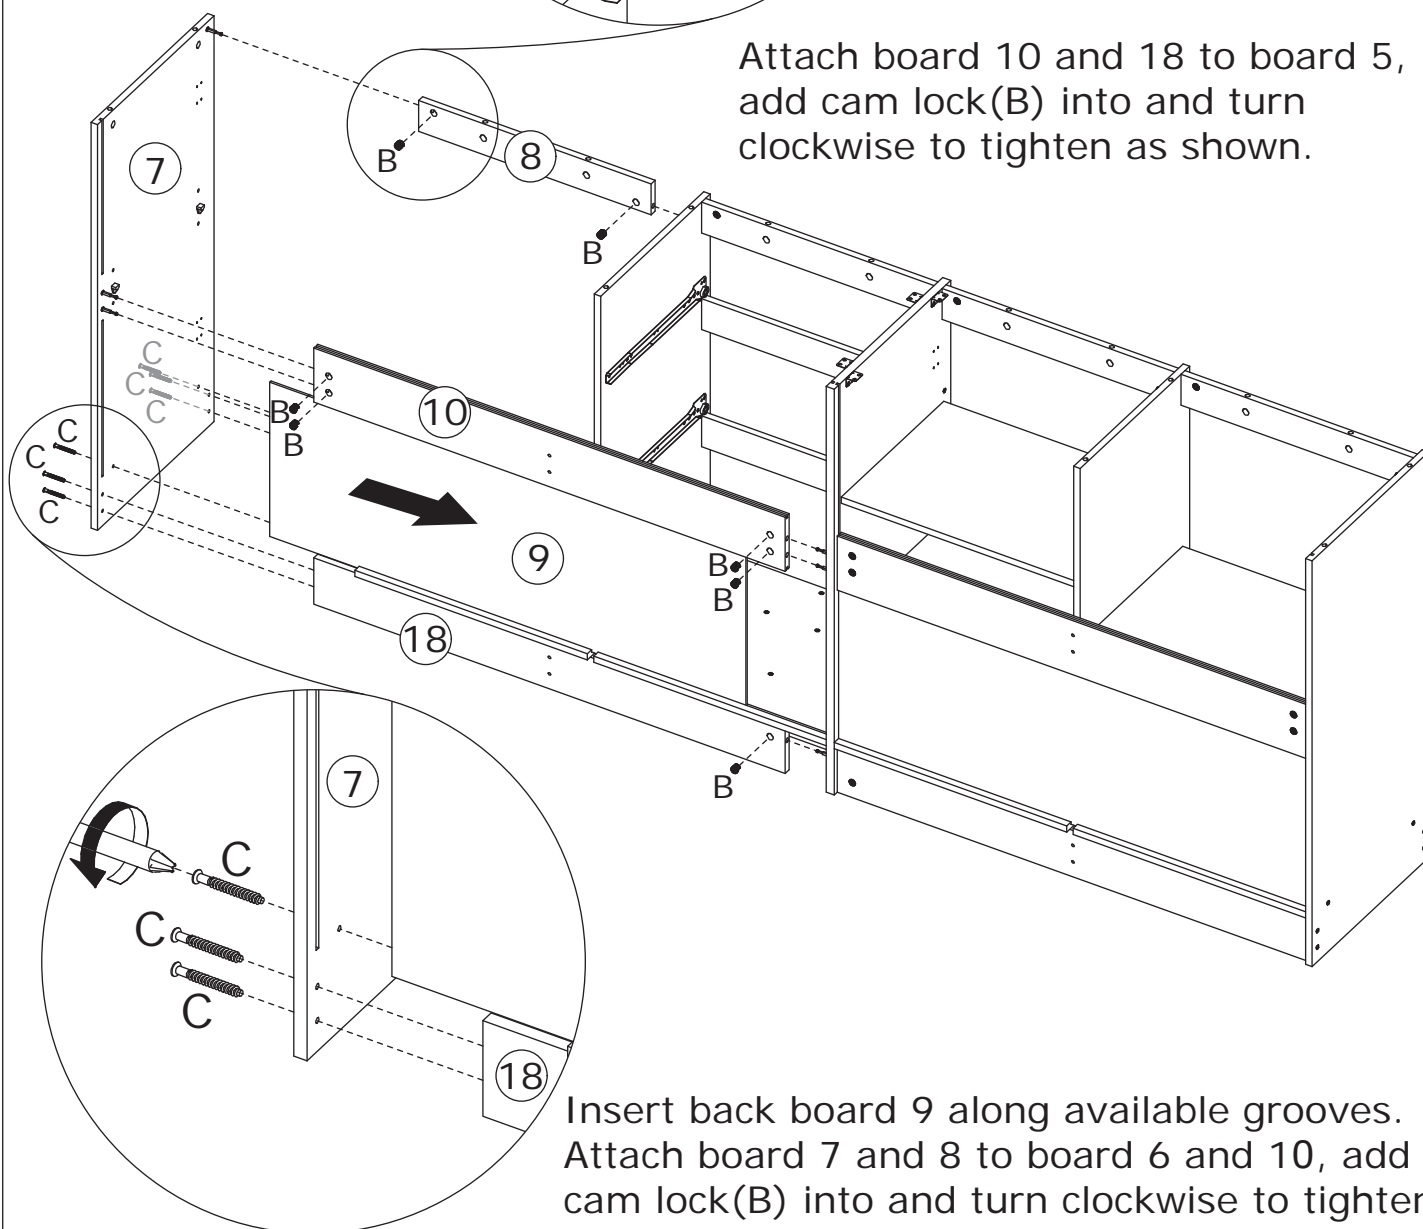


Insert back board 9 along available grooves. Attach board 7 and 8 to board 6 and 10, add cam lock(B) into and turn clockwise to tighten as shown. Fix board 7 to board 17,18 and 21 with screw(C) as shown.



# 13





 
<p>B x 16</p>  <p>Ø 15 x 9.5 mm</p>	<p>C x 8</p>  <p>M5 x 40 mm</p>	<p>E x 8</p>  <p>M3.5 x 14 mm</p>	
--	--	--	---

Insert back board 9 along available grooves.


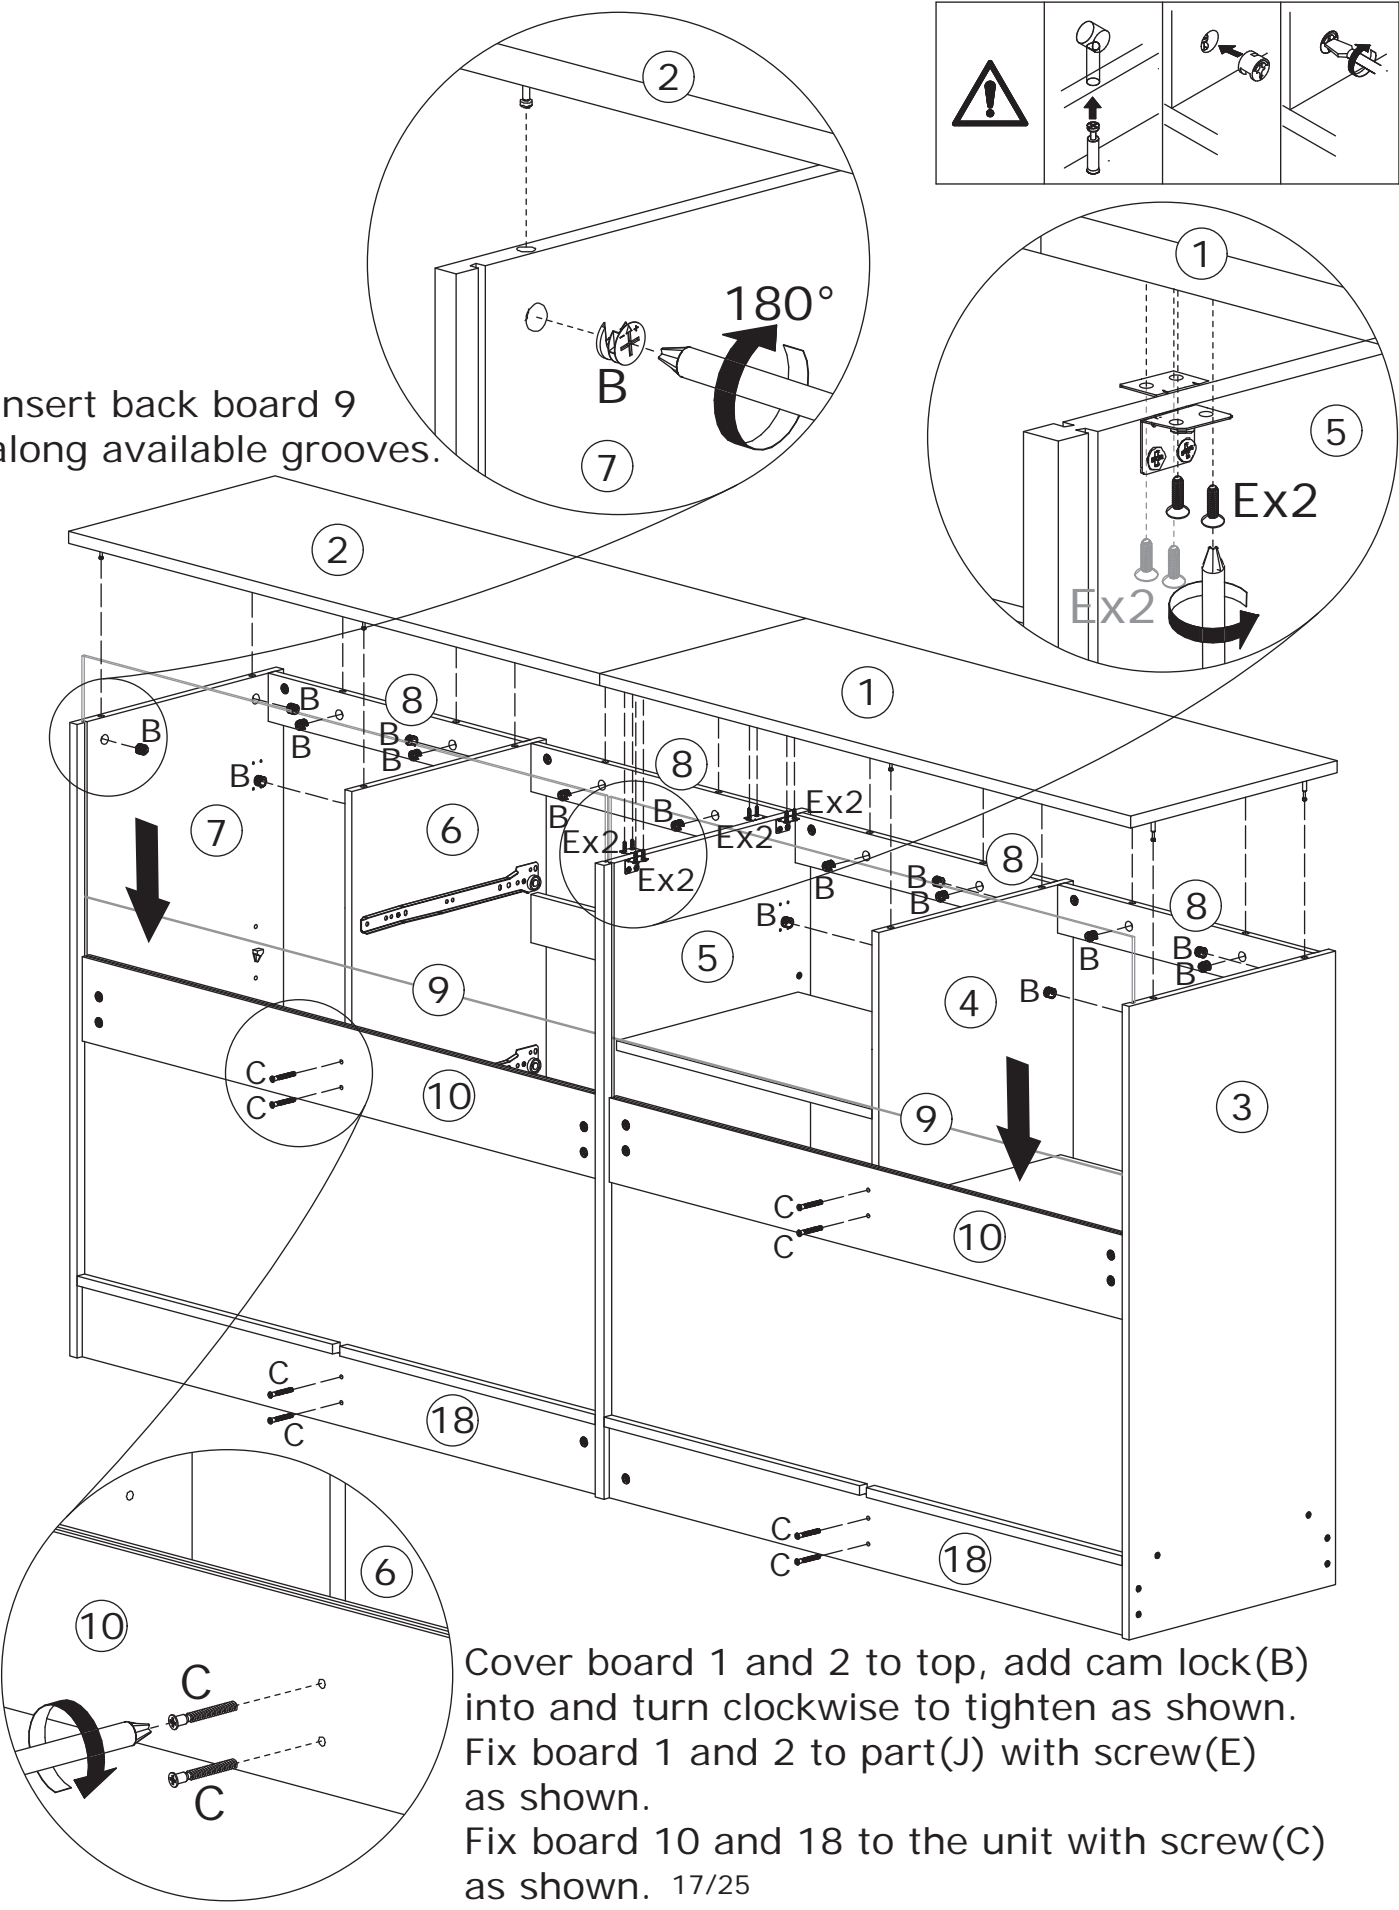


Cover board 1 and 2 to top, add cam lock(B) into and turn clockwise to tighten as shown. Fix board 1 and 2 to part(J) with screw(E) as shown. Fix board 10 and 18 to the unit with screw(C) as shown. 17/25

   

 
14

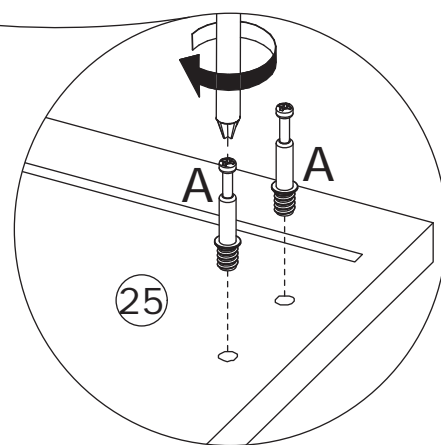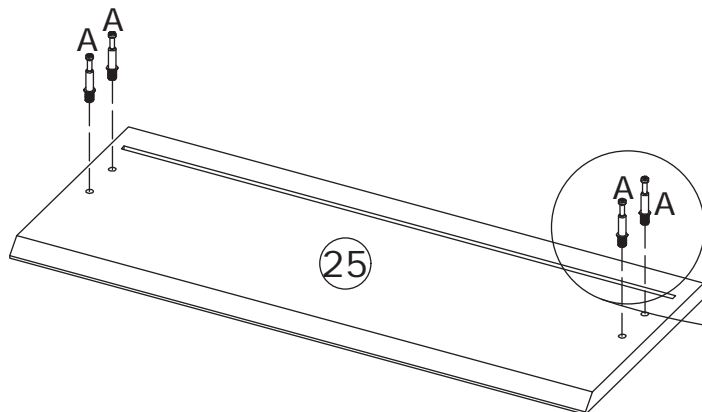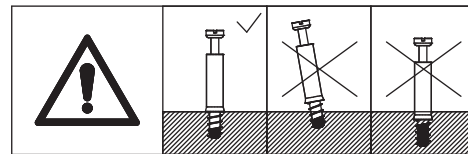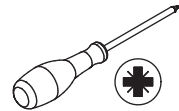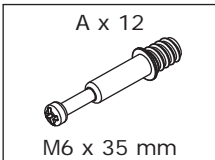

 
 
Screw eccentric rod(A) into board 25, 26 and 27 at first.

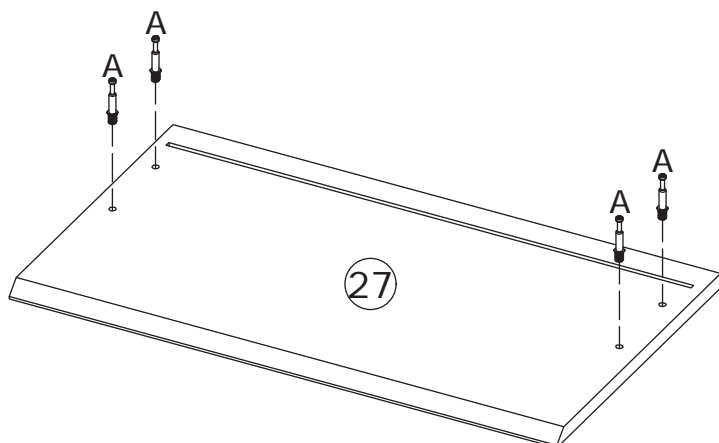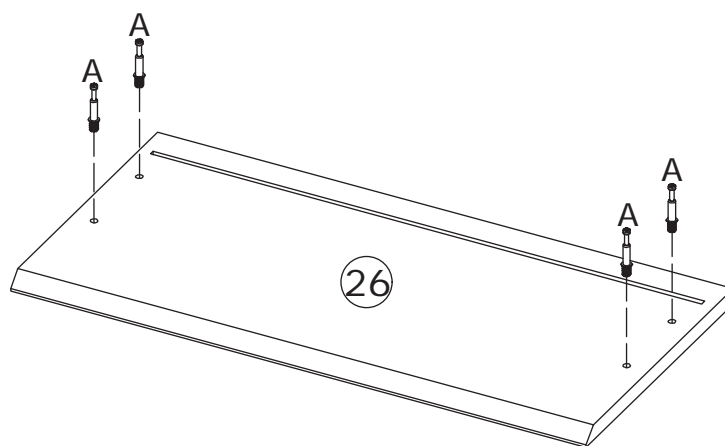





15

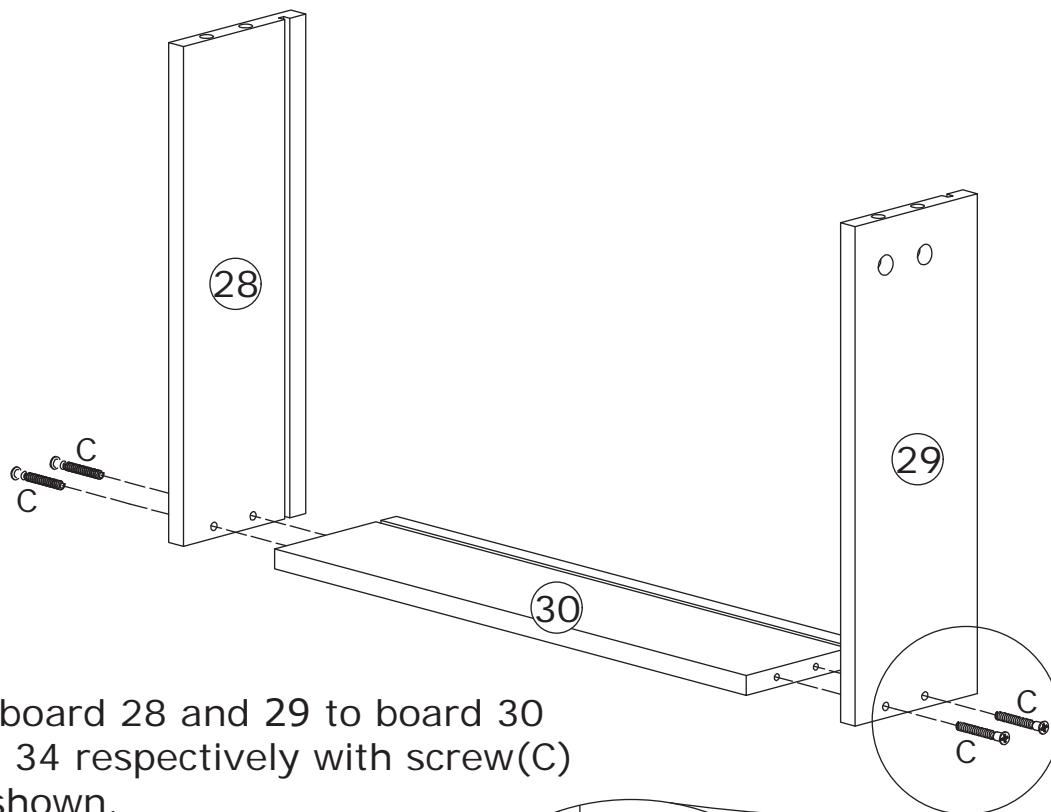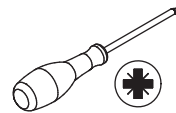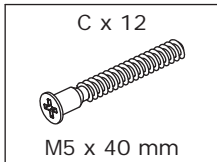  


 
 
Fix board 28 and 29 to board 30 and 34 respectively with screw(C) as shown.

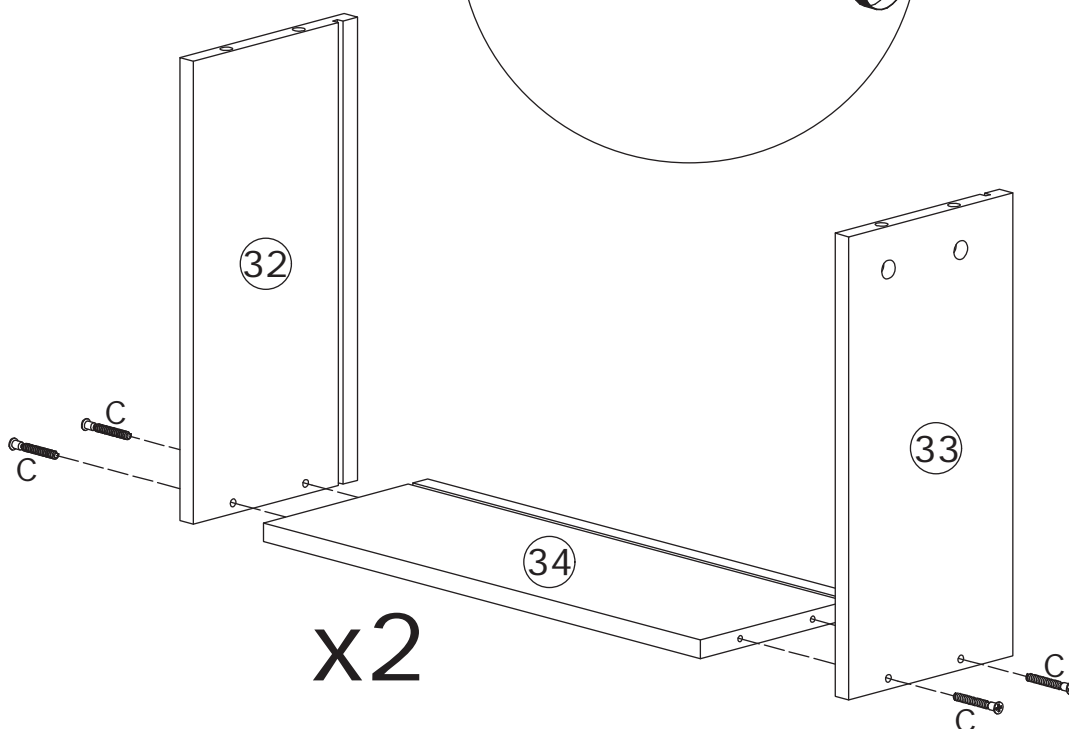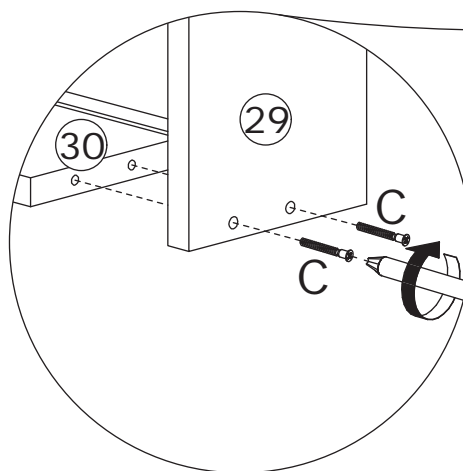

# 16

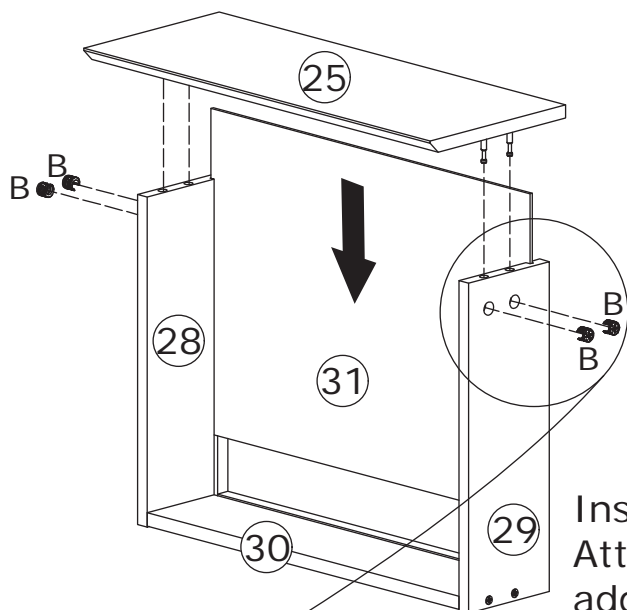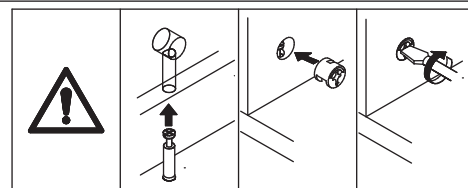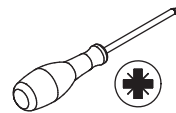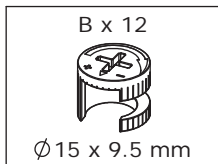   

   Insert board 31 along available grooves. Attach board 25, 26 and 27 to drawers, add cam lock(B) into and turn clockwise to tighten as shown.

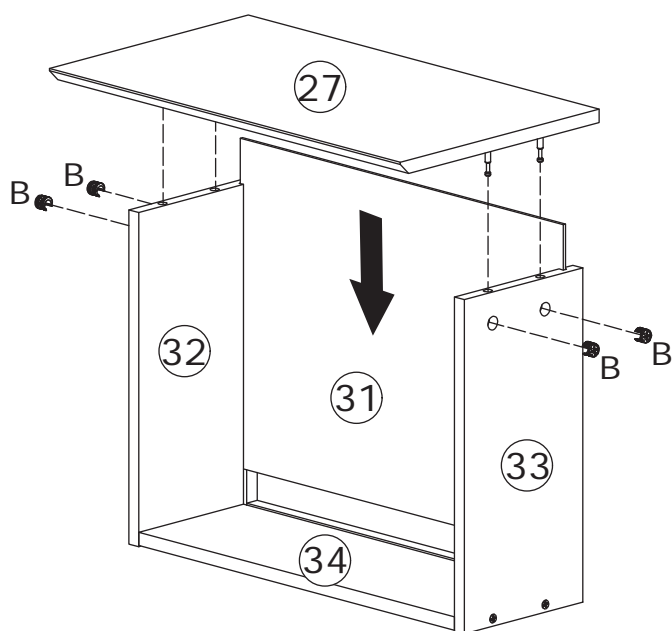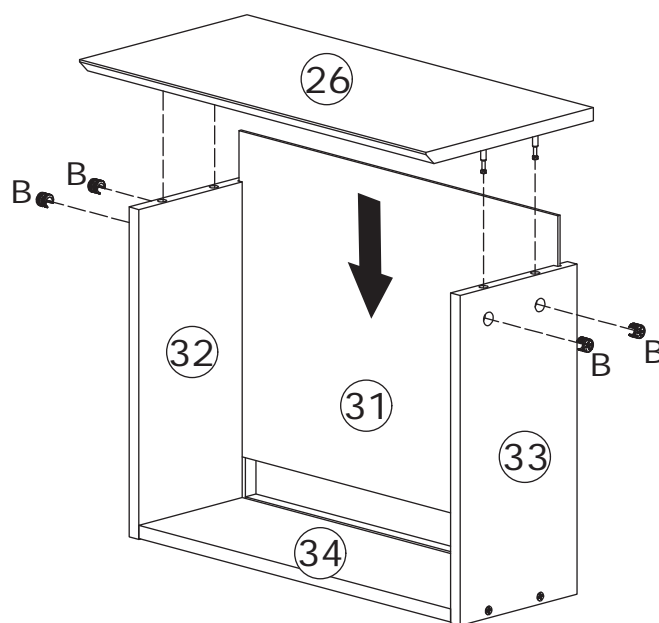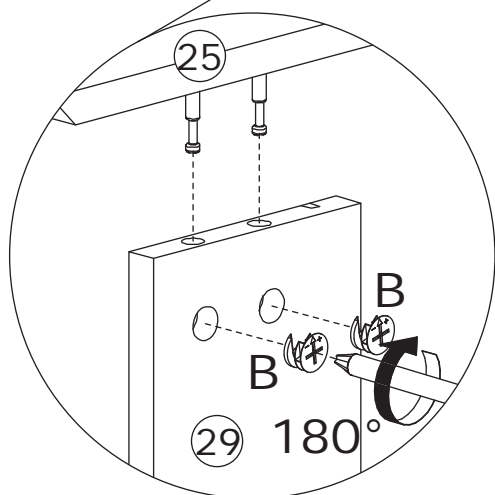


# 17

D x 12





M3 x 12 mm



 
G x 3

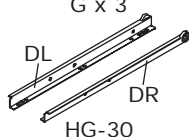

HG-30

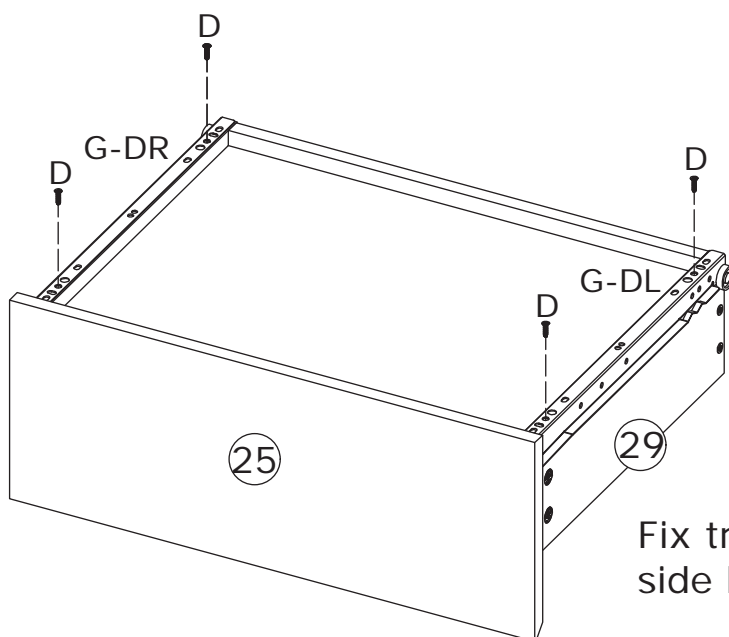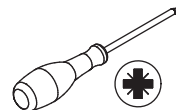 


   Fix track(DL) and (DR) to drawer side boards with screw(D) as shown.

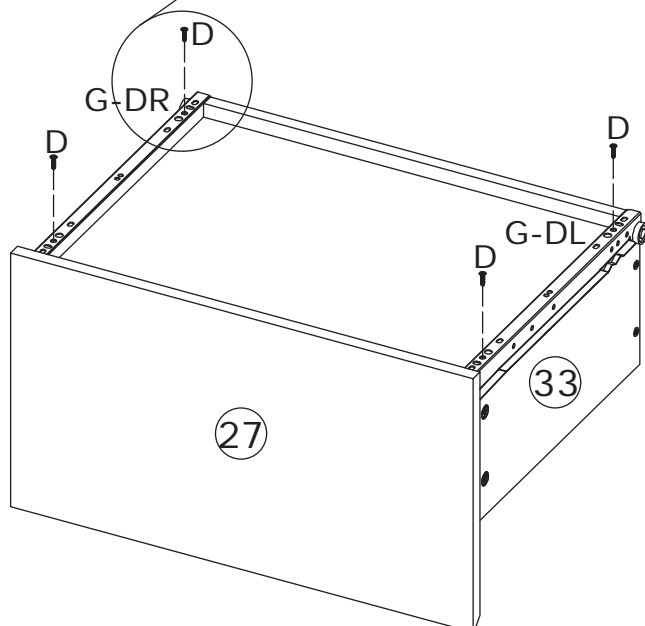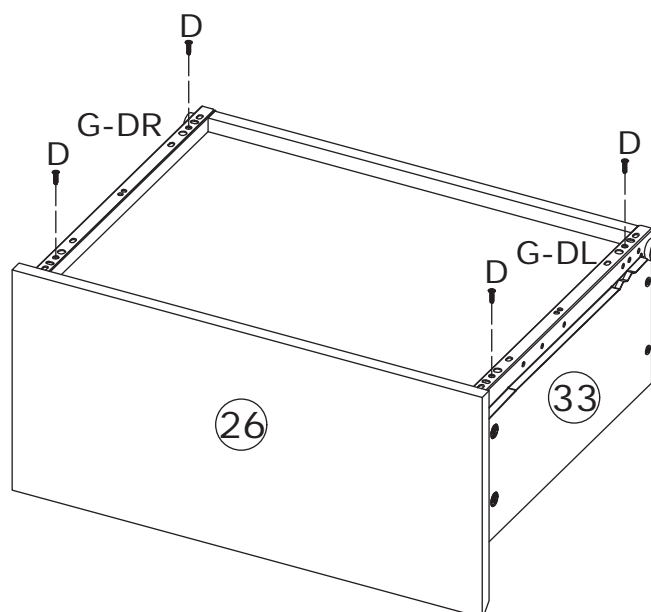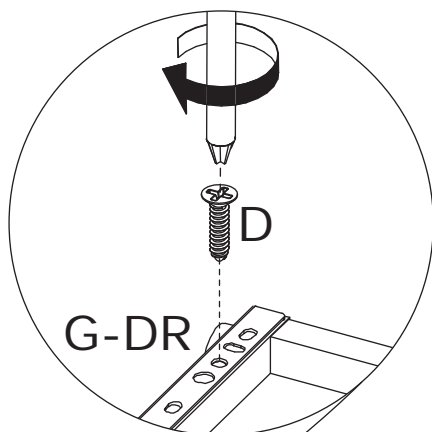

# 18

 E x 12






M3.5 x 14 mm


F x 6



   DWJL

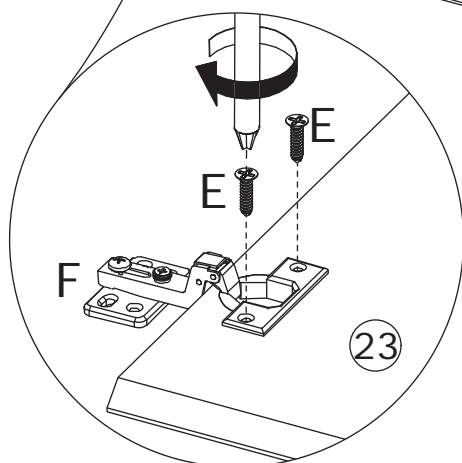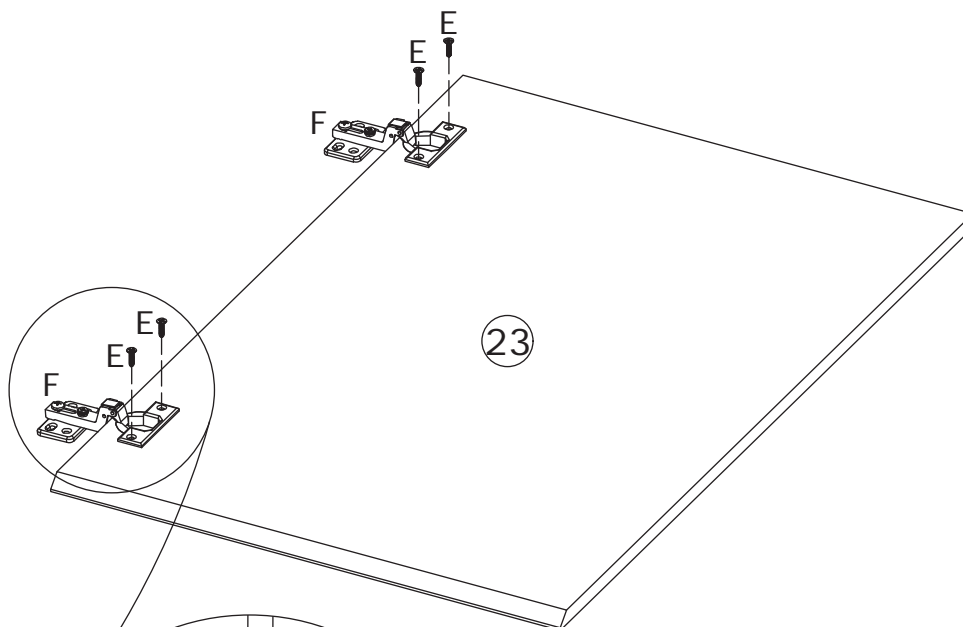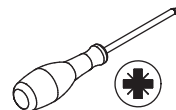


 Fix hinge(F) to board 23 and 24 with screw(E) as shown.

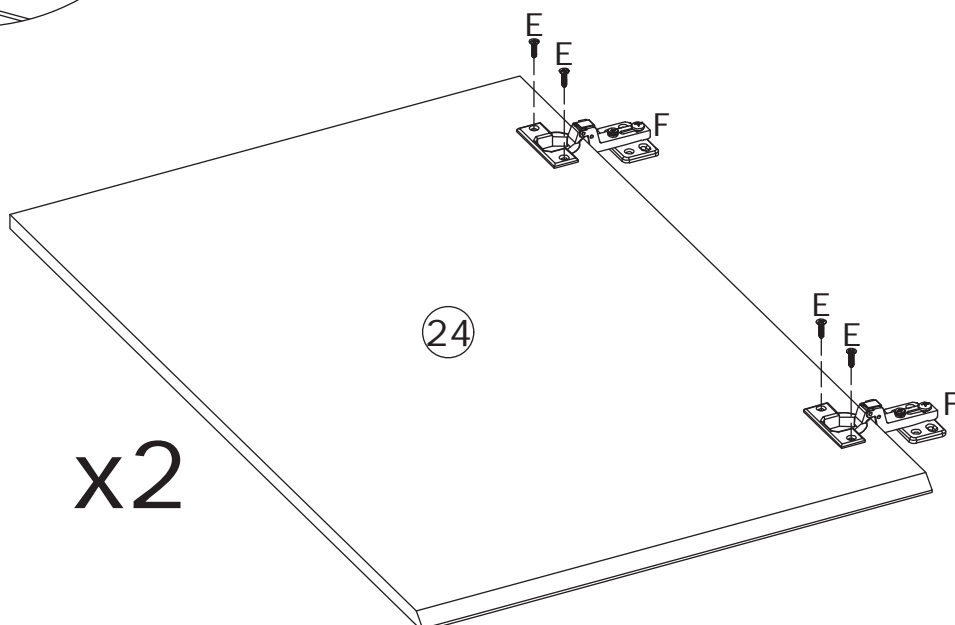

x2

 19

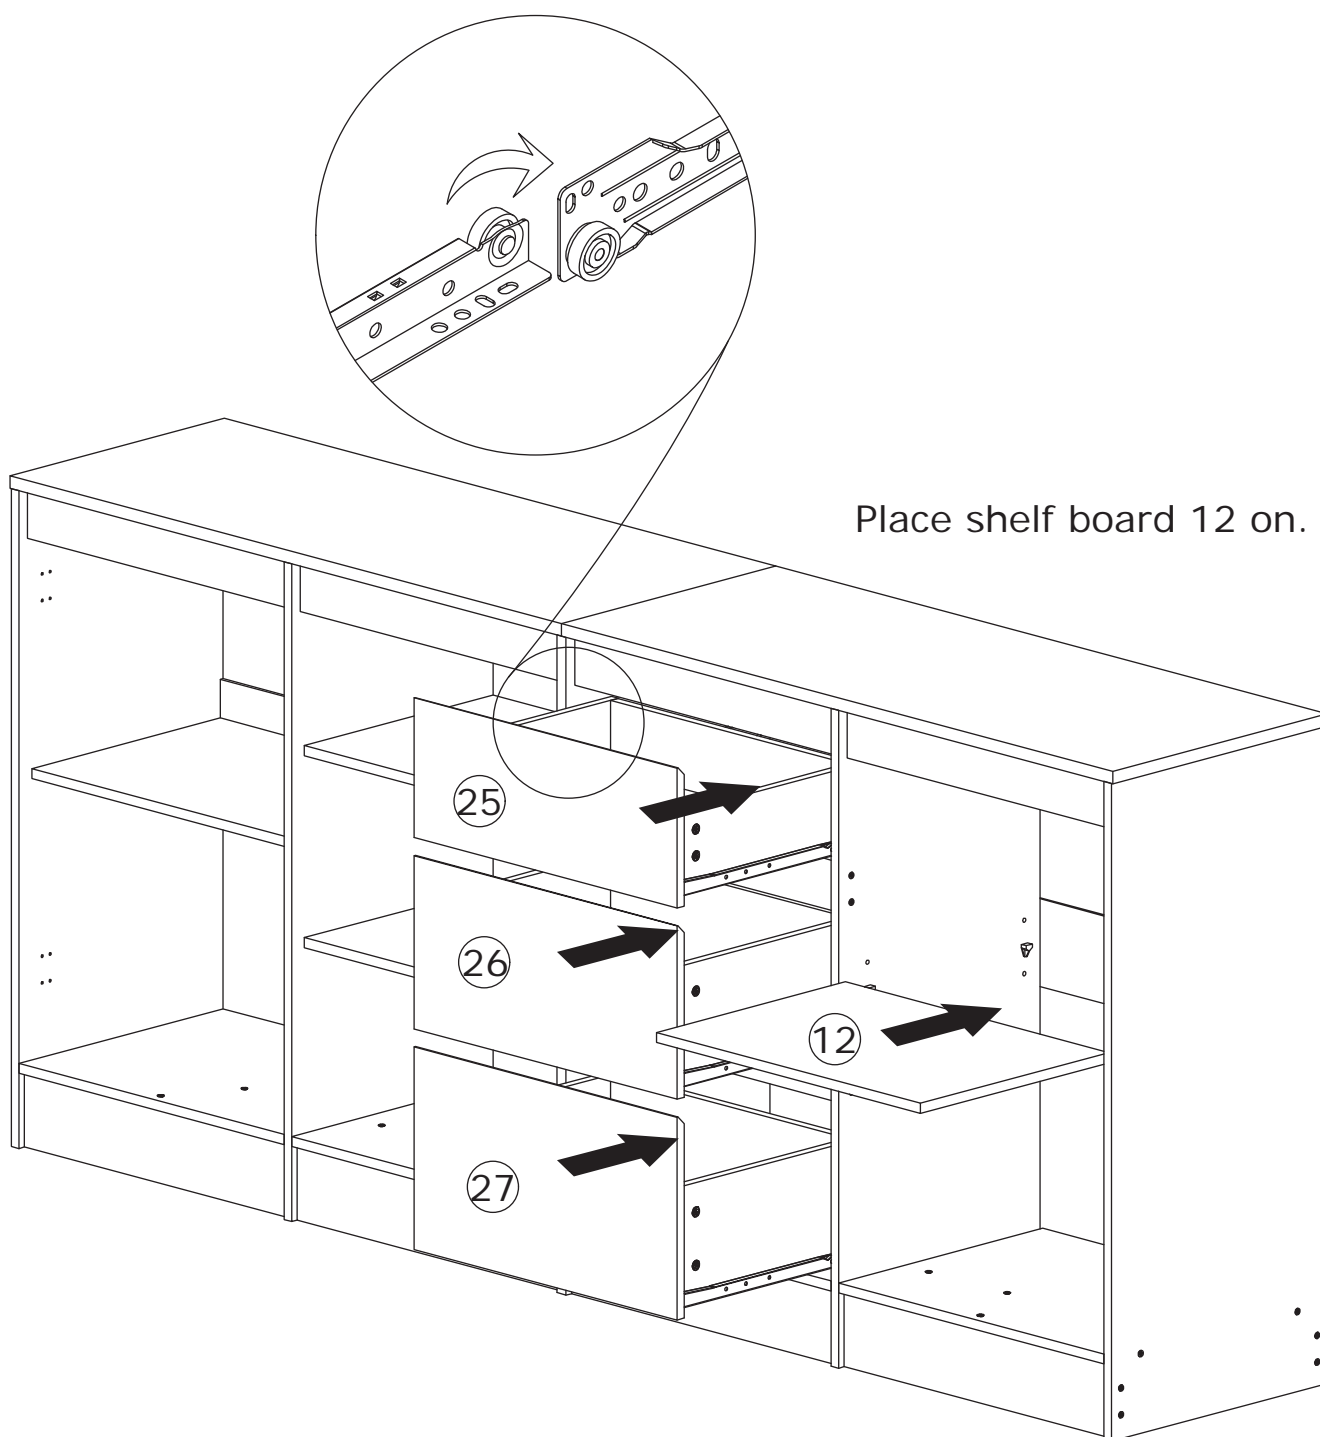


# 20


E x 24




M3.5 x 14 mm

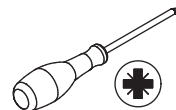

 
 
Assemble door 23 to board 3; door 24 to board 5 and 7 by fixing hinge with screw(E) as shown.

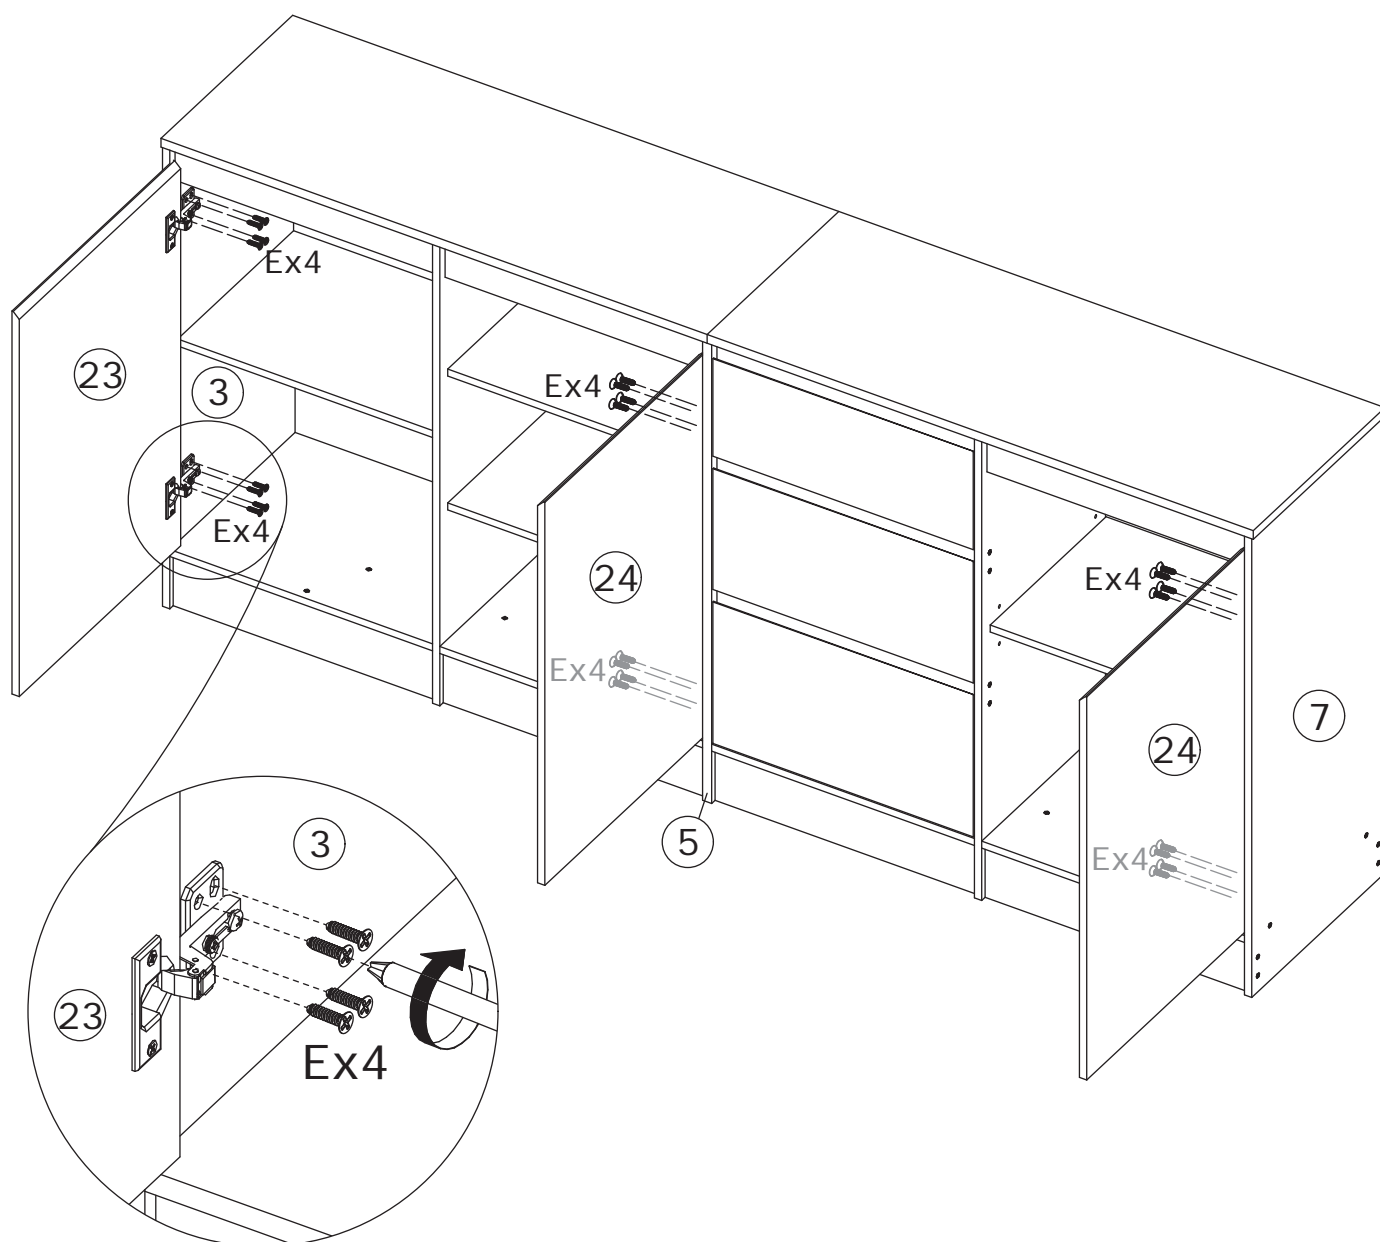






  
If doors are still not aligned if the hinges are properly correctly, please watch the video.

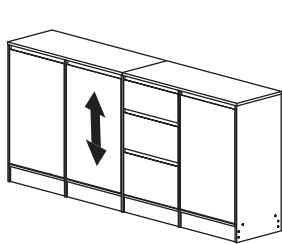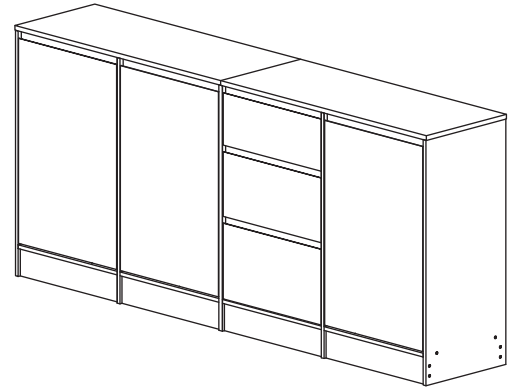



I

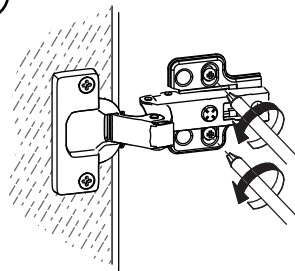 


II

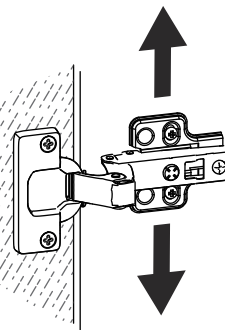 


III

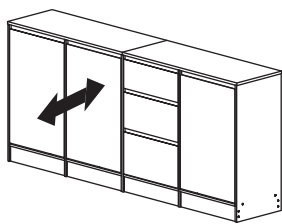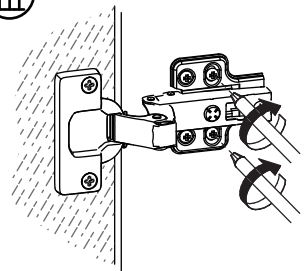  



I

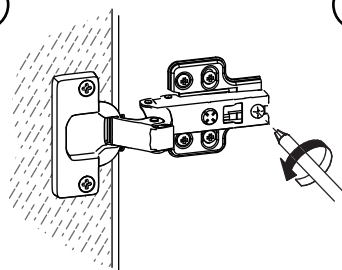 


II

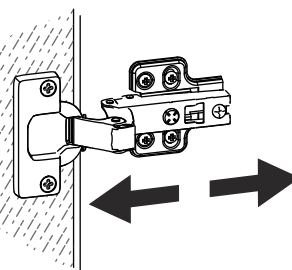 


III

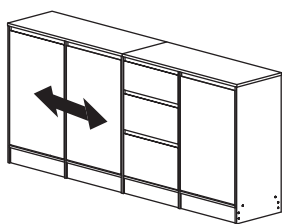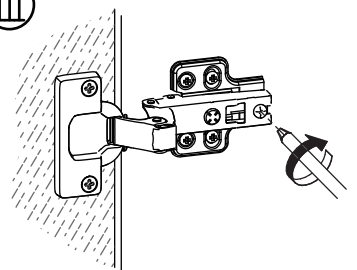  

I

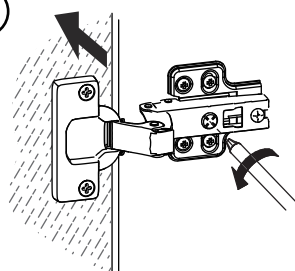 

II

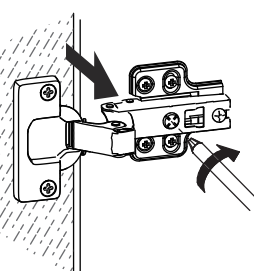 

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.