



# installation diagram

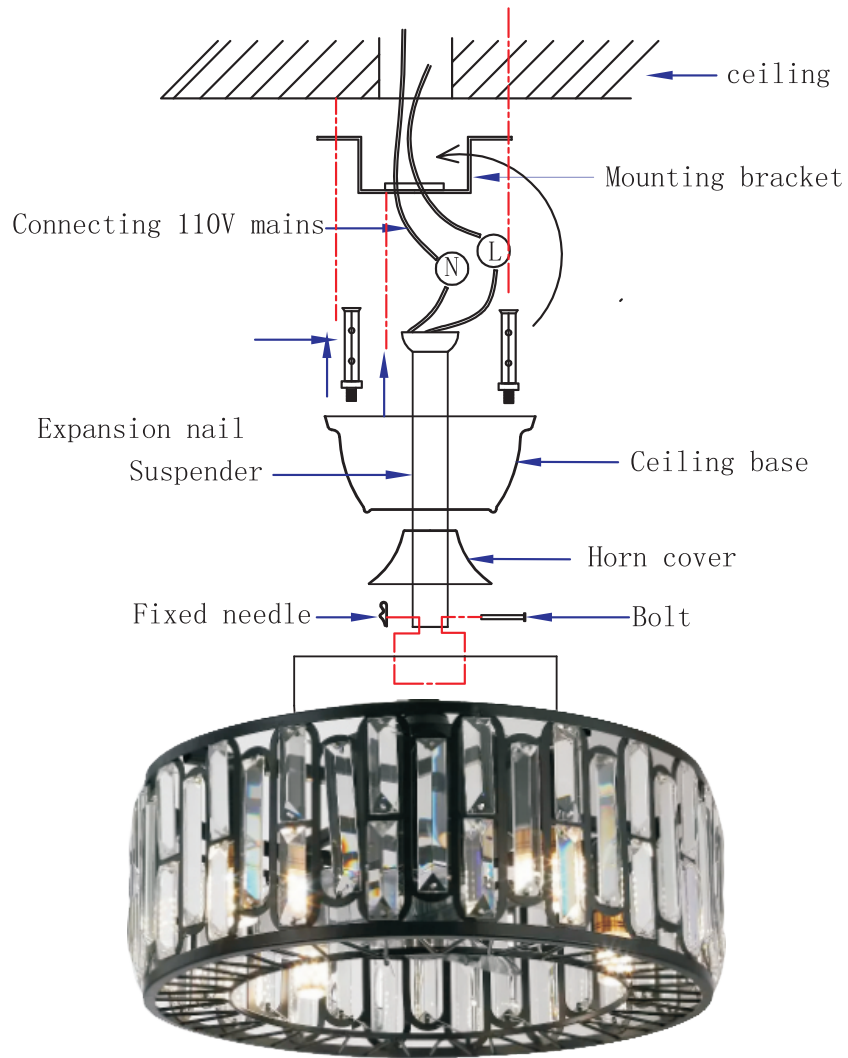



## Connect Remote Receiver Wire

Be sure to do this after a power outage  
Strictly follow the picture of linking wires.

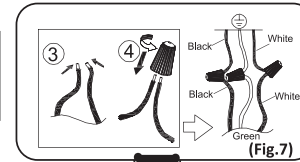

1.Connect the house cable to the remote receiver, as shown in Fig.7  
Connect using By wire nut (included).


2.Connect the motor to the remote receiver as shown in Fig.8,Connect using By wire nut (included).

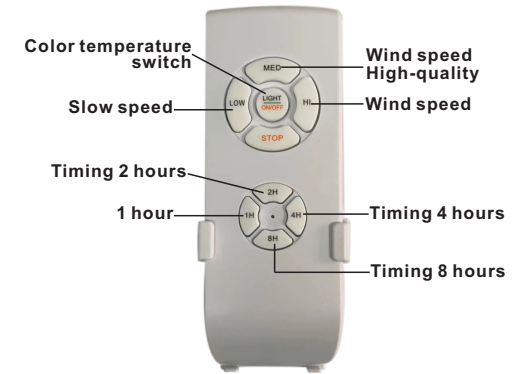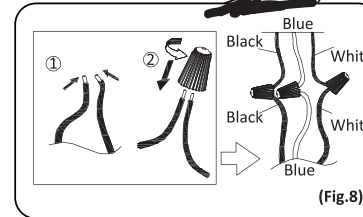

## Controller Instruction :

This controller uses wireless digital technology, one-to-one directly control, large effective range, strong anti-jamming, able to control cross the wall.

### Wiring method

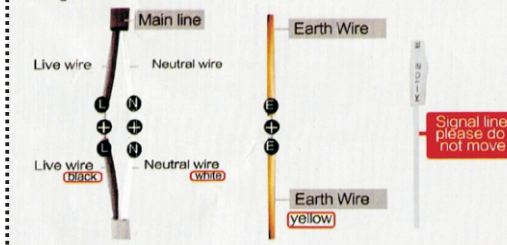

### Precautions:

1. Main motor high voltage, non-professional. Please do not disassemble it.
2. When equipped with a pull switch as a wall switch, it must be turned on before this control can work.
3. If the remote control does not work, please check if the battery is connected correctly, or insufficient power supply, disconnect between controller and fan lights.
4. If not using for a long time, please turn off the power. Turn on the power and remove the control battery.

Turn on warm light/warm white/white light, three light effects Corresponds to low, medium, and high speed fans  
STOP Stop/start working mode  
1h /2H/4H Can be scheduled to open and close  
Keine Funktionstaste If it is not used to guide the wind (this button is useless)  
Codierungsmethode: Einschalten innerhalb von fünf Sekunden nach dem Einschalten der Fernanzeige Halten Sie gleichzeitig gedrückt und der Ton zeigt an, dass der Code korrekt ist. (Bitte verwenden Sie diese Methode, wenn die Fernbedienung nicht reagiert)