



Instructions for Mode Selection of the Suiqi Handheld Mahjong Machine

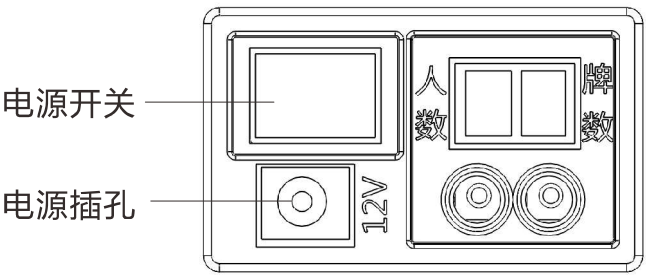

Program mode function description				
AA	Normal Mode	Normal 13 Zhang has a jump card. 16 Zhang has nothing. Jumping Cards, a game for 2-5 players with 72-152 cards. Players take their cards and automatically play them out, with 00 representing a 'pushing the barrel' action. The game uses 40 cards.	Code number	Total cards used
			0	152
			1	144
			2	136
			3	128
			4	120
			5	112
			6	108
			7	100
			8	84
			9	72
bb	Single point mode	During the grip card phase, automatic cards are removed, while non-automatic cards are removed during the play phase. Each press triggers one card, with all other mechanics identical to standard mode.		
CC	Taiwan model	The first 16 cards are dealt. When the total is 144, the last 16 cards are not dealt; when it's 136, the last 14 cards are not dealt.		
dd	Four-card only mode	Each round consists of 4 cards per hand from start to finish, with only the number of cards adjusted and no fixed player count.		
EE	Special card number pattern	The function is the same as the standard mode, but the number of cards is different (64 in the hidden card mode only shows 4 cards, not a single card).	Code number	Total cards used
			0	160
			1	156
			2	152
			3	148
			4	144
			5	136
			6	108
			7	84
			8	72
			9	64

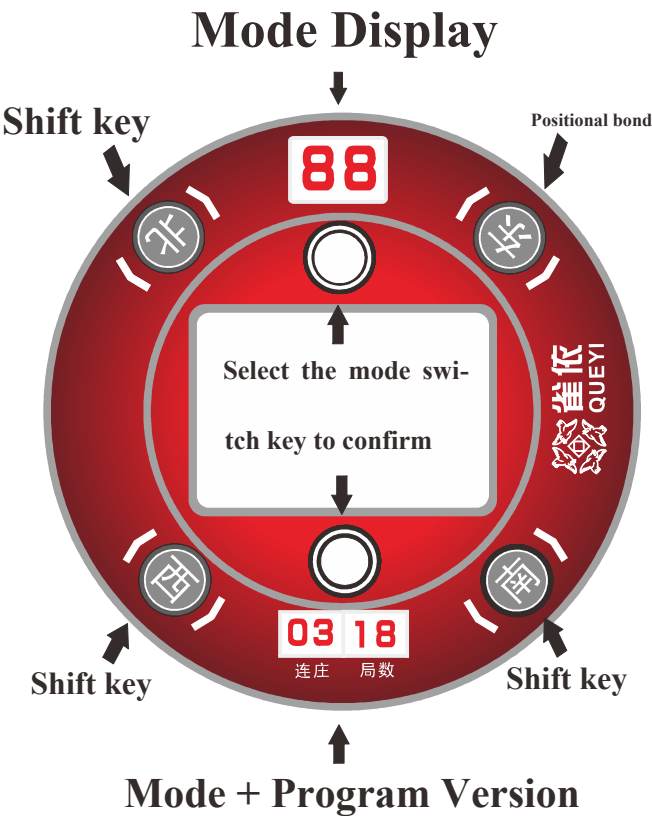

Step 1: Plug in the power and turn off the power switch to keep the machine powered down.

Step 2: Hold down any two of the directional keys, turn on the power switch, and release when you hear the buzzer beep.

Step 3: Refer to the mode instructions below. Click the "Mode Switch Button" to change the mode. After switching, hold down the "Select and Confirm Button" until the "Mode Display Screen" turns off. The mode switch is complete. Restart the device to use the configured function mode.