


ASSEMBLY INSTRUCTION

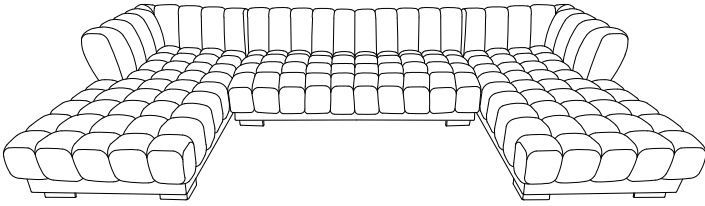


+ Parts Included


① LEFT CHAISE
BASE 1PC




② ARMLESS SOFA
BASE 1PC

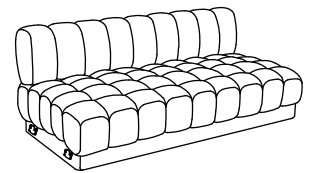


③ RIGHT CHAISE
BASE 1PC

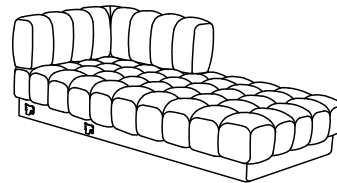

④ CHROME FRONT
LEG 6PCS

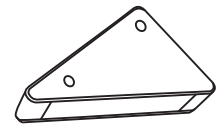

⑤ GOLD FRONT
LEG 6PCS

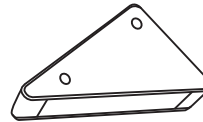

⑥ CHROME BACK
LEG 6PCS



 
⑦ GOLD BACK
LEG 6PCS



⑧ MIDDLE LEG
LEG 3PCS



⑨ FOOT PAD
24PCS



+ Hardware Included

A ALLEN WRENCH
Ø5/16 *66MM 1PC



B BOLT
M6*70MM 24PCS



**+ Do Not Use
Power Tools**



**+ Suggested
Adults**



NOTE:

- 1 Read instructions cover to cover.
- 2 Save all packaging until assembly is completed.

1 IMPORTANT SAFETY INFORMATION

Do not assemble the product if any of the following parts arrived damaged:

- Part # - Left Chaise Base
- Part # - Armless Sofa Base
- Part # - Right Chaise Base
- Part # - Chrome Front Leg
- Part # - Gold Front Leg
- Part # - Chrome Back Leg
- Part # - Gold Back Leg
- Part # - Foot Pad
- Part # - Middle Leg

Do not assemble if any of the following

Hardware parts missing:

- Part # - Allen Wrench
- Part # - Bolt

2 IMPORTANT ASSEMBLY INFORMATION

Assembly Step If loosening persists, please make sure to tighten all the bolts periodically, or use a thread locker adhesive.

ASSEMBLY INSTRUCTION

