

Recessed Hole




Pre-Checked

IMPORTANT: READ CAREFULLY BEFORE BEGINNING


1. Do not tighten bolts until fully assembled.
2. Recessed holes to face outward.
3. Insert bolts with washer and secure with washer and nut.
4. Pre-checked side must always face downward or inward.

END TABLE

PARTS AND HARDWARE LIST

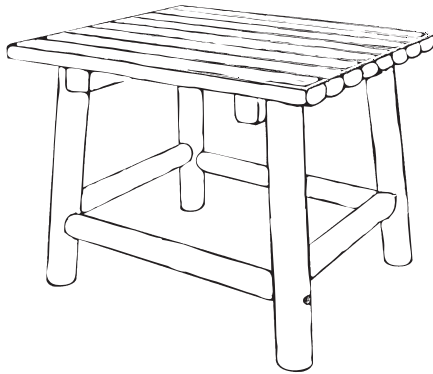


① TABLE TOP

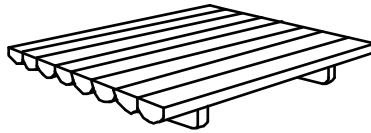


1pc

② SHORT SUPPORT BEAM

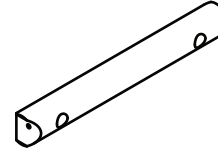


2pcs

③ LONG SUPPORT BEAM

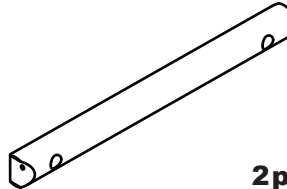


2pcs

 ④ TABLE LEG



2pcs

⑤ TABLE LEG

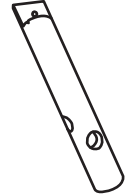


2pcs

Power tools are not recommended while assembling this product.

Tools Required for Assembly

 Mallet




13mm
Socket & Wrench




Phillips
Screwdriver

Tools Included

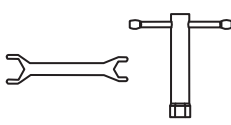


Ⓐ N08-11

 

8x70mm

NUT & BOLT 4pcs

 
Ⓑ S04-4




8x120mm

NUT & BOLT 8pcs


STEP 1 Keep all Nuts & Bolts loose during assembly

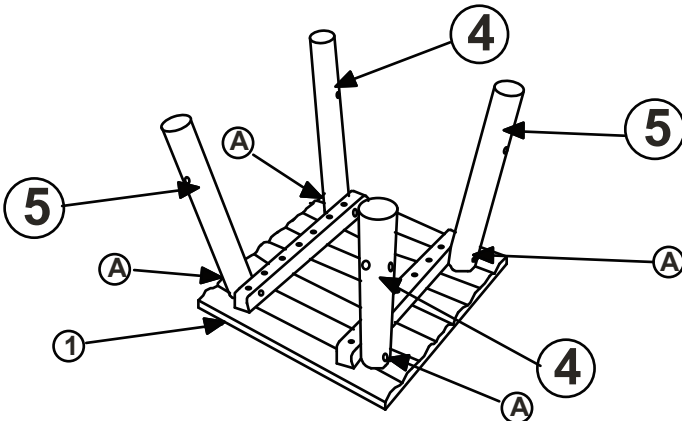

STEP 2

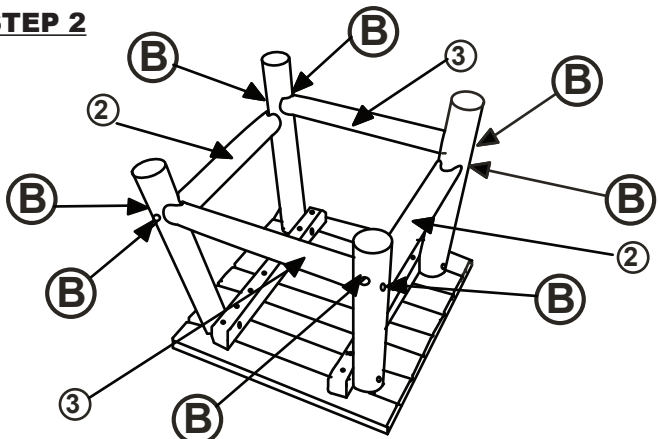

STEP 3

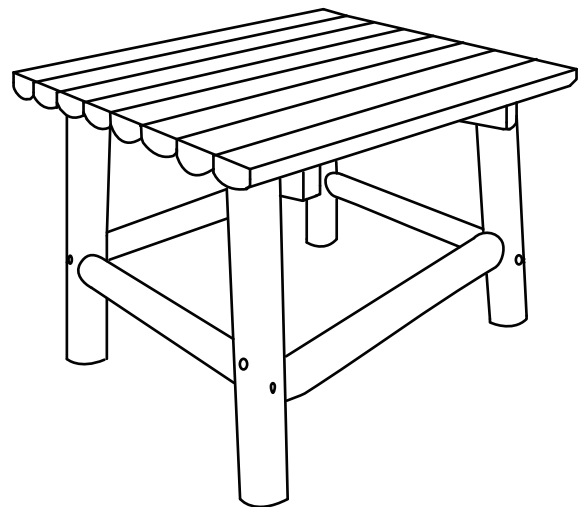

Tighten all nuts & bolts once all parts and assembled pieces are in place.

Congratulations on your assembly!

Limited Warranty and Care Instructions

LIMITED ONE YEAR WARRANTY (NON-TRANSFERABLE)

This product is covered under one (1) year limited warranty. To the original purchaser of this piece of furniture, cooler or accessory; we warrant that it will be free from defects in material and workmanship for up to one year from the date of purchase under normal use and proper care.

Replacement of defective or missing parts will be sent at no charge to the customer for a period of 30 days from the date of purchase. We will no longer be responsible for missing parts or hardware 30 days after date of purchase. Freight, packaging, labor or material charges to and from our customer service center is not covered under the warranty and is therefore the customer's responsibility.

The limited warranty does not cover this piece of furniture, cooler or accessory for commercial purposes, abusive use, damage by modification, freeze damage, severe weather damage, rust, fading and issues caused by improper care.

For minor defects or missing parts/hardware, please contact customer service immediately upon purchase. Please do not return product to the store unless the product is irreparable. A customer service agent may help determine whether the damage is reparable and will provide further instructions.

For returns and refunds, please refer to your local store return policy with proof of purchase. Proof of purchase (dated register receipt) will be required for warranty claims.

DO NOT USE POWER TOOLS ON THE ASSEMBLY OF THIS ITEM AS THEY MAY DAMAGE THE HARDWARE OR SPLIT THE WOOD. USE OF POWER TOOLS ALSO VOID THE WARRANTY.

PROPER CARE INSTRUCTIONS

If left untreated, wood will naturally weather. During long periods of non-use, store furniture in covered and dry place. For the least maintenance, place your furniture, cooler, or accessory under a covered area.

To preserve and maintain the original finish of this furniture, a natural tung/linseed/Danish oil (with stain), which can be found at your local hardware store, should be applied. Please note the furniture has been stained and oiled before being packaged. If the wood is not maintained, the wood will naturally gray in color.

Remove the furniture completely from sunlight prior to applying oil. Apply generously and remove any excess oil with cloth. Frequency of the application of oil depends on exposure to the extremities of the outdoors.

For all painted wood finish products, we recommend that you use a latex based paint with the matching color. Before painting, a light sanding with a fine grit sandpaper might be necessary to prep your product for a new paint coating.