 




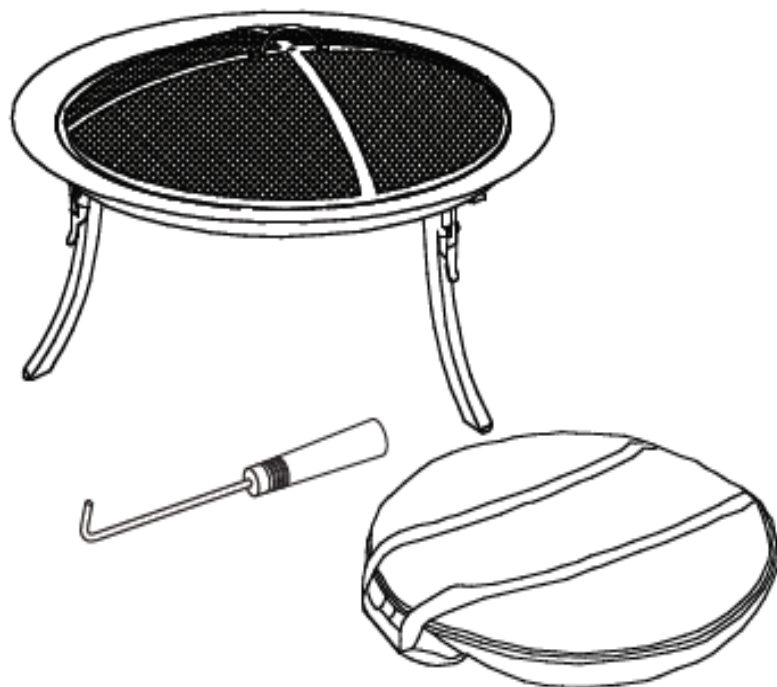


Thank you for choosing our products. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. If you have any questions, comments or concerns, feel free to contact us.

PORTABLE FOLDING FIRE PIT

Read the assembly instructions carefully and follow the care instructions. Keep these instructions for future reference.



Inspect packaging to ensure all parts are accounted for before disposing of packaging.

No.	PARTS	QTY.
A	 Leg/Ring Assembly	1
B	 Fire Bowl	1
C	 Spark Screen	1
D	 Carrying Bag	1
E	 Poker	1

ASSEMBLY

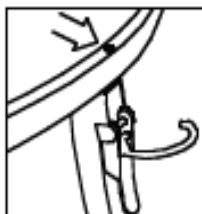 
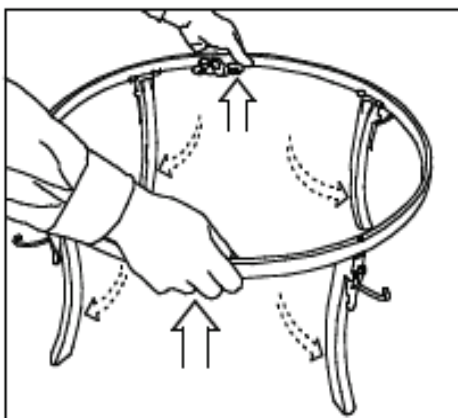 


Fig. 1

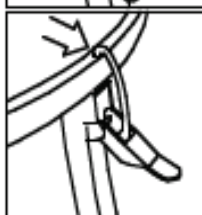 


Fig. 2



Fig. 3



 
1. Place the leg/ring assembly (A) on a flat surface with the latches down. Lift the leg/ring assembly straight up and allow the legs to move down.

2. Take the leg latch hook and place it in the hole on the ring (Fig. 1, 2). Lock the latch to the ring (Fig. 3).

3. Place Fire Bowl (B) on Leg/Ring Assembly (A) and Spark Screen (C) onto Fire Bowl (B).

PACKAGING

Make sure all parts are completely cool before packing them into the carrying bag.

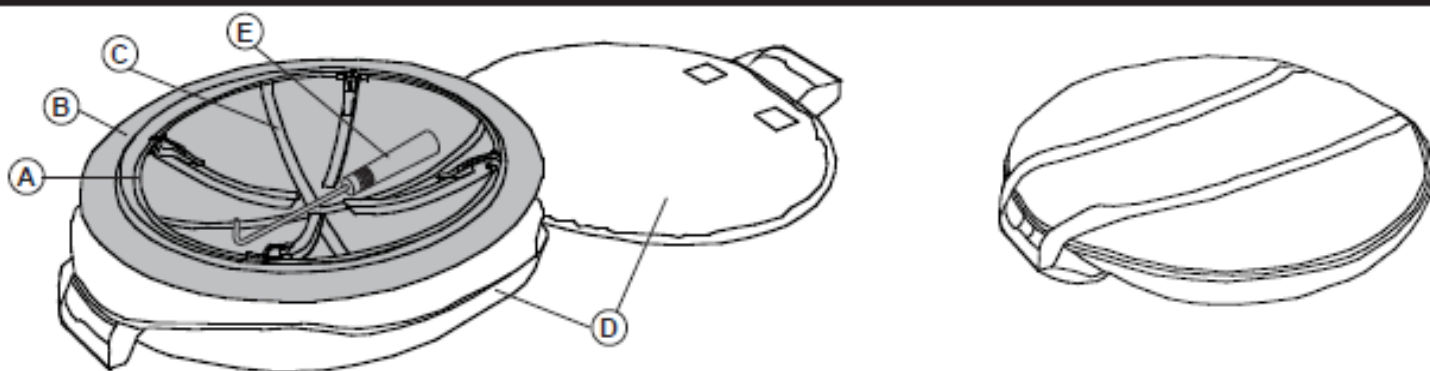

Unzip the carrying bag completely and place it on a flat surface. Flip the spark screen upside-down and place it in the fire bowl. Unlatch and collapse the leg/ring assembly and place it on the spark screen. Place the poker in the cavity. Carefully zip the carrying bag closed.

CARING FOR YOUR FIRE PIT:

Clean Regularly: All fire pits must be cleaned and inspected periodically. The ash produced in wood-burning fire pits must be cleaned out regularly. Never allow ash to accumulate in the bowl.

Clean Safely: Make sure the fire has completely died down and the metal is completely cool before you remove the ashes and cleaning the bowl.

Avoid Accelerants: Never use accelerants to start a fire; this is dangerous and can damage your fire pit.

Avoid Plastic: Never use any plastic materials in or nearby a fire pit. It is very difficult to remove the residue later, and the burning of this residue can cause the emission of toxic fumes.

Use on a Safe Surface: Always use fire pits on a smooth, non-combustible surface; do not use on a wood deck or other combustible surfaces like dry grass, leaves, mulch, etc. Do not use fire pits near combustible structures such as vinyl or wood siding. Take care never to drop your fire pit, as any breakage could cause serious damage and costly repairs.

Cover and Store: If you do not plan to use your fire pit for an extended period of time, cover and store it in a dry location; this will protect it from the elements and dust buildup. Do not allow the fire pit to be exposed to water. The manufacturer is not liable for rust due to weather conditions.

Extinguish: Let fires die down gradually, do not use water to put out a fire as this may cause the metal to crack from the sudden drop in temperature.

⚠ SAFETY STATEMENTS & WARNINGS ⚠

- For outdoor use only. Never use this product in an enclosed area.
- Always follow local laws and regulations when using wood-burning fire pits.
- Exercise the same care and precautions as you would with an open fire.
- Keep unit a safe distance away from buildings, balconies, or overhangs when in use.
- Use on a level, non-combustible surface.
- Do not use on or near combustible surfaces or structures i.e. wood decks, dry leaves or grass, mulch, vinyl or wood siding, etc.
- Keep away from all combustible materials including gasoline and other flammable liquids and vapors.
- Never use accelerants such as, but not limited to, gasoline, alcohol, paint thinners, kerosene, as this may cause serious injury or product damage.
- The fire pit becomes very hot when in use; let it completely cool before cleaning or moving.
- Keep out of reach of children.
- Do not overfill or use this unit to burn leaves or trash.
- Avoid using any fire pit during dry or windy conditions.
- Never leave unit unattended while hot or in use.
- Supervise children and pets when the fire pit is in use.
- DO NOT USE CHEMICAL-BASED CLEANERS as this may damage the product and/or ignite a flame during the next use.
- Extinguish the fire properly before leaving. Use a fire extinguisher or a bucket of sand to smother the fire if necessary. Do not use water to extinguish hot fires or embers as this may cause serious injury and may damage the product.
- Ashes can remain hot for a long time after fire is extinguished. Dispose of cold ashes properly.
- Ensure the unit is completely cool before covering, failure to do so will damage the cover and the unit.

Any modification to the product or failure to follow recommended care will void the product warranty.