 
 
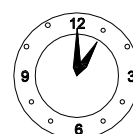 


Assembly Instructions

ITEM#WMDC04

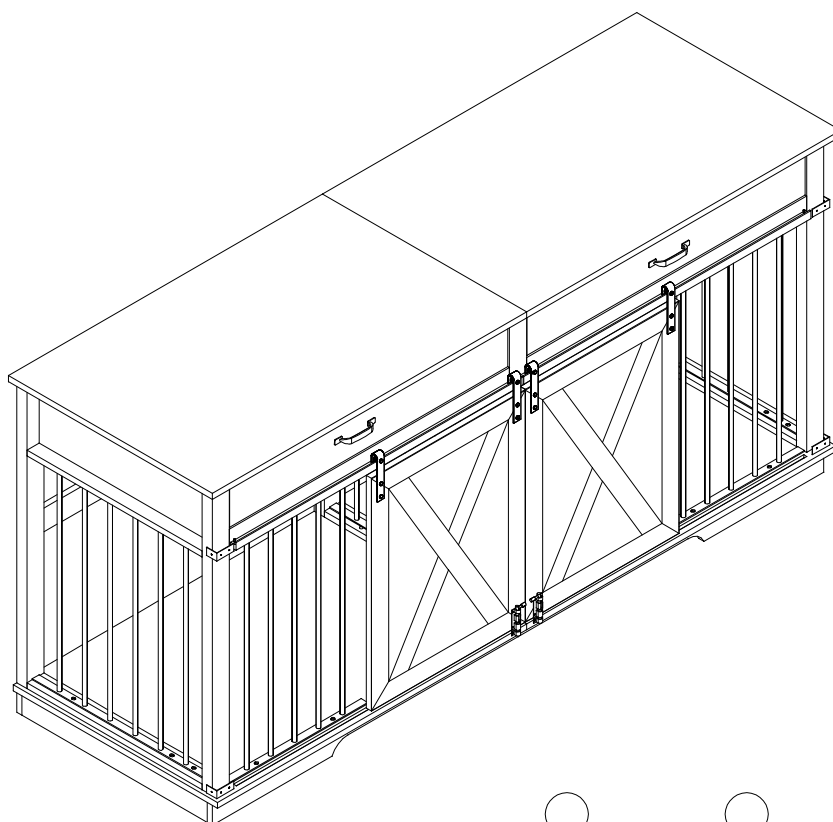

120'

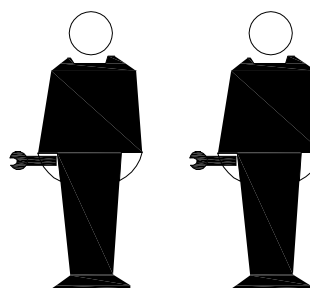

Questions, problems, missing parts? Before returning the product, call our customer service 9 a.m.- 5 p.m., PST, Monday-Friday

800-385-0608

or email us at aftersales@cye-way.com for assistance.

IMPORTANT SAFETY INFORMATION



WARNING

DEATH OR SERIOUS INJURY MAY OCCUR WHEN CHILDREN CLIMB ON AUDIO AND/OR VIDEO EQUIPMENT FURNITURE. A REMOTE CONTROL OR TOYS PLACED ON THE FURNISHING MAY ENCOURAGE A CHILD TO CLIMB ON THE FURNISHING AND AS A RESULT THE FURNISHING MAY TIP OVER ON TO THE CHILD.

MUERTE O LESIONES GRAVES PUEDEN OCURRIR CUANDO LOS NIÑOS SUBAN AL AUDIO Y / O MOBILIARIO EQUIPO DE VÍDEO. UN MANDO A DISTANCIA O LOS JUGUETES EXISTENTES EN EL MOBILIARIO PUEDE ANIMAR AL NIÑO A SUBIR A LOS MUEBLES Y COMO RESULTADO EL MOBILIARIO PUEDEN VOLCARSE A LA NIÑO(A).

MORT OU DES BLESSURES GRAVES PEUVENT SE PRODUIRE LORSQUE LES ENFANTS MONTER SUR L'AUDIO ET / OU DES MEUBLES DE L'ÉQUIPEMENT VIDÉO. UNE TÉLÉCOMMANDE OU LES JOUETS MIS SUR L'AMEUBLEMENT PEUVENT ENCOURAGER UN ENFANT À GRIMPER SUR LA FOURNITURE ET COMME RÉSULTAT L'AMEUBLEMENT PEUVENT BASCULER À L'ENFANT.



WARNING

RELOCATING AUDIO AND/OR VIDEO EQUIPMENT TO FURNITURE NOT SPECIFICALLY DESIGNED TO SUPPORT AUDIO AND/OR VIDEO EQUIPMENT MAY RESULT IN DEATH OR SERIOUS INJURY DUE TO THE FURNISHING COLLAPSING OR OVER TURNING ONTO A CHILD.

REUBICACIÓN DE AUDIO Y / O EQUIPO DE VÍDEO A LOS MUEBLES NO ESTÁN DISEÑADOS ESPECÍFICAMENTE PARA APOYAR EL EQUIPO DE AUDIO Y / O VÍDEO PUEDE CAUSAR LA MUERTE O LESIONES GRAVES DEBIDO A LA DECORACIÓN COLAPSE O MÁS DE INFLEXIÓN EN UN NIÑO.

DÉPLACEMENT AUDIO ET / OU VIDÉO À DES MEUBLES PAS SPÉCIFIQUEMENT DESTINÉ À SOUTENIR L'ÉQUIPEMENT AUDIO ET / OU VIDÉO PEUT ENTRAÎNER LA MORT OU DES BLESSURES GRAVES EN RAISON DE LA FOURNITURE DE S'EFFONDRE OU PLUS EN TOURNANT SUR UN ENFANT.

USE AND CARE

1. To clean, use a soft cloth slightly dampened with water.
2. Do not use abrasive cleaners or spray liquids.
3. Using solvents of any kind on your furniture may damage your furniture's finish.
4. Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.
5. Stains or marks from crayons or ink markers will be difficult to remove.
6. Do not climb or step on the stand.
7. Periodically check that all fasteners are tightened.

 
-
1. Para limpiar, use un paño suave ligeramente humedecido con agua.
 2. No use limpiadores abrasivos o rociadores.
 3. El uso de disolventes de ningún tipo sobre sus muebles pueden dañar el acabado de sus muebles.
 4. Los derrames de líquidos deben ser retirados inmediatamente. Con un paño suave y limpio, seque el derrame suavemente. Evite frotar.
 5. Las manchas o marcas de crayones o marcadores de tinta serán difíciles de eliminar.
 6. No se suba o pisar el stand.
 7. Compruebe periódicamente que todos los sujetadores estén apretados.

-
1. Pour nettoyer, utilisez un chiffon doux légèrement humidifié avec de l'eau.
 2. Ne pas utiliser de nettoyeurs abrasifs ou de liquides en aérosol.
 3. L'utilisation de solvants d'aucune sorte sur vos meubles peut endommager le fini de votre mobilier.
 4. Les déversements de liquides doivent être retirés immédiatement. L'utilisation d'un chiffon propre et doux, éponger délicatement le déversement. Évitez de frotter.
 5. Taches ou les marques de crayons ou des marqueurs d'encre sera difficile à enlever.
 6. Ne pas monter ou marcher sur le stand.
 7. Vérifier périodiquement que toutes les fixations sont serrées.

MAXIMUM WEIGHT: 66 LBS (30 KG)

PESO MÁXIMO: 66 LIBRAS (30 KILOGRAMO)


POIDS MAXIMUM: 66 LIVRES (30 KILOGRAMME)

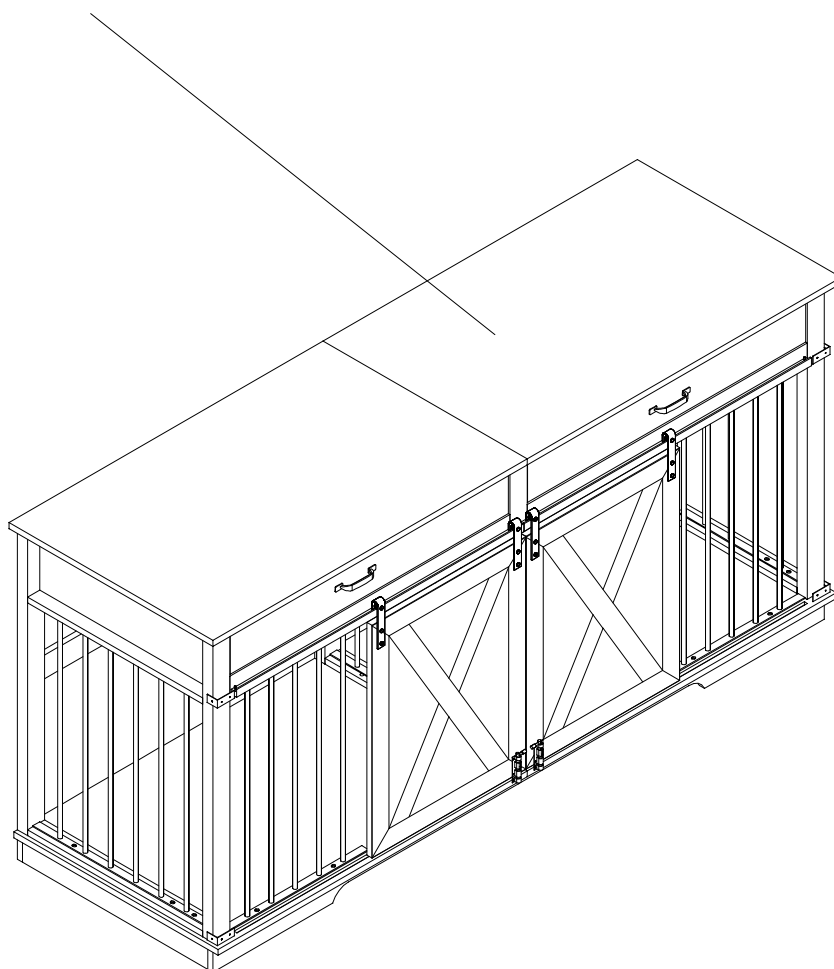


General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.

 
- V. Power tools should not be used to assemble this product.

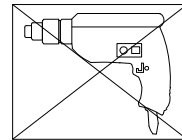

 
- VI. Cam bolt and Cam lock Assembly instruction.

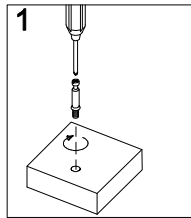


Cam bolt
vertical installation.

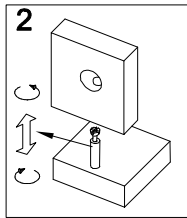 

Cam bolt is
adjustable

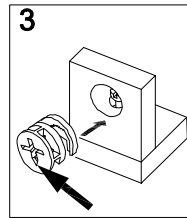 


 
Cam lock
the arrow is towards
the Cam bolt

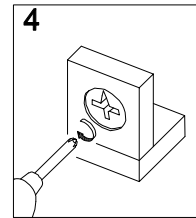

180°
Ensure locking

  - VII. Two people are required to install.

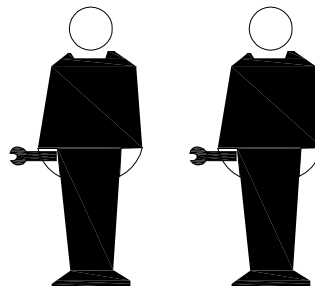

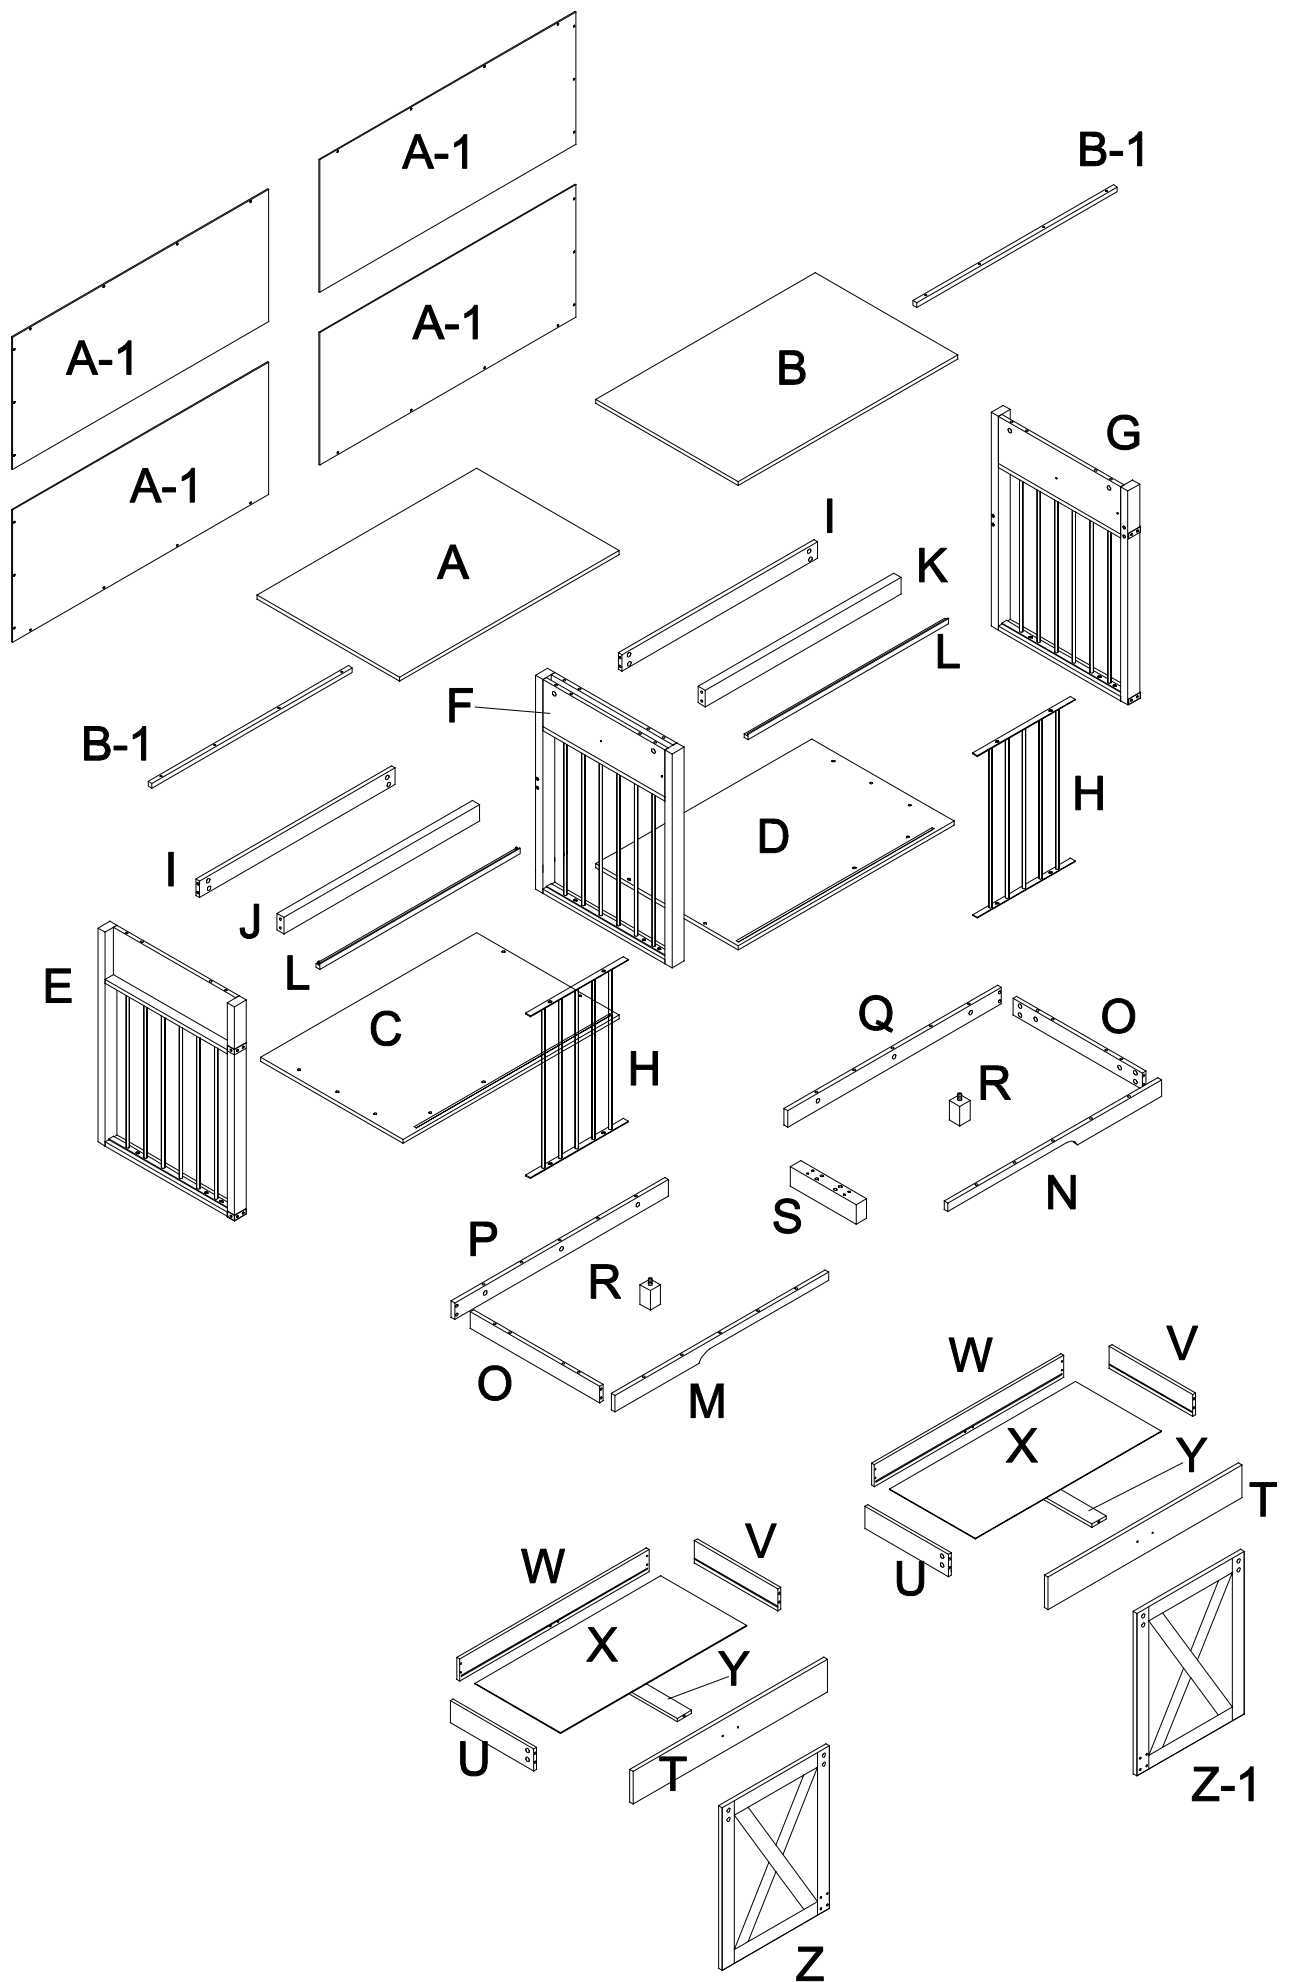

HARDWARE

 
x26



AA

ø6x30mm

x52



BB

ø6x35mm

 
x52



CC

ø15x9.5mm

x8



DD

M4x25mm

x8



EE

M4x12mm

x16



FF

Ø6x10mm

x10



GG

Ø6x20mm

x8



HH

Ø6x35mm

 
x1



II

M4mm

x4



J J

 
x4



KK

M6X16mm

x4



L L

 
x20



MM

Ø3.5x12mm


x12



NN

M4x30mm

 x2



OO

 
x4



PP

M4X16mm

x2



QQ

x12



RR

ø3x12mm

 
x40



SS

M3.5x14mm

x4



TT

 
M4X45mm

x2




UU

x2




CL

 x2




CR

 x2




DL




 
x2



DR

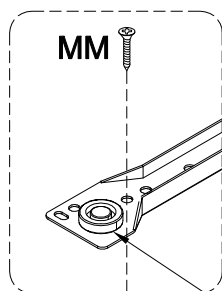 

The wheel is down

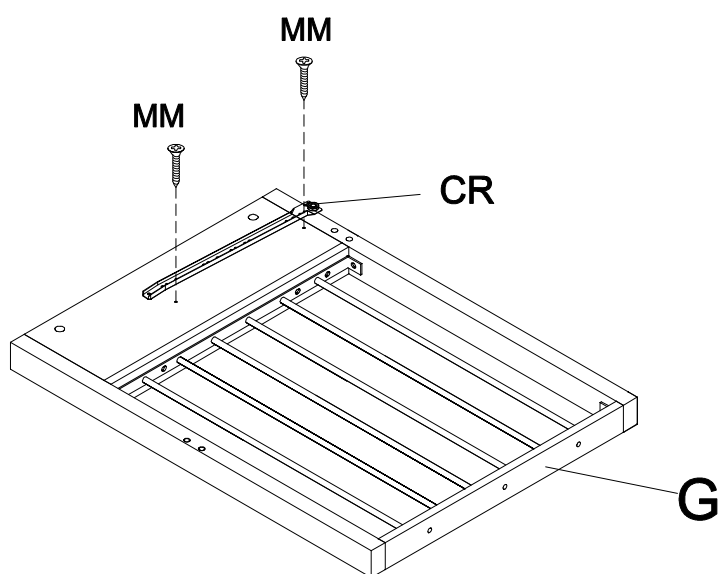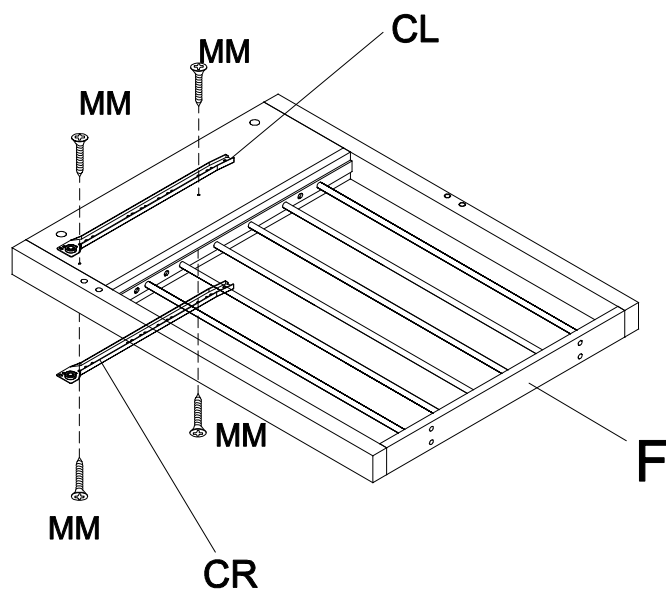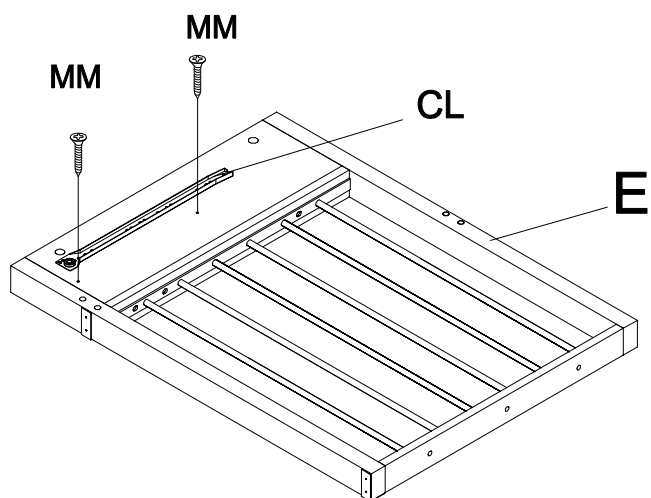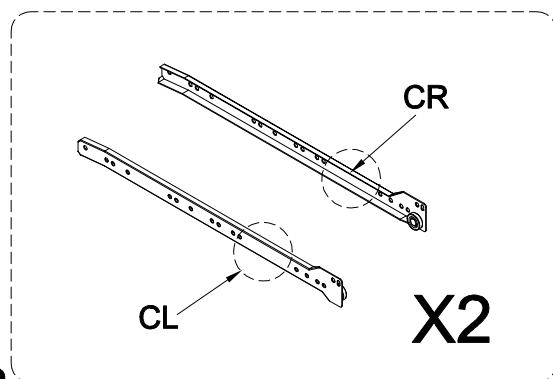    


MM




[x8]

 CL





[x2]

 
CR



[x2]

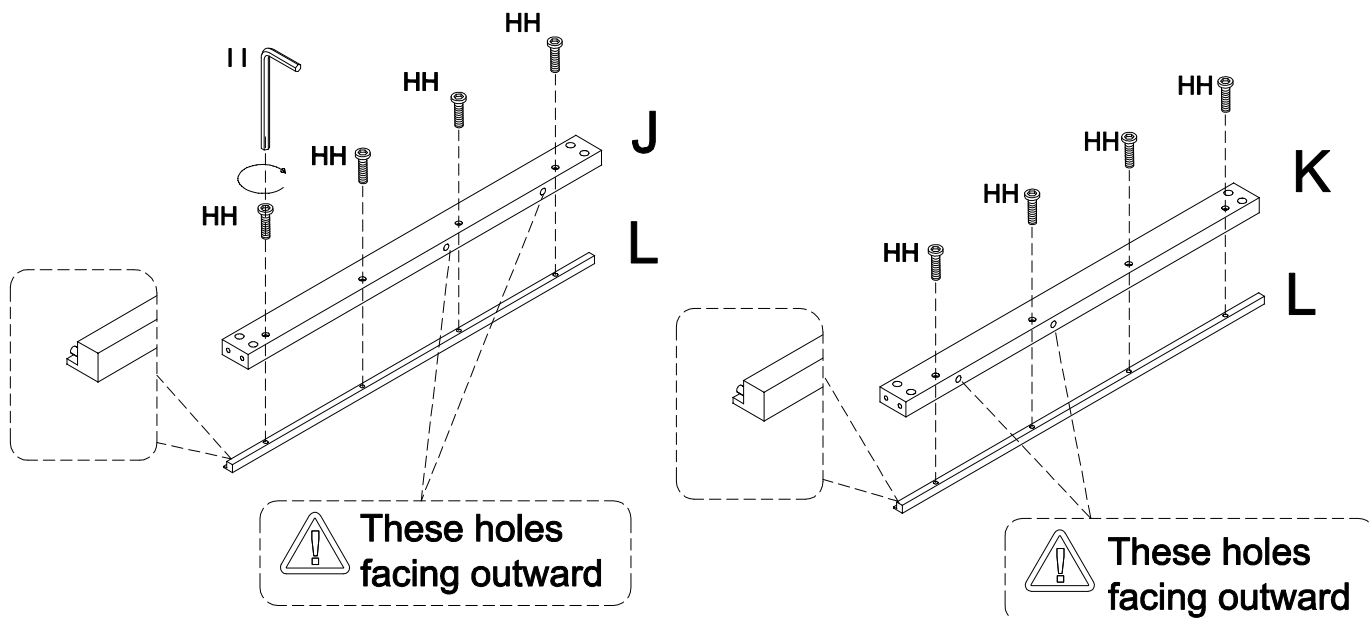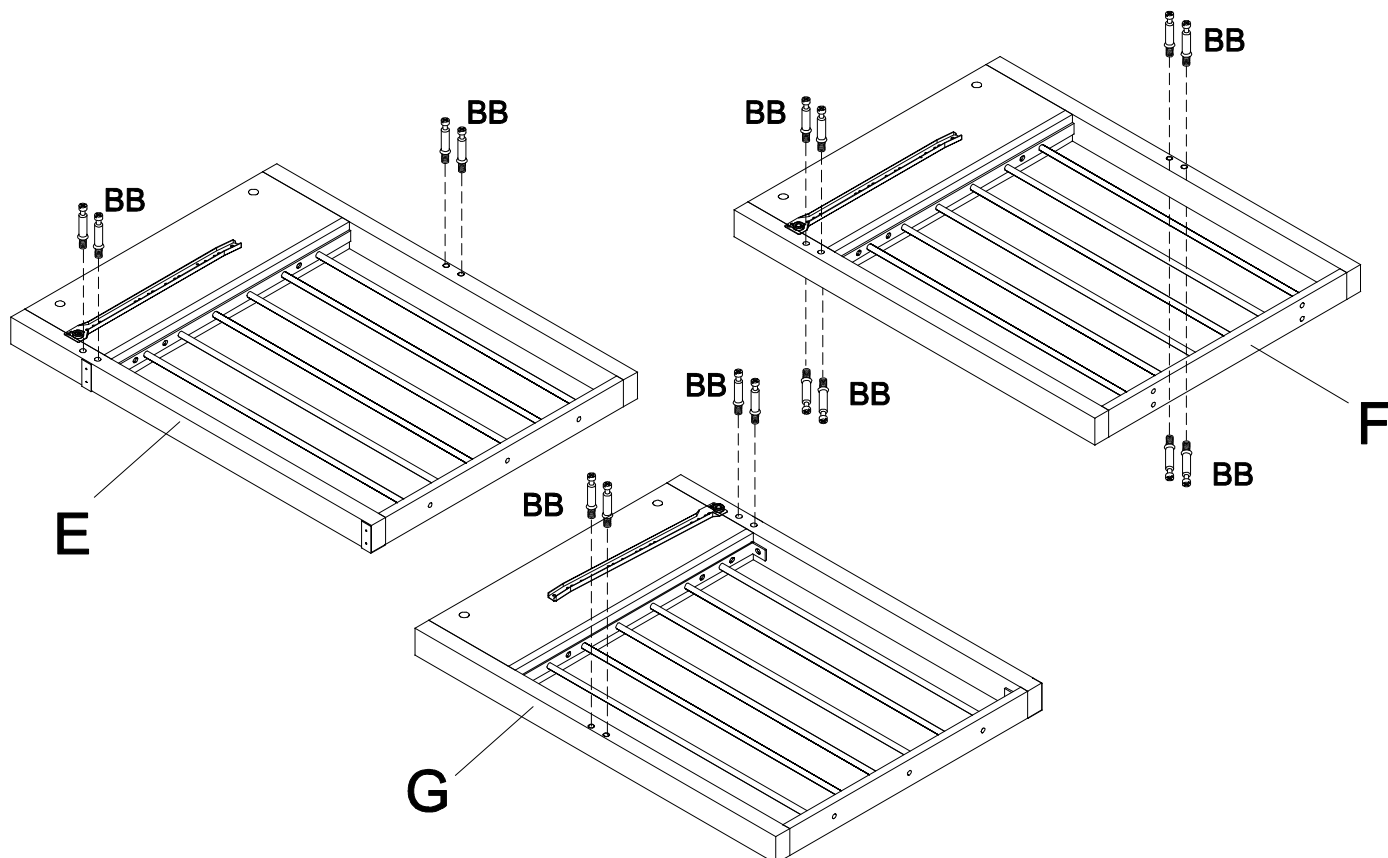  

BB

 

[x16]

II

 
 
 


 
[x1]

HH



[x8]



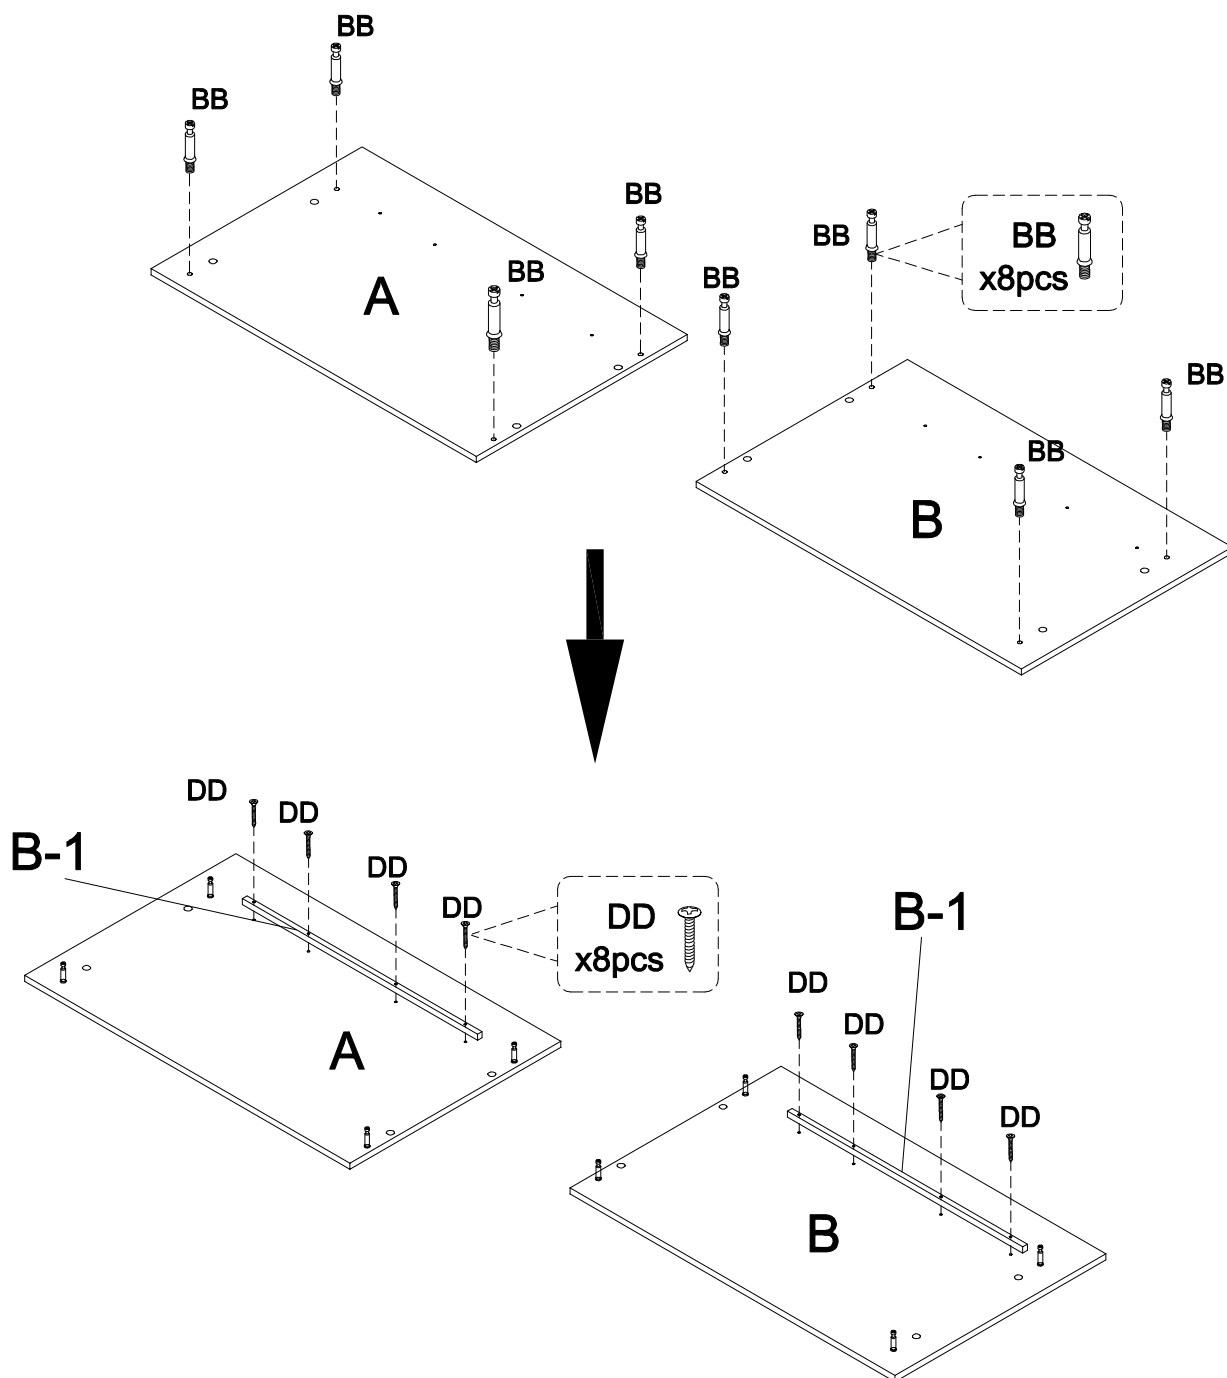


BB






[x8]

 DD



[x8]

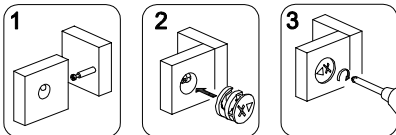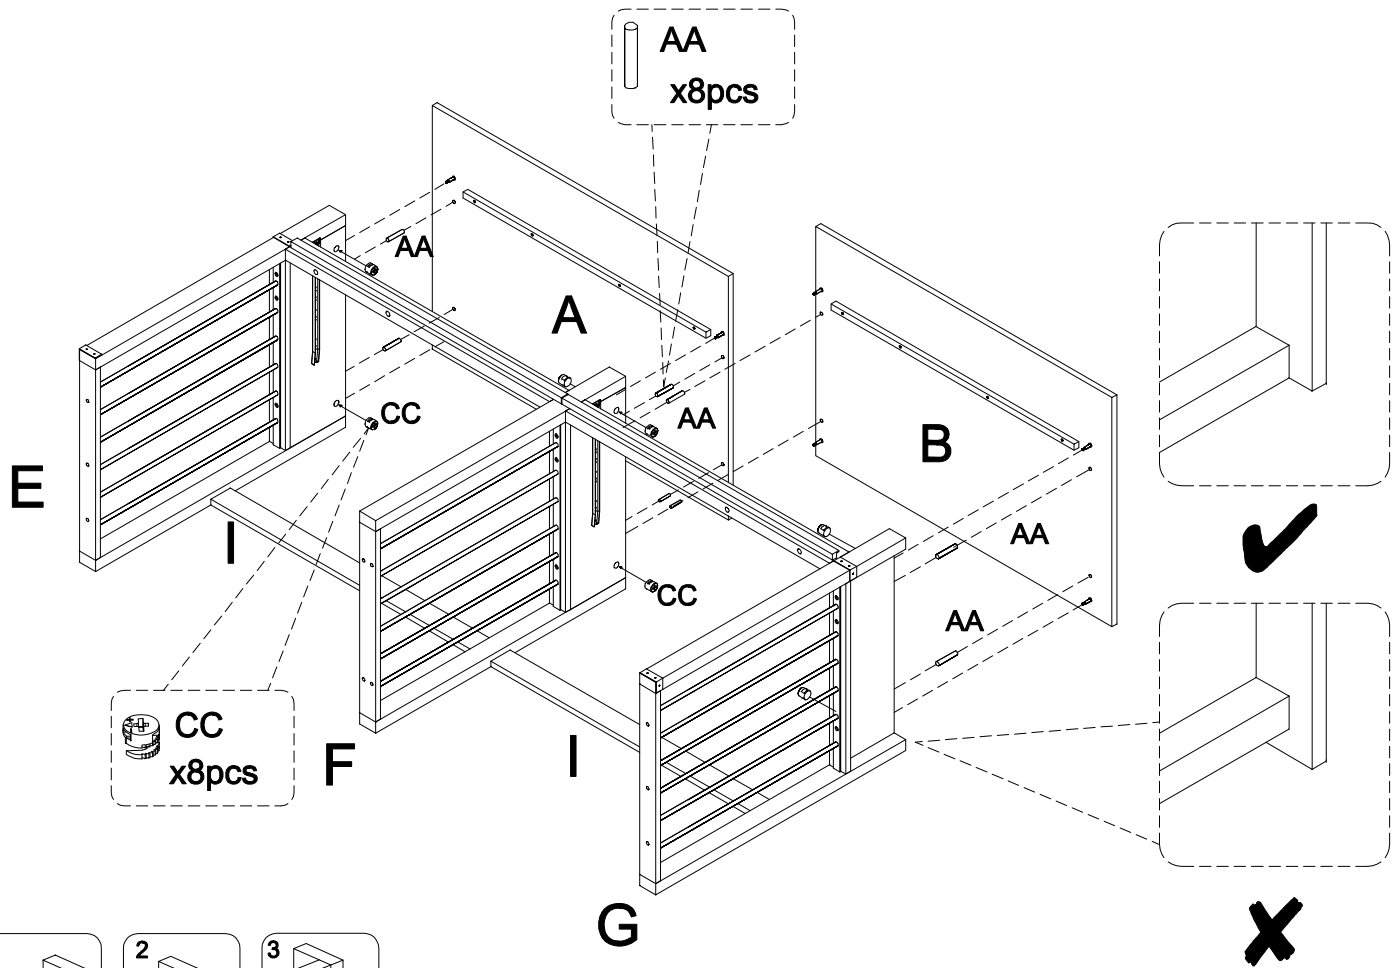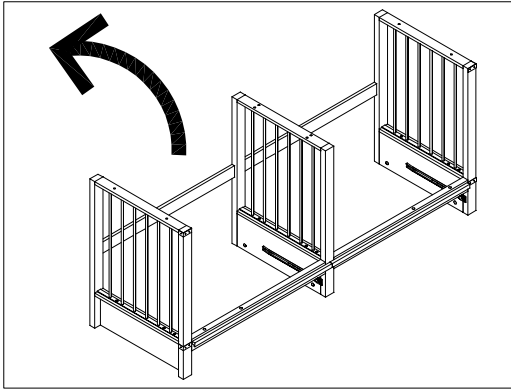   

AA

 


[x8]

CC



[x8]

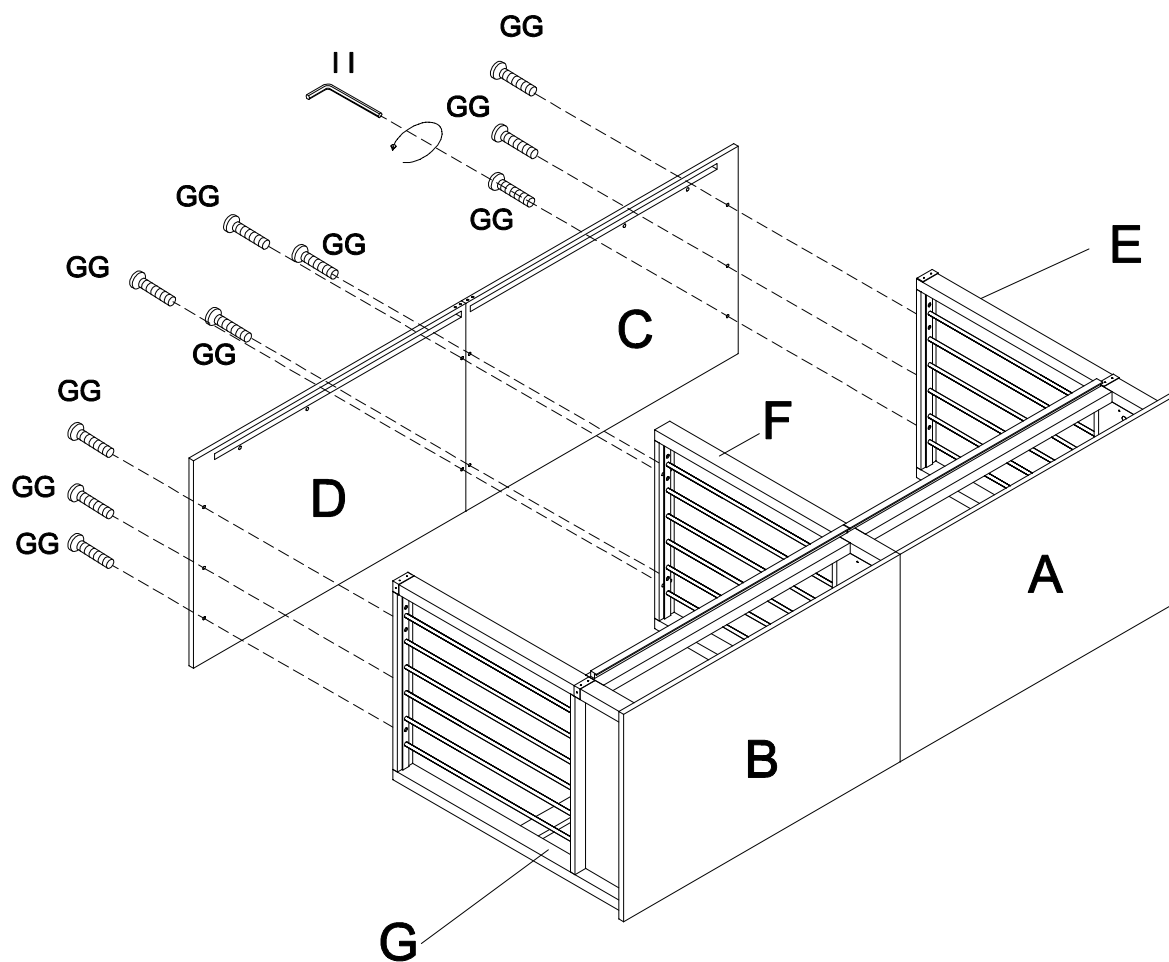

GG



 
[x10]

II




[x1]


7

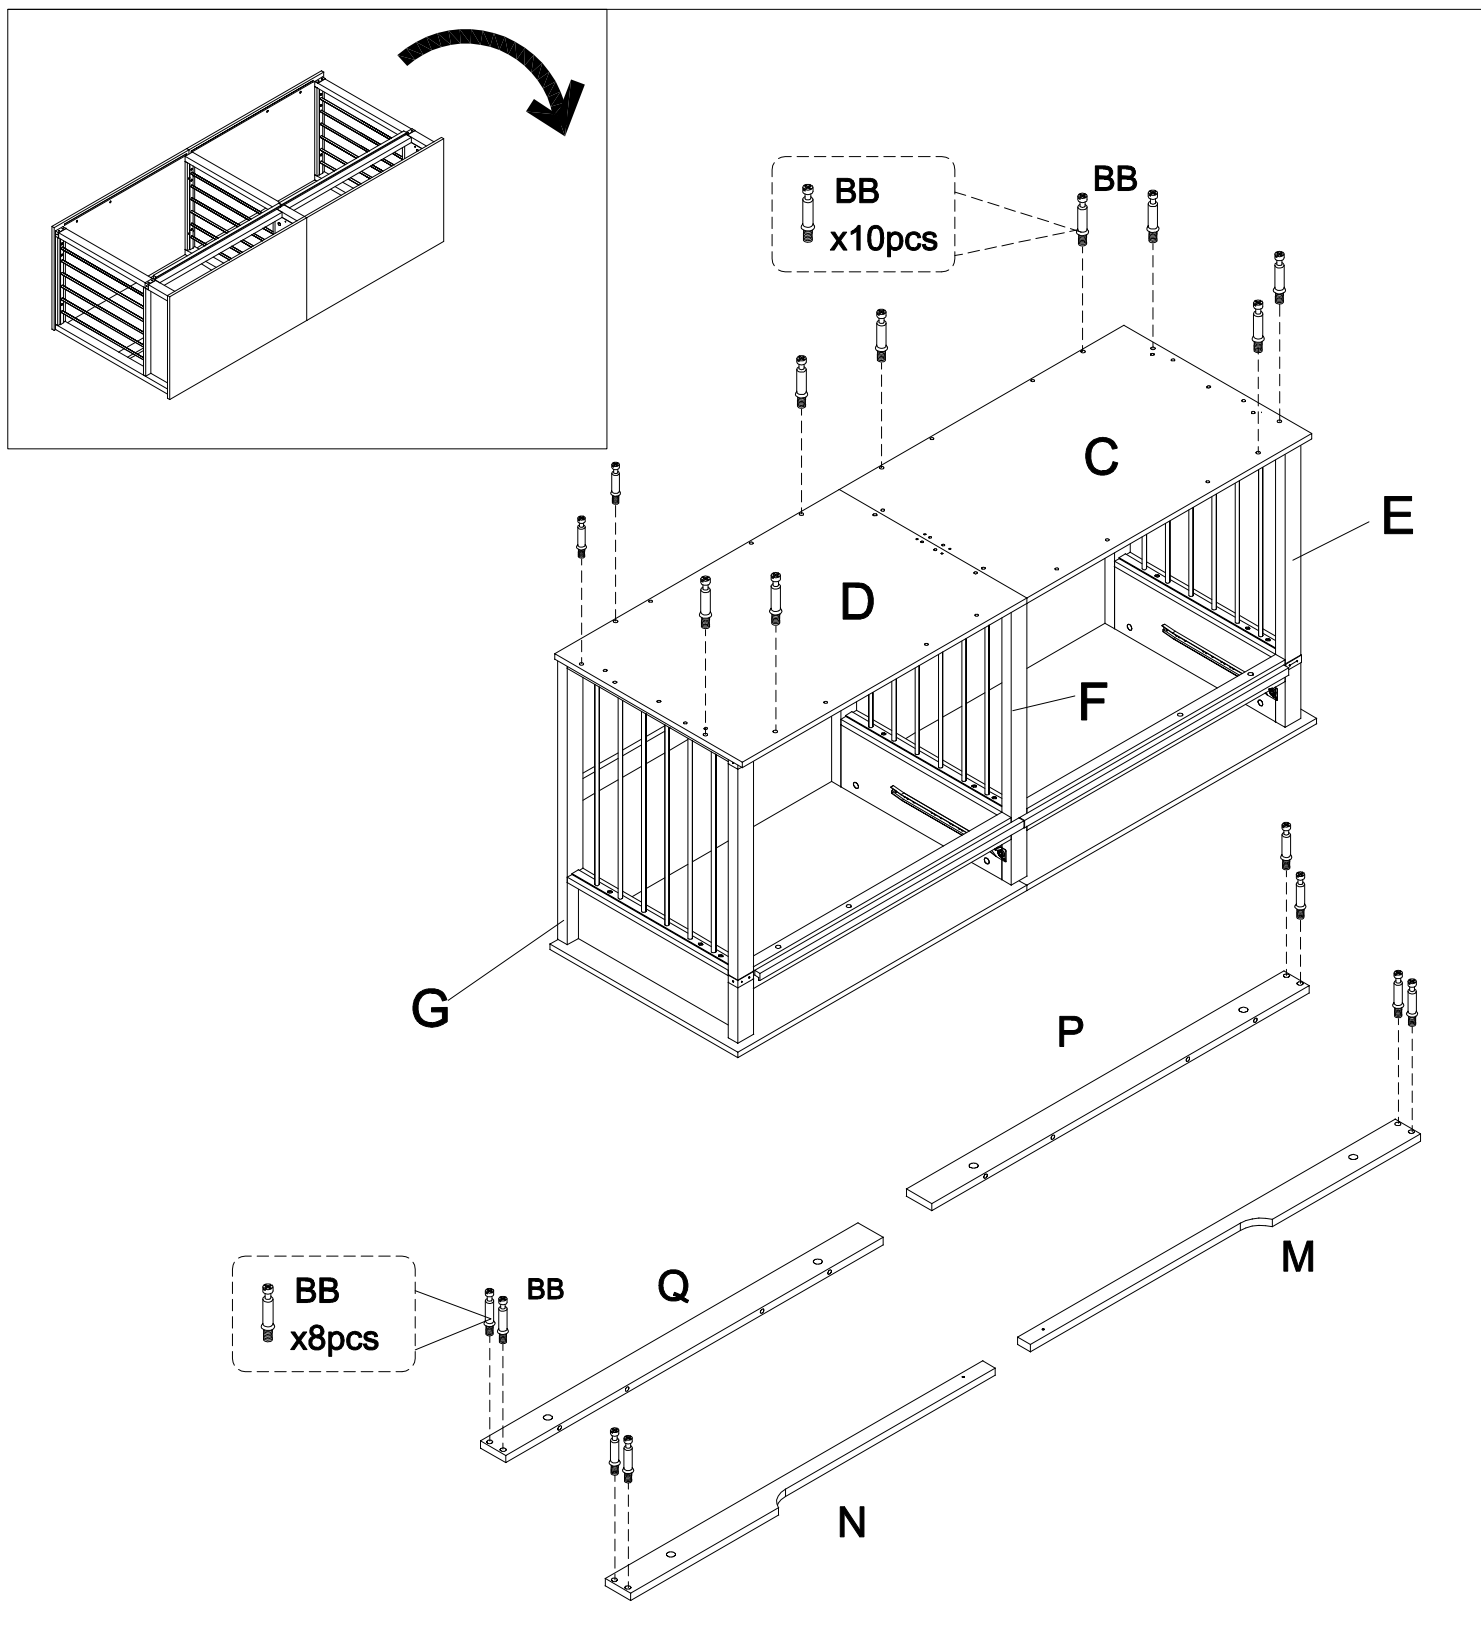

BB

 

[x18]

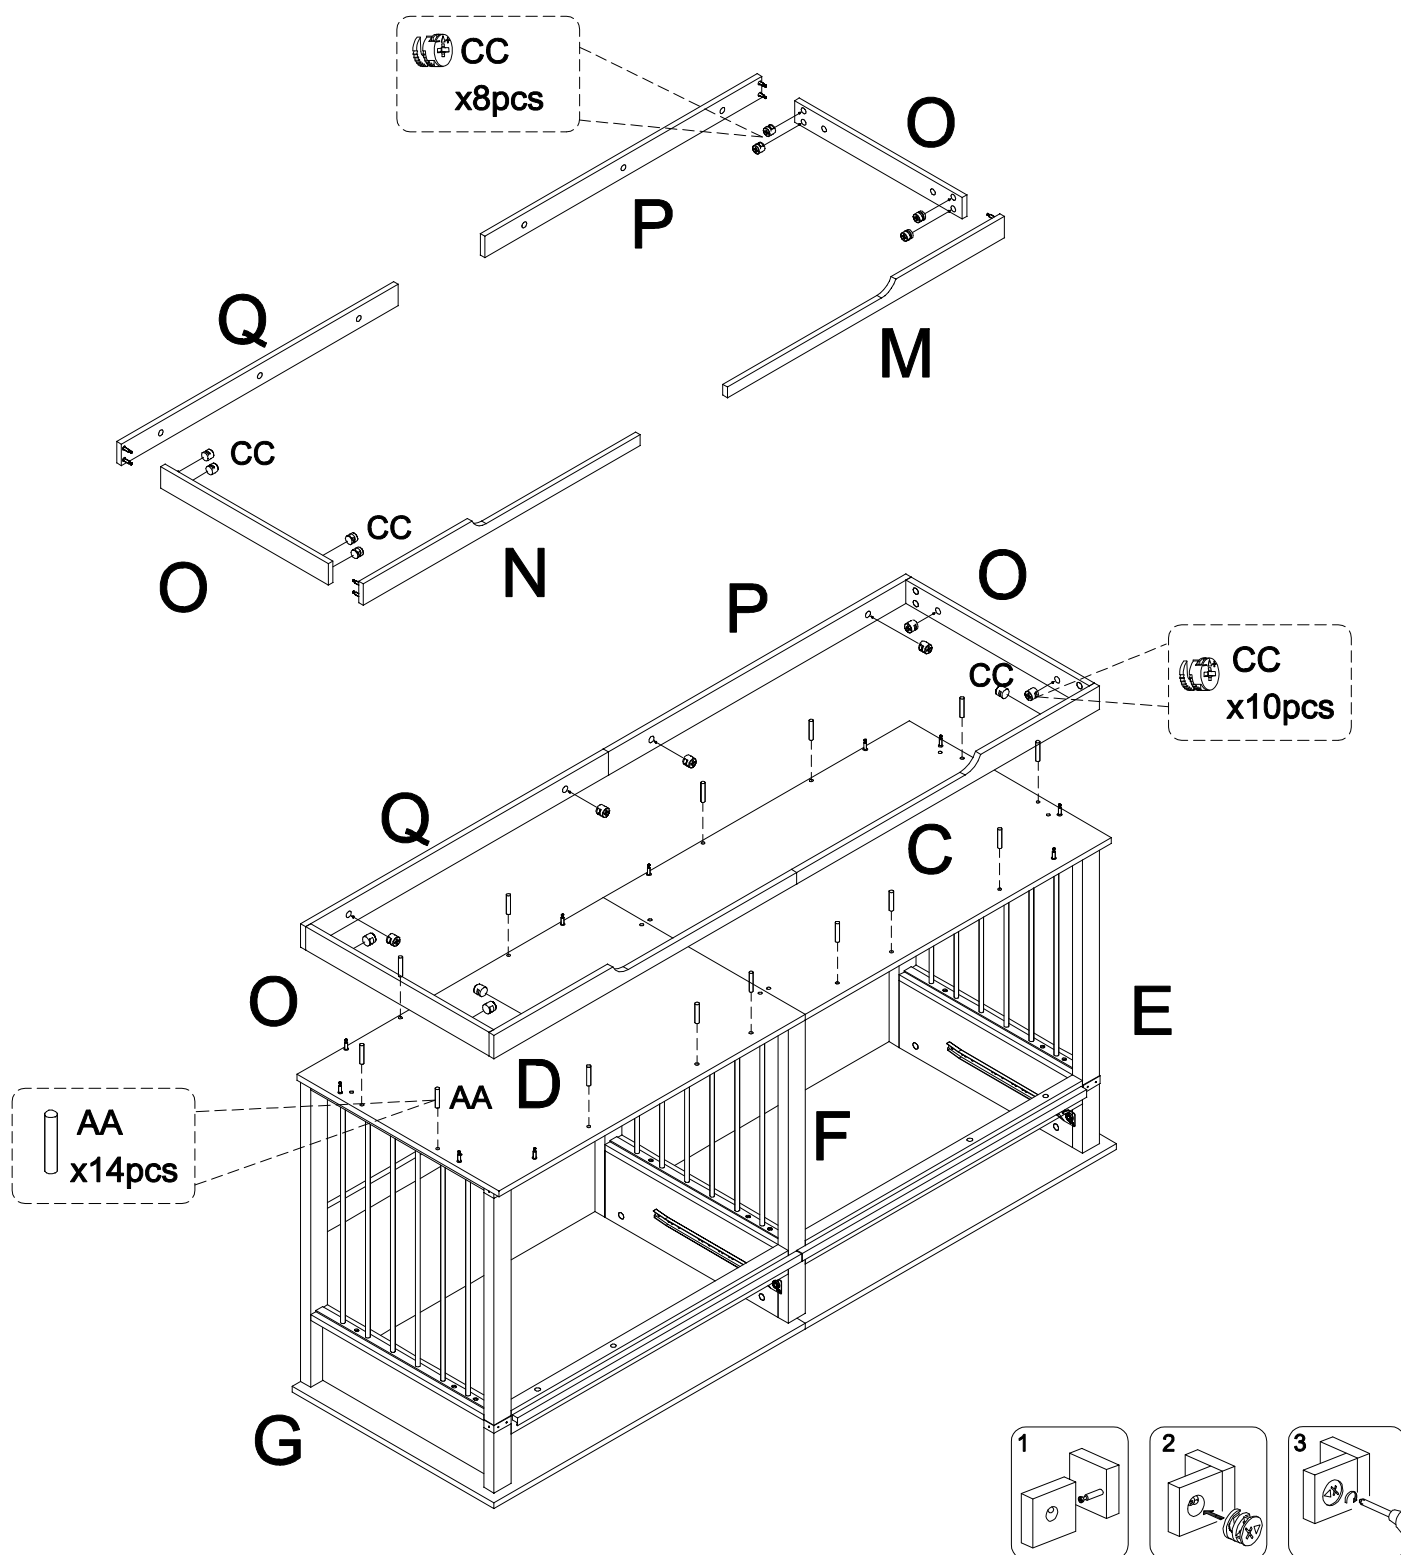 

AA

 


[x14]

CC



[x18]

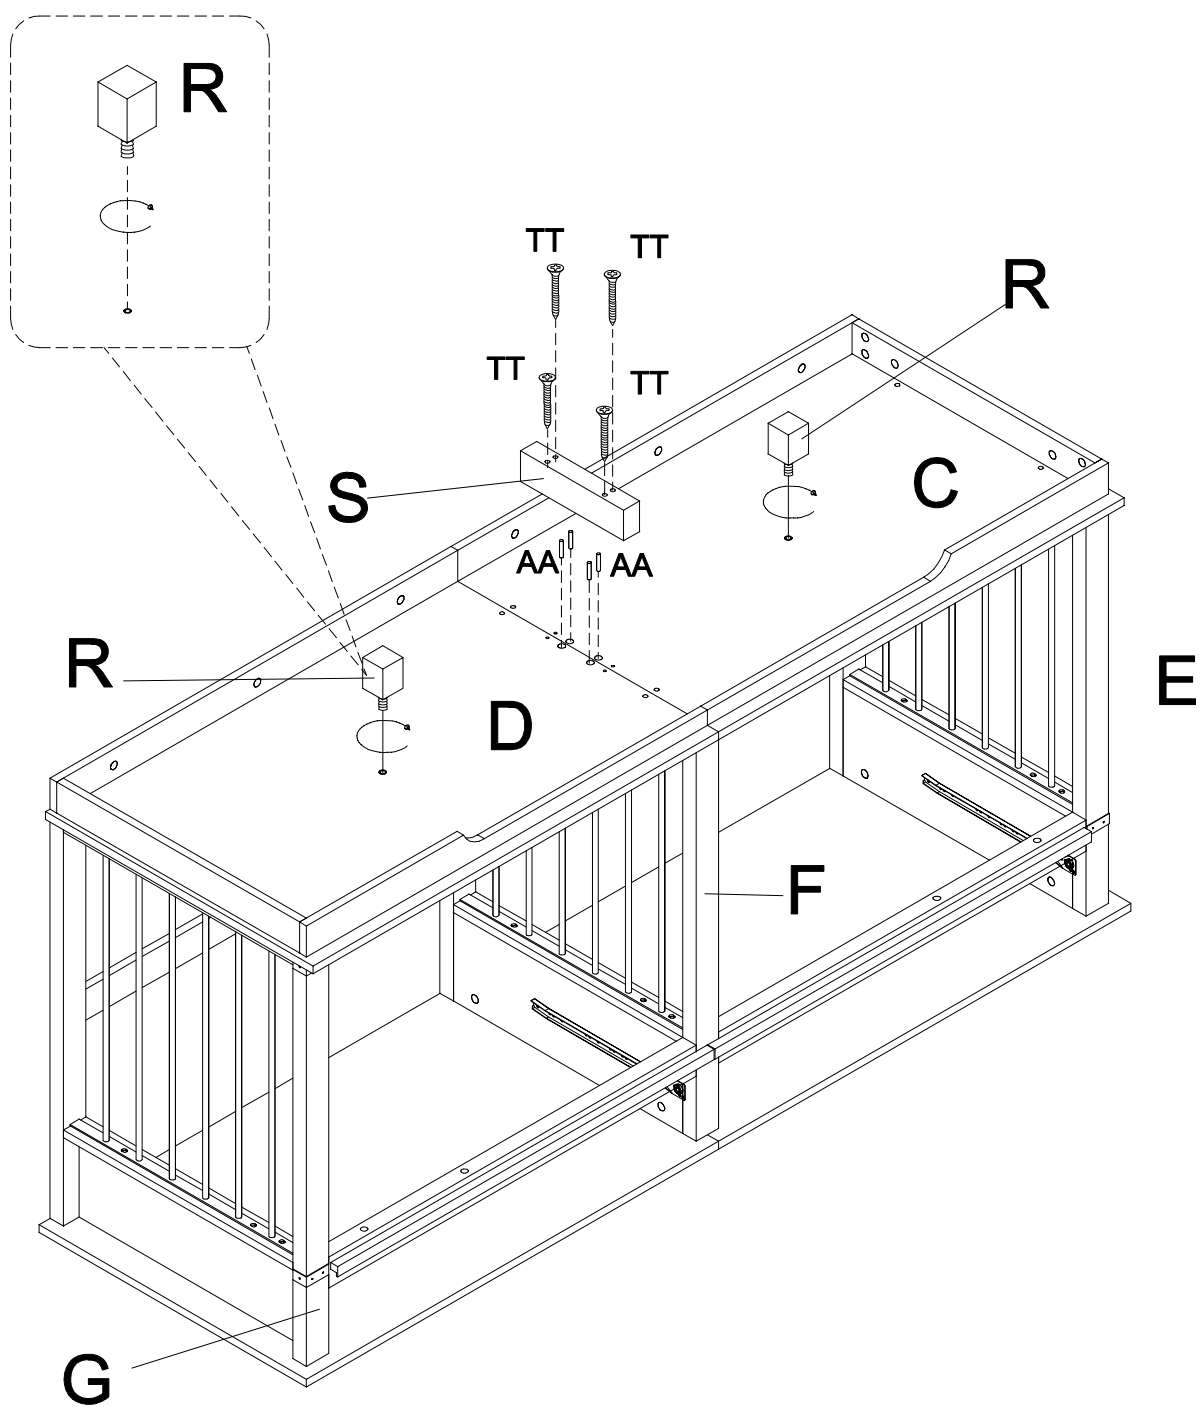


AA






[x4]

 TT



[x4]

   10

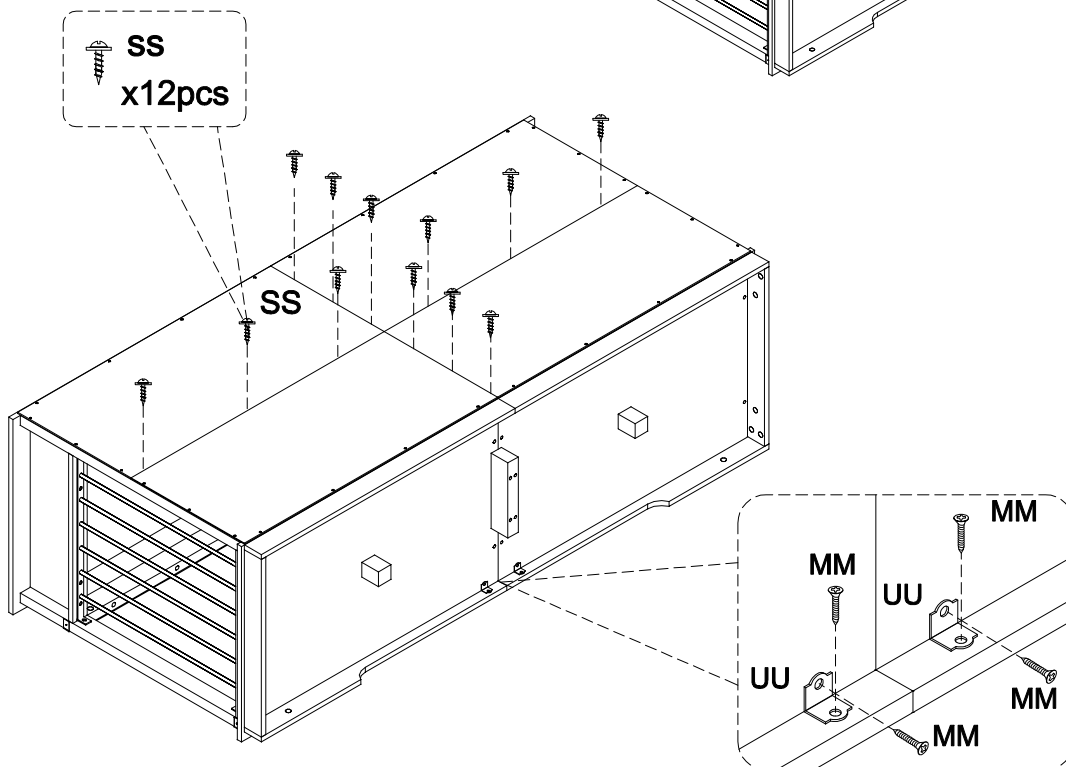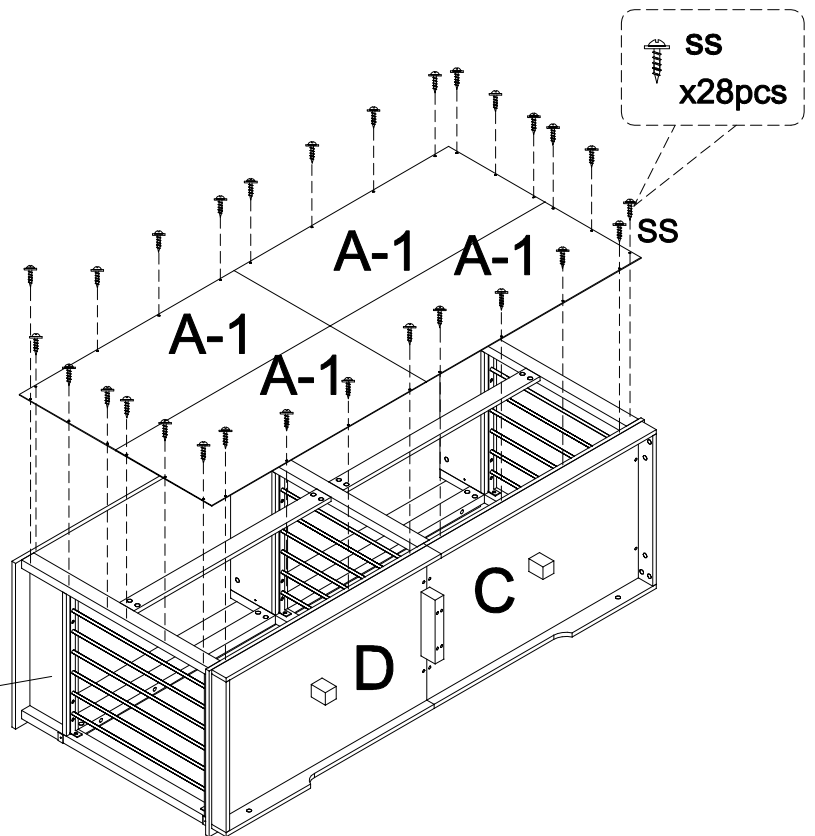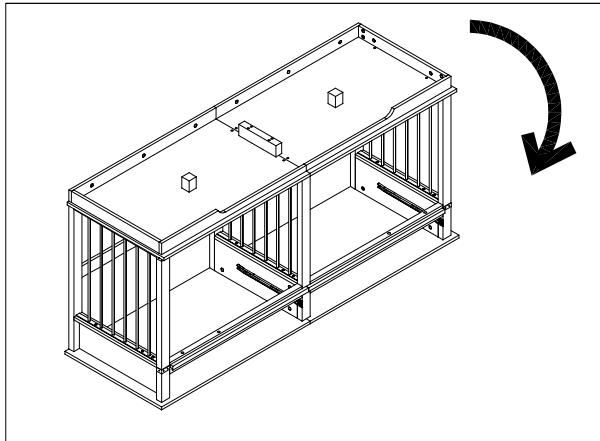

MM



[x4]

SS

 


[x40]


UU



[x2]

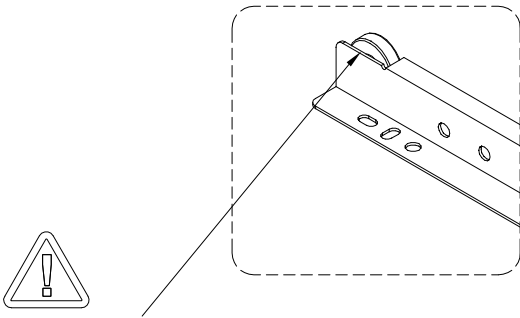


The wheel faces up

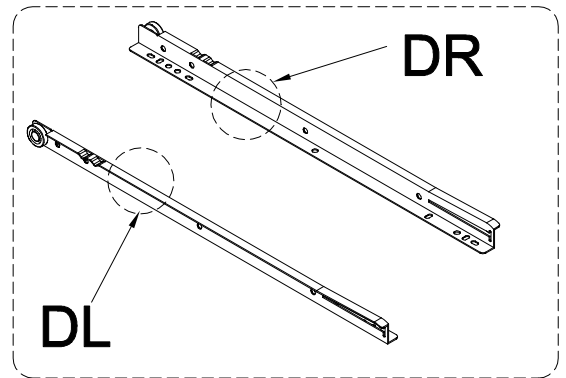 

Wheel at the back

 X2

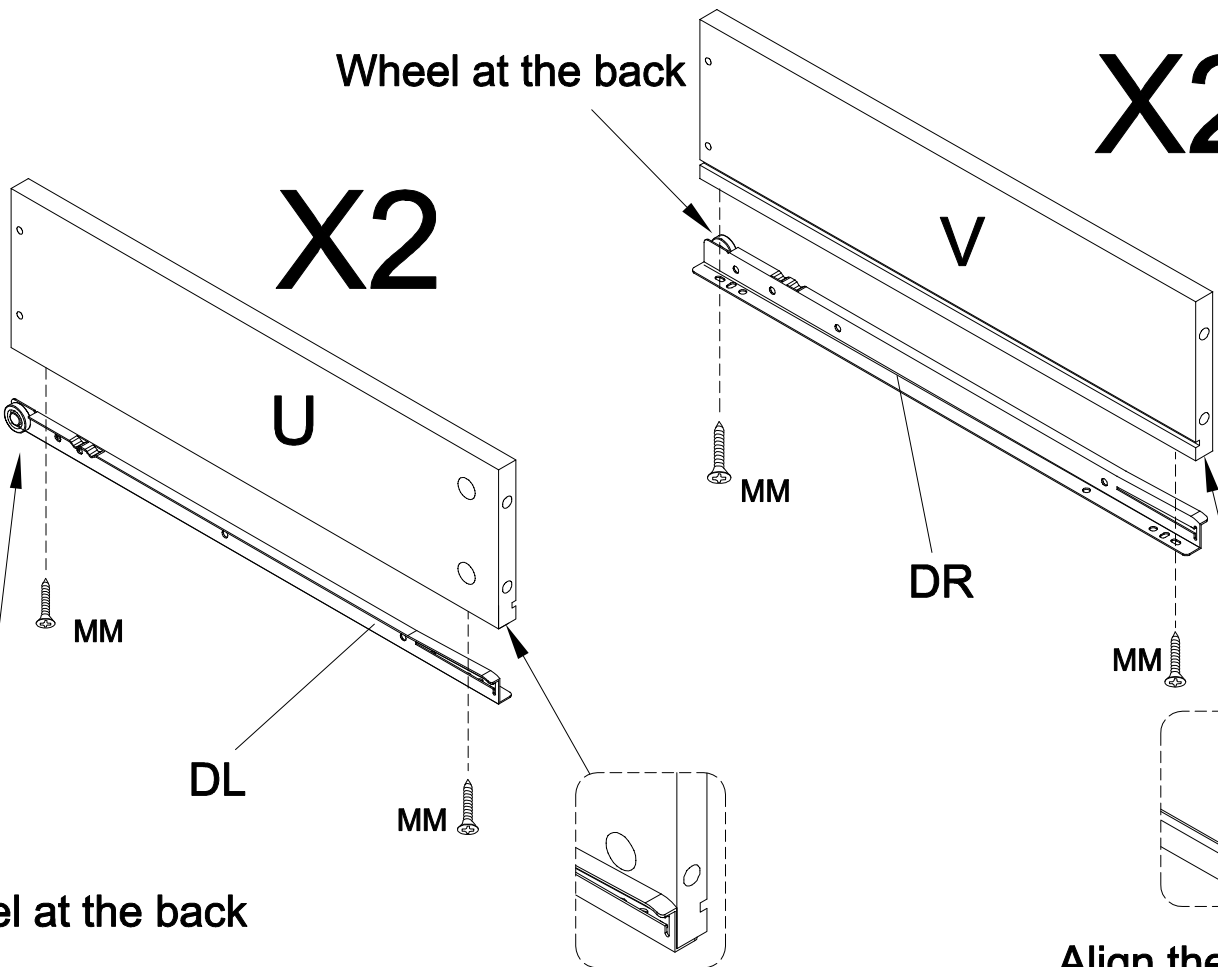

Wheel at the back

Align the panel and the rail

 
Align the panel and the rail

MM




[x8]

DR








[x2]

 DL




[x2]

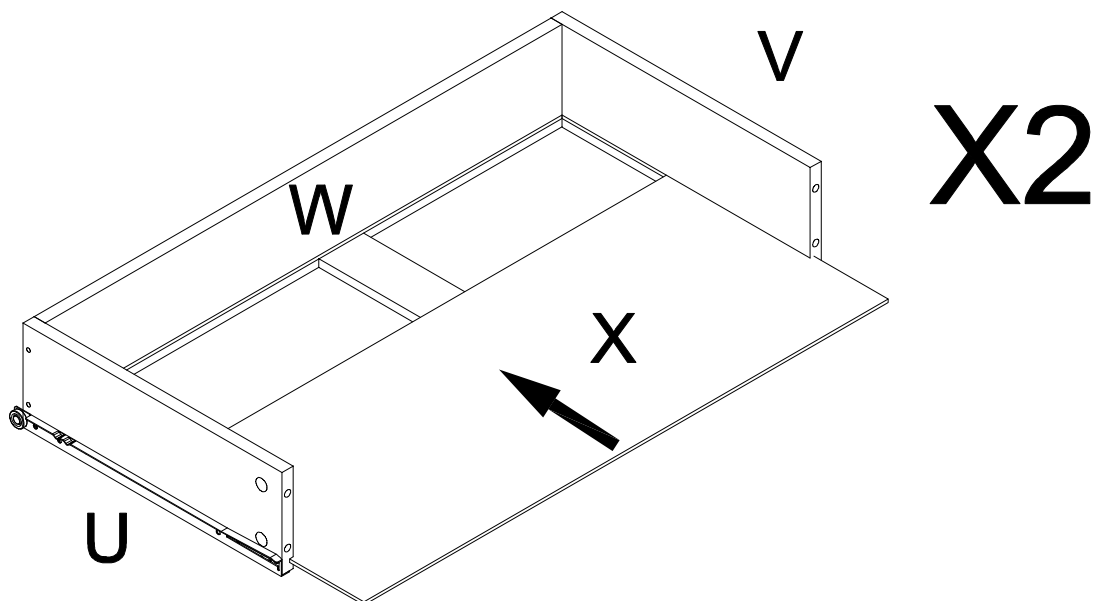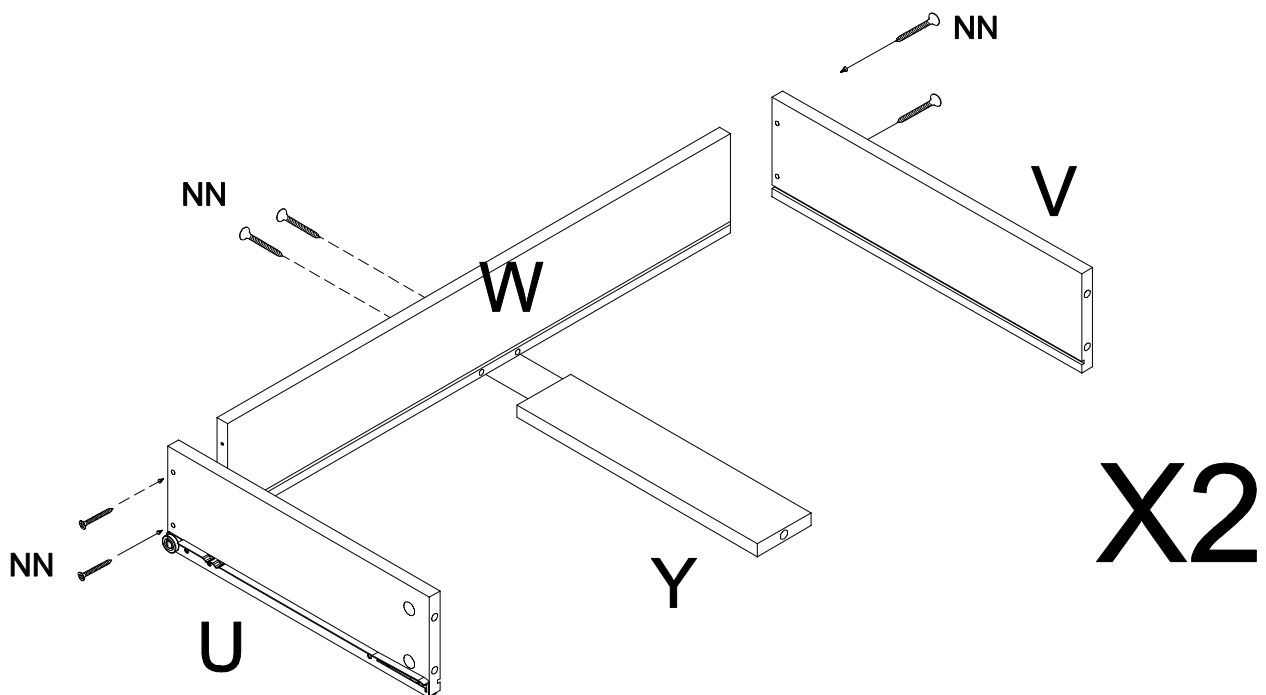  

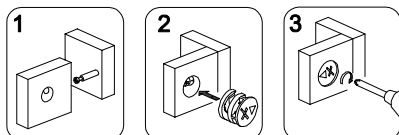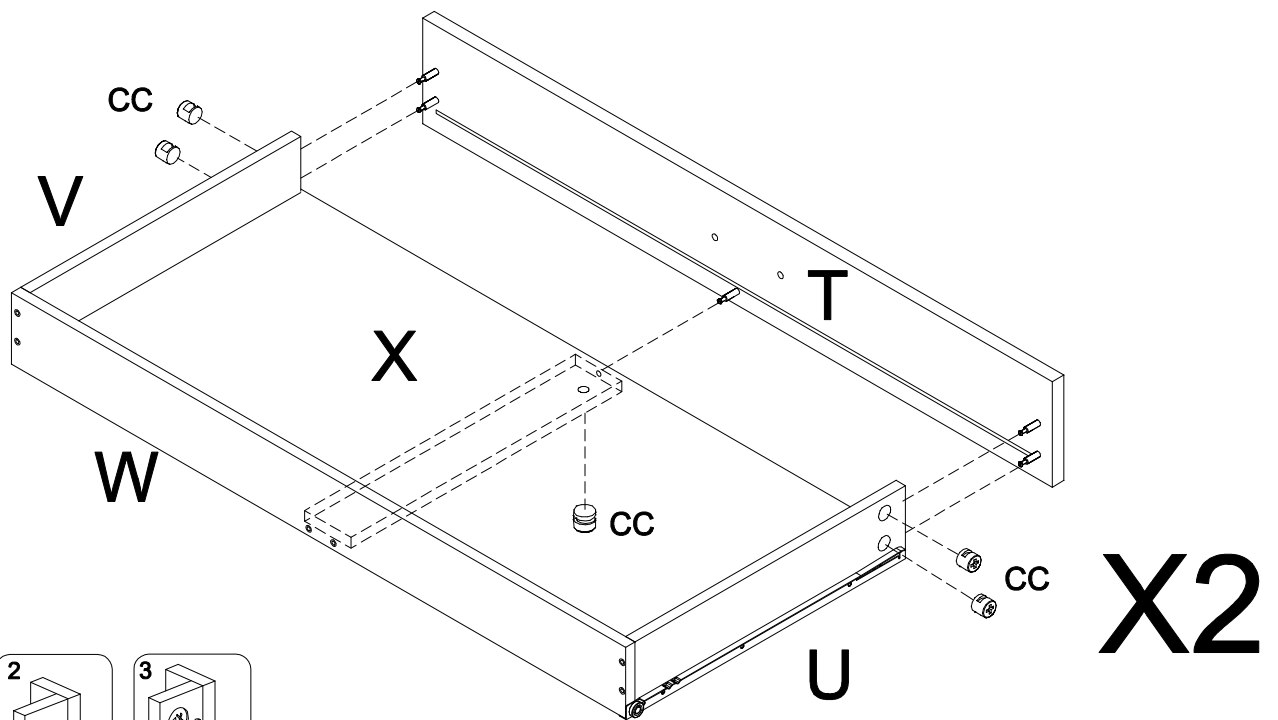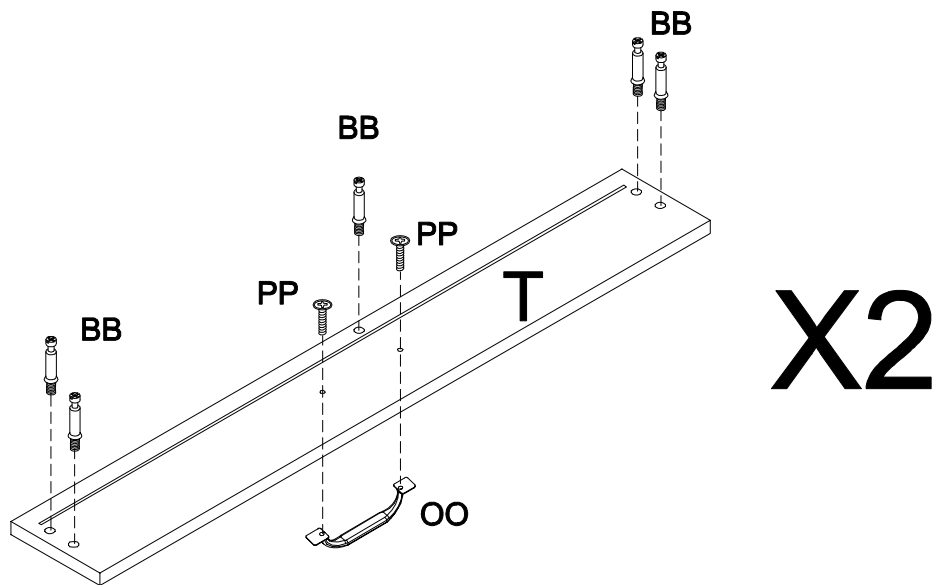   

BB

 

[x10]

CC



[x10]

OO

 
 


 
 
[x2]

PP



[x4]

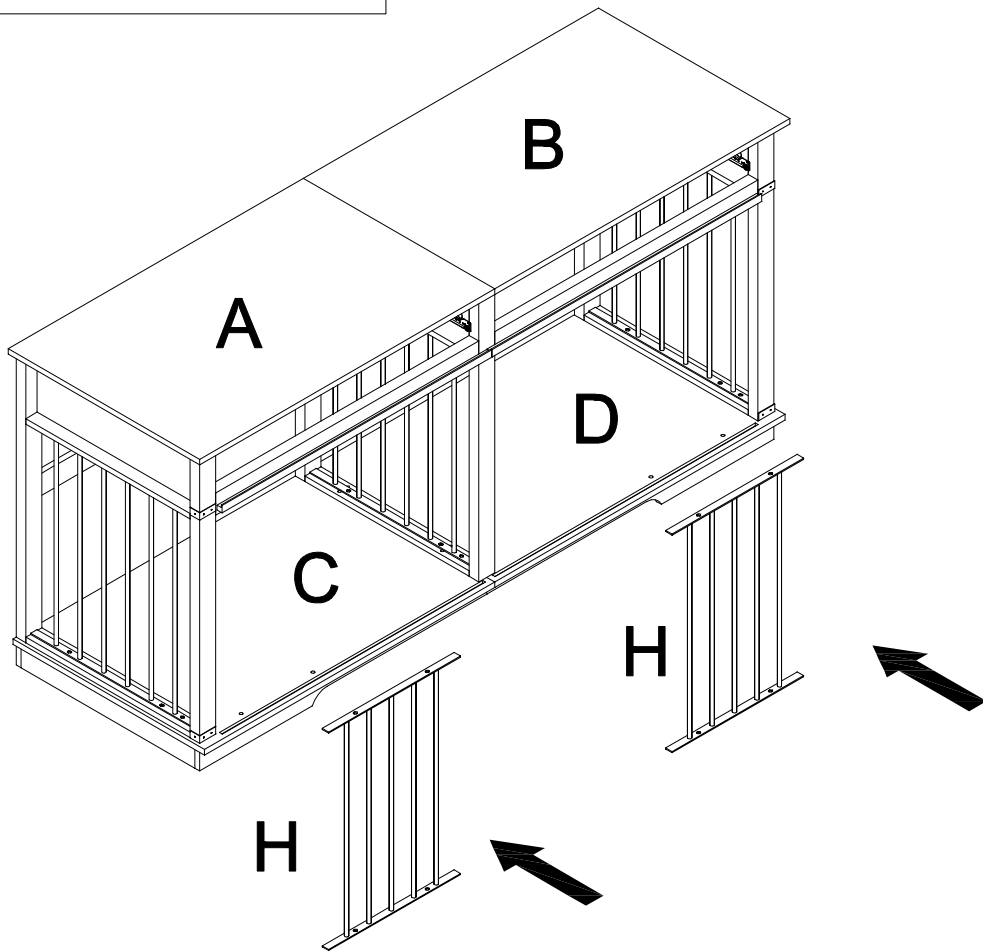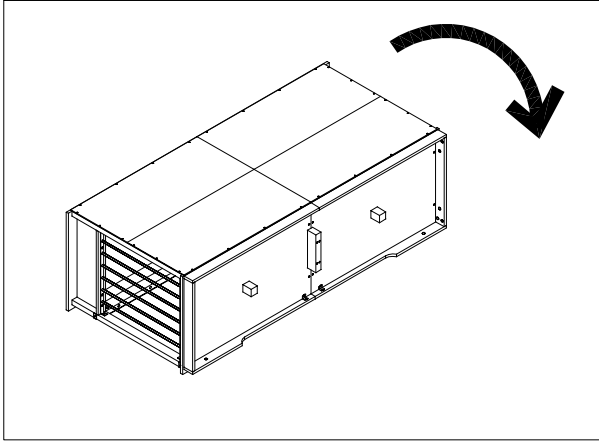


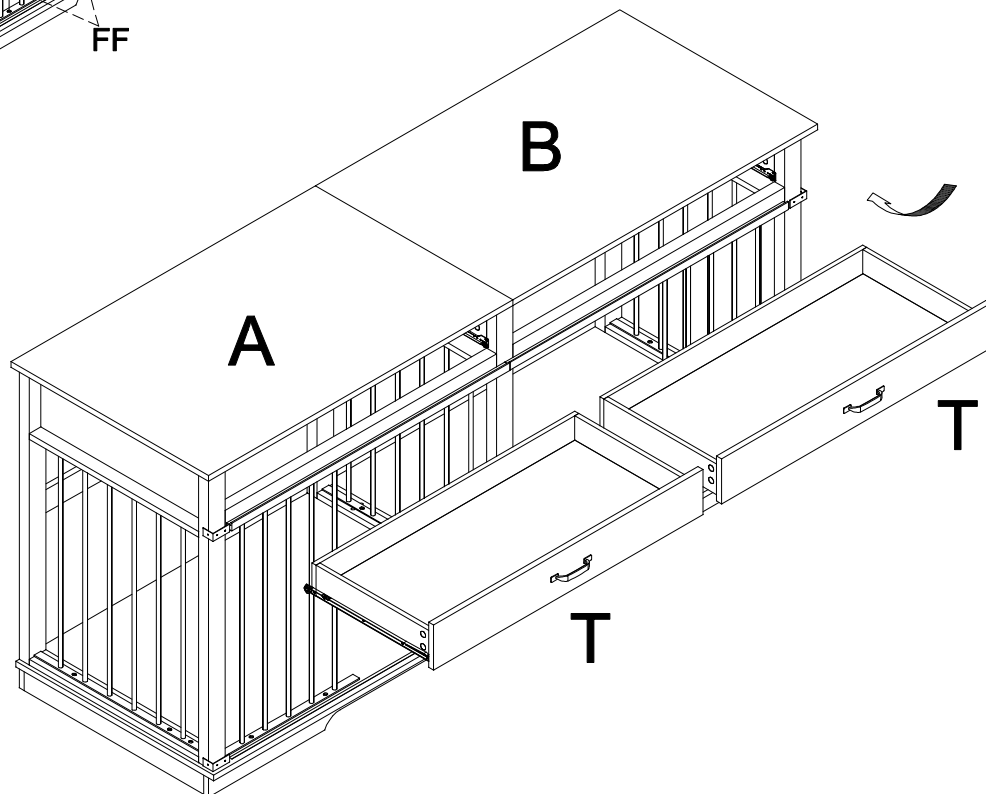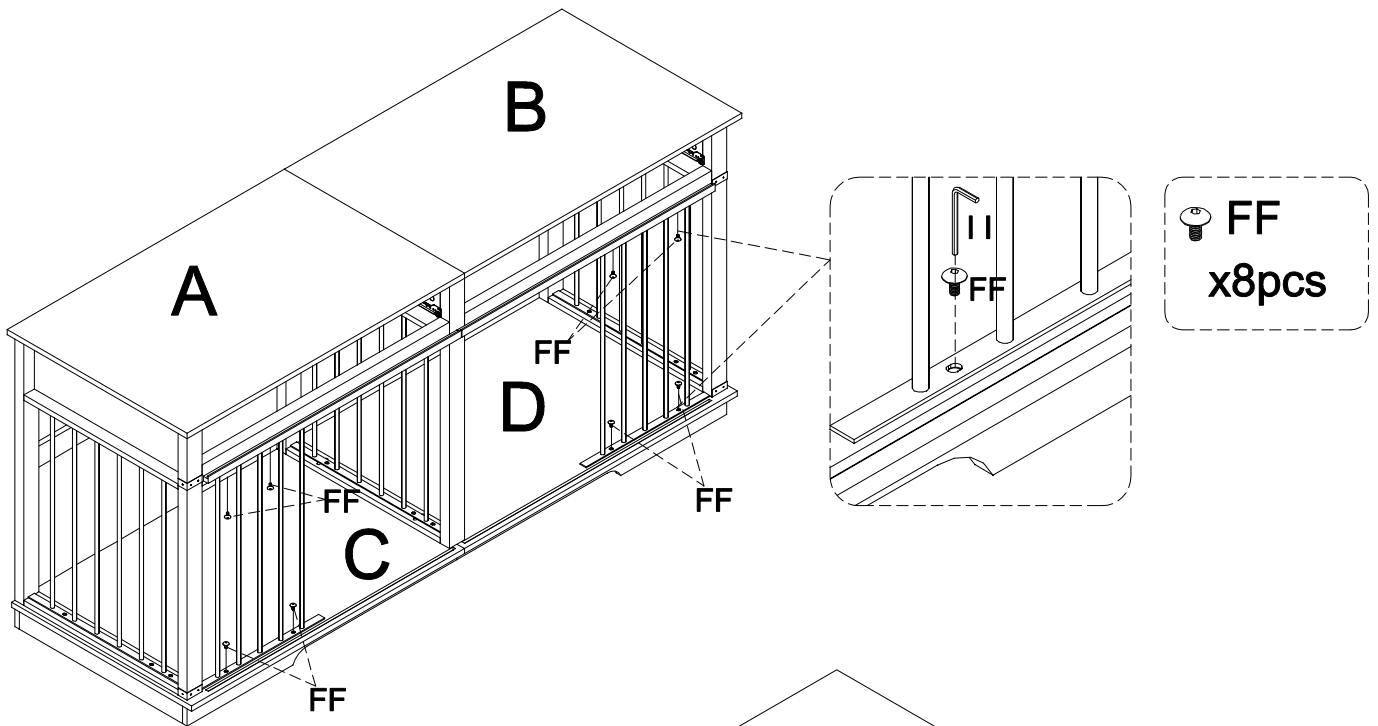

FF



 [x8]

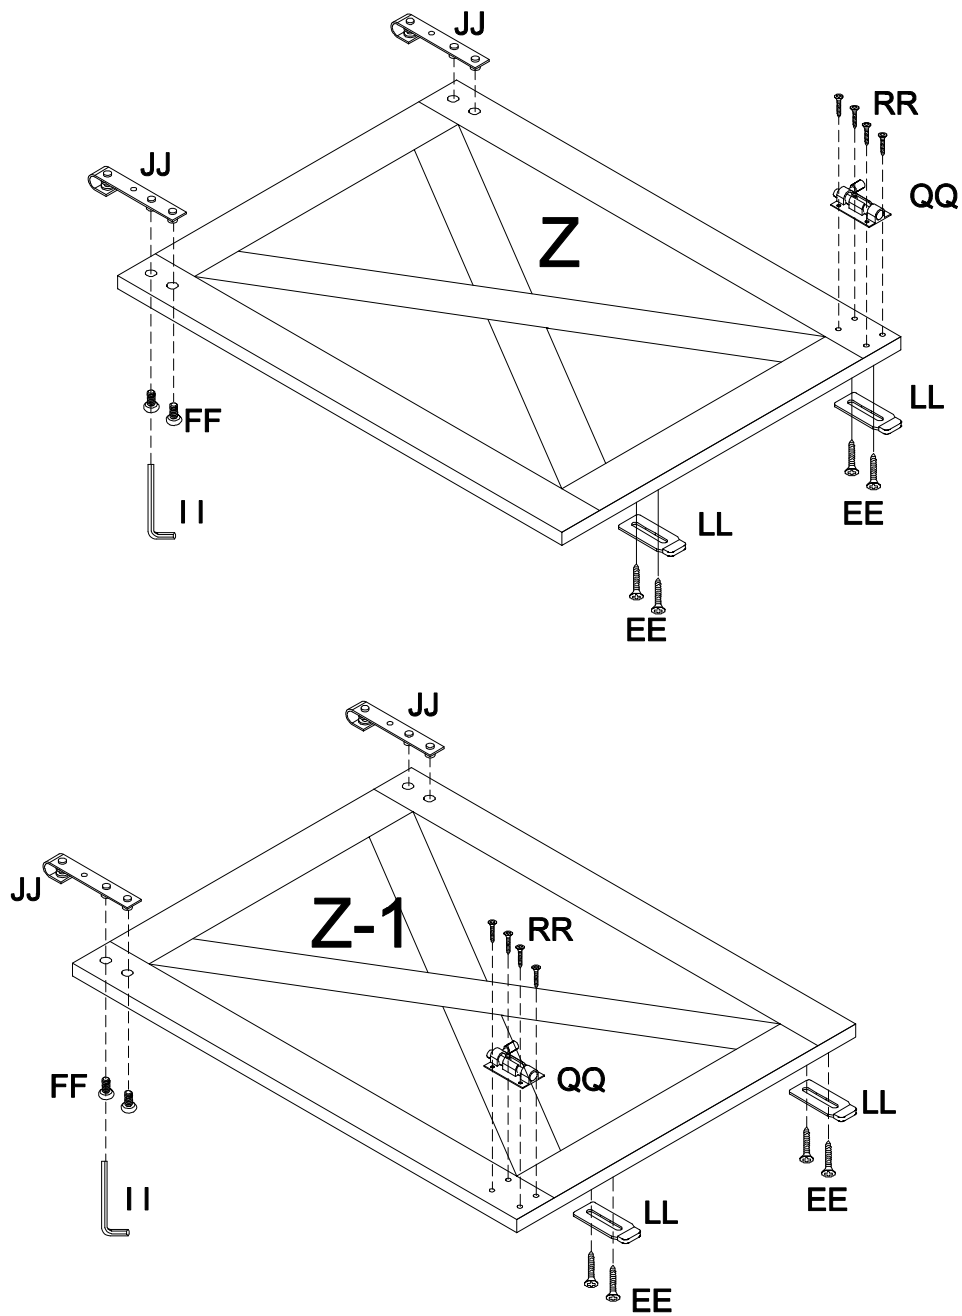


FF




[x8]

 LL




[x4]

 II




[x1]

 QQ



[x2]

 JJ



[x4]

RR

 
 


[x8]


EE



[x8]

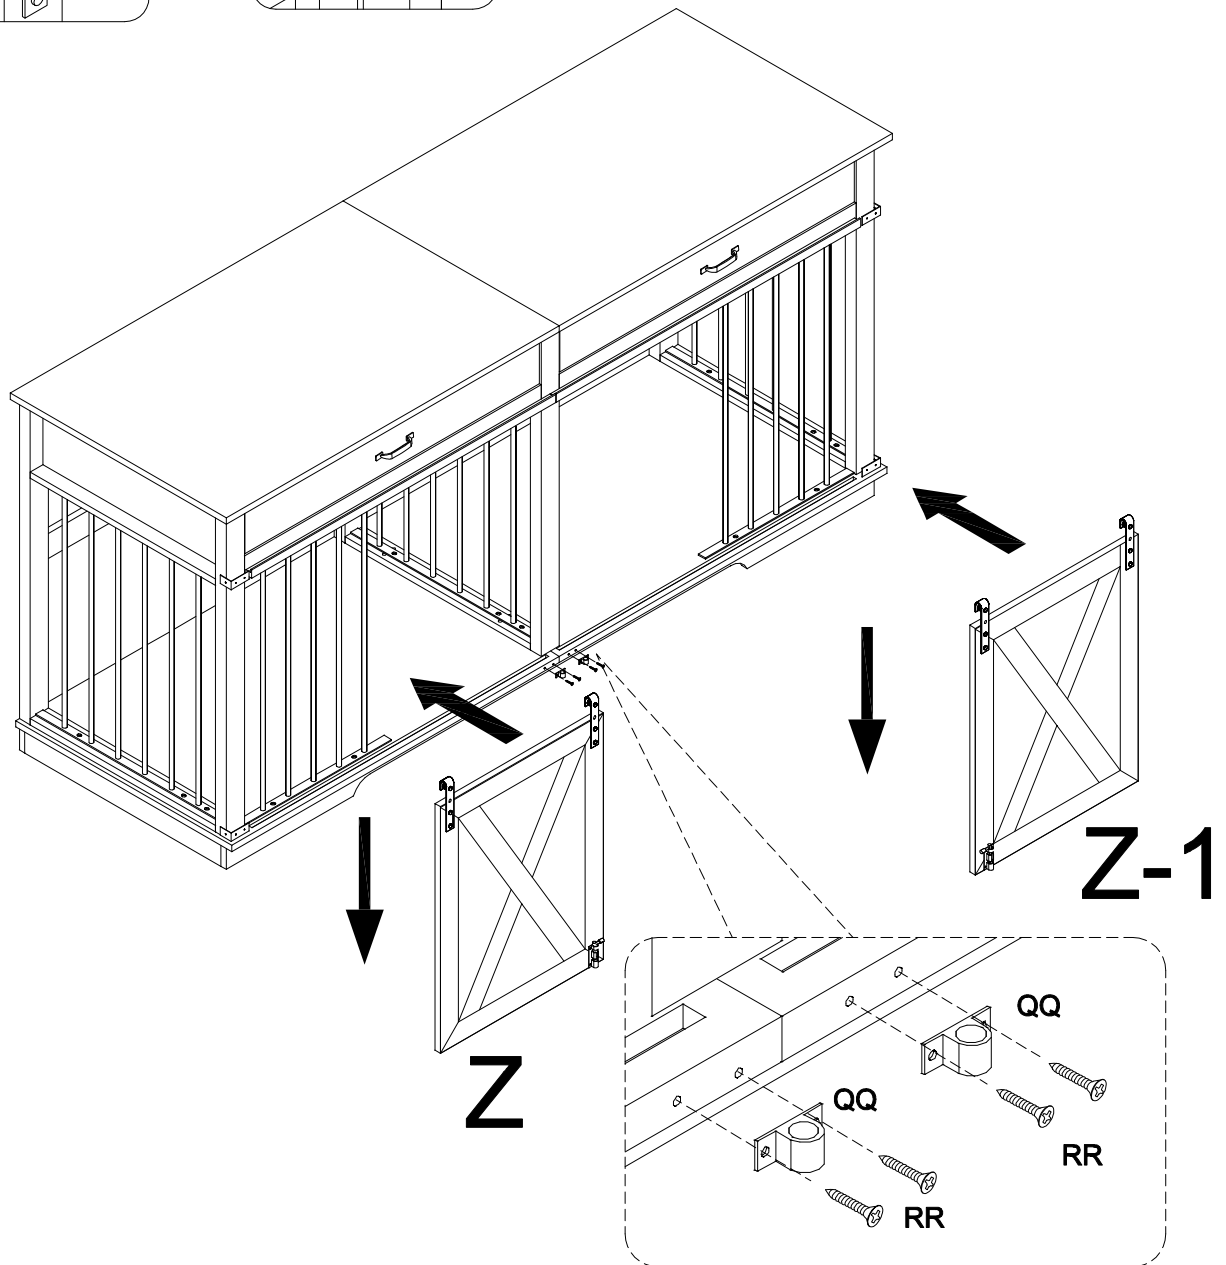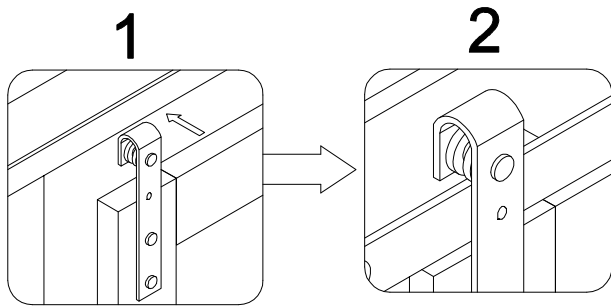

QQ




 





[x2]

RR




       [x4]

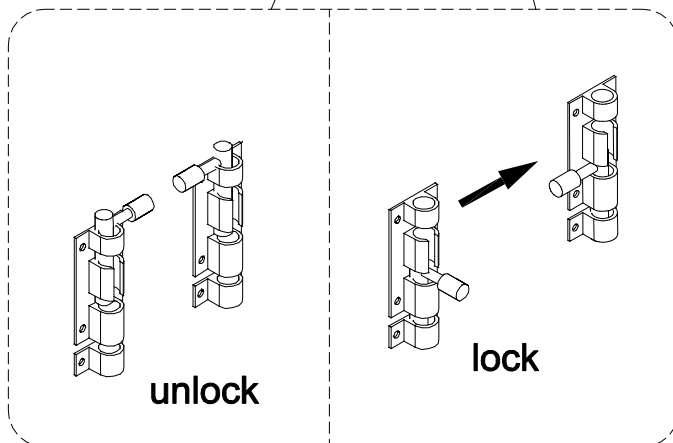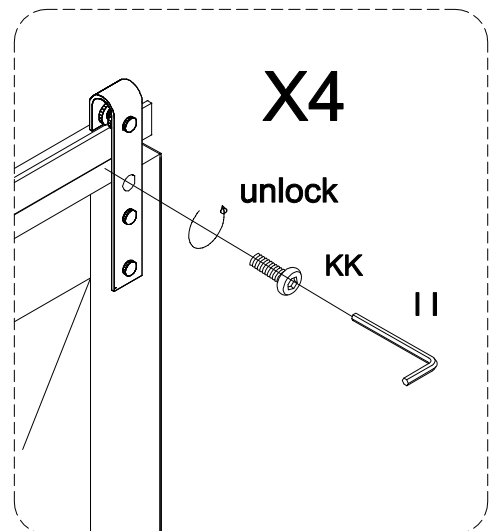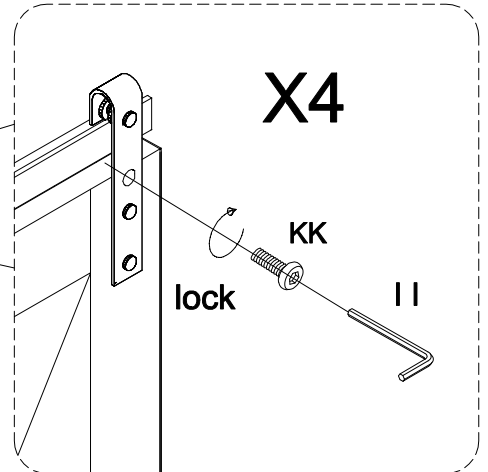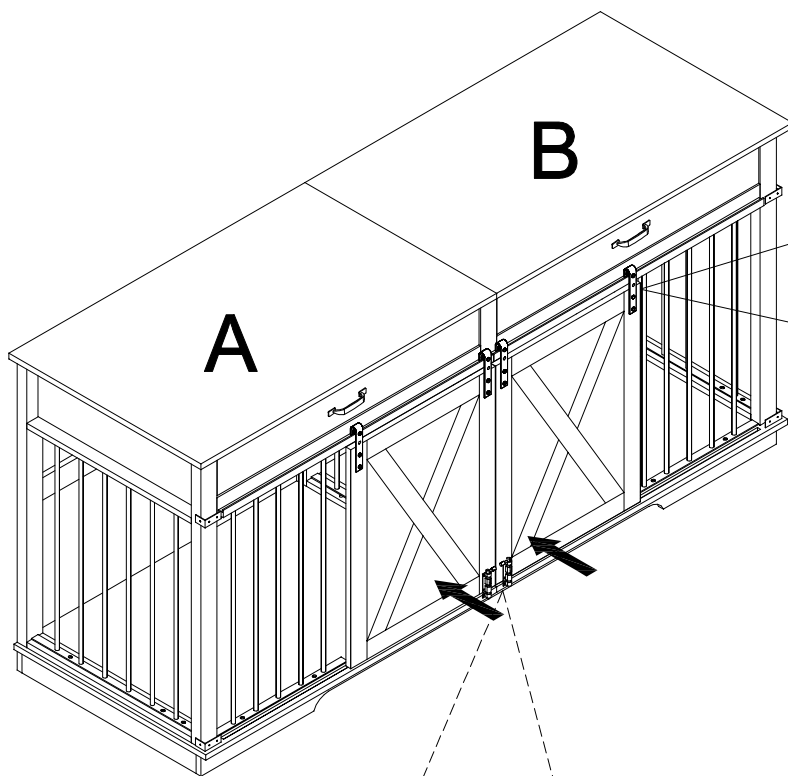

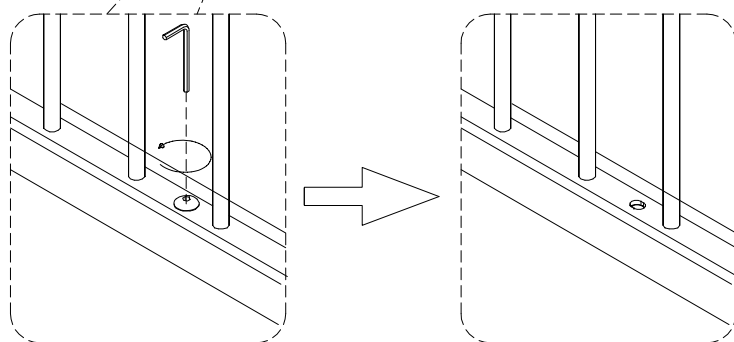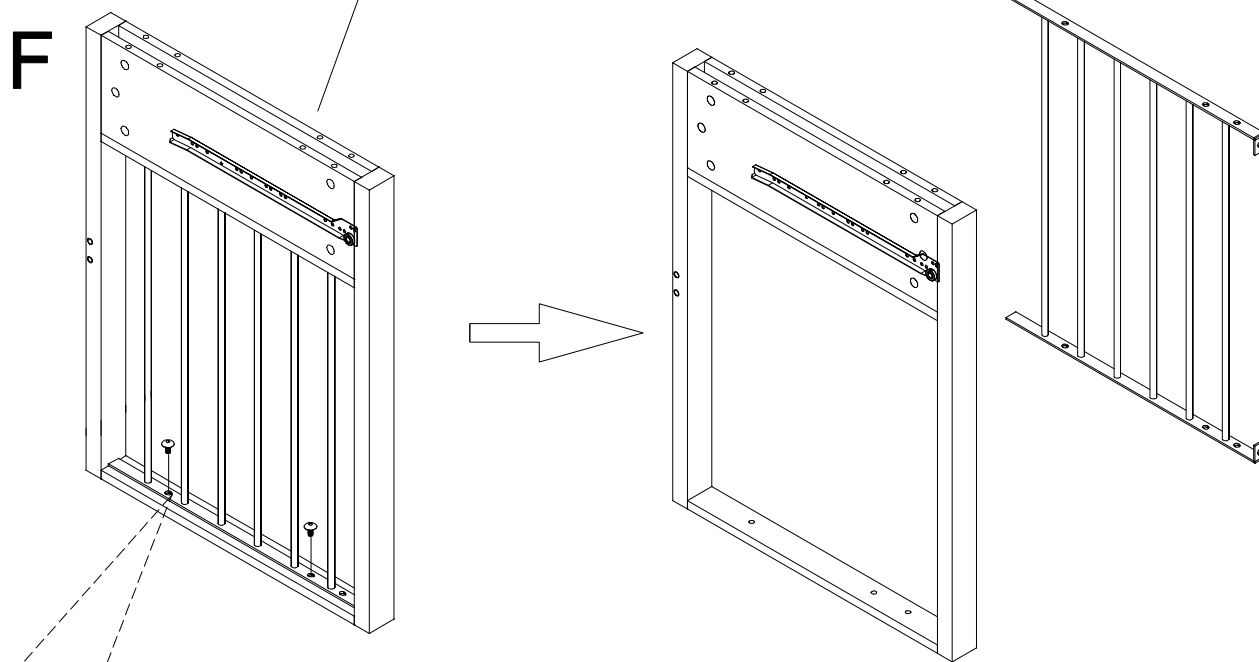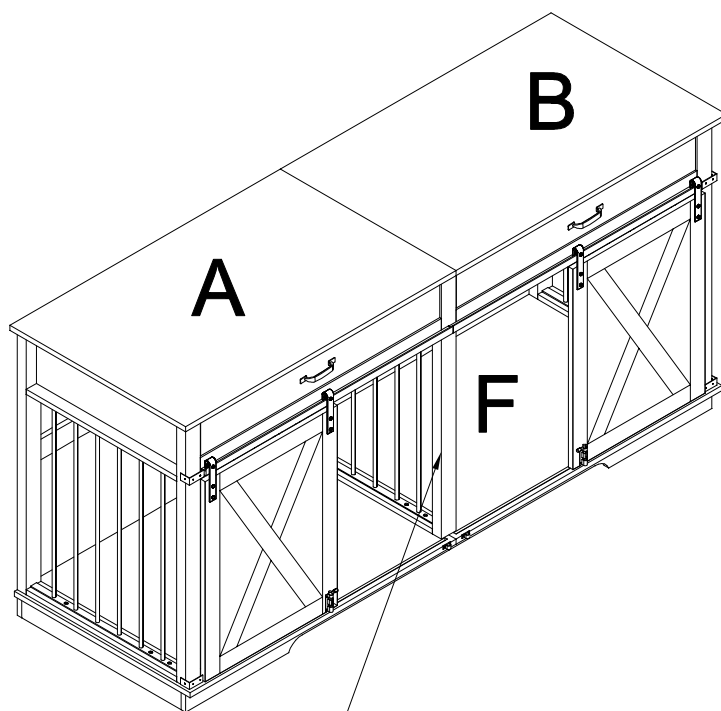

 The crate furniture is equipped with a removable divider in the middle of the two rooms. You can easily switch between one or two rooms by removing and installing the screws.

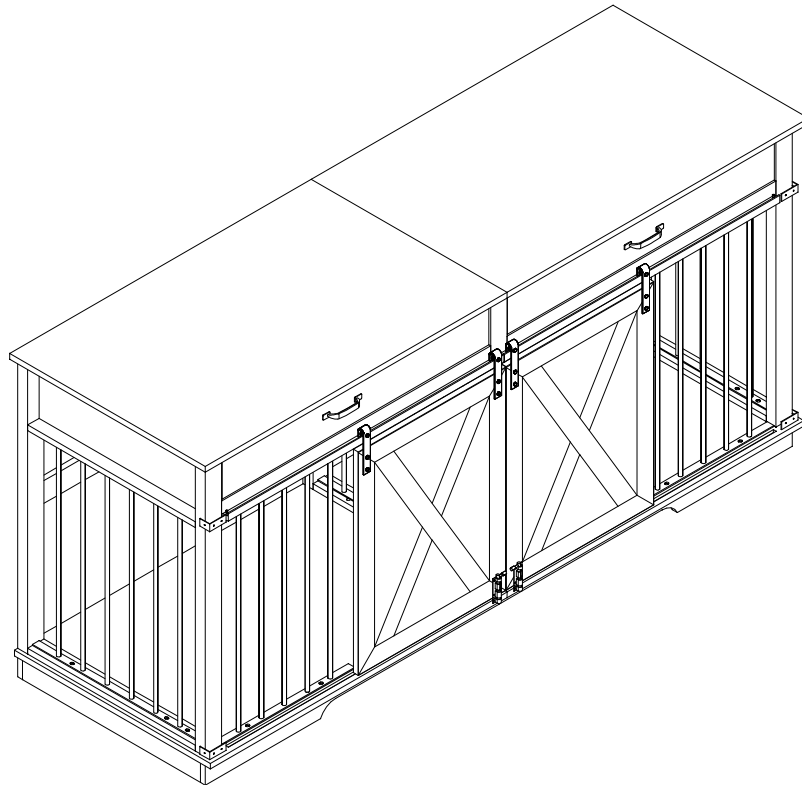

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.

Questions, problems, missing parts? Before returning the product, call our customer service 9 a.m.- 5 p.m., PST, Monday-Friday

800-385-0608

or email us at aftersales@cye-way.com for assistance.