 


24-9-14 尺寸: 195x140mm 单面印 厚布标

6.3m² inflatable tent

Unit: i n c h



Setting up

The site shall be flat or stable. Do not set up tents near water, low, high land or large trees.



① Clean the ground, spread and stretch the tent, and find the nozzle.



② Connect the inflator and the nozzle to inflate the tent.



③ Inflate the tent to 6-8PSI until the air column is steady.




④ Fix the tent pegs and tighten the rope.

⑤ Put the canopy on and support it with the canopy pole.


*The data are manually measured. If there is any error, please refer to the actual object.

Folding

Please keep the tent dry. The folded wet tent will get mold and the service life will be affected.

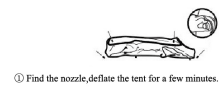

 ① Find the nozzle, deflate the tent for a few minutes.



② After deflating, fold it along the dotted line, then fold it into three parts.



③ Roll along the direction of nozzle, roll up and put it into the storage bag.



④ Put it in the storage bag and pull the drawstring.

Product&fittings:



6.3m² Inflatable tent



Inflator



Repair accessories



24 tent pegs



1 sunroof curtain



Wind rope

Attention:

1. Please check the manual carefully and make sure you have received all the parts.
2. If there is any missing, please let us know the letter of the parts you need.
3. If there is any damage, please send clear photos to us, we will check and offer you the best solution soon.

Storage Instructions:

Store the tent in a completely dry place to prevent damage from mold. The tent will be damaged if stored in a damp condition.

If you pack the tent after it has been rained on or when dew has condensed in the morning, please set it up immediately after returning home to allow it to fully dry before long-term storage.

Extra caution should be taken in high humidity climate conditions to prevent mold damage.

Mildew can be cleaned with a diluted solution of white vinegar (5 parts water to 1 part white vinegar).

Care Instructions:

Clean before storage (including tent poles).

Before storing, clean off any dirt and other natural debris.

Keep tent poles, stakes, and other accessories clean as well.

The best way to clean the tent is to use water and a soft brush, then allow it to air dry.

We strongly recommend using a separate ground cloth to prolong the lifespan of the tent floor and help maintain cleanliness.

Keep the zippers clean and occasionally use zipper lubricant.

MADE IN CHINA