 


Steam Mop

Instruction Manual

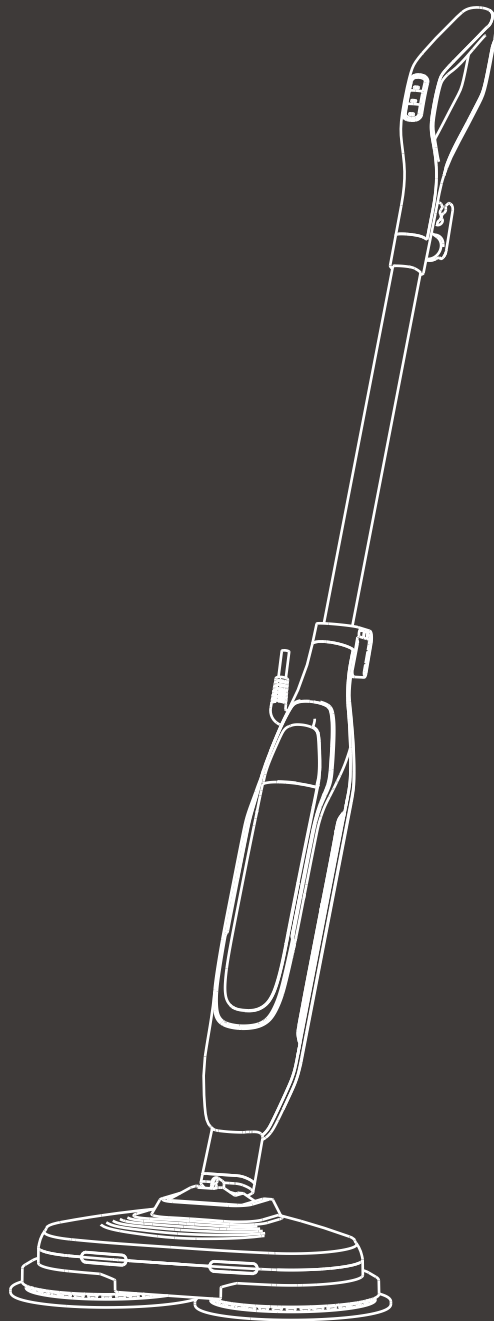

Contents

IMPORTANT SAFETY PRECAUTIONS	1
TECHNICAL SPECIFICATIONS	3
PRODUCT OVERVIEW	3
OPERATIONS	4
ASSEMBLY INSTRUCTION	5
USAGE INSTRUCTION	5
CLEANING AND MAINTENANCE	6
WARRANTY INFORMATION	7

IMPORTANT SAFETY PRECAUTIONS

Please read this user manual carefully before using the product and keep it for future reference.

When using the product, safety precautions should always be followed.

GENERAL WARNINGS

1. This product is for household use only.
2. Do not leave the product unattended when plugged in. Always unplug it when not in use and before servicing.
3. Do not operate the product if the power cord or plug is damaged. If the product malfunctions or is damaged, do not attempt to repair it on your own and contact our after-sales service. Failure to do so may cause electrical shock or injury.
4. Do not immerse the product in water or any other liquids.
5. Do not handle the plug or the product with wet hands or operate it without wearing shoes.
6. Do not pull on the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not allow the product to run over the power cord.
7. Keep the cord away from heated surfaces.
8. Do not unplug by pulling on the power cord. Always grasp the plug, not the power cord.
9. Do not use an extension cord or outlet with inadequate current-carrying capacity.
10. Never fill the water tank or attach the mop pads when the product is plugged in. Unplug and allow it to cool before filling the water tank or attaching or removing the mop pads.
11. When cleaning the exterior of the product, unplug and clean it with a dry or damp cloth. Do not immerse in water or use alcohol, benzene, or paint thinner.
12. To avoid circuit overload, do not operate another appliance on the same socket.
13. To avoid scalding injuries, always unplug and allow to cool before removing or changing any items.

USE WARNINGS


1. Use the product only for its intended purpose. Use only as described in this manual. Do not use for space-heating purposes. Do not use outdoors.

2. Do not allow children to use or play with the product. Close attention should be paid when using it near children, pets, or plants.
3. Use only the manufacturer's recommended accessories.
4. When in use, do not carry or turn over the product on its side, or direct steam toward people, pets, plants, or equipment containing electrical components, such as the interior of ovens.
5. Do not insert any objects into the outlet openings. Do not use if the openings are blocked.
6. Keep hair, loose clothing, fingers, and any parts of the body away from the openings and moving parts.
7. Do not put hands or feet under the mop head, as it gets extremely hot when operating.
8. The steam emitted from the openings is extremely hot and may cause scalding. Please use caution.
9. Use only on flat, horizontal surfaces. Do not use on walls, counters, or windows. Do not use on leather, wax-polished furniture, synthetic fabrics, velvet, or other delicate, steam-sensitive materials.
10. Do not use on unsealed wood or unglazed ceramic floors. On waxed surfaces, the sheen may be removed by the heat and steam.
11. Add only water to the water tank. Do not add cleaning solutions, scented perfumes, oils, or any other chemicals to the water tank, as this may damage the product or make it unsafe for use. If you live in a hard-water area, we recommend using distilled water.
12. Using distilled water can prolong the product's lifespan.
13. Never leave the pads in one spot on the floor during use, as this may damage the surfaces.
14. Never use the product without the pads or with an empty water tank.
15. Before removing the pads, unplug and allow the product to cool down.
16. Extreme caution should be exercised when cleaning the stairs.
17. Keep your work area well lit.
18. Always test an isolated area before large-area cleaning.
19. Do not clean the same area for an extended period.
20. When used for the first time, it may take about 30 seconds to start, which depends on the ambient temperature.



TECHNICAL SPECIFICATIONS

Rated Voltage	120 V~, 60 Hz
Rated Power	1200 W
Water Tank Capacity	400 ML

PRODUCT OVERVIEW

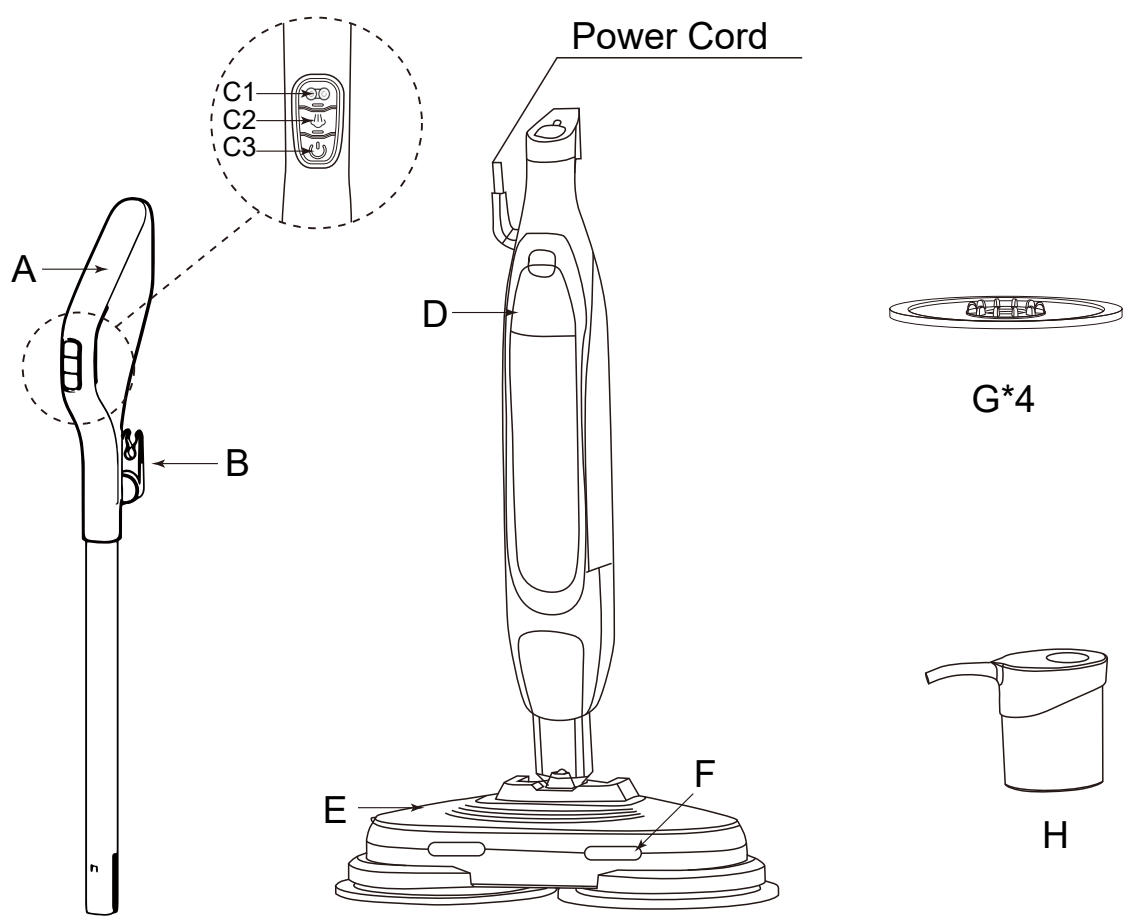

A	Handle	D	Water Tank Cap
B	Quick-release Cord Holder	E	Mop Head
C1	Floor Brush Button	F	Head Light
C2	Steam Button	G	Mop Pads
C3	Power Button	H	Measuring Cup

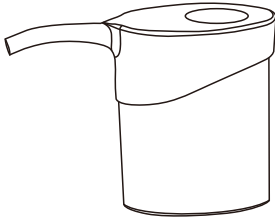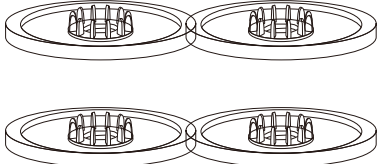Accessories	Diagram	Description
Measuring Cup		For measuring and adding water.
Mop Pads		1. Easy to assemble. 2. Reusable pads feature a super-absorbent microfiber for locking in moisture and dirt and breaking up tough, stuck-on stains.

OPERATIONS



(C1): Floor Brush Button

1. The default mode is low speed.
2. Press once to switch to high speed, and the indicator light is blue.
3. Press again to switch to low speed, and the indicator light is green.

Note: You can toggle between the two speeds by pressing this button.



(C2): Steam Button

1. The steam indicator light (green light) flashes when preheating, but it remains steadily on when finished.
2. The default mode is low level, and the indicator light is green.
3. Press once to switch to high level, and the indicator light is blue.
4. Press again to turn off the steam mode, and the indicator light is off. You can use it as a normal mop.

Note: The above sequence cycles repeatedly.




(C3): Power Button

1. Press to turn on the power, and the power indicator light (white light) remains steadily on.
2. The product starts with steam mode and works at low speed by default after being turned on.
3. Press again to turn off the power.

Note: The indicator light flashes red, and the product will stop producing steam when the water tank is empty.

ASSEMBLY INSTRUCTION

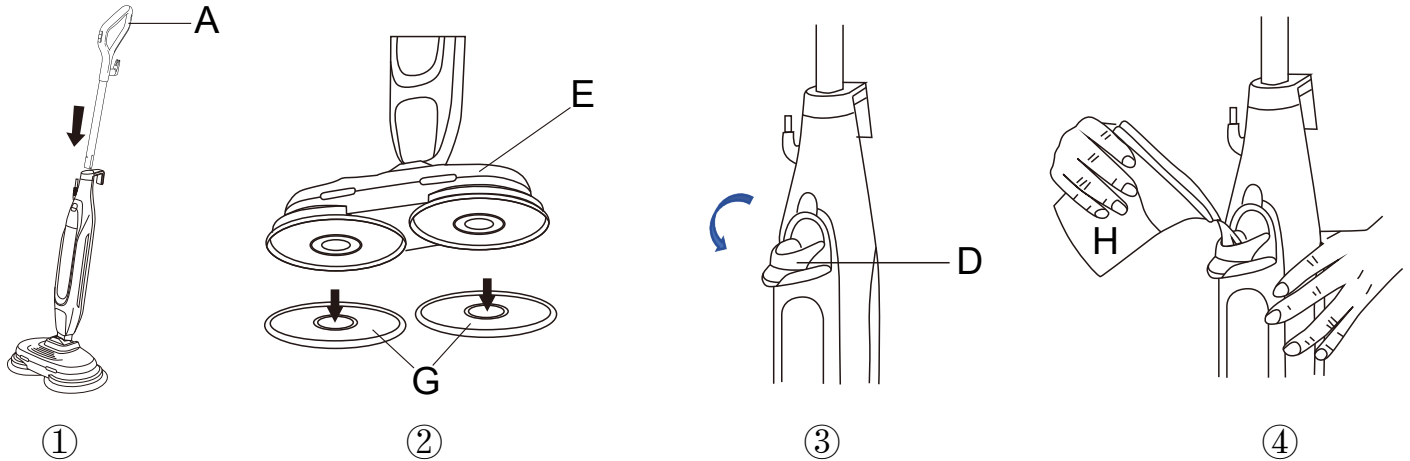


Note:

1. Unplug the product before filling the water tank.
2. Ensure not to exceed the max water line. When finished, close the tank cap firmly.
3. Add ONLY water to the tank. Do not use chemicals or cleaning solutions, as they may damage the product.
4. Recommended using distilled water.

USAGE INSTRUCTION

- ① Ensure both pads are properly installed before using.
- ② Fill the water tank.

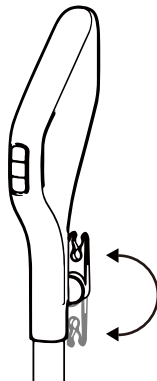


- ③ Turn down the quick-release cord holder to release the power cord. Then plug it in.


Note:

1. The product will not turn on when upright. Tilt it to activate before use.
2. Sweep or vacuum your floors before using the product.
3. Ensure the product is unplugged before refilling the water tank.
4. Wait 2-3 minutes to ensure the pads are cool before removing them.
5. Do not leave the product with wet pads on any surfaces. Wash the pads after use.


CLEANING AND MAINTENANCE

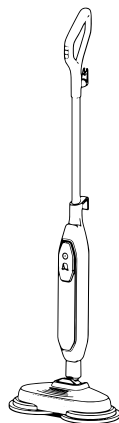

1. Unplug and place the product in an upright position. Allow it to cool completely.

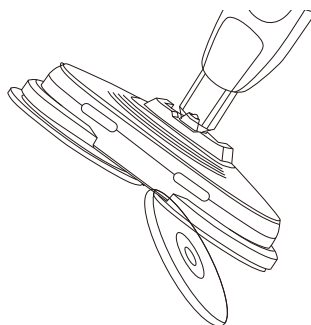

2. After the pads have cooled completely, remove and wash them in warm, soapy water. Then dry them thoroughly.
3. Drain any remaining water from the tank and clean it after use.
4. Do not use bleach, powdered detergent, or fabric softeners, as they may damage the pads or affect the cleaning performance and absorbency.
5. To prolong the pads' lifespan, always line dry or tumble dry in a low setting.
6. Before storage, lock the product in an upright position by raising the handle until the pole is standing upright. Then store it in a cool, dry, and protected area (e.g., in a closet or the corner of a room).

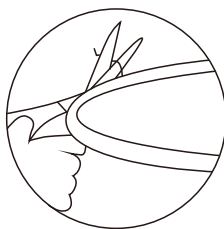

7. Loose fibers indicate normal wear of the pads' fabric. Do not pull them, as this may cause unraveling. Simply trim them.
8. For best cleaning results, replace the mop pads every 3 to 4 months. Dirt, grease, friction, and repeated washing can cause the fibers to degrade and break down, which will reduce the pads' cleaning performance.

Note: Before storage, ensure the product has completely cooled down and the steam has fully released.

WARRANTY INFORMATION

1. This product is covered by a **one (1) -year** limited warranty against defects in materials and workmanship, valid only for the original purchaser. The warranty period begins on the date of retail purchase and is non-transferable.
2. This warranty does not cover normal wear and tear, or any damage resulting from misuse, negligent use, use with improper voltage or current, failure to follow the operating instructions, or any disassembly, repair, or modification not authorized by our after-sales service.
3. Additionally, this warranty does not cover damages caused by Acts of God (such as fire, flood, hurricanes, or tornadoes) or force majeure events (such as arson, power outages, riots, or vandalism).
4. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state (or province to province). Some states (or provinces) do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

