 


ASSEMBLY INSTRUCTION

Dining Table

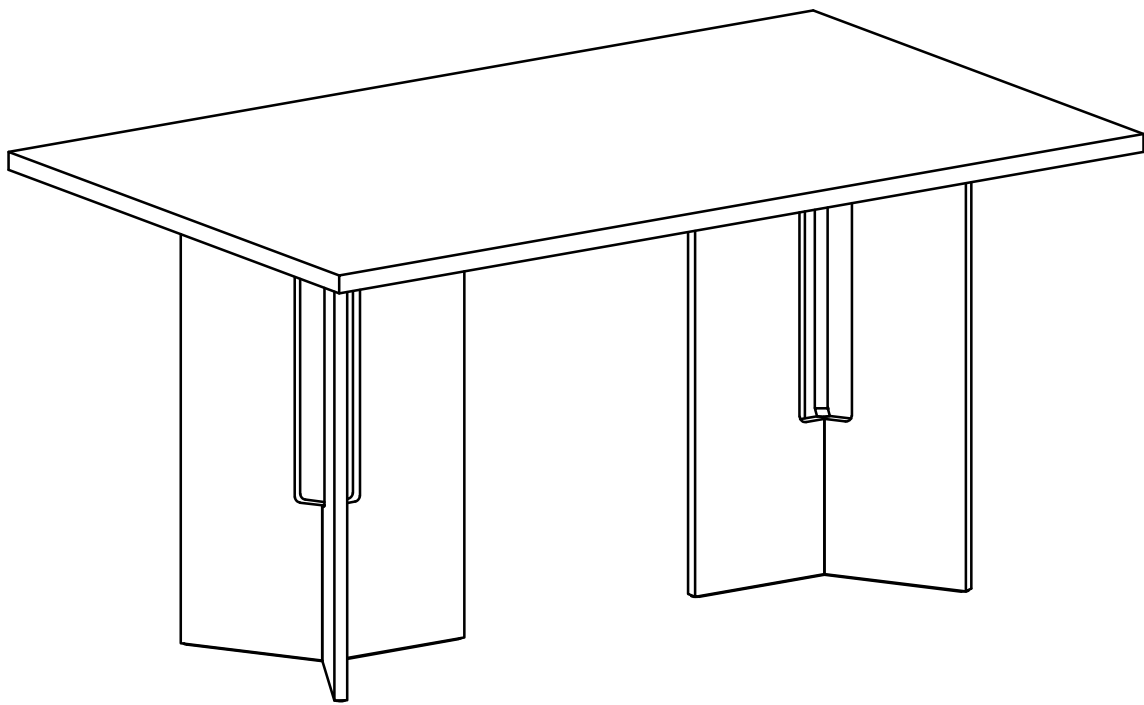

ASSEMBLY INSTRUCTION

 
Please read these instructions fully before starting assembly:

1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

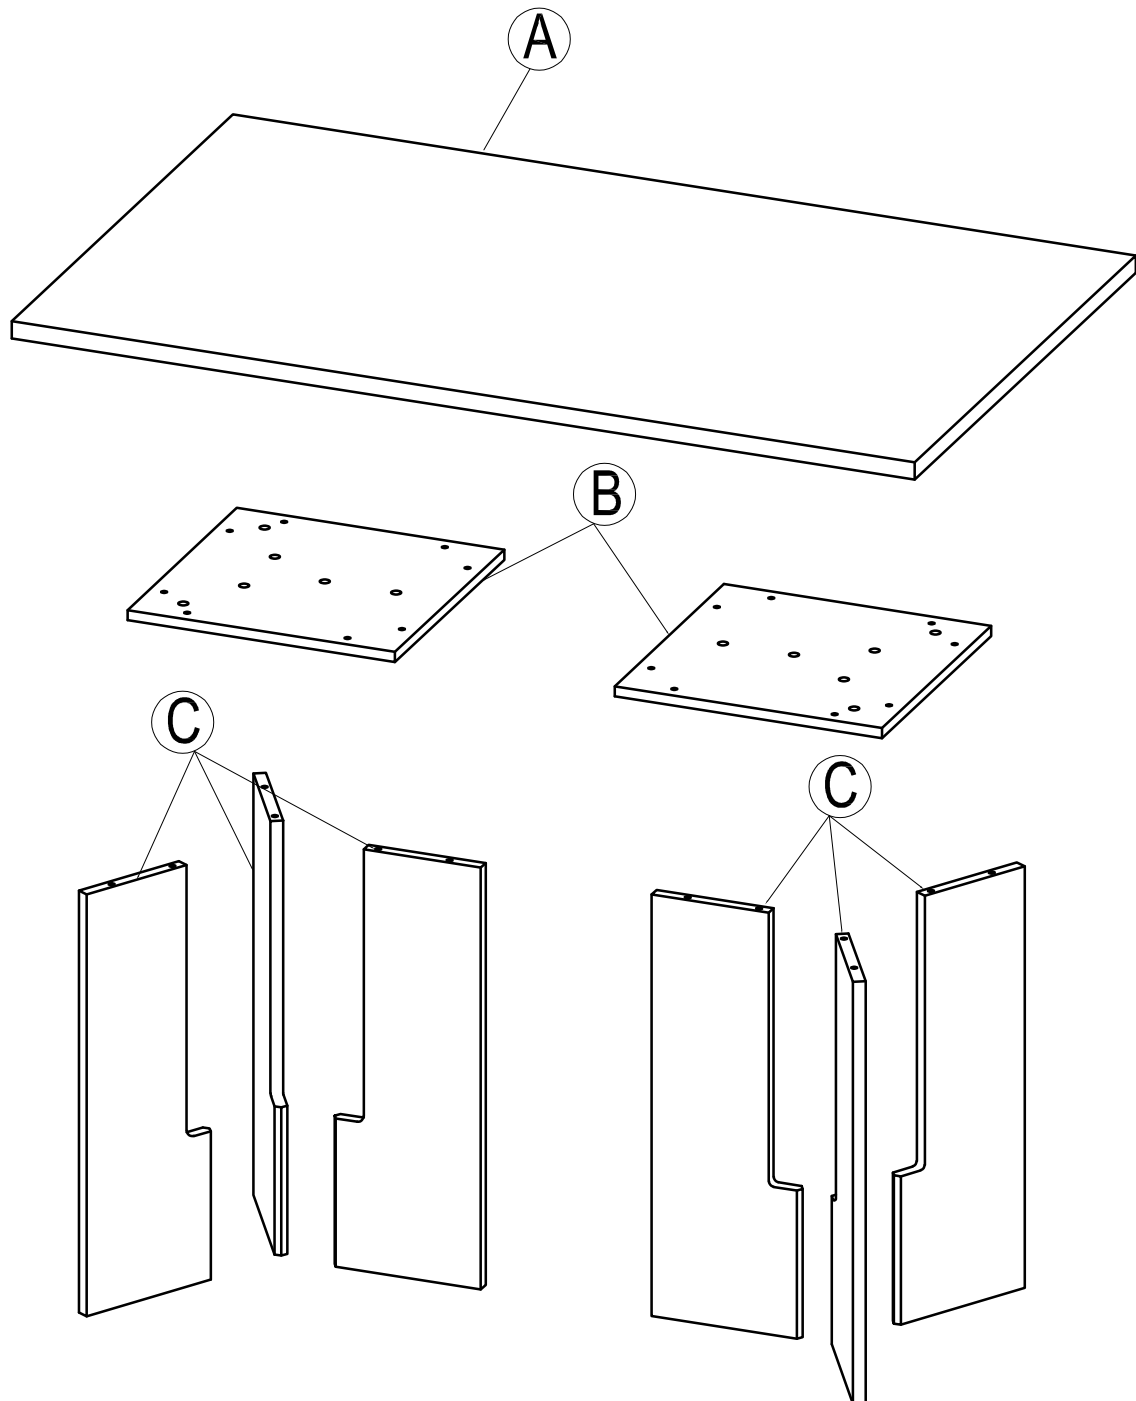

ASSEMBLY INSTRUCTION

Part List

Ⓐ


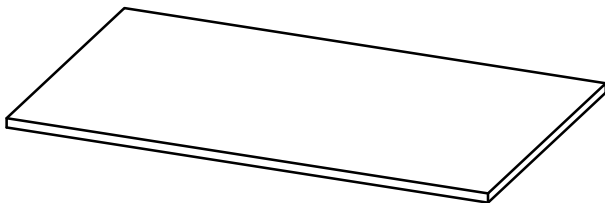 



TABLE TOP (1pc)

 Ⓑ



PANEL TOP LEG (2 pcs)

 Ⓒ




PANEL TOP LEG (6pcs)

ASSEMBLY INSTRUCTION

Hardware List

 ①



Ø 5/16" x 35 mm

BOLT (28 pcs)

 
②



Ø5/16" x 13 mm

LOCK WASHER (28 pcs)

③



Ø5/16" x 19 x 2 mm

FLAT WASHER (16 pcs)

 
④



4 mm

ALLEN KEY (1 pc)

⑤



Ø3.5 x 25 mm

WOOD SCREWS (12 pcs)

 
⑥



Ø8x 20 mm

HEIGHT ADJUSTER (6 pcs)


⑦

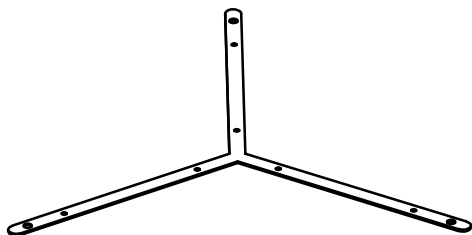

425x425x3 mm

PATCH (2 pcs)

 
Tools Requires




Not included

ASSEMBLY INSTRUCTION

 STEP 1:

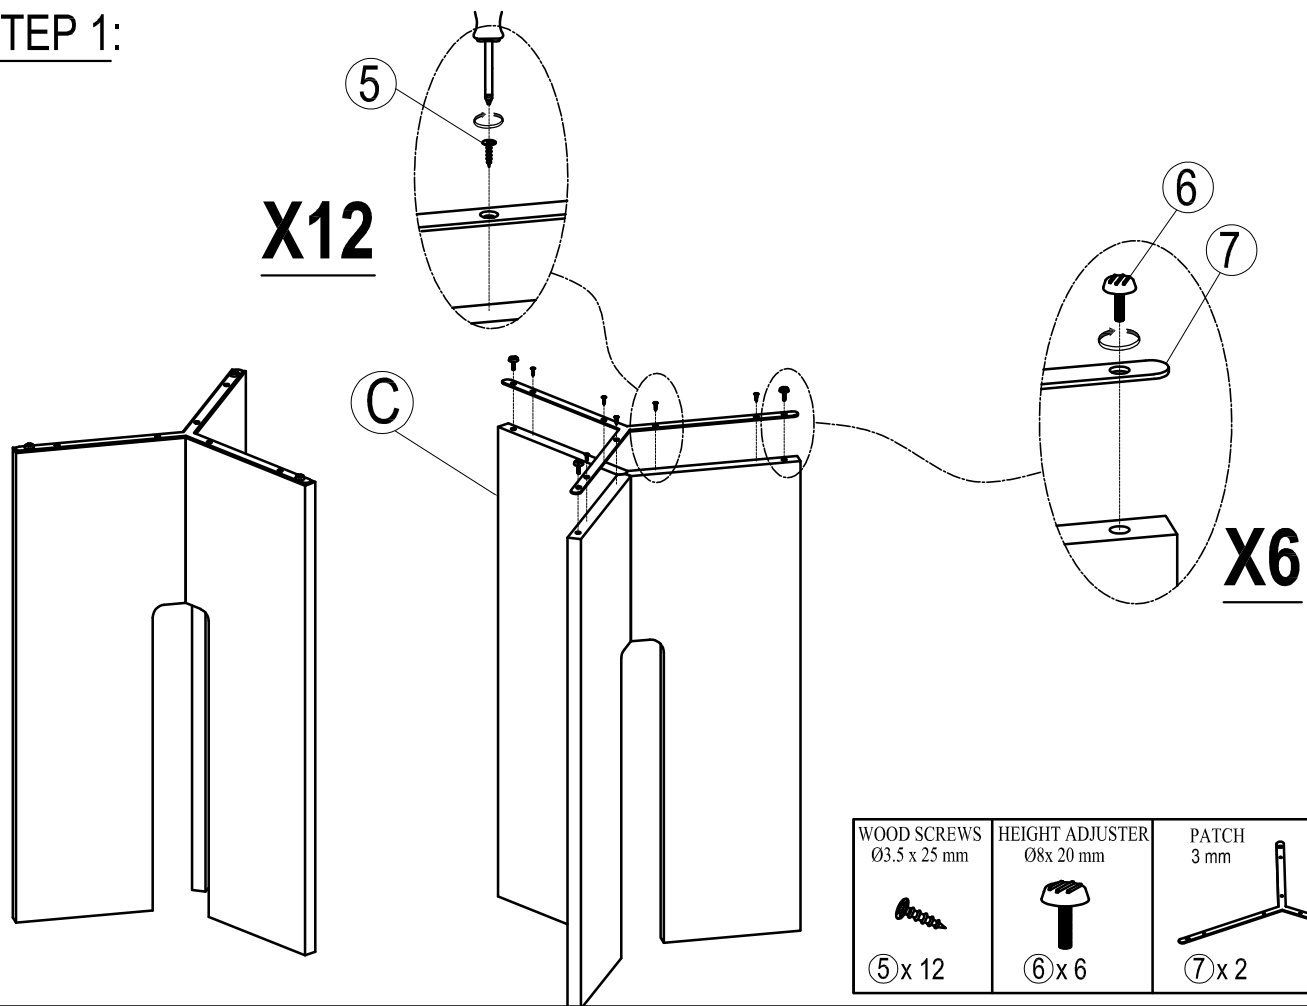


 STEP 2:

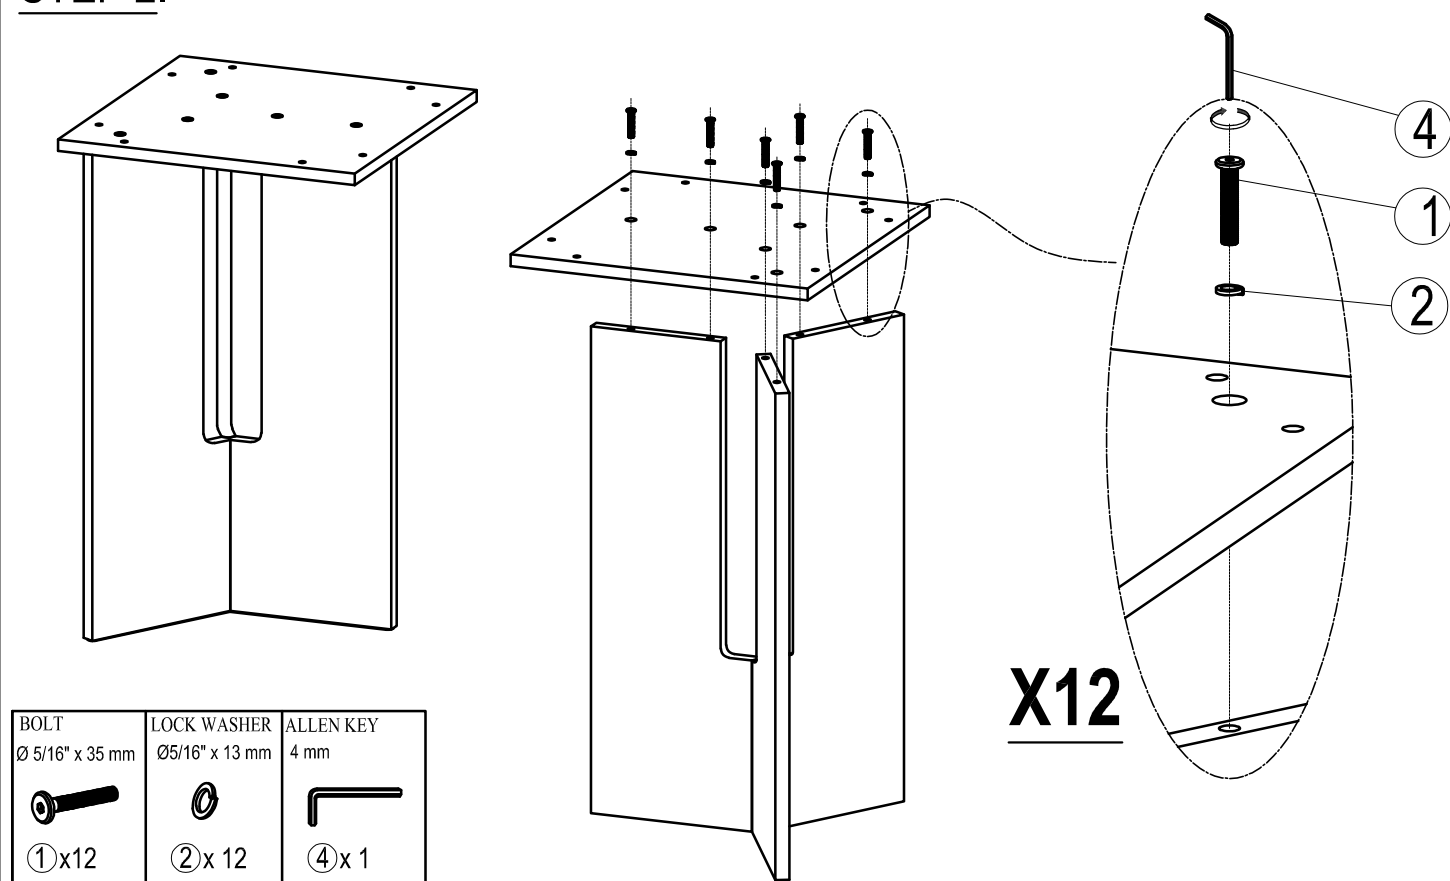

ASSEMBLY INSTRUCTION

 STEP 3:

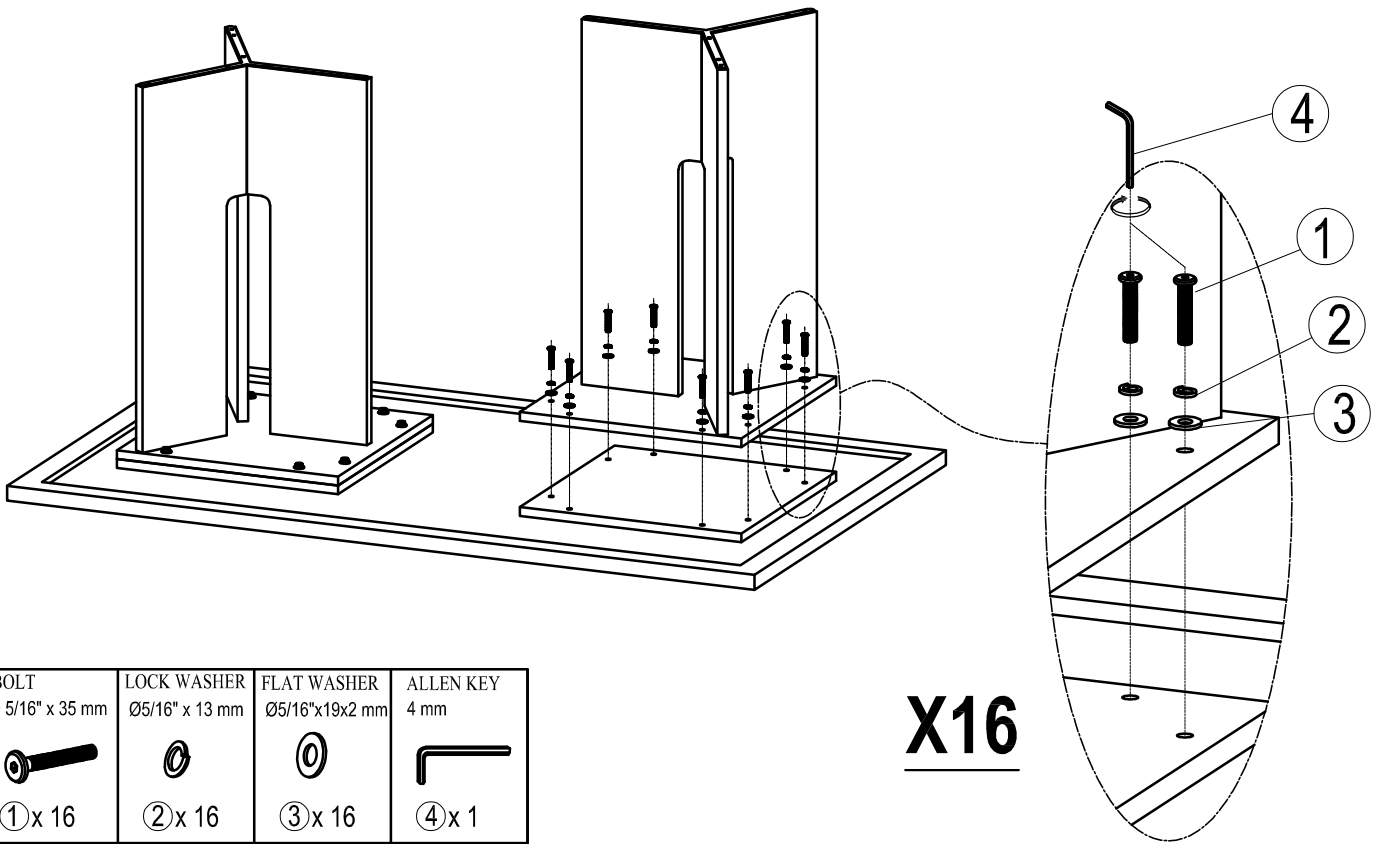

BOLT Ø 5/16" x 35 mm	LOCK WASHER Ø5/16" x 13 mm	FLAT WASHER Ø5/16"x19x2 mm	ALLEN KEY 4 mm
			
① x 16	② x 16	③ x 16	④ x 1

COMPLETE

