

Automatic Pet Feeder & Water Fountain Combo Set

User Manual



 
Automatic Pet Feeder—————1

Pet Water Fountain—————9

User Manual

Automatic Pet Feeder

F14-L

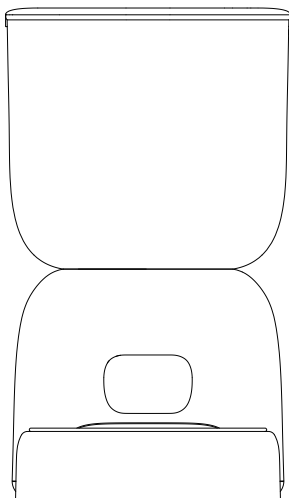


Please read the manual carefully before using this product.

Features



 Main
Body



Food
Hopper



Food
Bowl



Stainless Steel
Bowl



Power
Adapter



Desiccant



Manual

Desiccant Box

Top Lid

Food Hopper

 
Body

Stainless Steel Bowl

Food Bowl

Feeding
mechanism
Impeller

Food Outlet

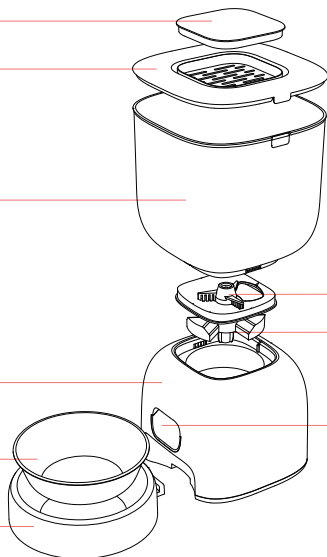

Setup and Assemble Feeder

Lift The Latch

Take out the food hopper and install it by aligning the slot on the base.

Place Desiccant

 
Open the desiccant box on top lid, tear off the transparent wrapping paper of the desiccant bag, place it into the box and close it.

Plug in Power Adapter

①Battery power supply: remove the battery cover by releasing the retaining clip, insert 3 good quality alkaline “D” batteries and reinstall the battery cover.

②Power adapter supply: plug in the power adapter and connect the power cable into the card slot.

**Note: Please use safe and standard alkaline batteries. Do not mix batteries of different specifications and models.*

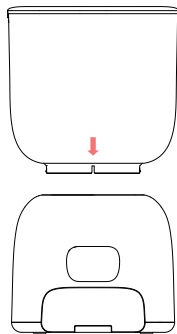

Install Food Bowl

 
Tilt the base unit back slightly, align the buckle of the food bowl with the base unit to install; the same steps to disassemble.

Fill Pet Food

Open the top lid, pour fresh dry food into the food hopper, and close the top lid.

**Note: The device only support 5-12mm dry pet food.*

Grain Size Self-check:

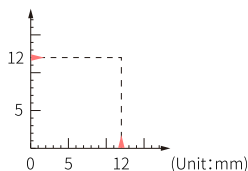

Product Introduction

Unlock The Panel

Long press “⚙️” button for 5 seconds to unlock, 30 seconds no operation screen will be automatically locked.

Set Clock

- ①Unlock the panel, Press “⚙️” button to enter setting.
- ②Set Clock: Press “+” or “-” to adjust hours, Press “⚙️” button to confirm. Press “+” or “-” to adjust minutes Press “⚙️” button to confirm.

Program Feeding Schedule

 
- ①Program Meal Time: “1” icon flash means setting the first meal, Press “+” or “-” to adjust hours and minutes, Press “⚙️” button to confirm.
- ②Meal Size: LCD display goes into meal size set mode after setting the meal time “1” icon illuminate, Press “+” or “-” to select desired, Press “⚙️” button to confirm.
- ③Repeat this process for as meal times portions desired (Up to 4 meals and 9 portions).
- ④If you do not need to set too much feeding schedule, long press the “⚙️” button to save and exit the set mode.

Check the feeding schedule

In the locked state, press “+” or “-” to check the 1-4 meal feeding schedule, but it cannot be set.

Manual Feed

Unlock the panel, long press “+” button to feed one.

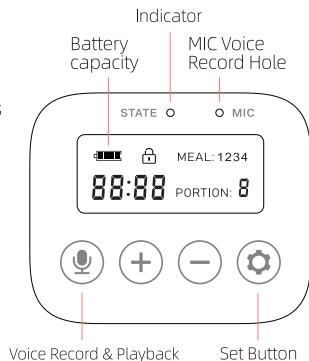

Record

Unlock the panel, long press “” to enter recording mode, the “STATE” indicator light is on and record voice toward the “MIC” hole for up to 10 seconds. If the “” button is released within 10 seconds, the recording ends immediately.

**Note: If you need to record again, repeat the above steps.*

Play Record

Unlock the panel, press “” to play record once, no play if no record.

Cancel Feeding Schedule

Set the portion to be “PORTION: ”, then no feed anymore.

Default Meal Settings

Unlock the panel and press the “” and “” simultaneously until heard “DiDi” sound, which reset the time and clears the feeding schedule and recording.

Indicator Information

STATE 	ON	Working
STATE 	ON	Voice Recording
	Flash	Device Faulty
		Low Battery Power

LCD Screen Icons Information

	OFF	Battery Uninstalled
	ON	With Battery Inside
	ON	Low Battery Power
	ON	Panel Unlock
	ON	Panel Lock
MEAL: 1234	OFF	Meal OFF
	ON	Meal ON
	FLASH	Meal Setting

 
Disassemble & Clean

Power Off

Unplug and take out the alkaline batteries.


Clean

- ① Hold the fuselage steady and pull out the food hopper upward.
- ② Disassemble the impeller and feeding mechanism.
- ③ The main body of the feeder is not dishwasher-safe. Do not immerse the main body in water. This could damage the internal electronics and cause the batteries to short out, create an electrical shock, or catch fire.
- ④ Use the dry soft cloth to wipe it, the body is not waterproof, please do not use wet cloth.
- ⑤ Make sure all parts of the feeder are completely clean and dry before filling with food.

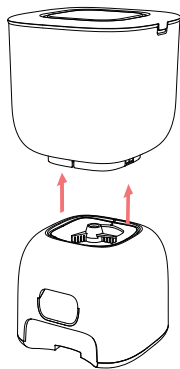

Assemble

 - ① Align the triangle mark when installing the impeller.
- ② Install the food hopper by aligning the slot on the base.

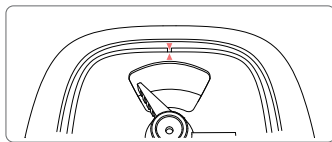

Replace the desiccant pack

Open the desiccant box cover and replace the desiccant. It is suggested to replace it every one months.

Replace Alkaline Batteries

Unplug and open battery lid at the bottom, then you can replace the batteries

*Warnings:

- ① Please keep the food hopper dry after cleaning it.
- ② Please replace the food on a regular basis if your pets did not eat up.
- ③ Please clean and maintenance your device on a regular basis to prolong the using period of your pet feeder.

FAQ

What happened to your device	How to check by yourself	How to solve it
No display on LCD Screen	Not plug or battery inside	Plug in or install batteries
	Feeder faulty	Contact After-sale service
Impeller can not be installed	Food blocked on the installation position	Clear the cat food inside the installation position, align the triangle and reinstall
Food hopper can not be installed	Food blocked on the installation position	Clear the cat food inside the installation position and reinstall
E1 -- Display	Impurities inside food hopper	Clean the impurities inside of food hopper
	Food size inapplicable	Ensure to use 5-12mm dry food

Parameters

Product Name	F14-L Automatic Pet Feeder
Product Model	F14-L
Dimension	168mm*296mm*290mm
Material	Food-grade ABS、SUS 304 Stainless Steel Bowl
NW	Around 1.0KG
Capacity	3.0L
Food Appliance	5~12mm Dry Food
Pets Appliance	Cats & Small size dogs
Power	DC 5V1A Adapter / 3 * D Size Batteries
Rated Power	0.5W

Safety Precautions

Read all instructions carefully before attempting to operate this device.

🕒 Keep Device

1. For indoor use ONLY.
2. Device need to be placed horizontally and firmly, it's not allowed to tipped one side and rock or upside down.
3. Keep device placed in a dry area and not expose the device under sunlight.
4. Not to place the feeder in a high place to avoid the damage from dropping.
5. DO NOT place any foreign objects in the feeder.
6. To avoid tripping, always keep power cord out of the way of foot traffic.
7. Do not place anything on top of this feeder.
8. Ensure there is no barriers near the food outlet to make the pets can be fed normally.

🔌 Electricity safety

 
1. Please check the power supply before going out.
2. The clock will be maintained for a year if the device is powered off.
3. Please pay attention to the battery display when powered by batteries, users need to replace the batteries when “” shows on LCD screen.
4. It's suggested to replace the batteries once a year if you do not get the device work by batteries, for the power will be running off with time goes by.
5. When powered by batteries, it is normal for the electric quantity icon to fluctuate occasionally because of the large transient current.
6. To prevent electric shock, do not insert the power cord or plug into water or other liquids.
7. The device only supports the use of a 5V/1A adapter; please do not use a non-specific adapter.

⚠️ Caution

1. Intended for use with dogs or cats ONLY.
2. DO NOT use this feeder with puppies, kittens, dogs or cats with any physical disability.
3. NOT recommended for puppies or kittens less than 7 months old or unable to reach the feeding dish.
4. DO NOT allow small children to play with, in or around feeder.
5. DO NOT eat the desiccant. DO NOT use it if it is damaged.
6. For dry food use ONLY. Works best with 5-12mm food diameter or smaller.
7. DO NOT attempt any repairs or modifications to the feeder.
8. DO NOT immerse the feeder in water at any time, as this can cause damage to the electronic components.
9. Dispose of all packaging material properly. Some items may be packed in poly bags; these bags could cause suffocation; keep away from both children and pets.
10. Check with your veterinarian if you are unsure about the proper MEAL SIZE for your pet.
11. DO NOT operate feeder without Bowl, Food Hopper and Lid securely in place.

User Manual

Pet Water Fountain

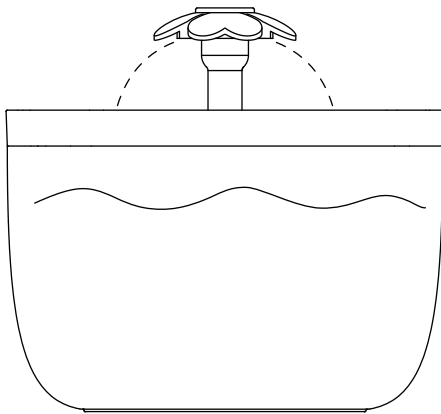

Please read the manual carefully before using this product.

Caution

Read all instructions carefully before attempting to operate this device.

- Intended for use with dogs or cats ONLY.
- For indoor use ONLY!
- To avoid the possibility of the plug or outlet getting wet, Put power adapter in higher position of pet fountain unit.
- Runs on DC 5 V power adapter, other brand power adapter is prohibited.
- Do not allow the water level to fall below the pump, or the pump may run dry and burn out.
- Make sure the cord does not have any frayed or exposed wires due to pet's possibly chewing the cord.
- Place the pet fountain on a protective surface to guard floor against possible water damage from spillage.
- Dispose of all packaging material properly. Some items may be packed in poly bags; these bags could cause

Q&A Troubleshooting

● How frequently do I need to change the filter?

The charcoal filter and foam filter should be changed every 2 to 4 weeks, depending on the number of pets using the fountain. Having more pets that use the fountain will increase the saliva content and debris in the water, so the filter will need to be changed more frequently.

● Why am I finding small black particles in my pet's fountain?

It is common for some residual charcoal dust to seep from the filter. This is perfectly normal and not harmful to your pet in any manner. To help prevent the charcoal dust from shedding, rinse the filter thoroughly under running water before placing inside the fountain.

 
● How often should I clean the fountain?

Fountain should be clean at least every two weeks. Please clean it once a week if you are living in hard water.

● Why so many bubbles in the water?



When water level falls below the pump, the pump sucks in air, creating bubbles.

Components

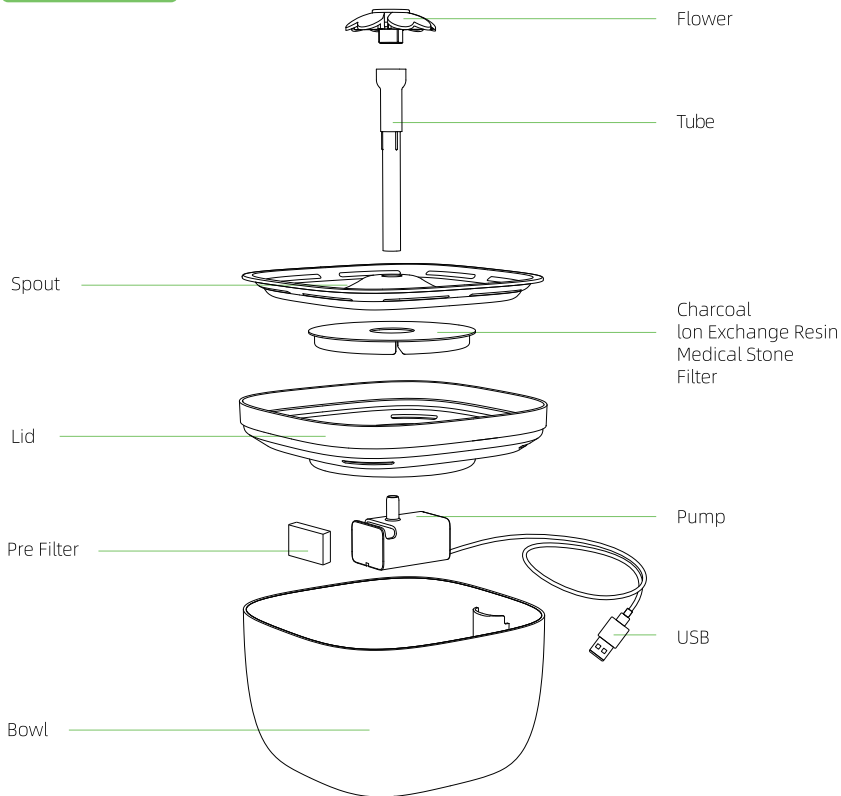


Assemble Pump

  ① Take the bowl and place the pump inside the square indentation.

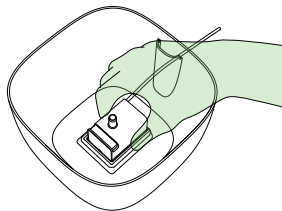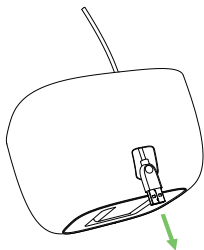

 
② Feed the in-line plug of the electrical power cord over and through the raised post.

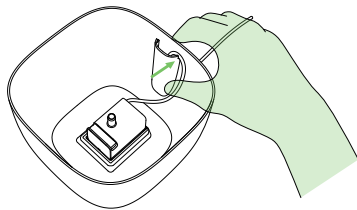


③ Place the power cord into the notch.

Assemble Filter

 
Rinse the filter thoroughly in cold water to help remove any excess and loose charcoal dust.

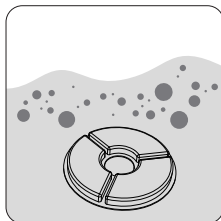

Assemble Water Faucet and Power ON

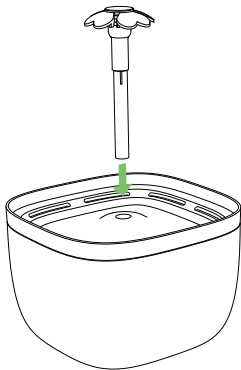 

Insert the water faucet.

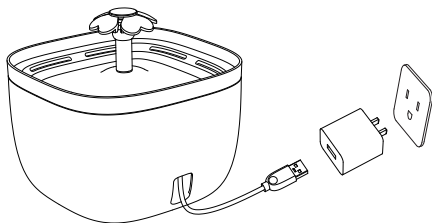 


Connect the power adaptor.

Fountain Maintenance

- Power off before fountain clean.
- Clean fountain by water or a foam with neutral detergent.
- Foam filter can only clean by water. Detergent is not allowed.
- Hot water, gasoline, alcohol or organic solvent is not allowed to clean the fountain.
- Dishwasher safe, but excluding pump.

Pump Maintenance

 - ① Remove the Pre-filter.
- ② Remove the pumpcover.
- ③ Remove the Impeller cap.
- ④ Remove the Impeller and clean the parts with soap and warm water.

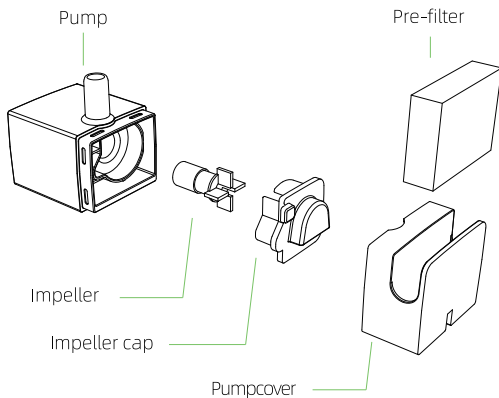

Parameters

Product Name	Pet Water Fountain
Product Model	W7
Dimension	183mm*183mm*170mm
Material	Food-grade PP
NW	Around 0.65KG
Capacity	2.0L
Pets Appliance	Cats & Small size dogs
Power	USB 5V1A
Rated Power	1.5W