

 
USER MANUAL




ARMOIRE WARDROBE CLOSET
WITH DRAWERS

Model: JY-260201


TOOLS REQUIRED

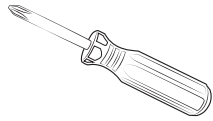


Phillips screwdriver
(Not included)

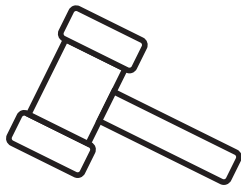 

Hammer
(Not included)

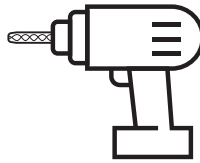 

Drill
(Not included)

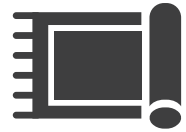 

Protective blanket
(Not included)



ATTENTION

 
Keep children and pets away while assembling.




How to use cam locks

CAM LOCK FASTENING SYSTEM


This Cam Lock Fastening System will be used throughout the assembly process.

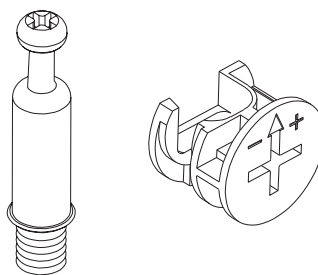


1

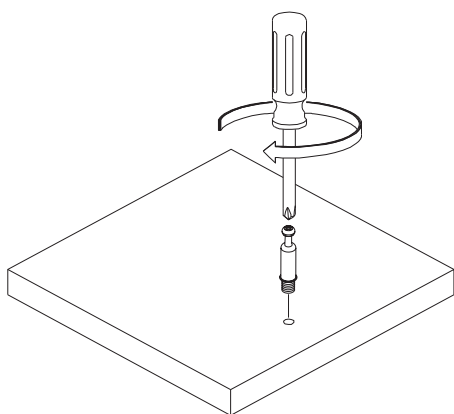 



2

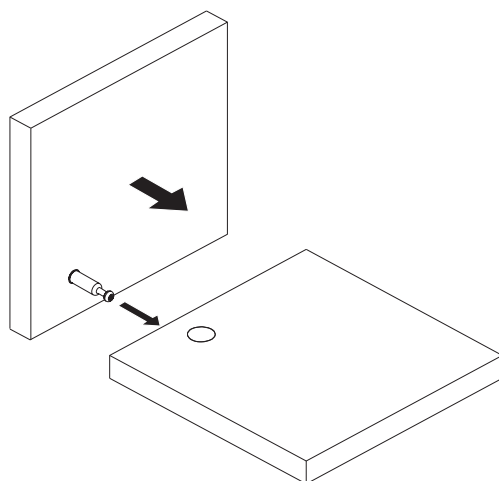 

3

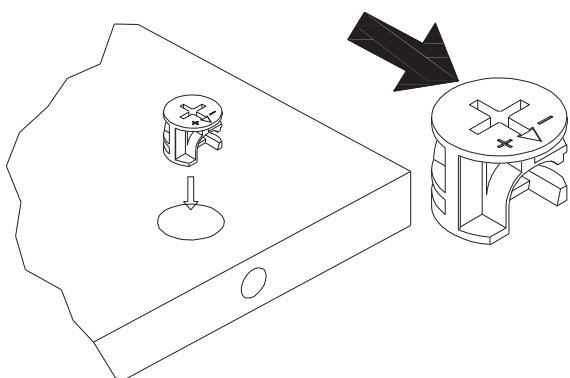 

4

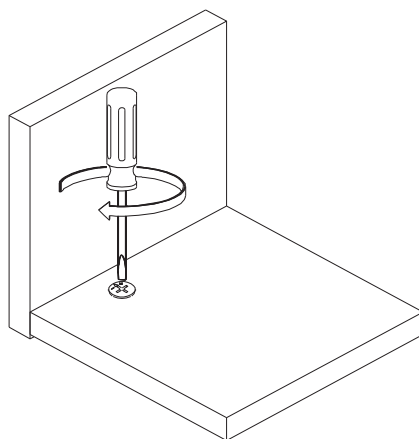  

INTRODUCTION

Thank you for choosing our products. Please read the instructions carefully and keep them for future reference. If you need further assistance, please contact our customer service online via email.

 
PRECAUTIONS

1. When installing the product, use a soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
2. Please try to use a manual screwdriver instead of electric screw driver. A manual screwdriver can be used to better control the tightness of the screws.
3. Do not use any glue.
4. The product is unstable before it is assembled. Please pay attention to the product installation sequence.
5. The structure of this product can not meet the requirements of the placement of heavy items and children climbing.

WARRANTY















We provides an **18 Month** Warranty on all products starting from the date of original purchase. If the product has any manufacturing defect, please contact customer service via email with your order number and other details to the problem. We will send you further information about the return or exchange.

PACKAGE CONTAINS

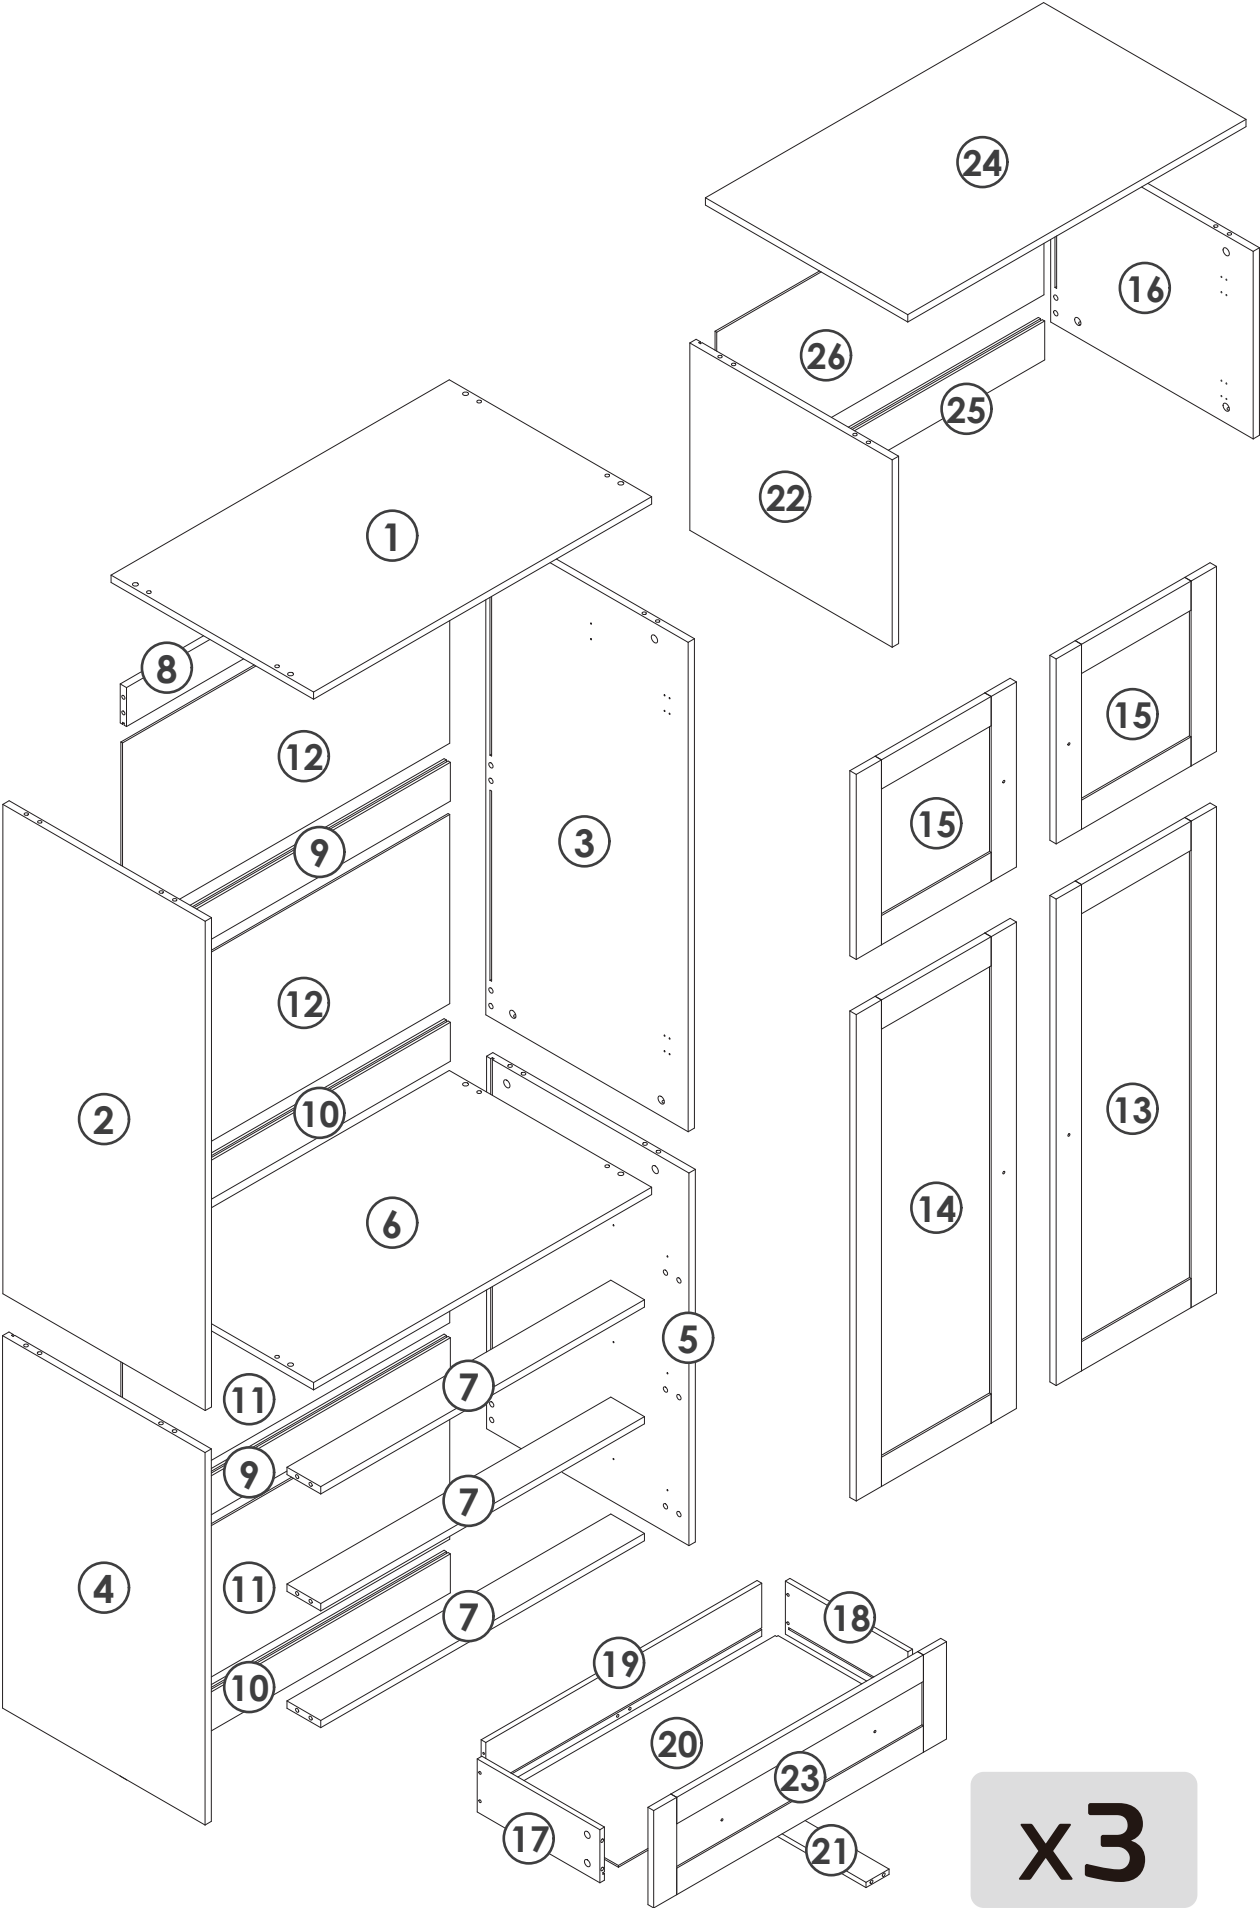


















x3

              HARDWARES LIST

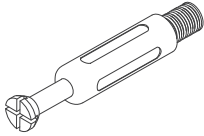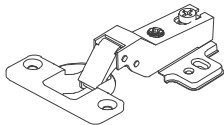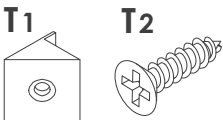A x74  M6*40mm	B x74  M15*11mm	C x74  M3.5*14mm	D x18  M5*40mm
E x4 	F x20  M8*40mm	G x2 	H x2 
J x10 	K x6  M4*10mm	L x3 	
M x18  M3*12mm	N x1 	P x8 	Q x4  M4*20mm
R x30 	S x22  M3*16mm		
T x2 			











PARTS LIST » A BOX

                 Unit: (mm)

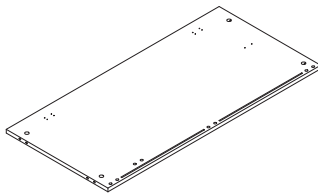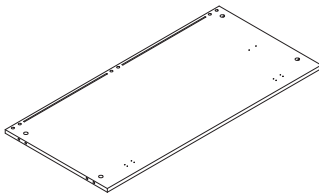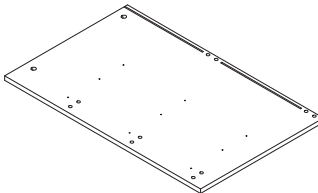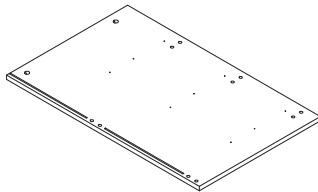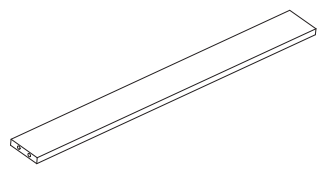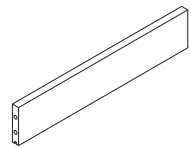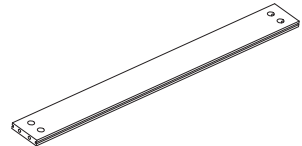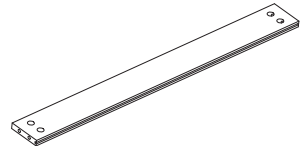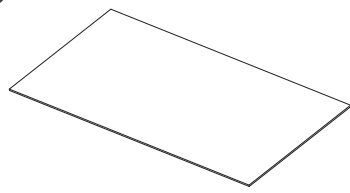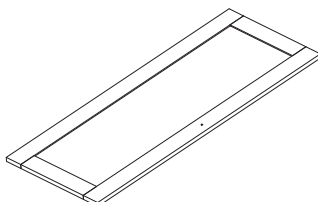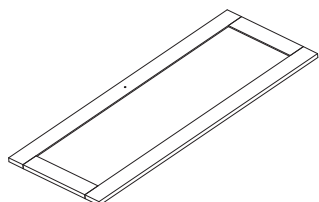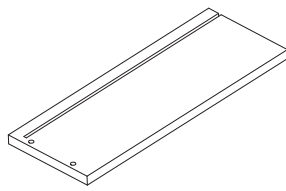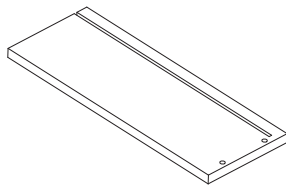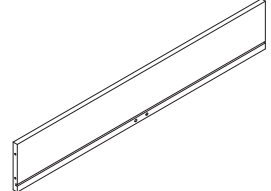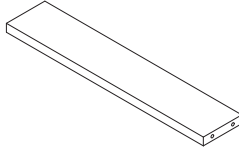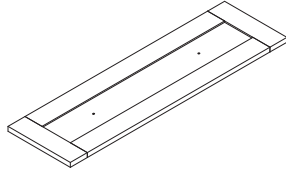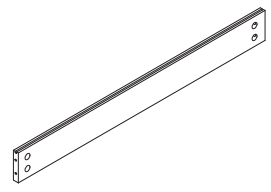
② x1  1005*480*15 mm	③ x1  1005*480*15 mm	④ x1  765*480*15 mm
⑤ x1  765*480*15 mm	⑦ x2  768*80*15 mm	⑧ x1  768*80*15 mm
⑨ x2  768*80*15 mm	⑩ x2  768*80*15 mm	⑫ x2  776*390*3 mm
⑬ x1  380*999*15 mm	⑭ x1  999*380*15 mm	⑰ x3  320*120*12 mm
⑱ x3  320*120*12 mm	⑲ x3  720*120*12 mm	⑳ x3  307*60*12 mm
㉓ x3  764*220*15 mm	㉕ x1  768*80*15 mm	

PARTS LIST » B BOX

          
Unit: (mm)

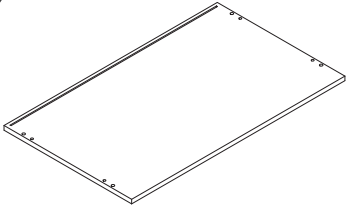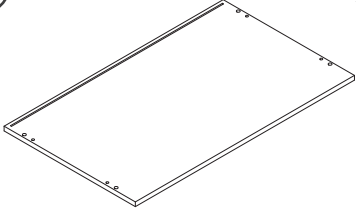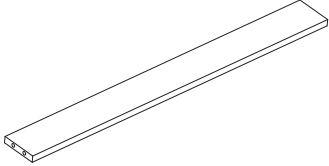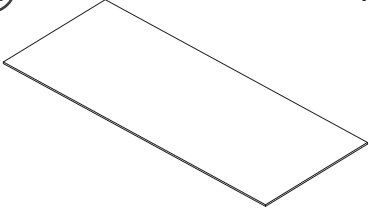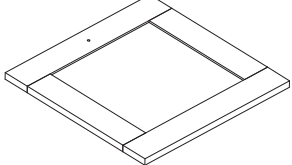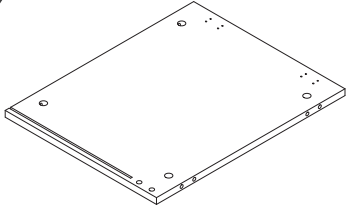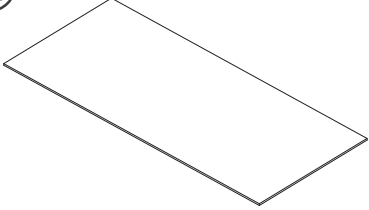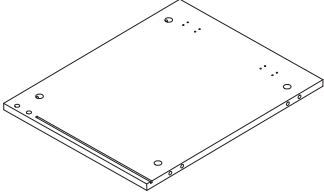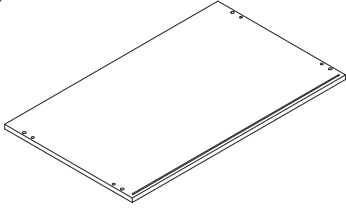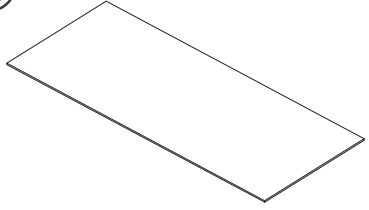① x1  802*480*15 mm	⑥ x1  802*480*15 mm	⑦ x1  768*80*15 mm
⑪ x1  776*310*3 mm	⑮ x2  380*379*15 mm	⑯ x1  386*479*15 mm
⑳ x2  728*315*3 mm	㉒ x2  386*479*15 mm	㉔ x2  802*480*15 mm
㉔ x1  776*313*3 mm		

 INSTALLATION INSTRUCTION

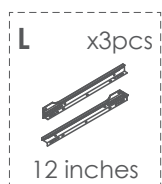

$$L = CR + DR + CL + DL$$

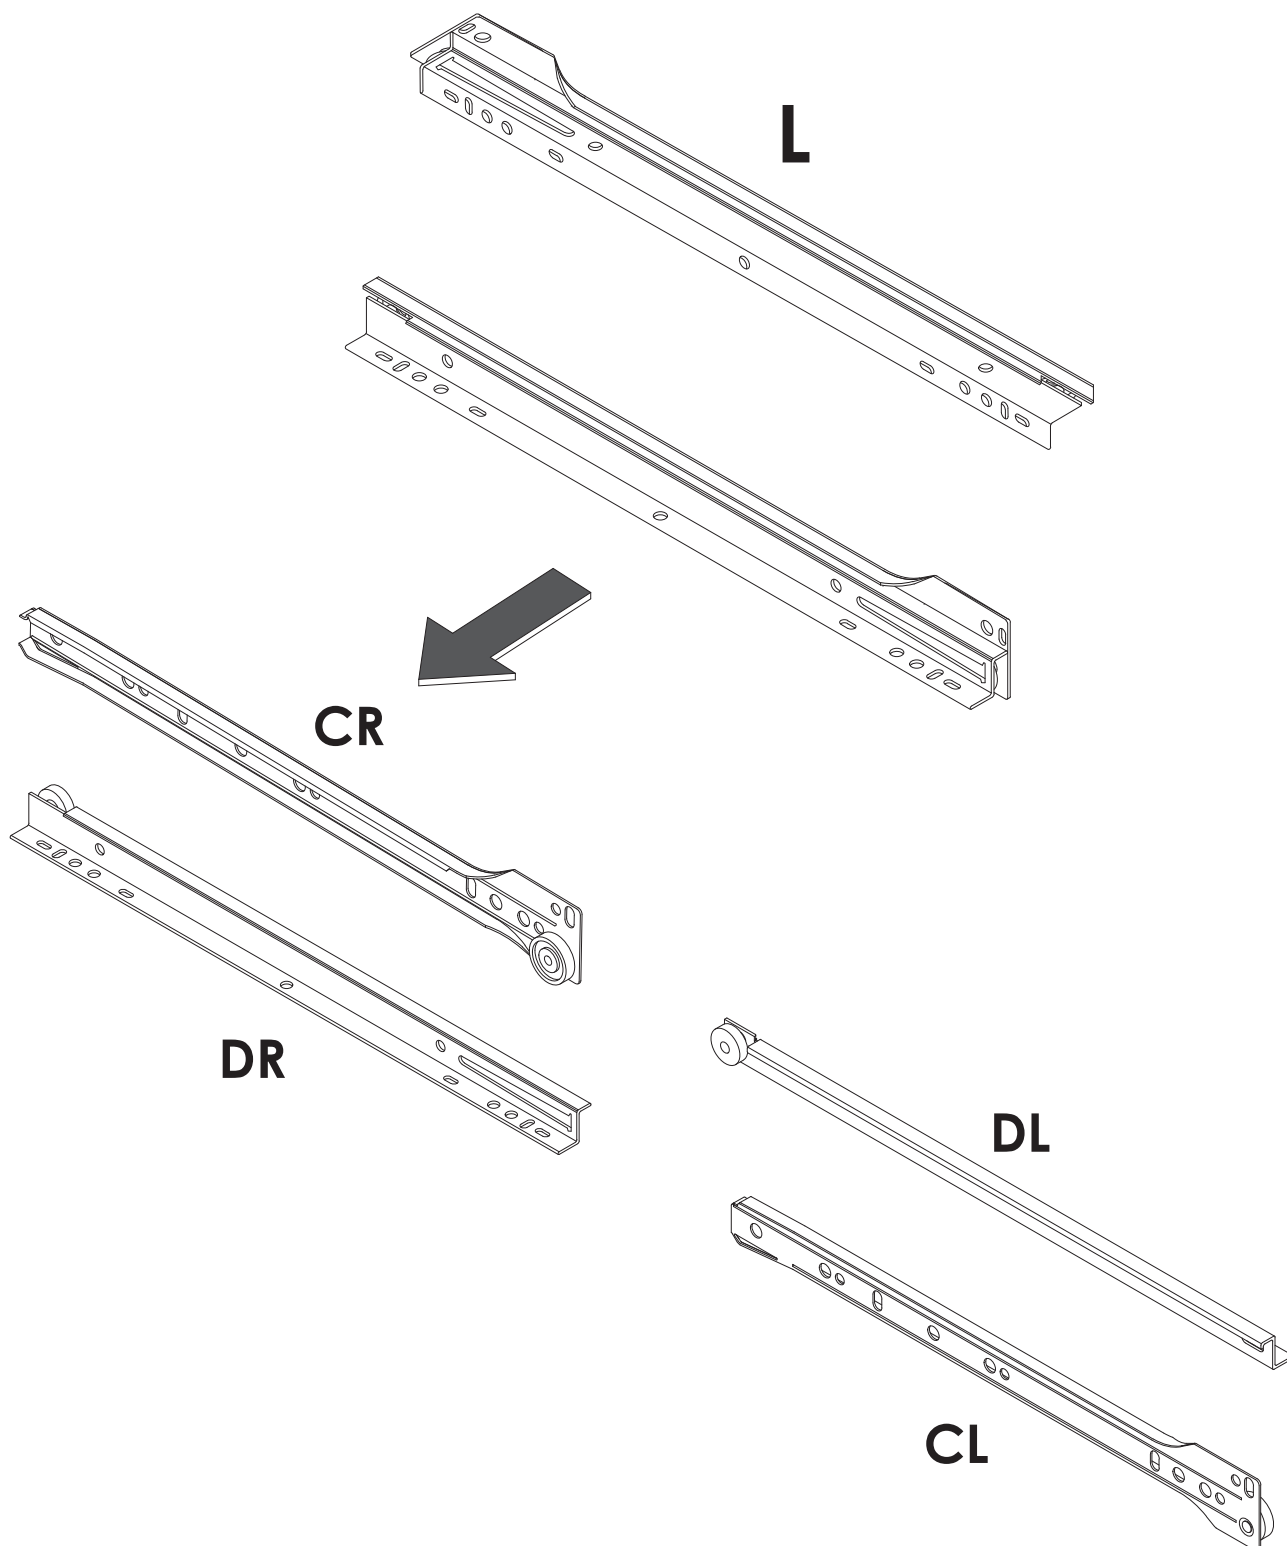 

01

C x18pcs

 


M3.5*14mm





L x3pcs



CL




CR

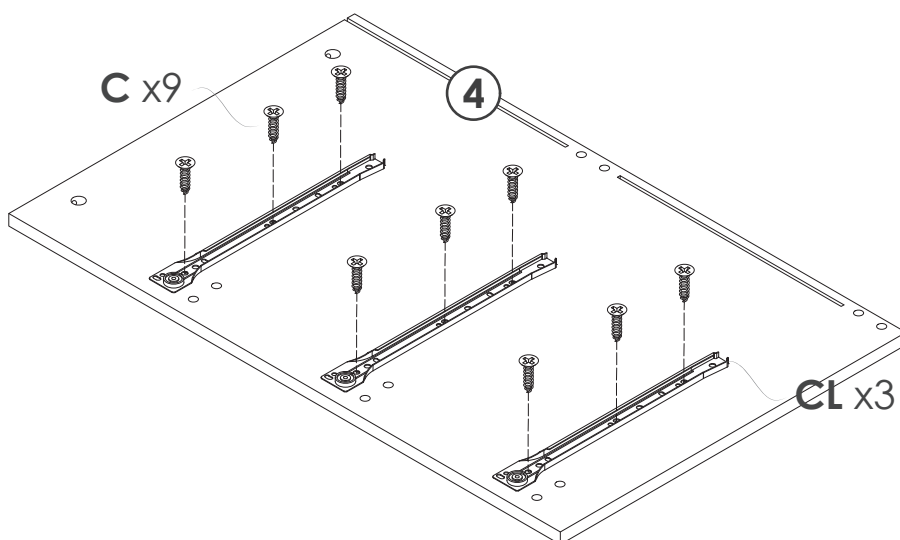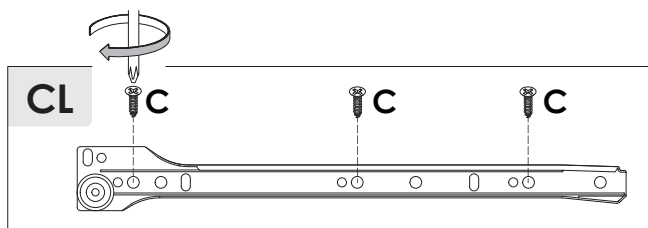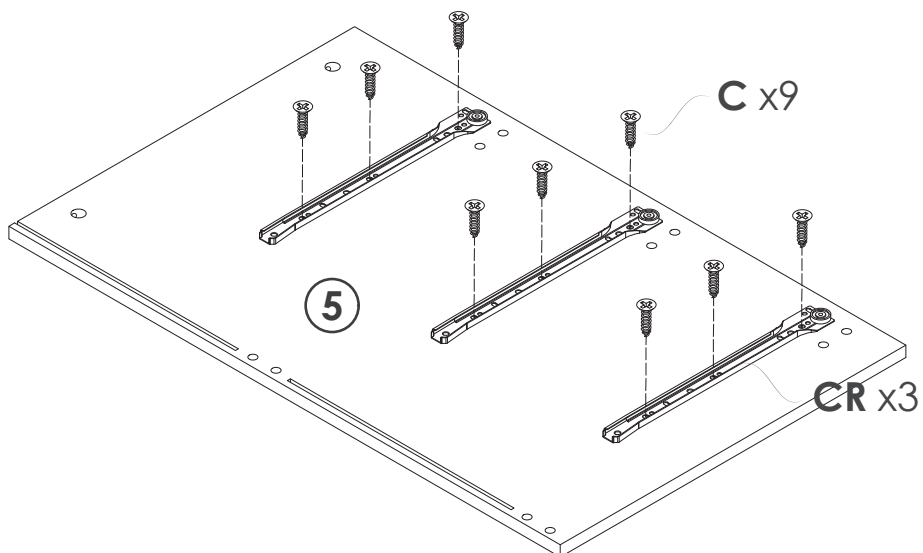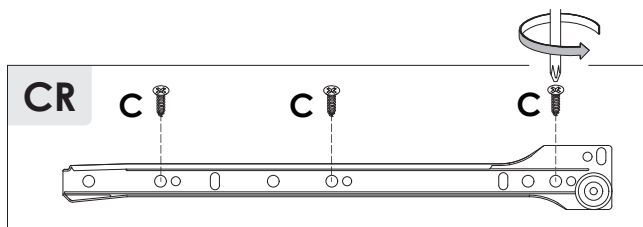    


02

 A x20pcs




M6*40mm

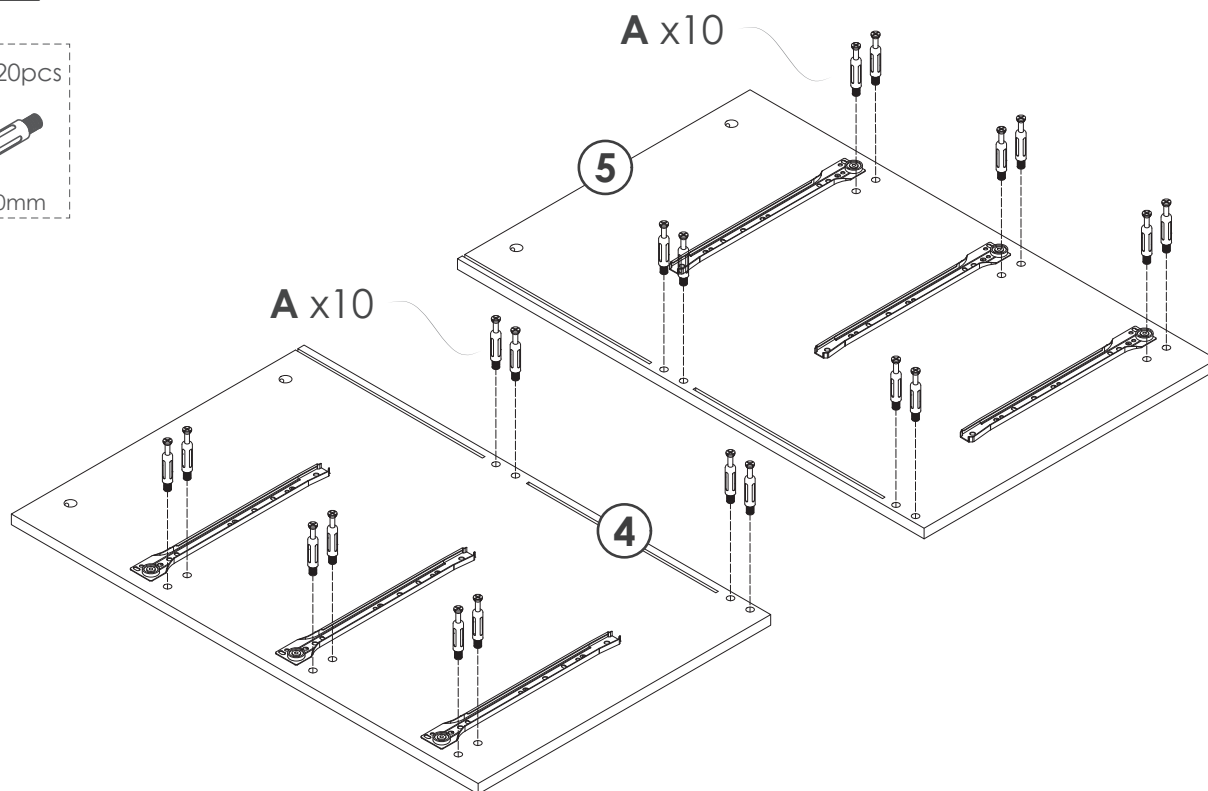 

03

 E x4pcs

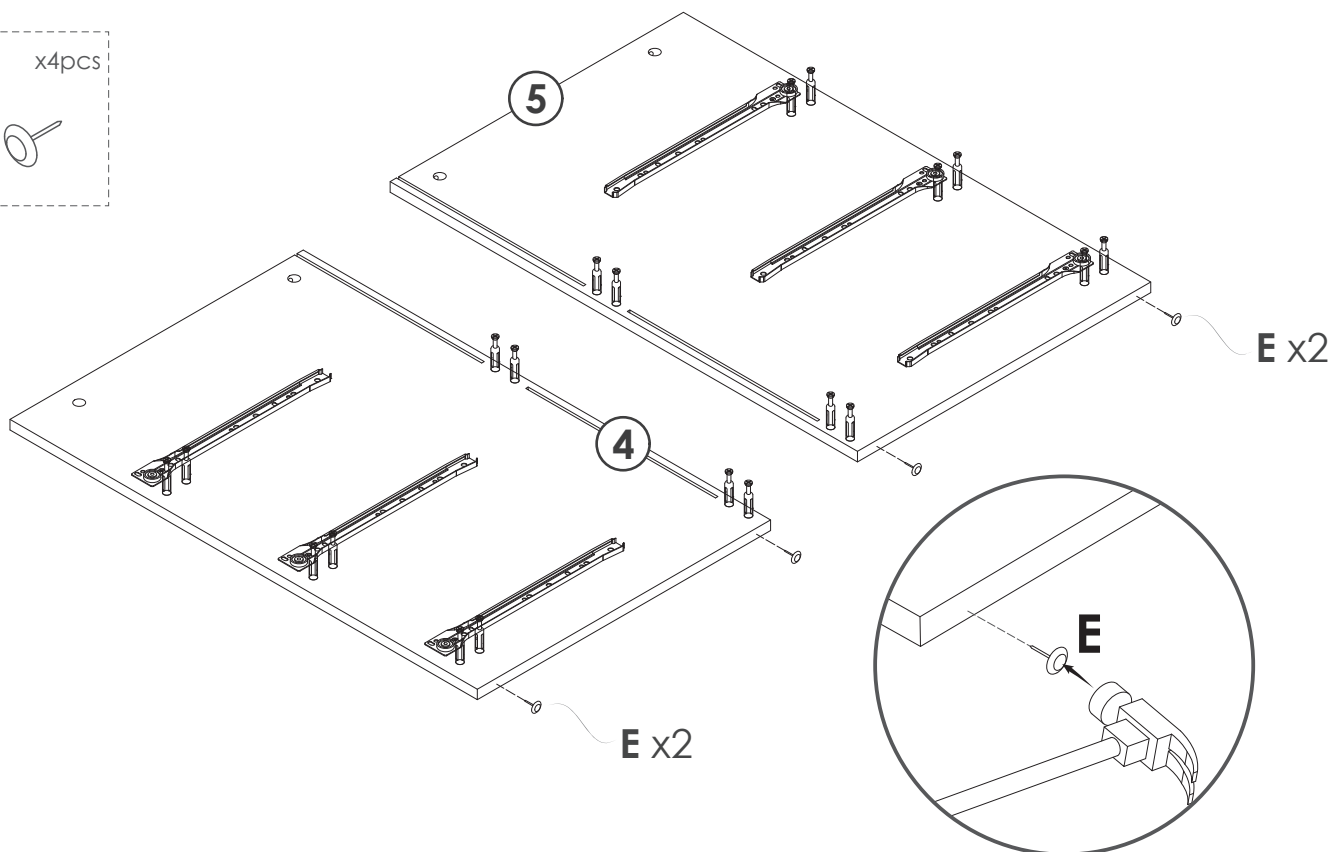



04

B x10pcs



  M15*11mm

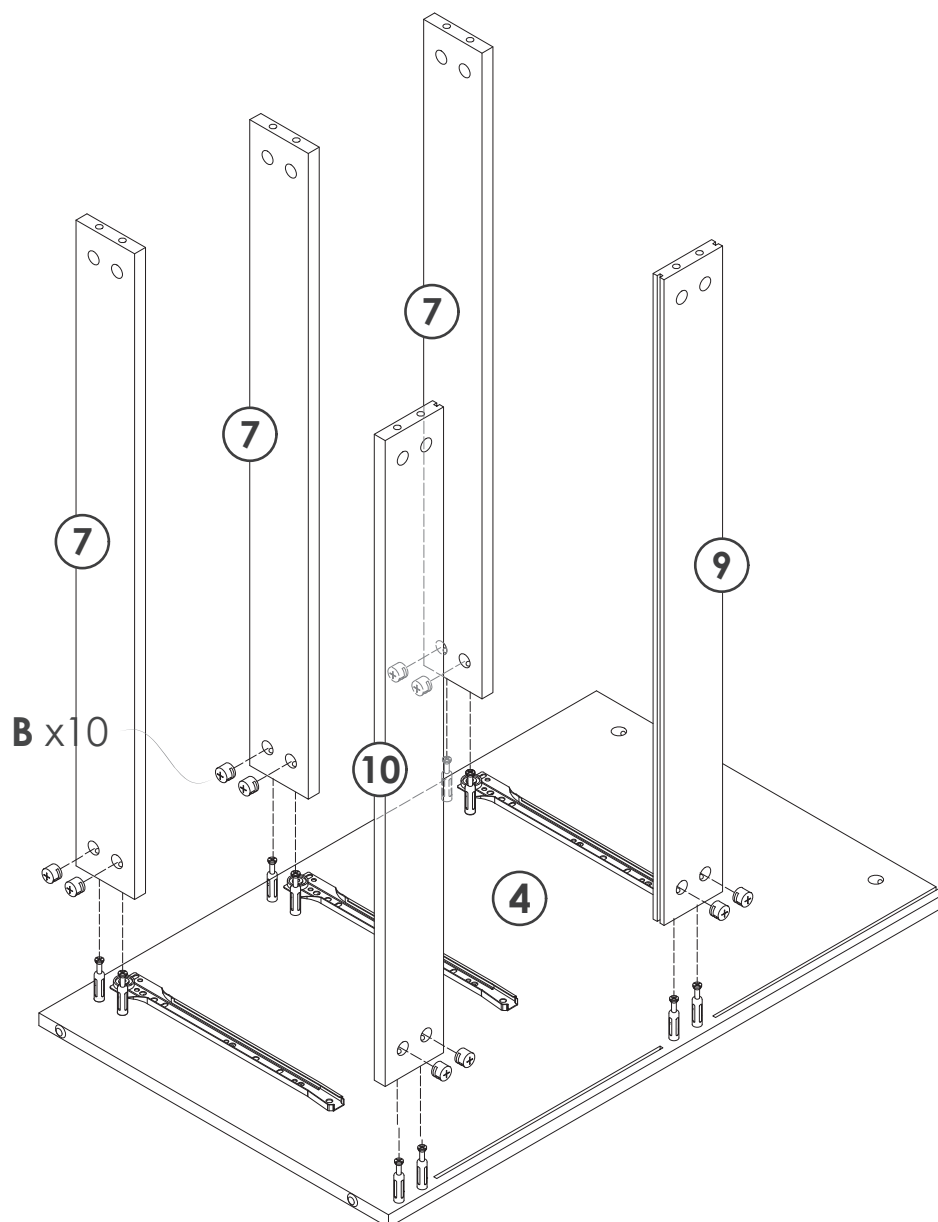

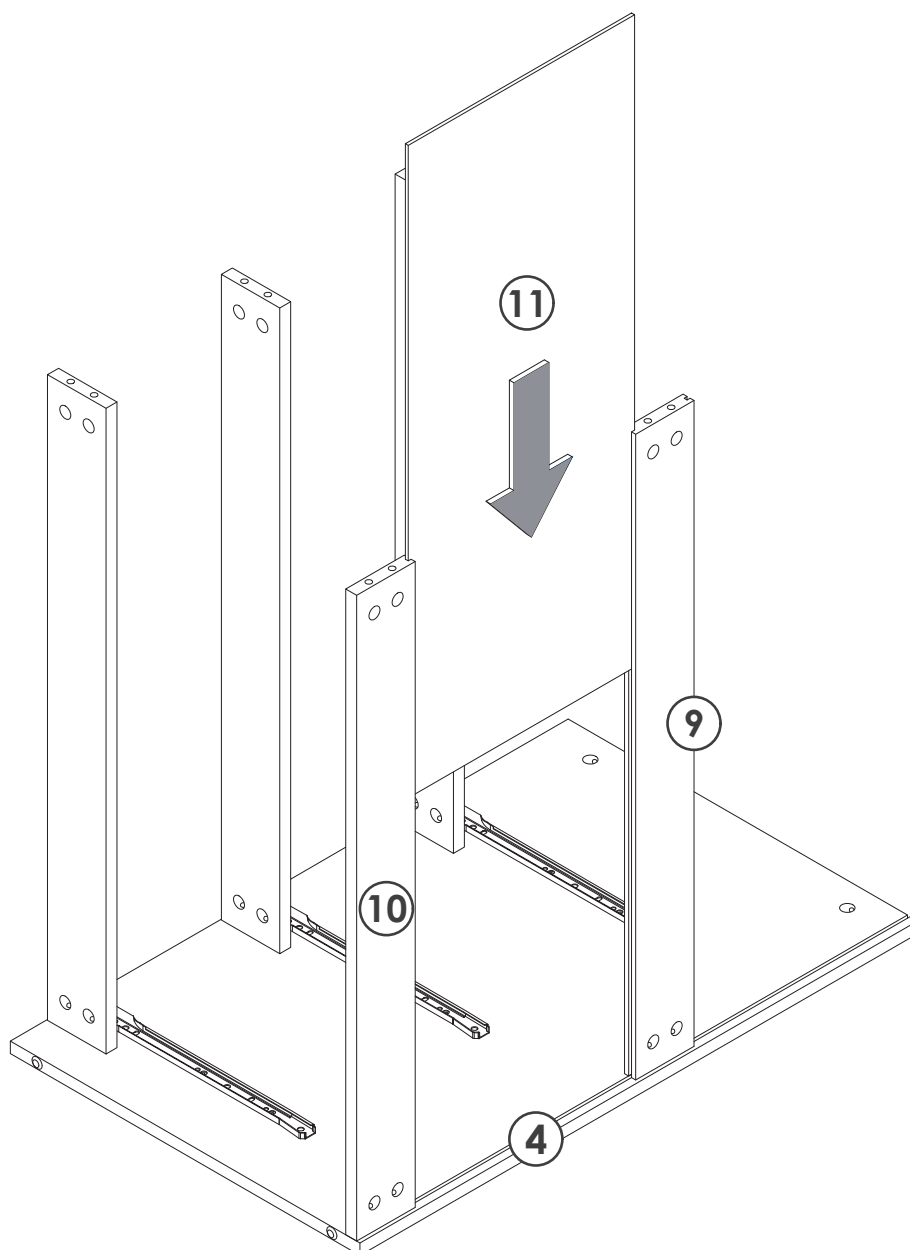



06

B x10pcs





  M15*11mm

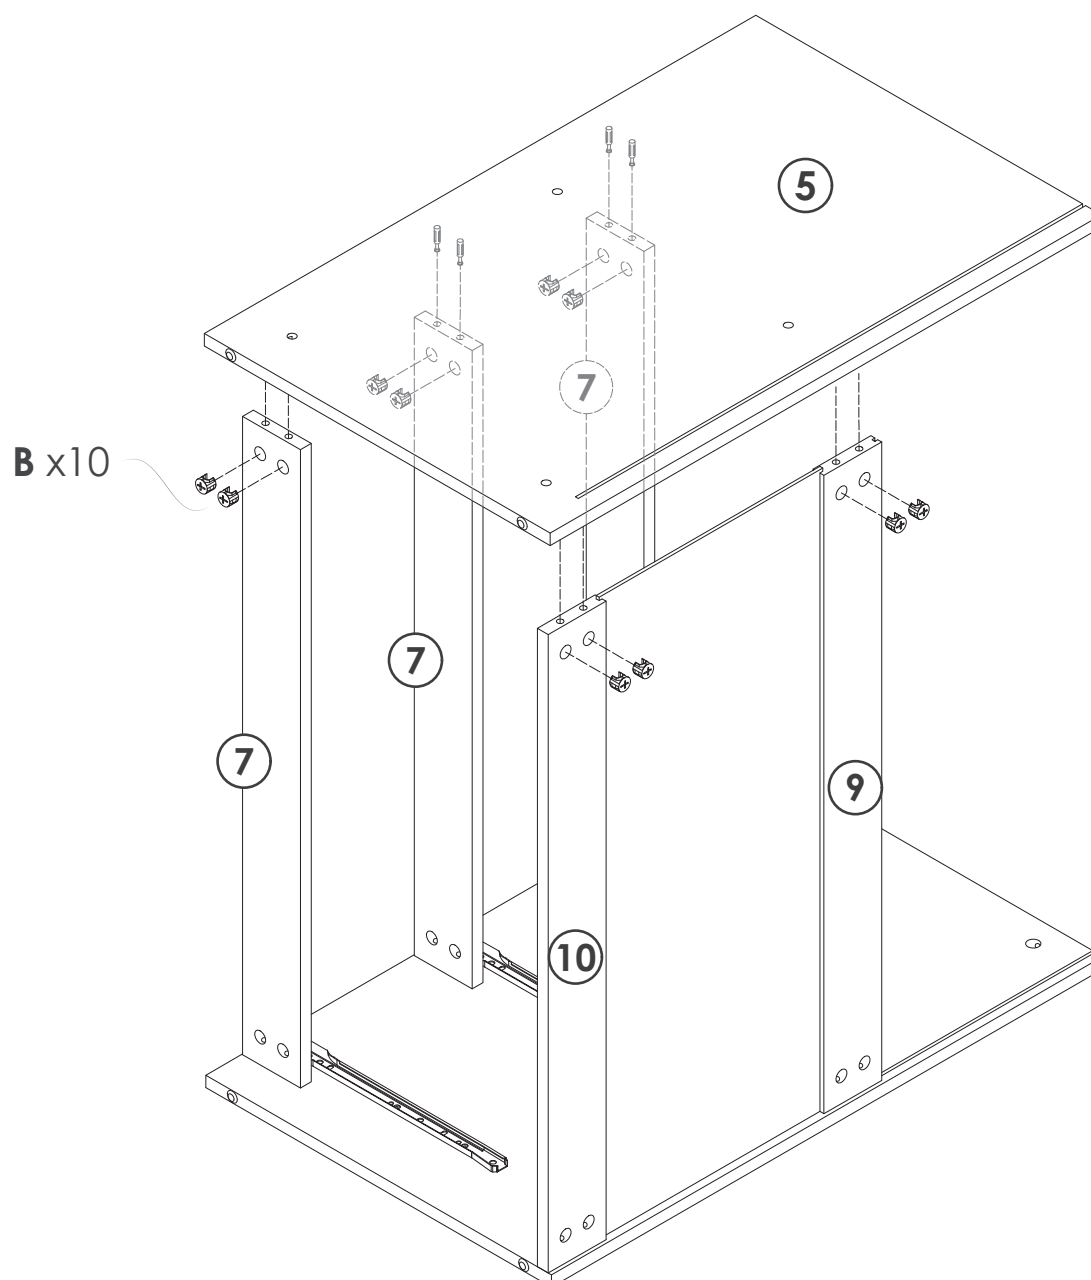

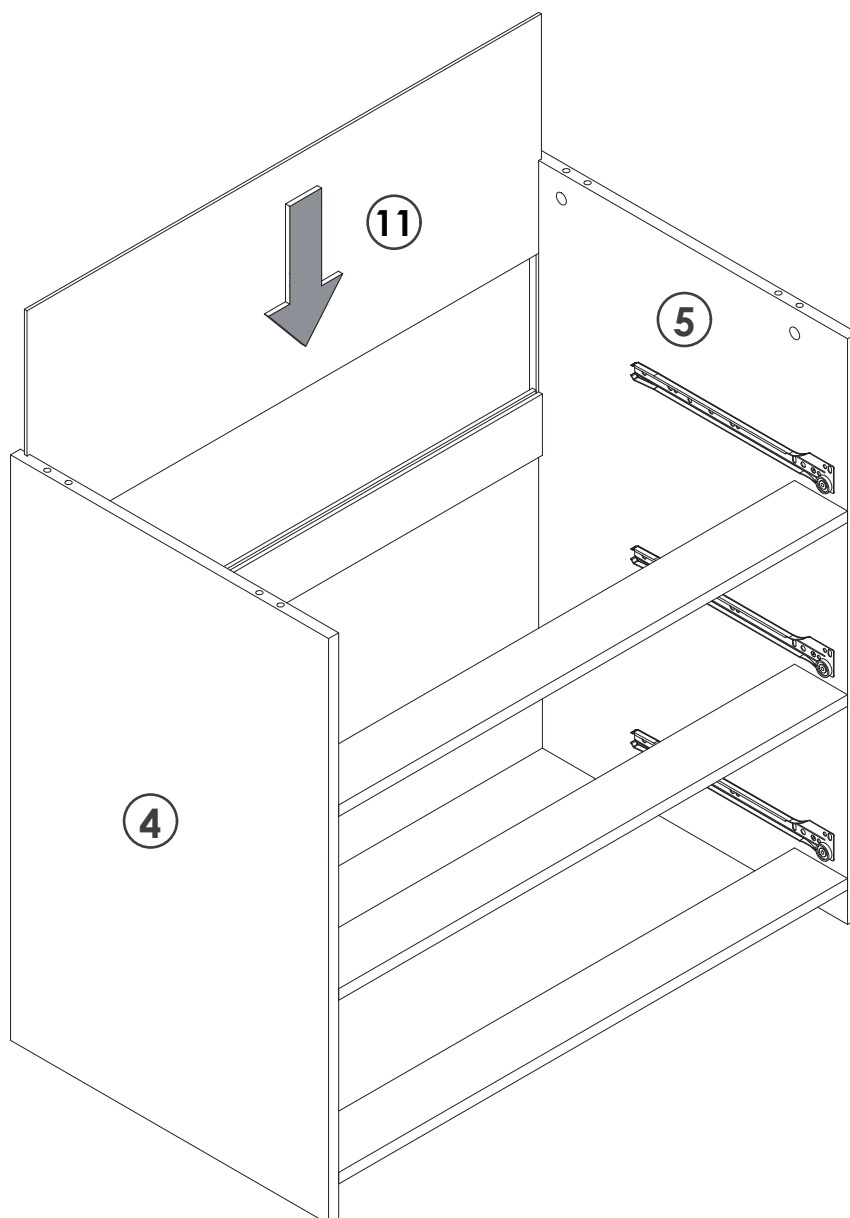


08

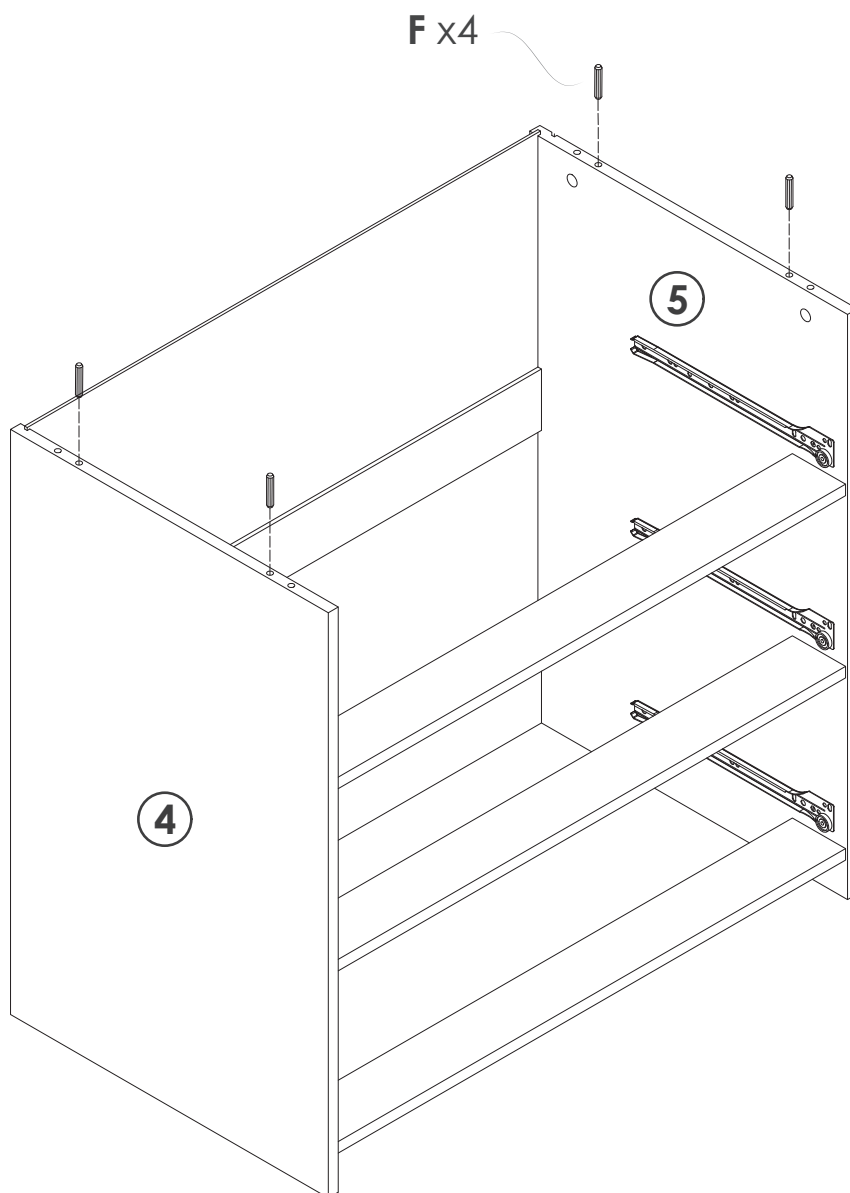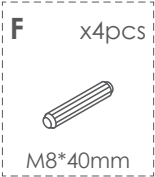  

09

 A x4pcs





M6*40mm

B x4pcs





M15*11mm

 
 
A x4

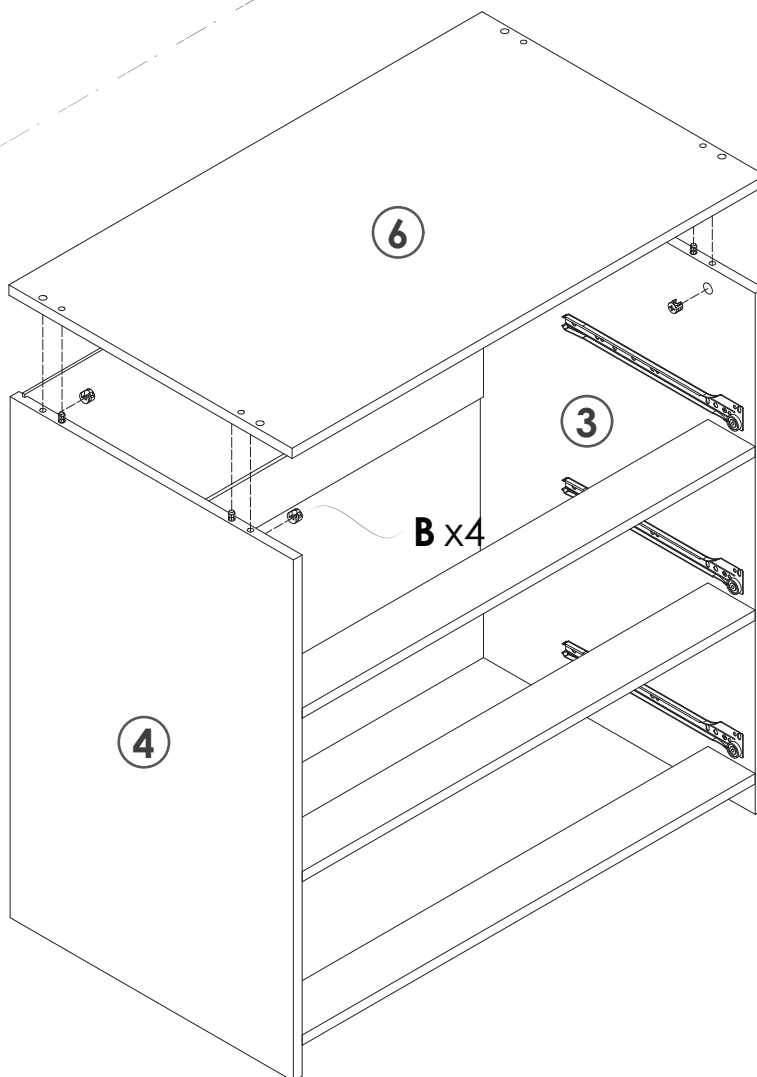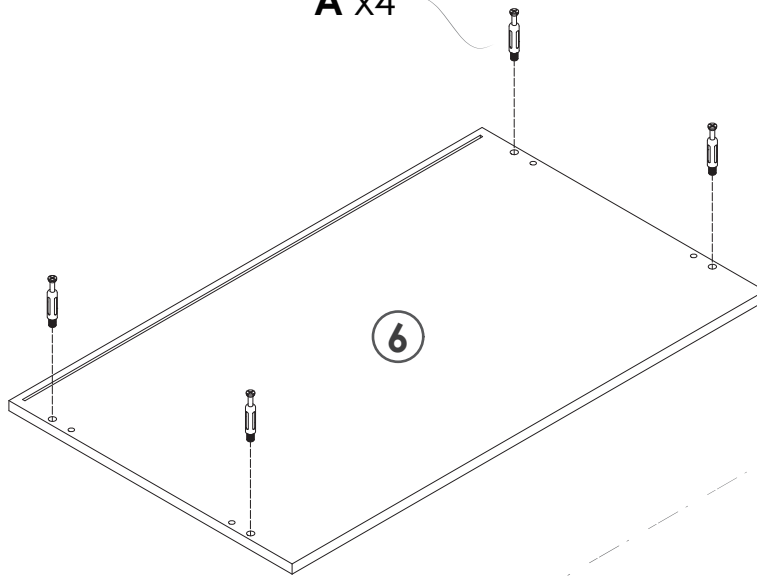



10

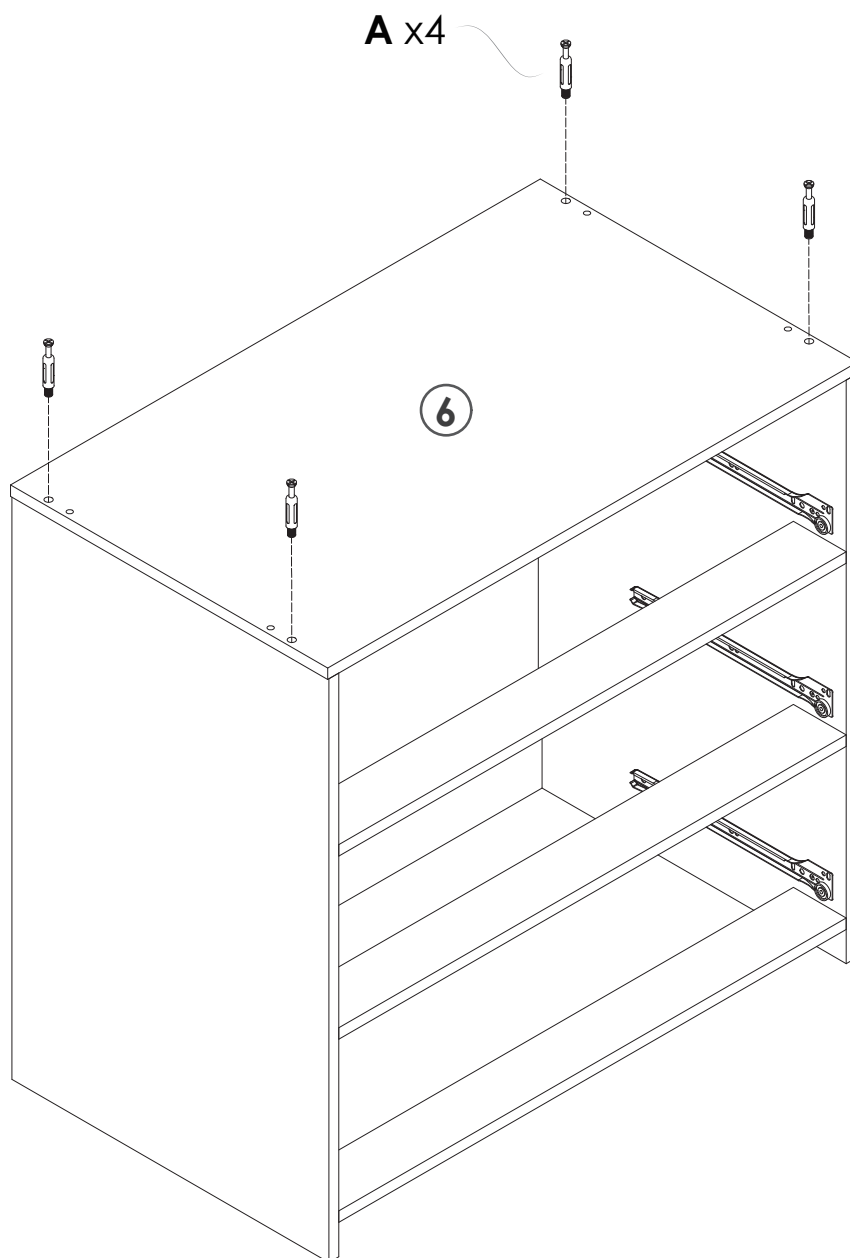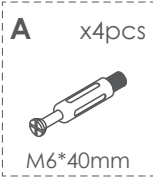  



11

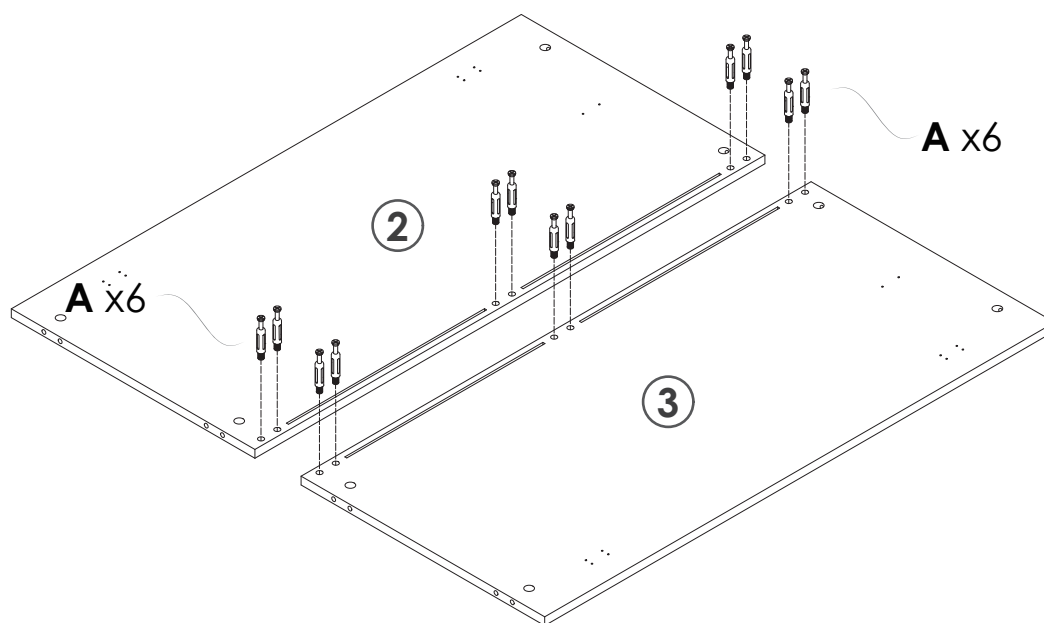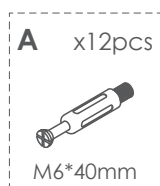  


12

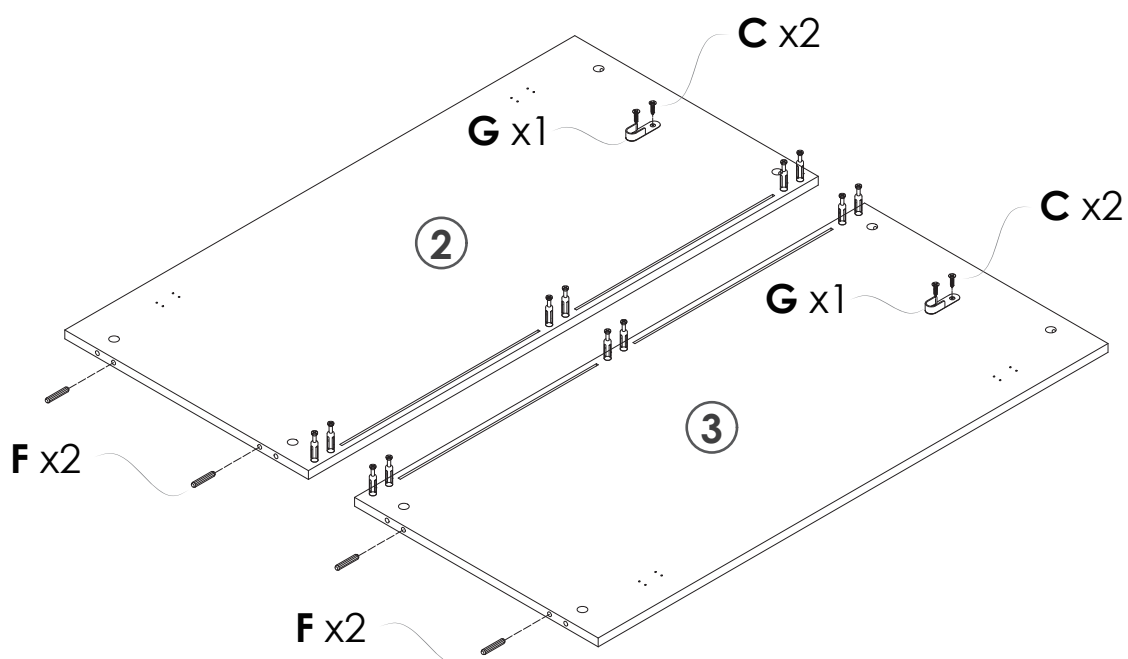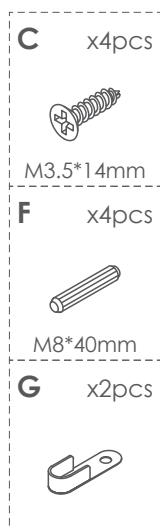  



13

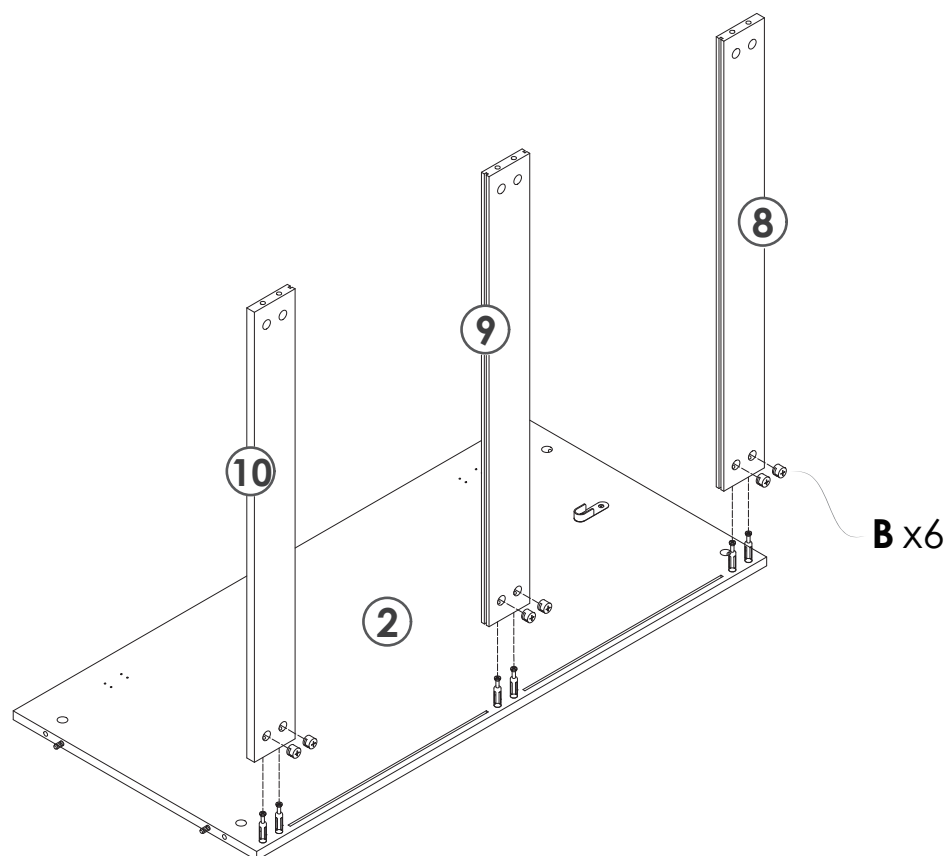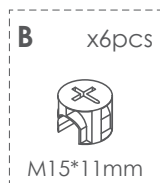  

14

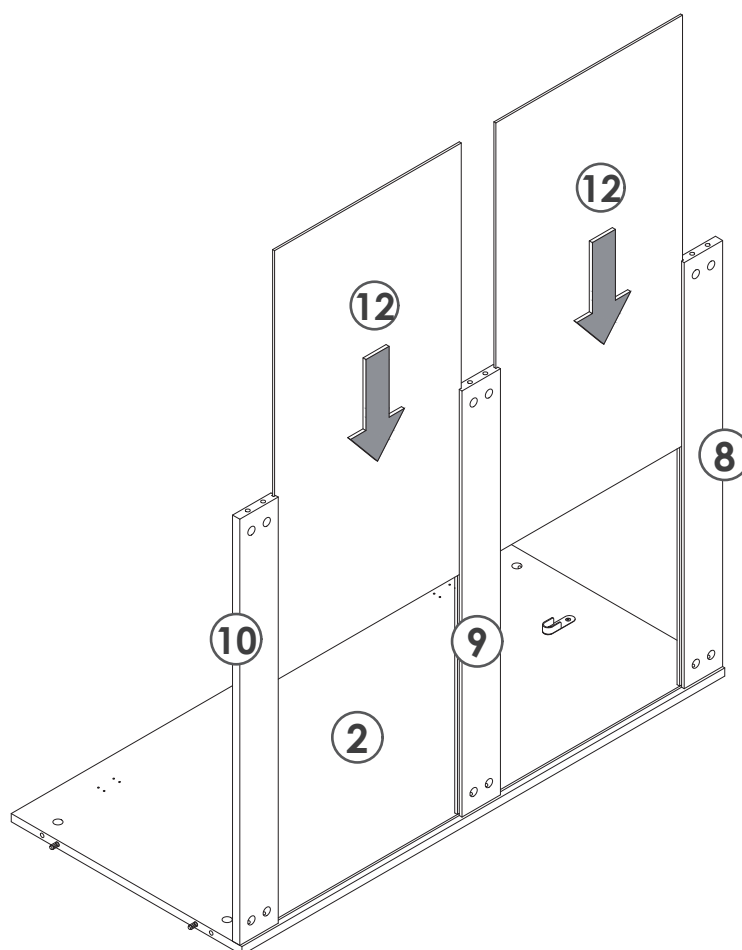 

15

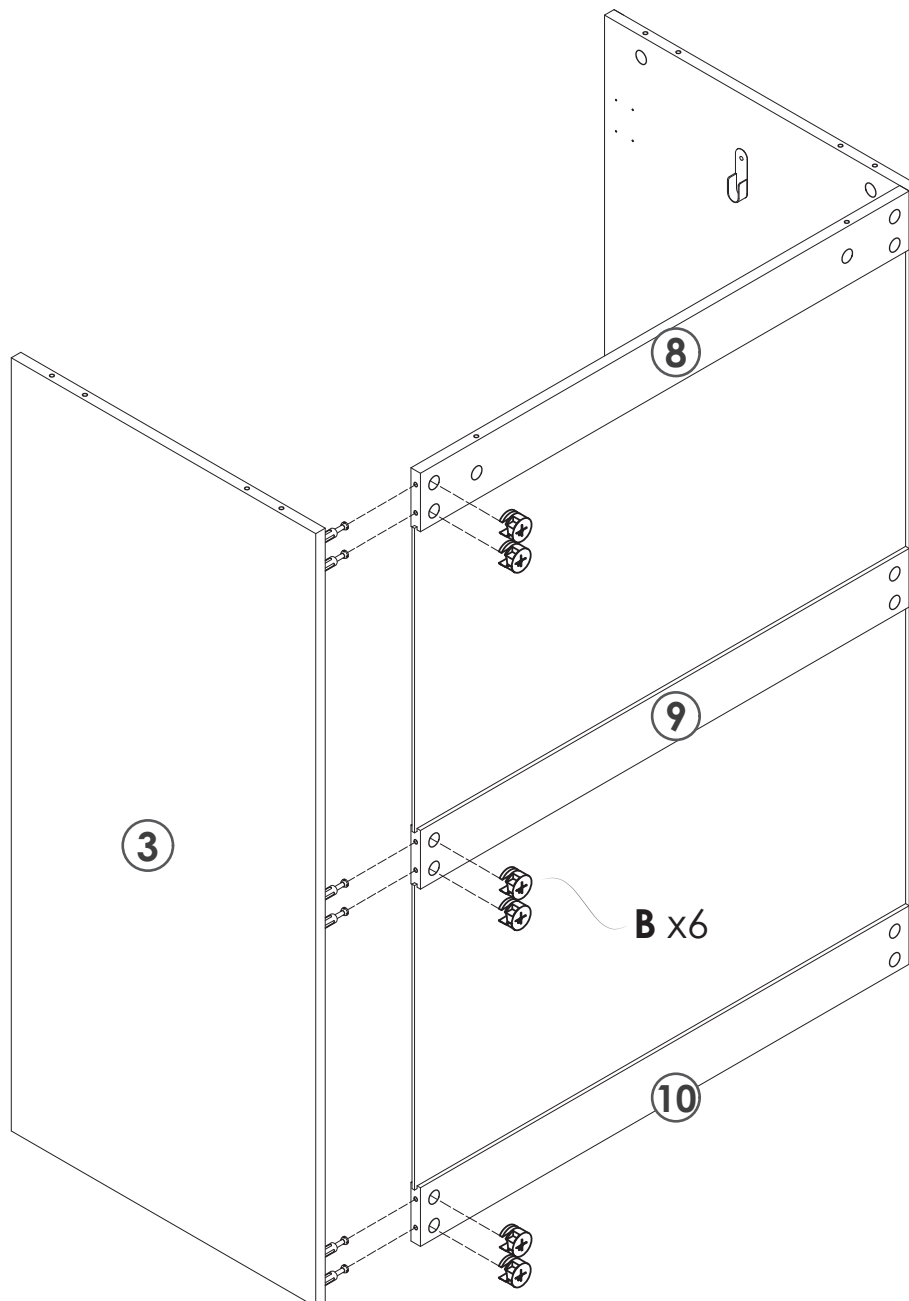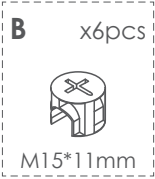  

16

A x4pcs



 
 
M6*40mm

C x2pcs




M3.5*14mm



H x1pc

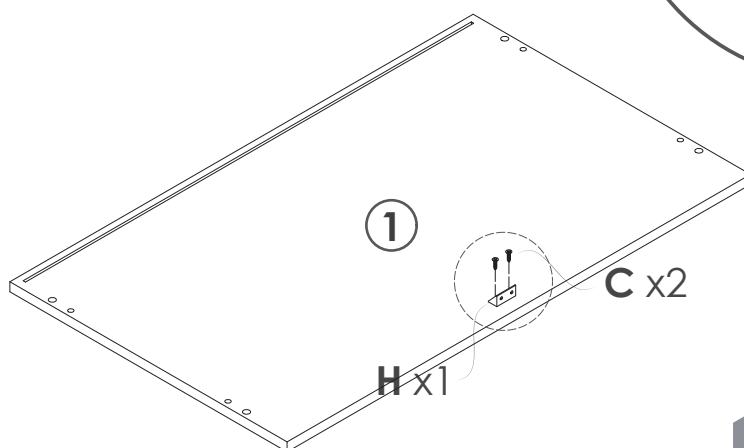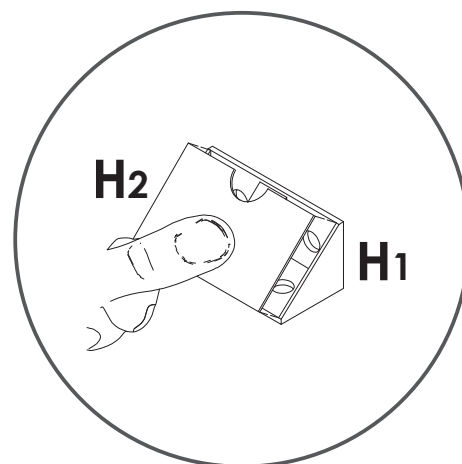



A x4

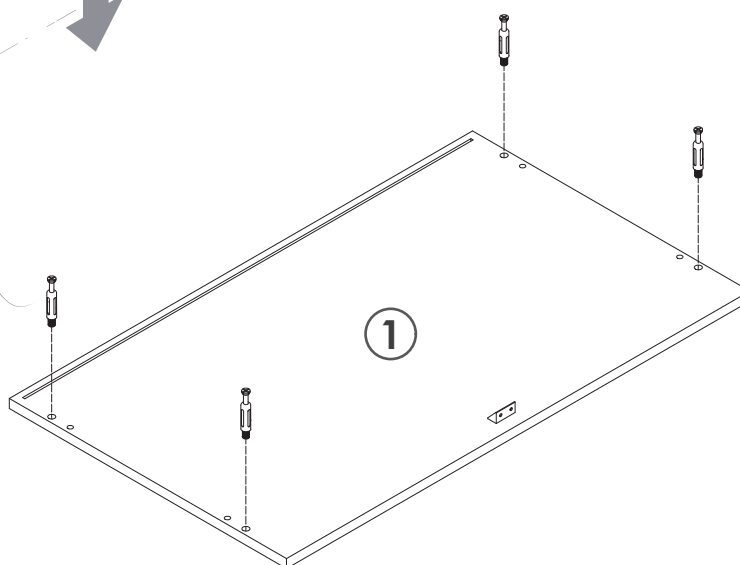 



17

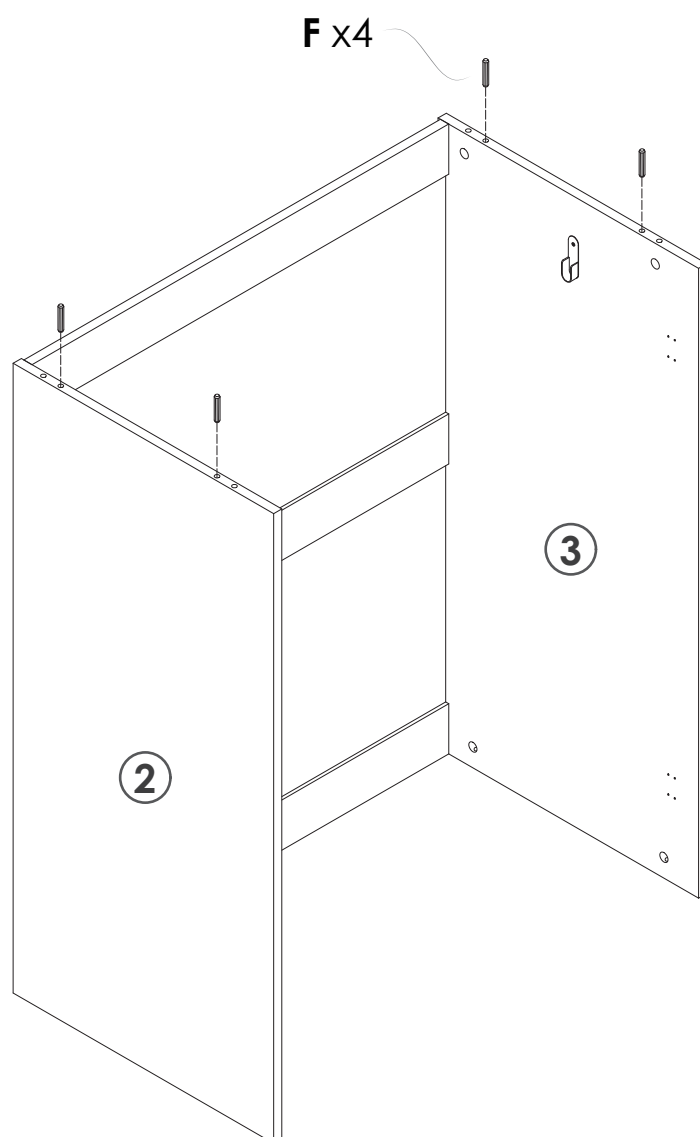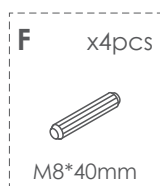  



18

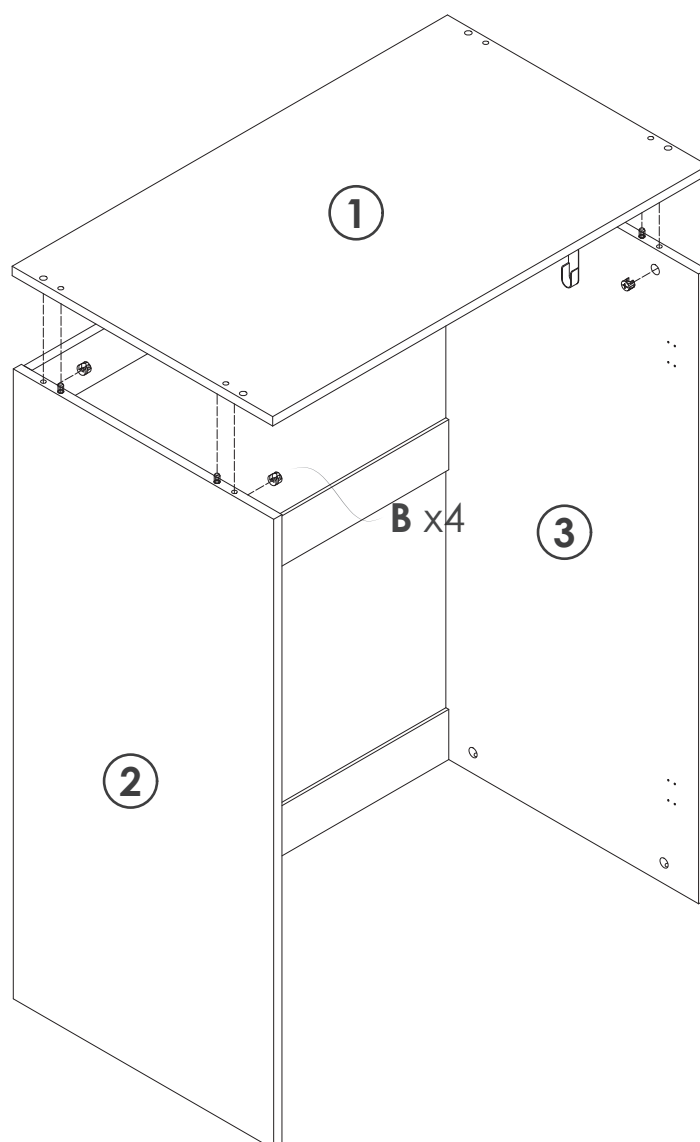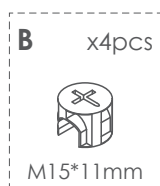  



19

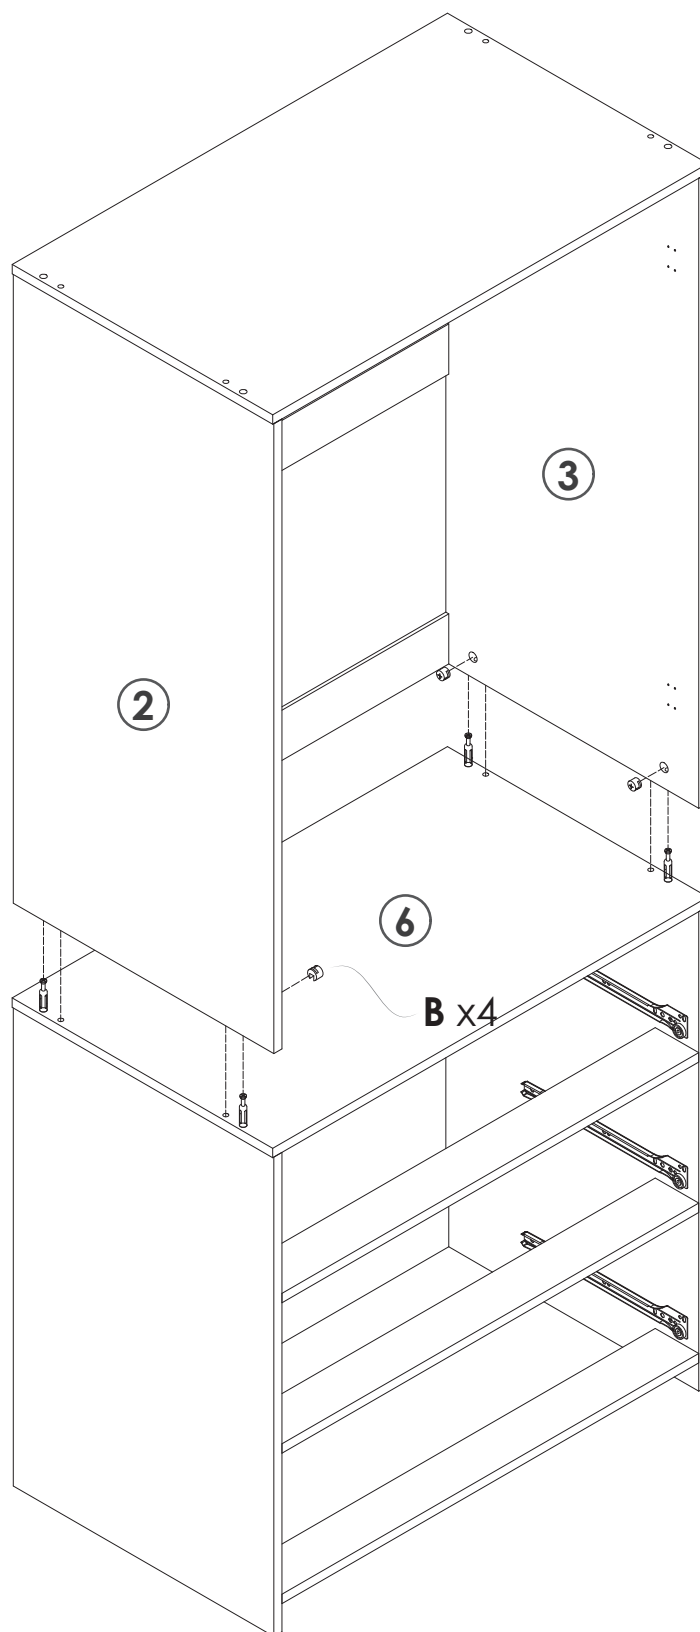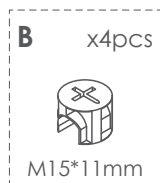  



20

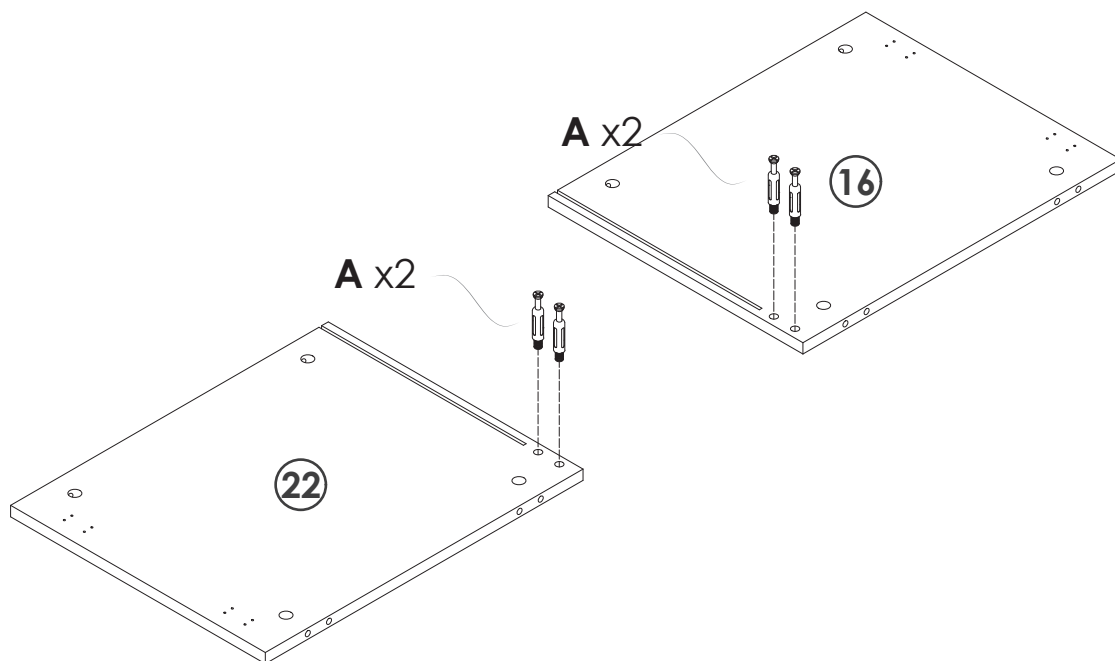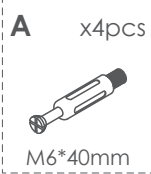  


21

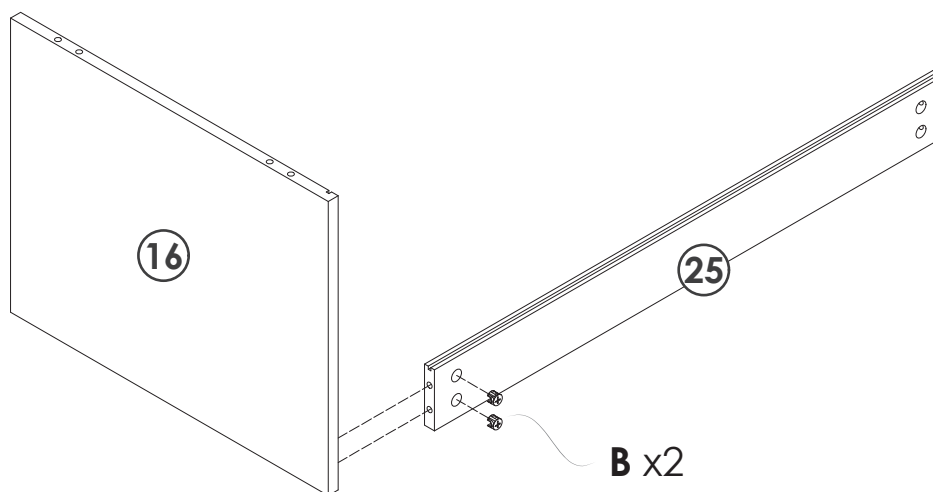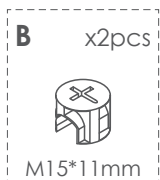  



22

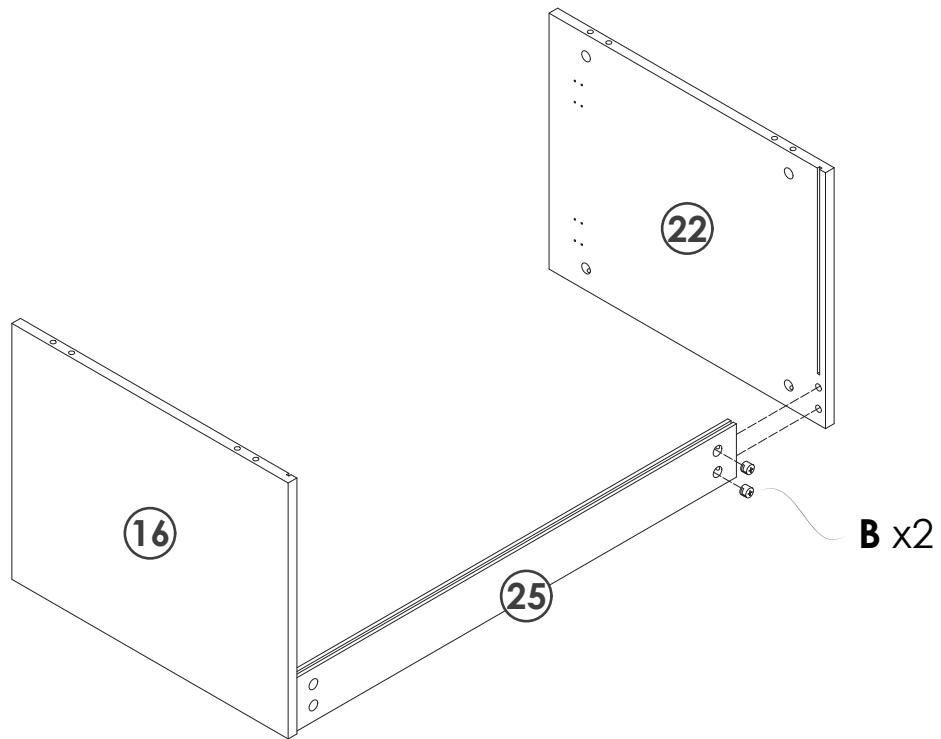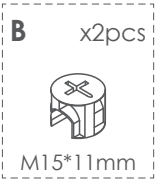  



23

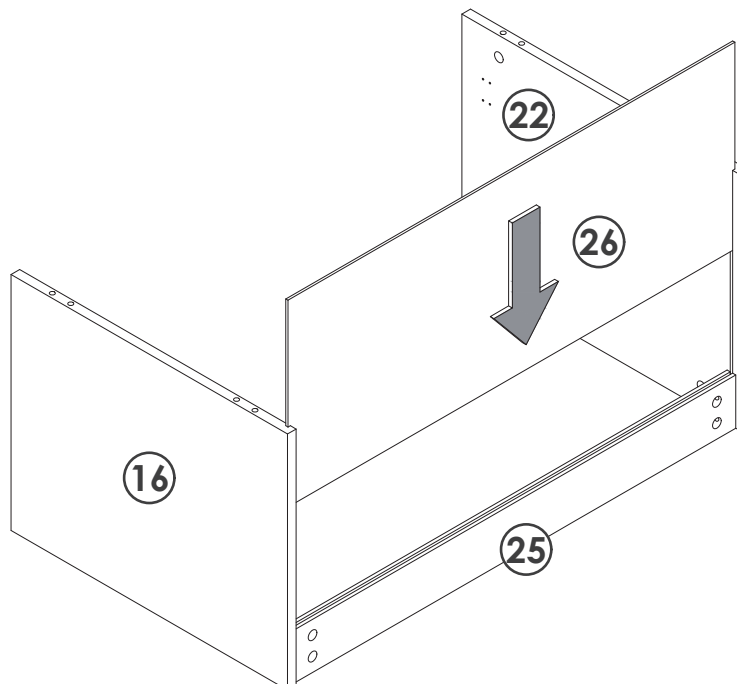 



24

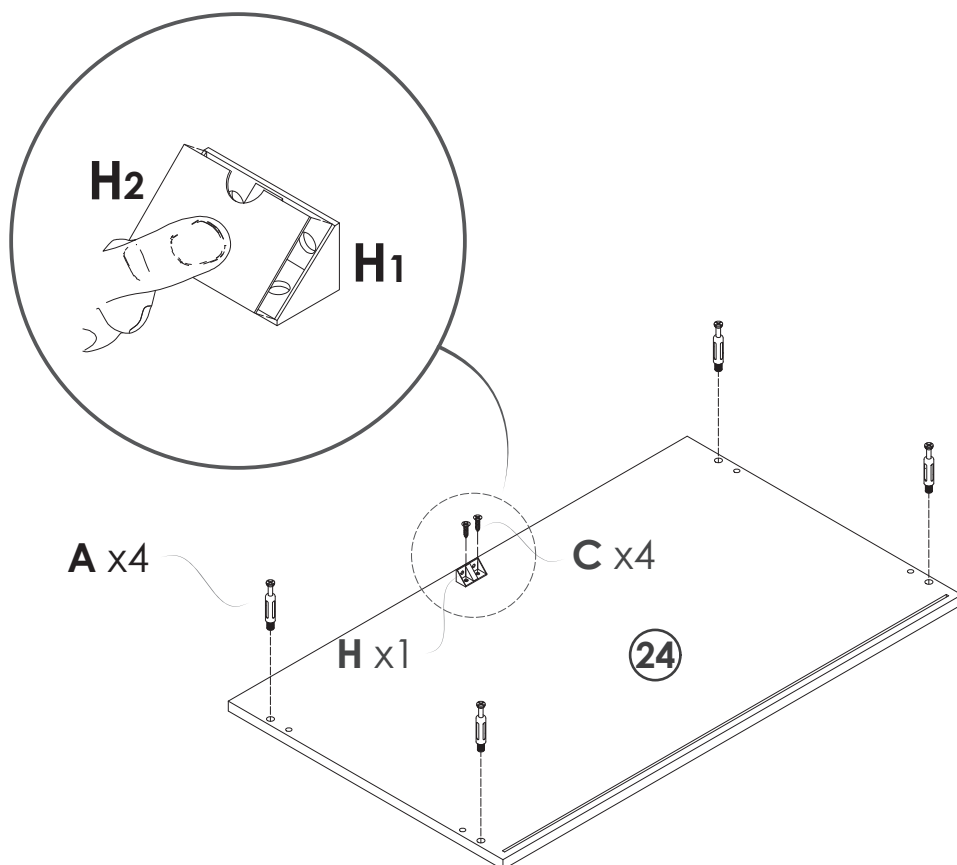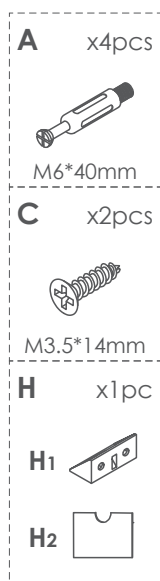  


25

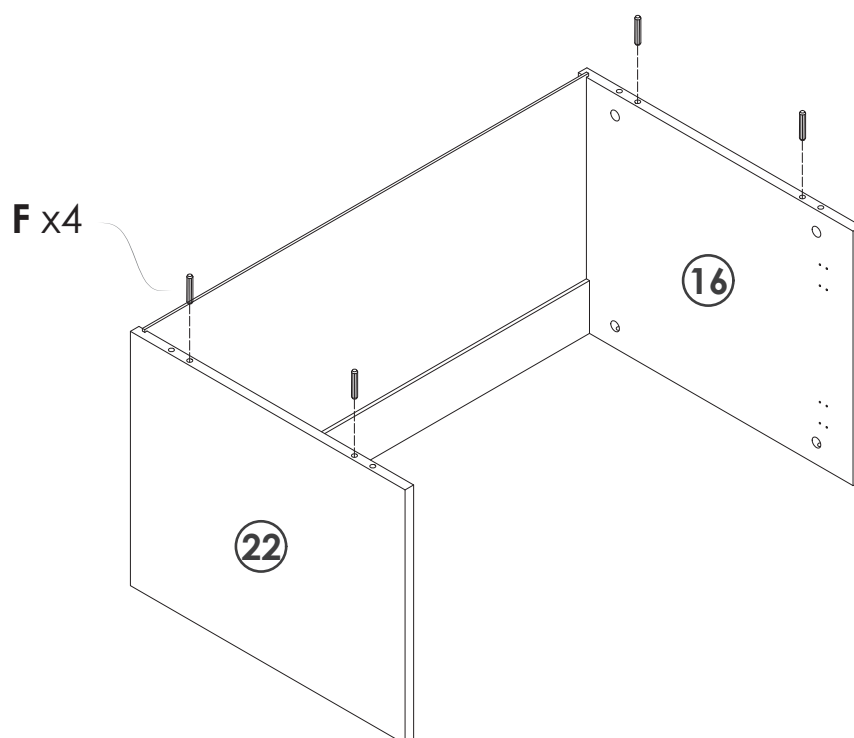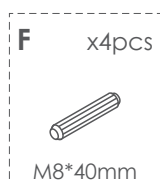  

26

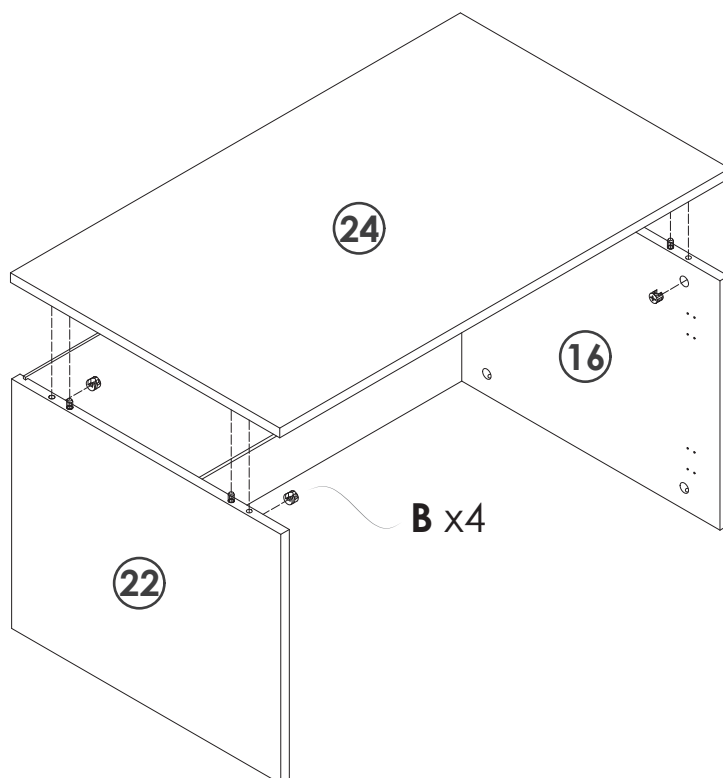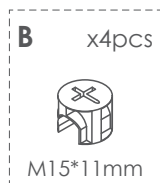  

27

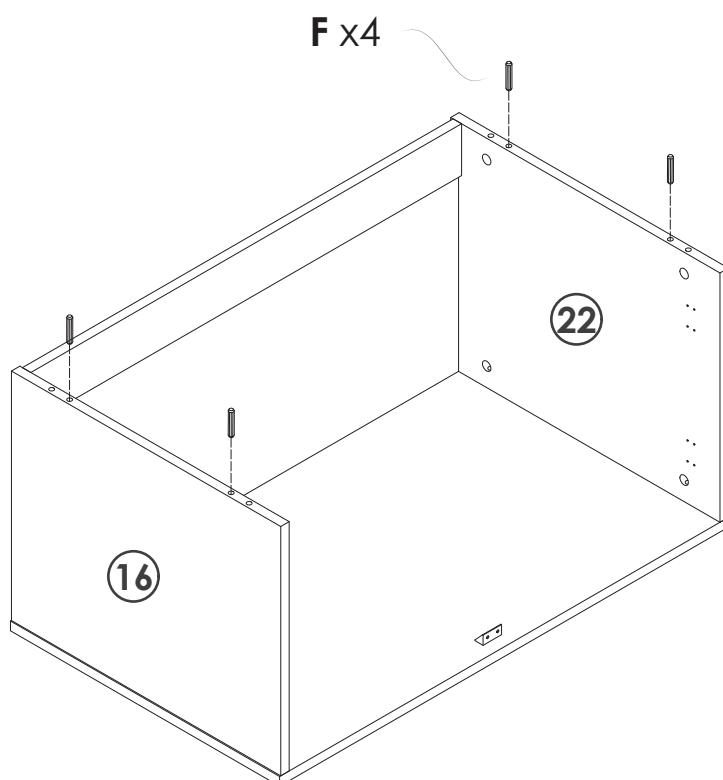 


28



A x4pcs





M6*40mm

   A x4

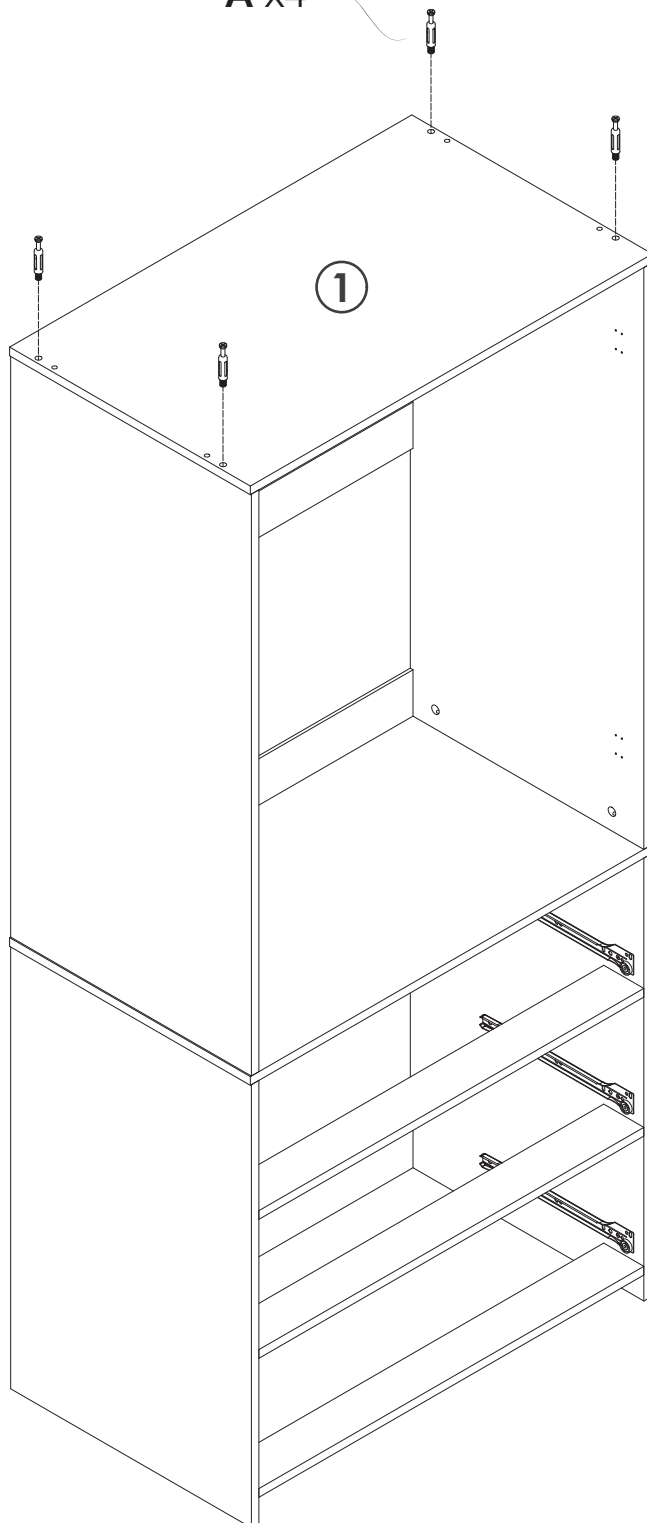

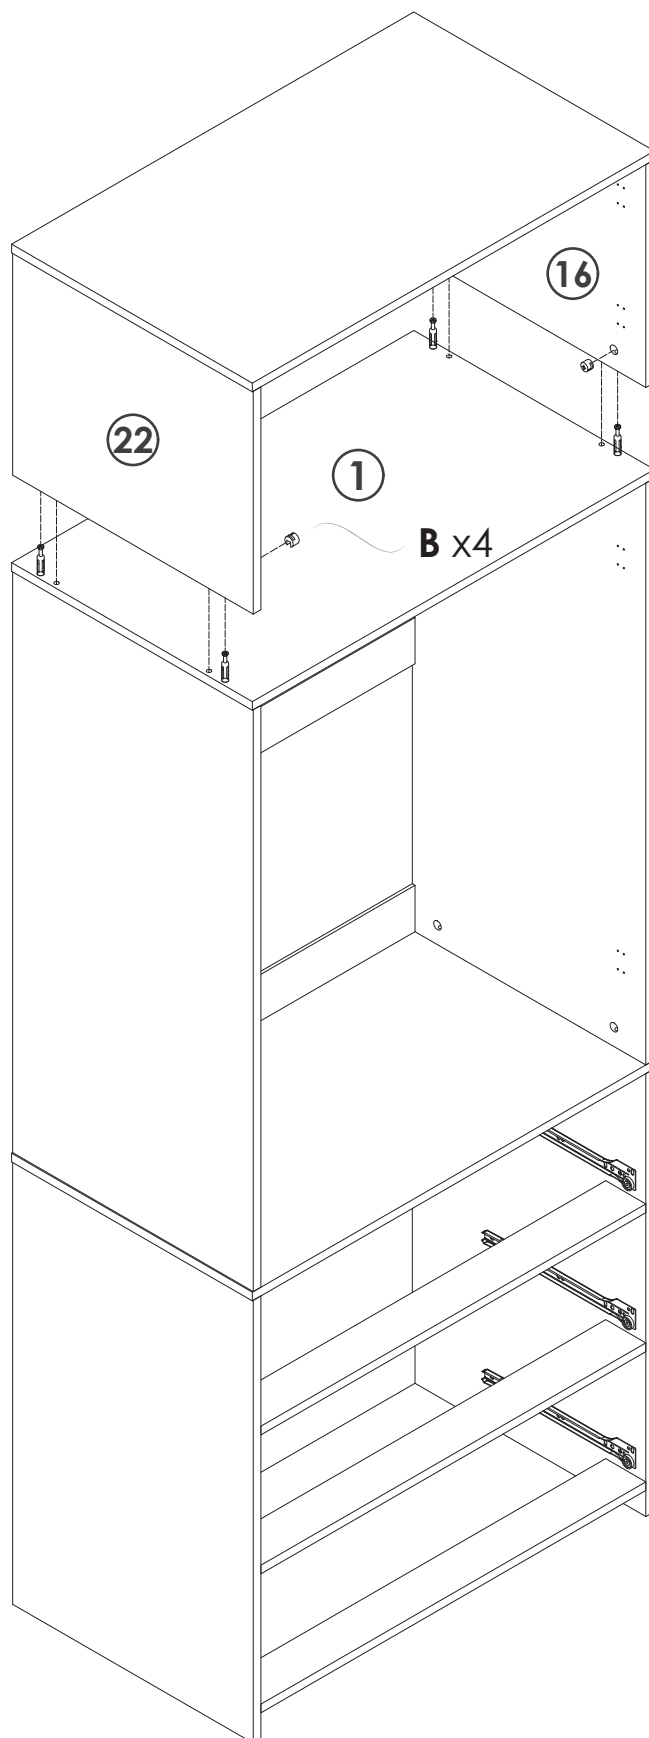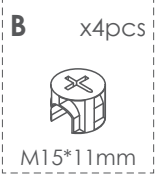


30

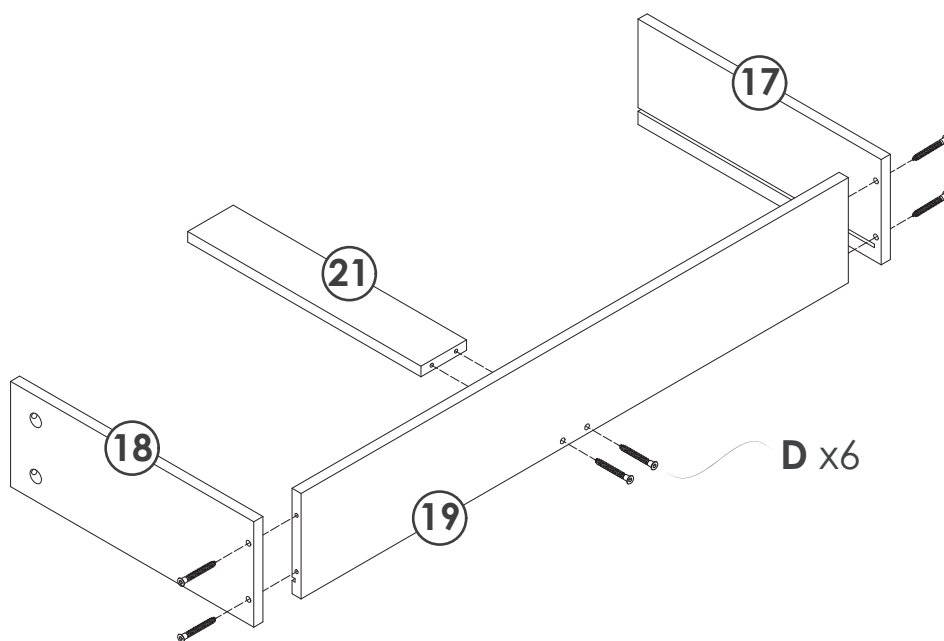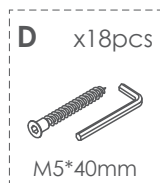  



x3

 31

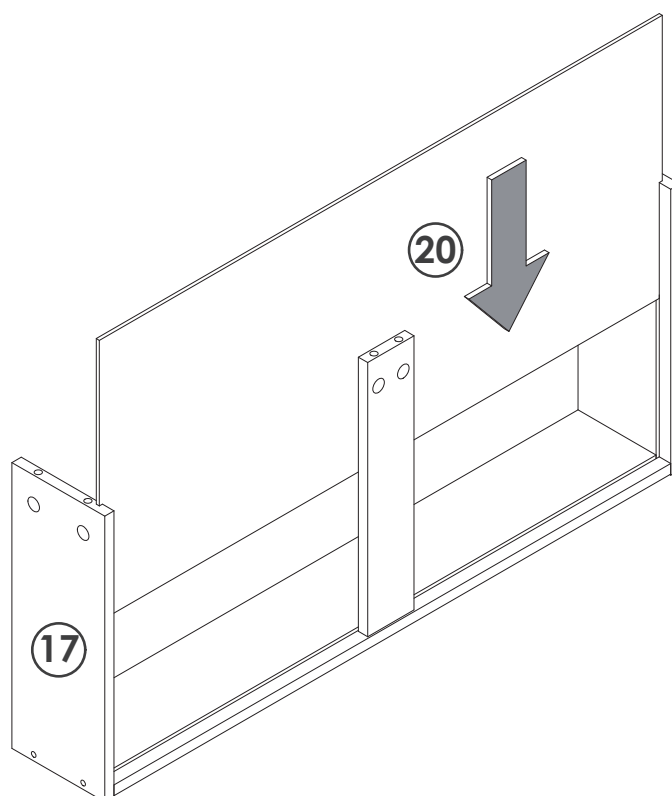



x3

  32

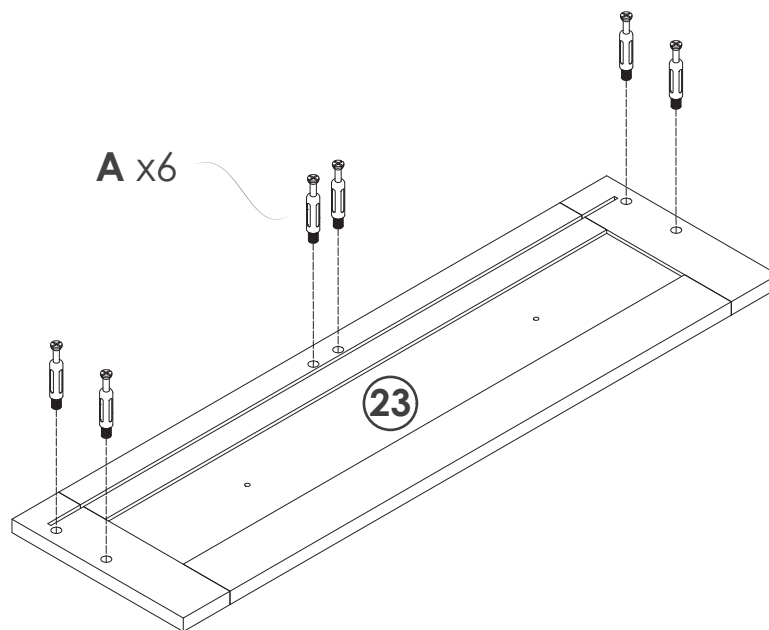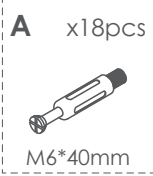

x3

  33

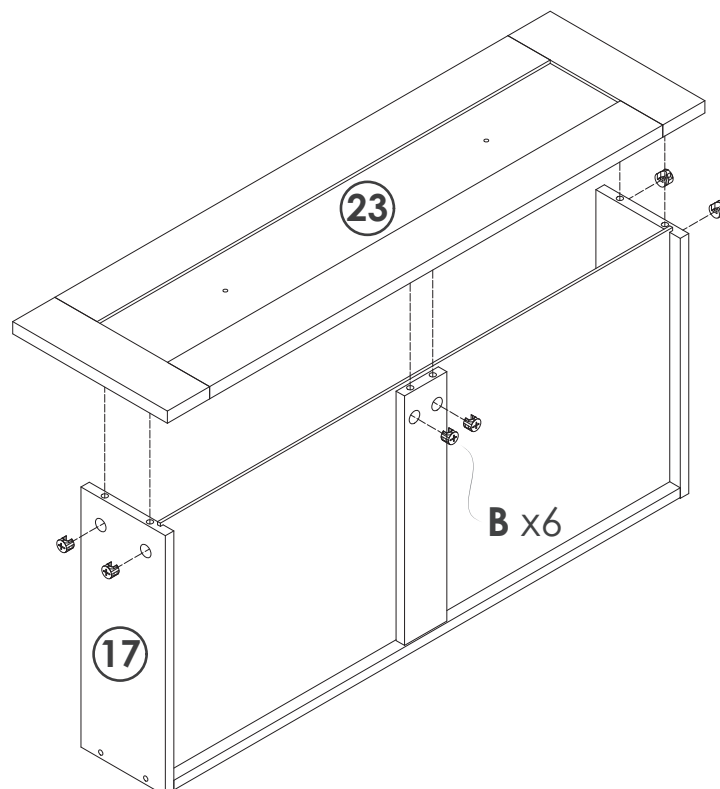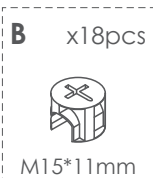

x3

34

 
J x6pcs



K x6pcs



M4*10mm

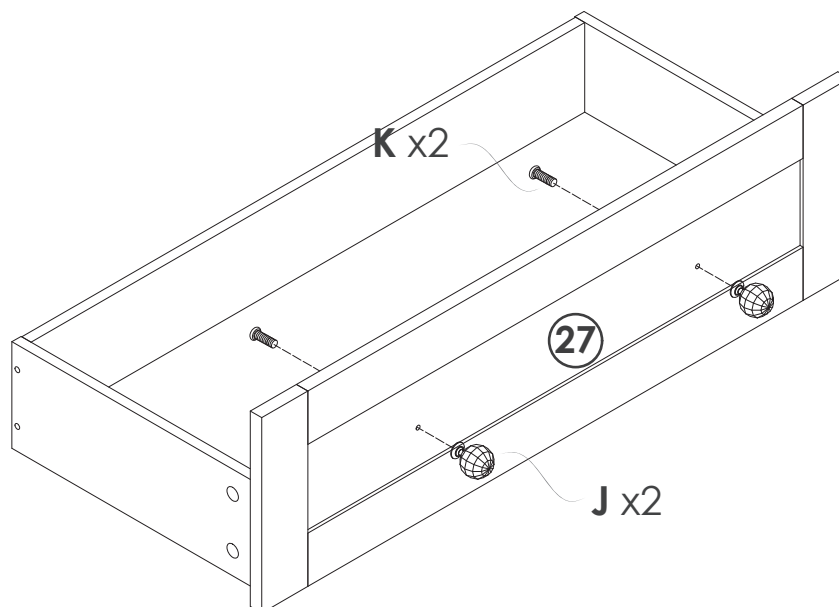

x3

35

L x3pcs



DR

 


DL

M x18pcs






M3*12mm



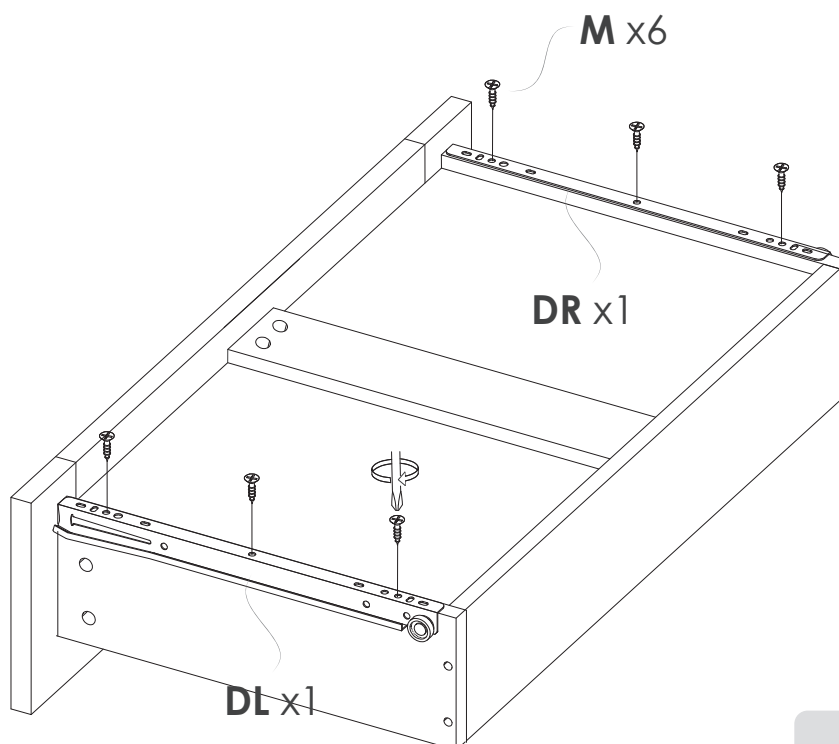


x3

   36

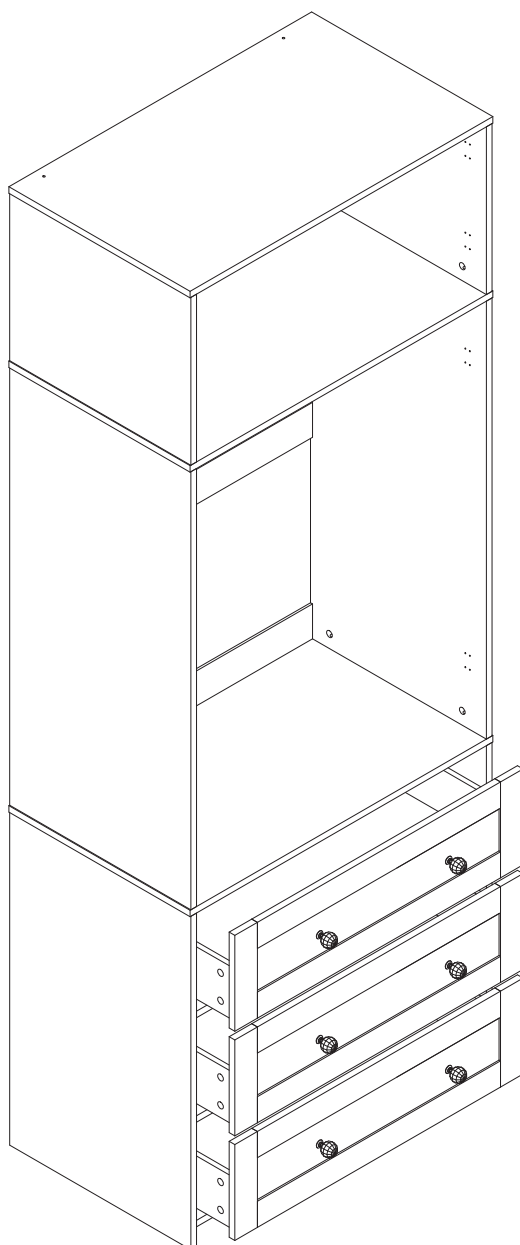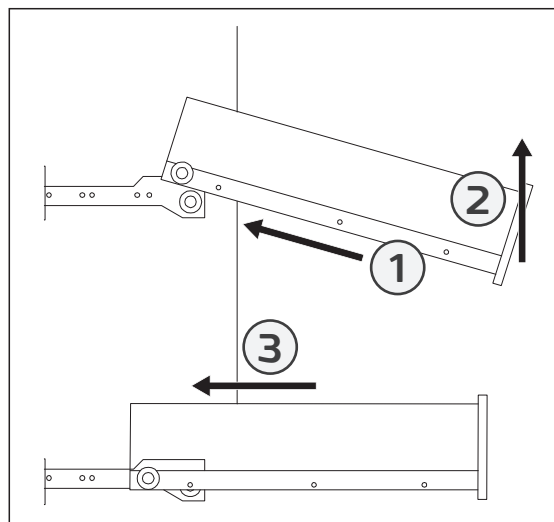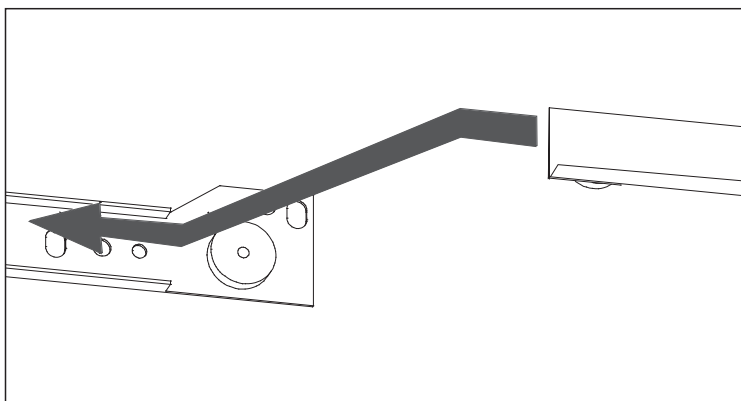

37

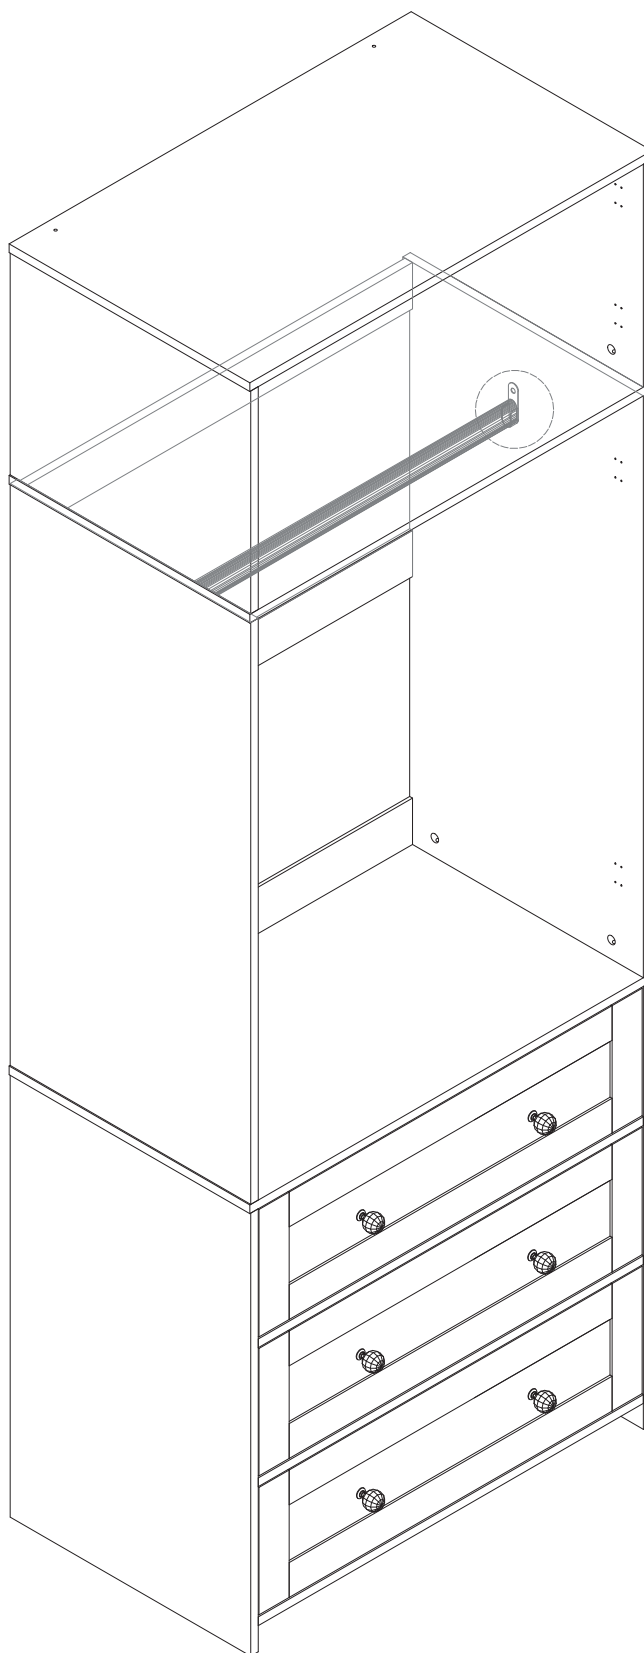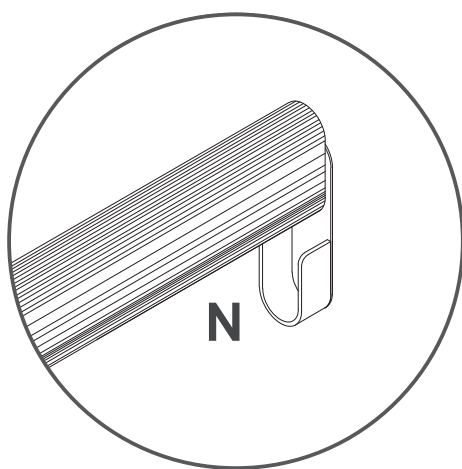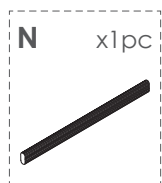   






38

C x16pcs



M3.5*14mm

     P x8pcs

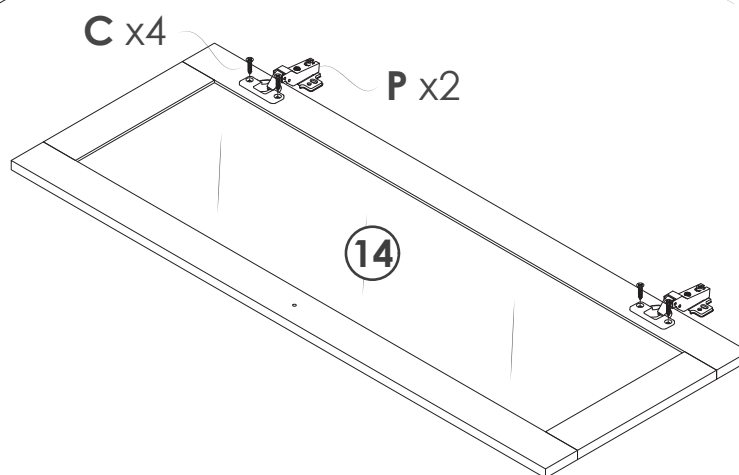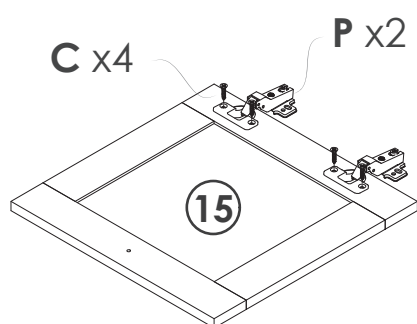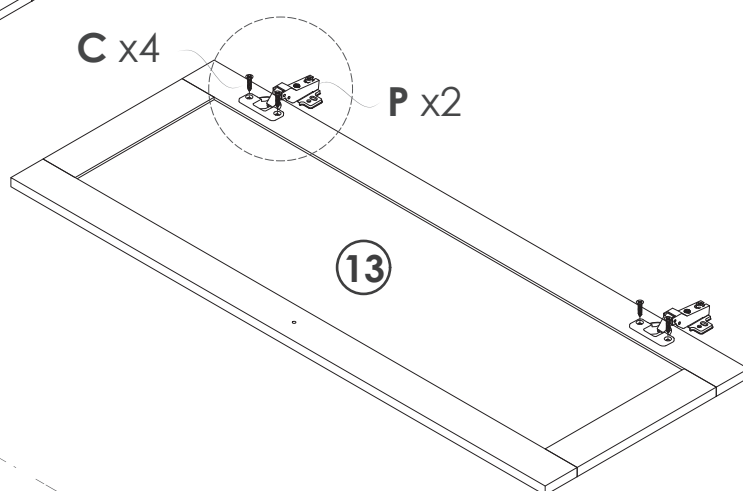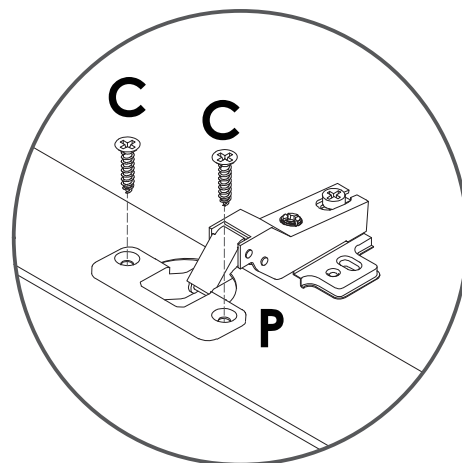
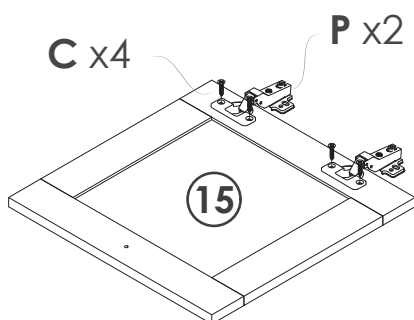


39

C x32pcs



























  M3.5*14mm

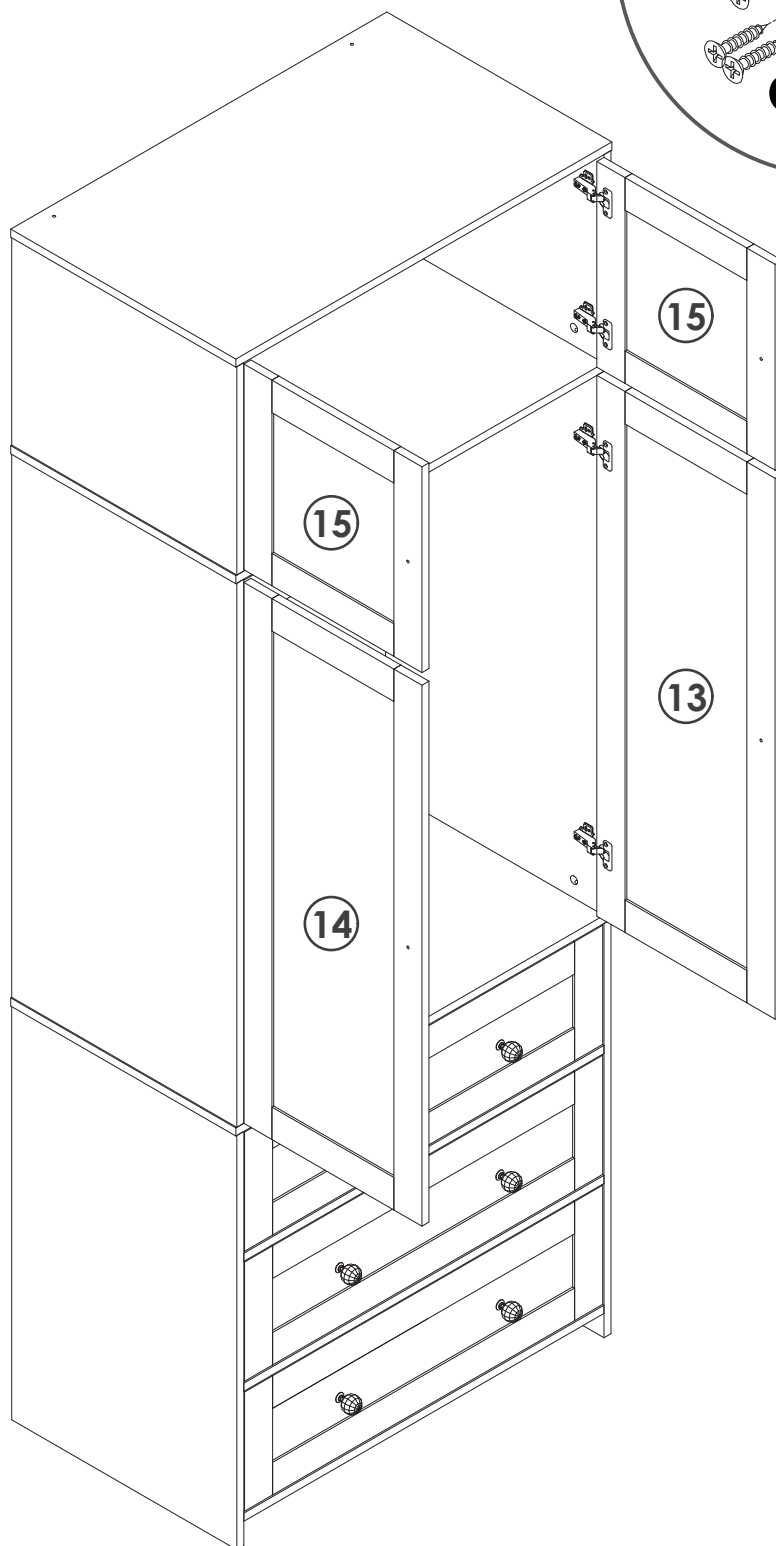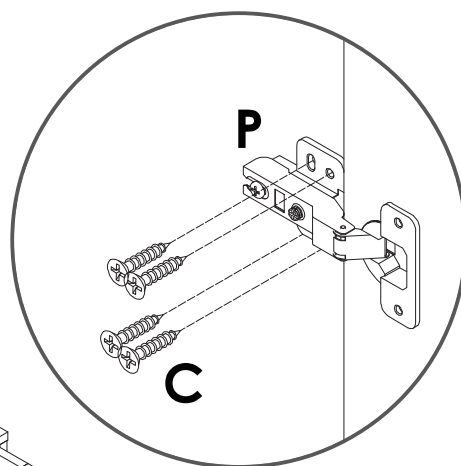

The ways to adjust the door

                        - Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.

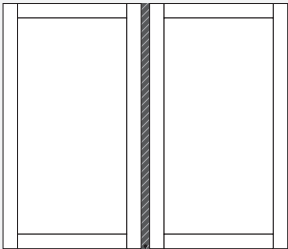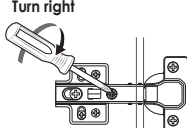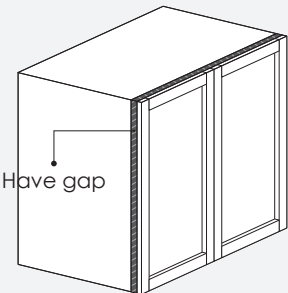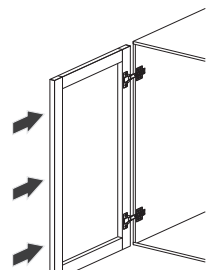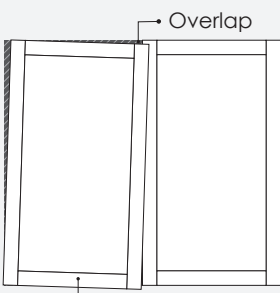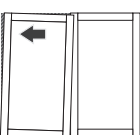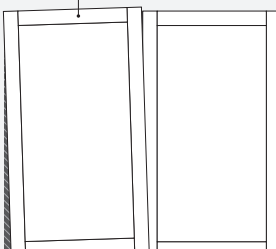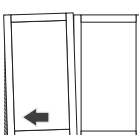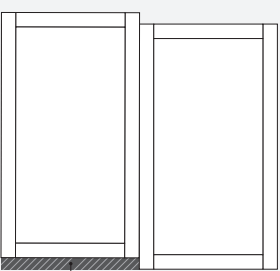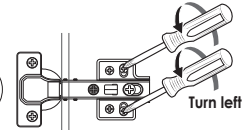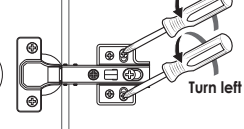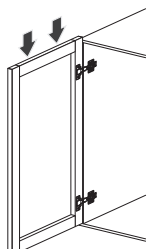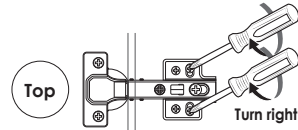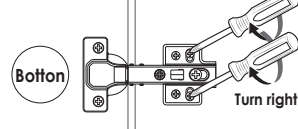Obvious gaps between doors or Doors don't look closed  Have gap	1 Turn "internal & external screw" to the right can make the door approach inside. Please adjust the doors little by little. Top  Turn right Bottom  Turn right The left door  Top  Turn right Bottom  Turn right The right door  * If the 2 doors are overlap, please turn the "internal & external screw" to the left.		
When door is crooked  Have gap	1 Rotate the "front and rear screws to the left." Top  Turn left Bottom  Turn left *After adjusting the "front and rear screw", the door still does not change, please turn the "internal & external screw" to the right slightly.	2 Push the door to the cabinet. 	3 Rotate the "front and rear screws to the right." Top  Turn right Bottom  Turn right
When door is leaning  Overlap Protruding to the underside	Turn "internal & external screw" to the left can make the top of the door tilted outward. Top  Turn left Bottom  Turn left 	Protruding to the upside  Overlap	Turn "internal & external screw" to the left can make the bottom of the door tilted outward. Top  Turn left Bottom  Turn left 
When the door is higher on top  Have gap	1 Turn "up & down screw" to the left. Top  Turn left Bottom  Turn left	2 Lower the door's height so that 2 doors are of the same height. 	3 Turn "up & down screw" to the right. Top  Turn right Bottom  Turn right *If the door is lower on bottom, please lift up the left door slightly on step 2.

40

 
J x4pcs



Q x4pcs




M4*20mm


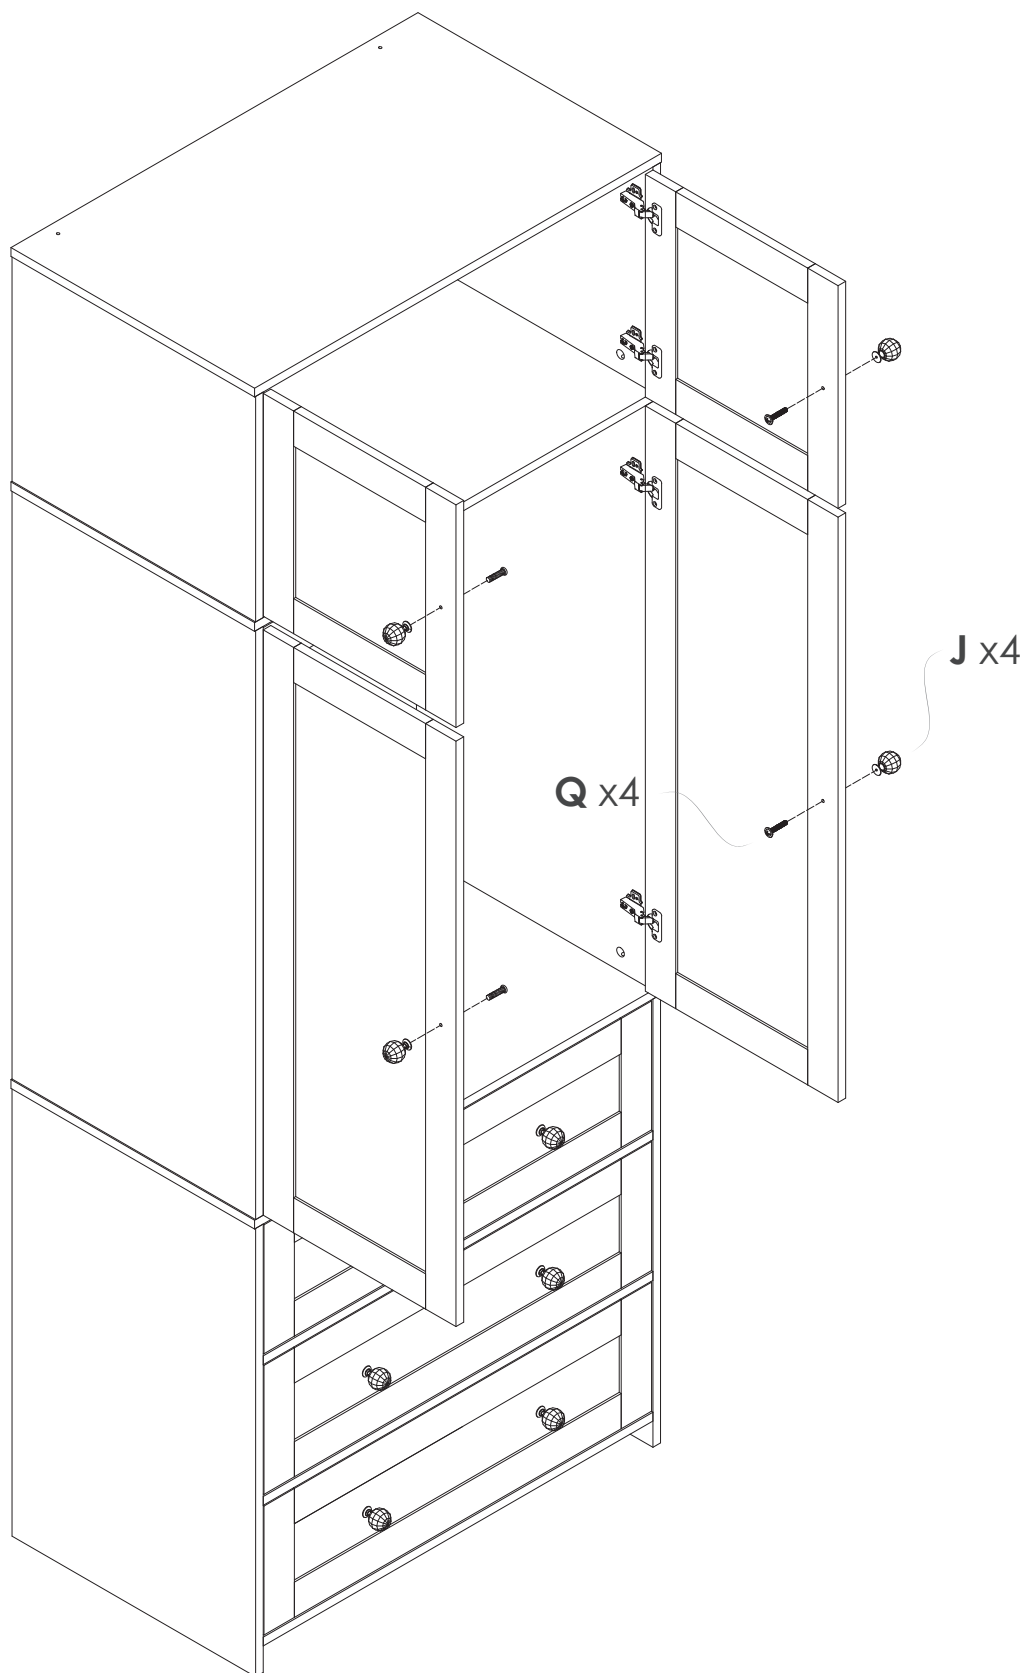


41

 R x30pcs





M3.5*14mm

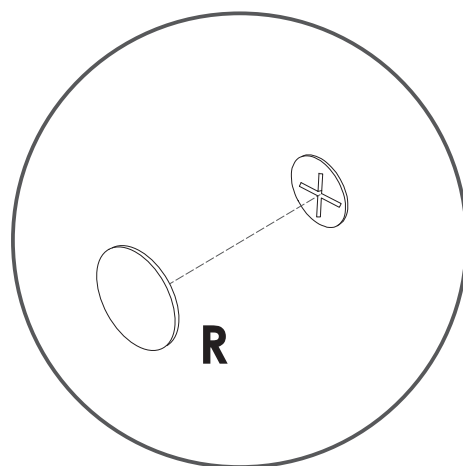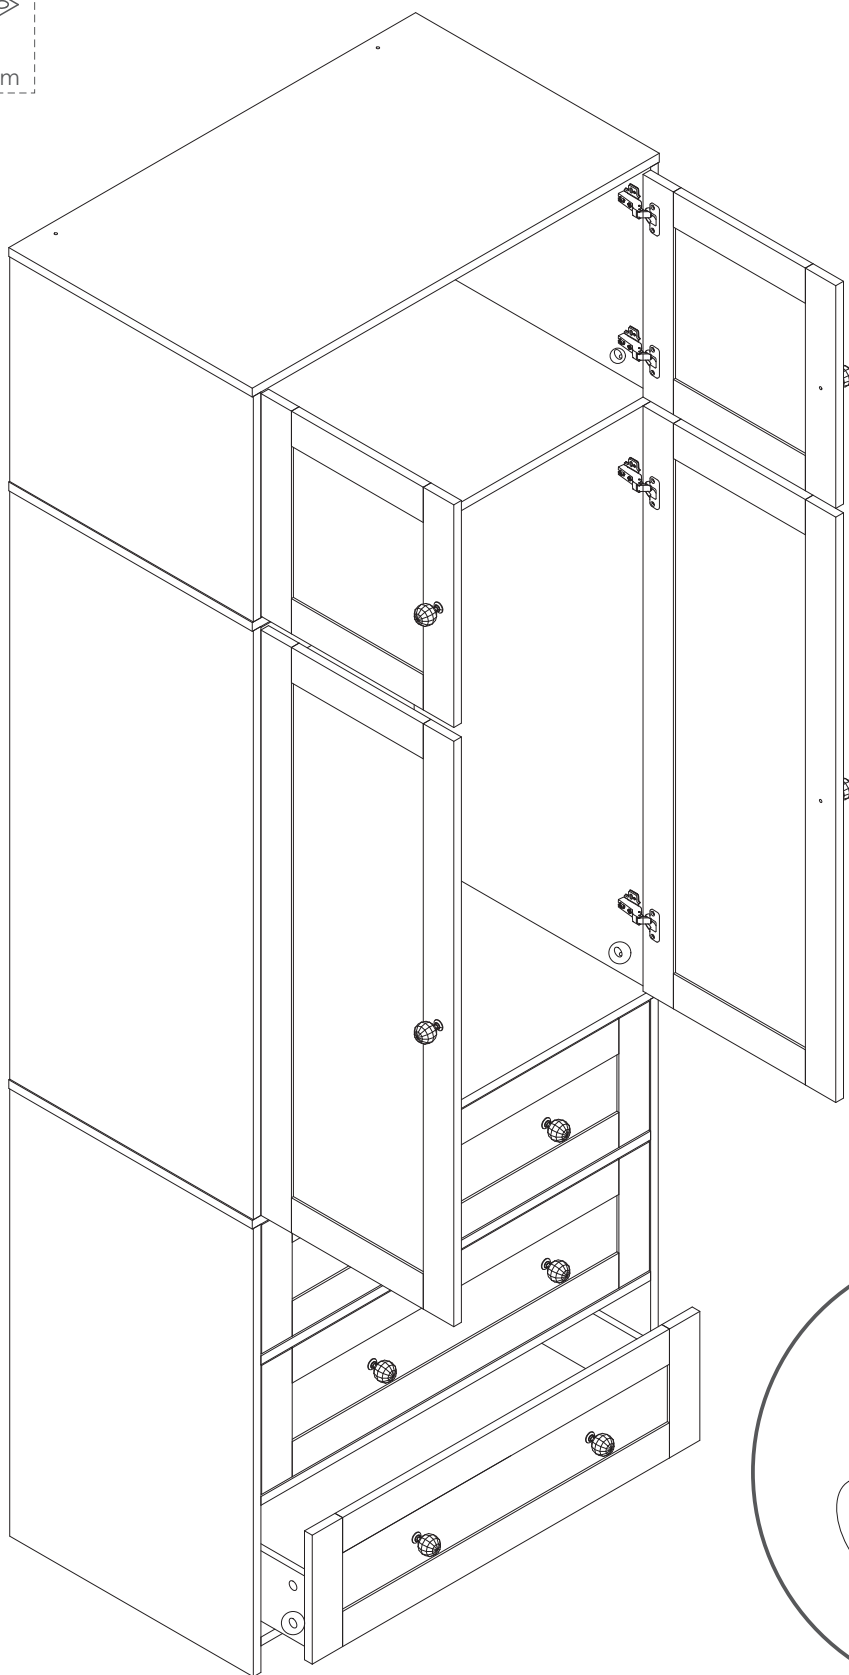  

T x22pcs

T1 

  
T2 

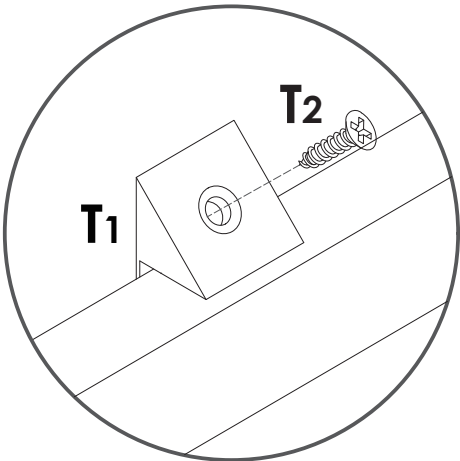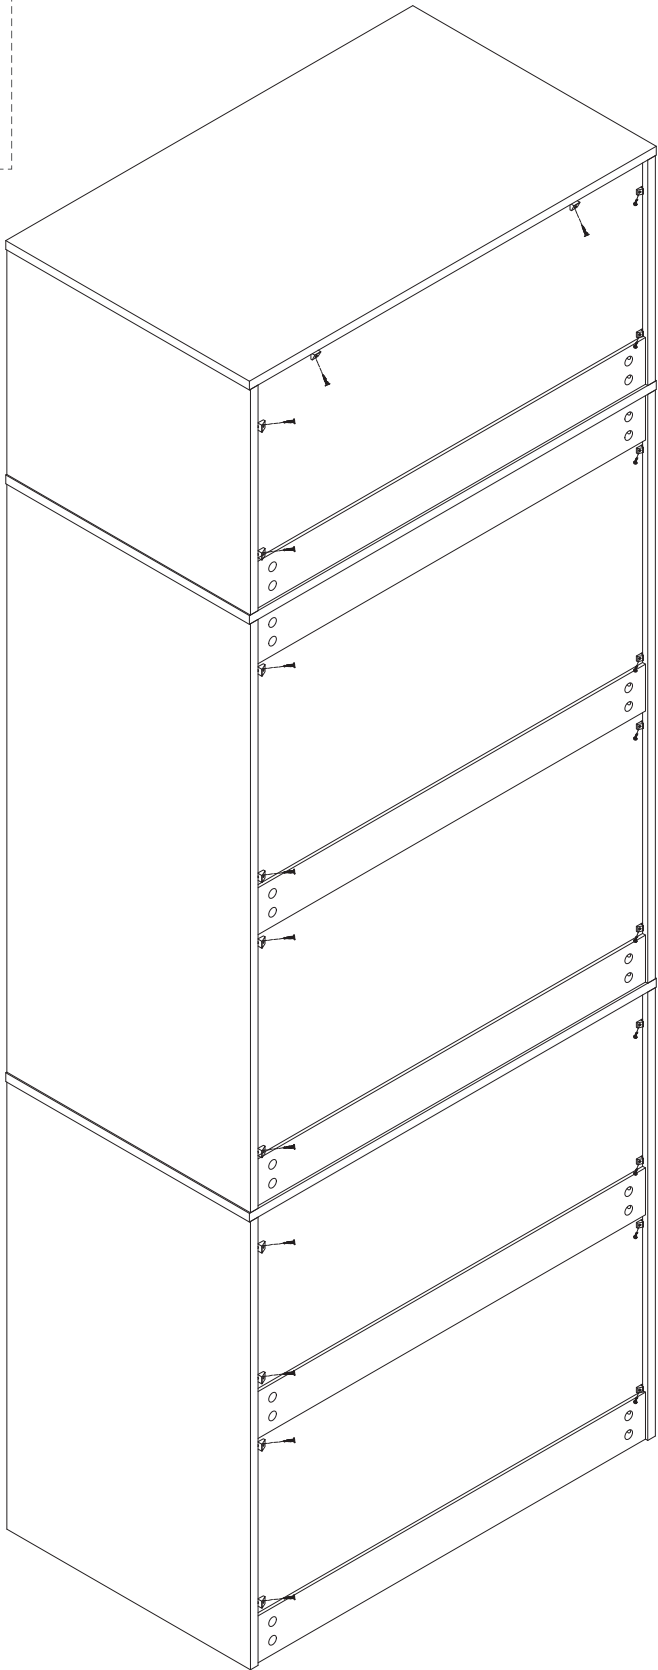

43

Mandatory!

 For safety reasons, we strongly recommend you follow these instructions to install the anti-tipping hardware, when installed properly, this hardware may prevent the unit from tipping unexpectedly.

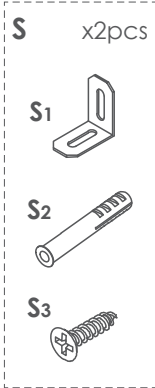

⚠ WARNING

 


Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER open more than one drawer at a time.
- NEVER put a TV on this product.
- Place heaviest items in the lowest drawers.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.



This is a permanent label. Do not remove!

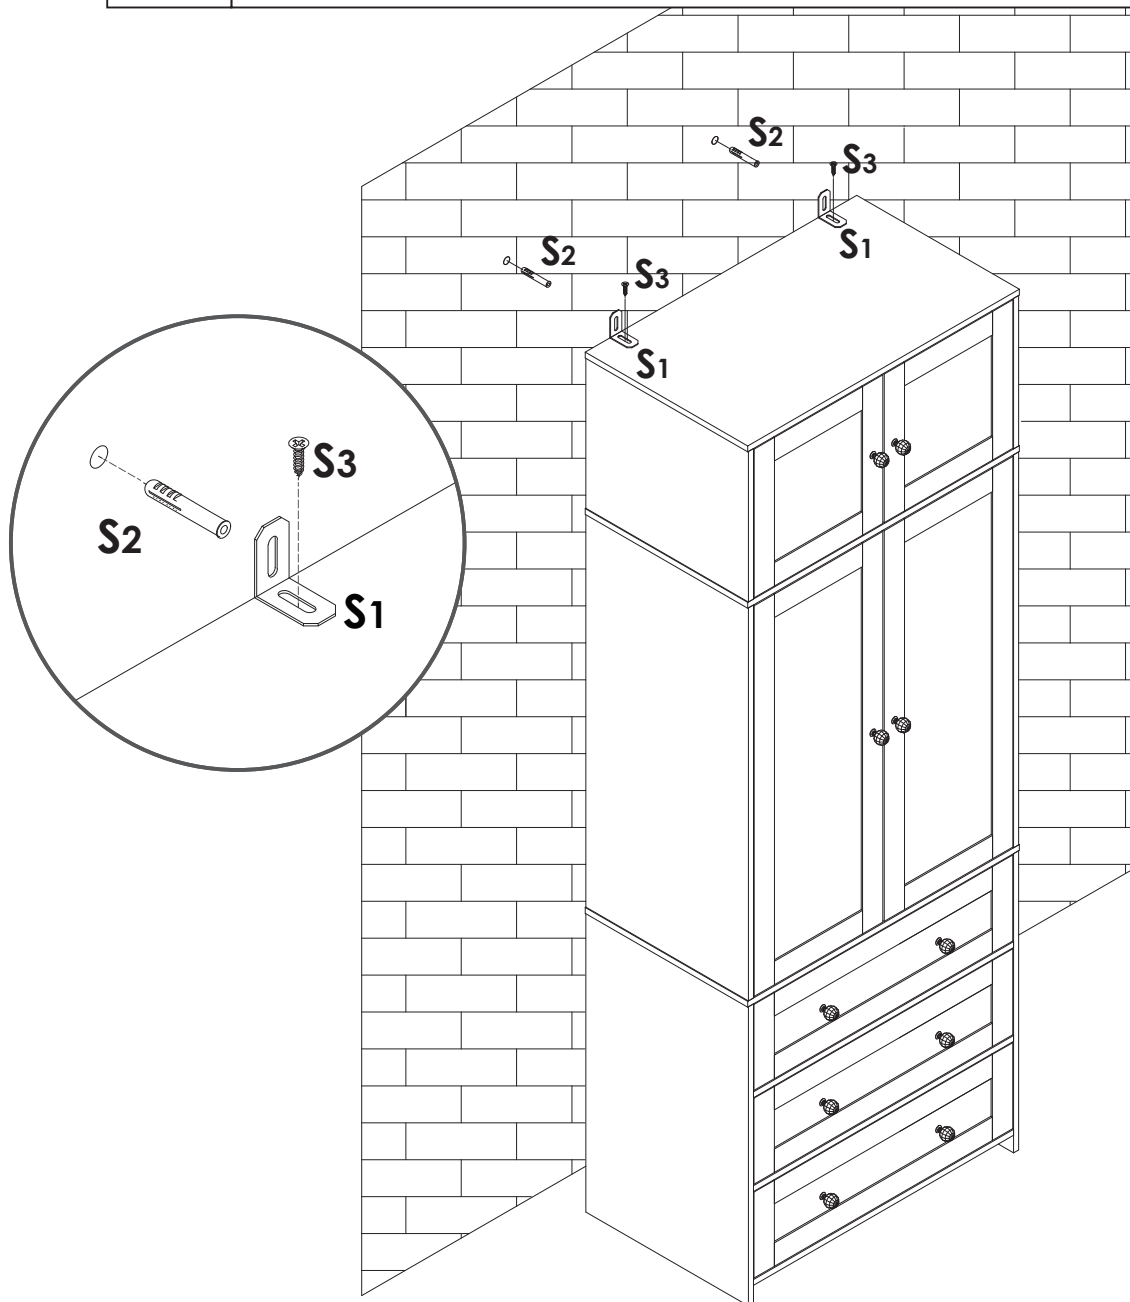

44

