

2张A4（210*285mm）正反面印刷（骑马钉）（成品尺寸：142.5*210mm）

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

a) READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.

c) This seasonal use product is not intended for permanent installation or use.

d) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.

e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.

f) Do not let lamps rest on the supply cord or on any wire.

g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.

h) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.

i) Do not use this product for other than its intended use.

j) Do not hang ornaments or other objects from cord, wire, or light string.

k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.

l) Do not cover the product with cloth, paper or any material not part of the product when in use.

m) Read and follow all instructions that are on the product or provided with the product.

n) SAVE THESE INSTRUCTIONS

Use and Care Instructions

a) When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.

b) If the product is placed on a tree, the tree should be well secured and stable.

c) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.

d) When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.

e) When not in use, store neatly in a cool, dry location protected from sunlight.

CAUTION

1. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify wiring or product.

2. To reduce the risk of fire and electric shock: a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and b) Do not mount or support strings in a manner that can cut or damage wire insulation.

Model No. DH-F-12V-SG

INSTRUCTION MANUAL

60IN Christmas Sign Light



72IN Christmas Sign Light




 
60IN Christmas Sign Light

PRE-ASSEMBLY:

PARTS LIST

■ Ensure there are no missing pieces pieces by firstly separating and identifying all parts before assembling.

■ Make sure to check packing material for small parts when shipment received to avoid any parts missing during shipment.

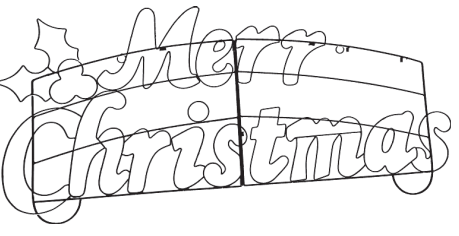Part	Descripti on	Illustration	Qty
A	Christmas Sign		1
B	Tree		1
C	Metal stand		1
D	Zip Ties		12
E	Ground stakes		4

TIPS :

■ To ensure the final unit is secure and sturdy, it is highly recommended to secure each component with the zip ties provided after connecting each component together in the steps.

■ Remove all components from the box and lay flat on the floor before assembling to make it easier for you to assemble accordingly.

■ Some parts are connected by a string of lights and should NOT be separated. Any separation or disconnection of the light set may cause the unit to malfunction or not light completely.

1

Warning:

■ Product may contain glitter, DO NOT assemble indoors to avoid unintended property cleanup.

■ DO NOT plug into a wall outlet until item is fully assembled and lights are properly connected.

■ DO NOT use in extreme weather conditions.

■ This item is NOT intended for permanent installation or use.

■ Unplug item when not in use or if left unattended.

■ If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made .

■ DO NOT allow glitter to contact your eyes or face as this may result in skin irritation or injury.

■ Keep items away from all heat sources (fireplace, stove, heater, etc.).

■ Do not secure wiring with staples, nails, or sharp hooks.

■ Do not hang ornaments or other objects from the cord.

Troubleshooting Guide

Problem	Solution
Unstable or Difficult to Assemble	Ensure the product is placed on a flat, level surface
Malfunctioning Operation	Verify the product is securely plugged into a wall outlet or a UL-listed power cord;Do not plug into other electrical items.
Product Fails to Light Up	Inspect for loose/broken bulbs, faulty connections, or unplugged cords;
Partial Lighting (Multiple Light Strings)	If the product has multiple light strings, make sure all power cords are correctly connected to the power supply (e.g., A is connected to A, B is connected to B).

Care and Help Center

Question? Concerns? We'd love to hear them!


E-mail: jinmai211211@gmail.com and we will reply within 24 business hours.

⚠WARNING


Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

6

3. Connect the tree & Christmas sign by inserting the posts of the tree into corresponding holes of the Christmas sign. Inserting the rods of the base into corresponding rings on the sign and secure the installing points with zip ties;

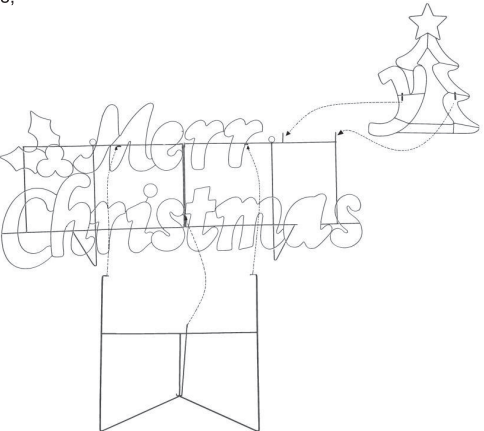

4. Secure the base to the soft ground by fully inserting stakes into the ground.

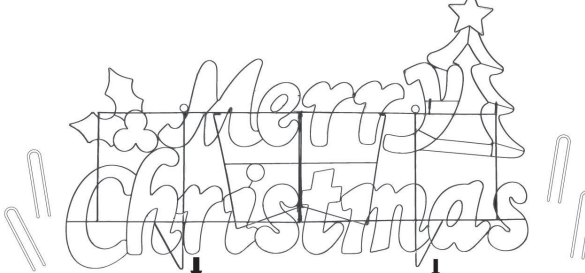


5. Or hang it anywhere you want with the rings on the sign;

6. **VERY IMPORTANT:** Secure the installing points with plastic ties(D) and secure the base to the soft ground by fully inserting Ground stakes(E) into the ground.

WARNING: Those step are **MUST-HAVE** or it will be less of wind rating and stability for outdoor use! It is NOT supposed to be a quality issue.

7. Connect the plug to the extension cord with A to A, B to B... and plug the light set into a standard 120-volt AC electrical outlet. (see Fig.1)

Fig.1

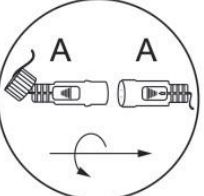

5


Assembly:

MAKE SURE TO FOLLOW THE STEPS STRICTLY FOR A SUCCESSFUL & EASY ASSEMBLY

1. Remove all components from the box & packaging and lay flat them on the floor to make it easier for you to assemble later.

NOTE: Parts are connected by a string of lights and **SHOULD NOT** be separated, Any separation or disconnection of the light set may cause the unit to malfunction or not light completely.


2. Open the Christmas sign as below photo, secure the sign's two parts by zip ties;

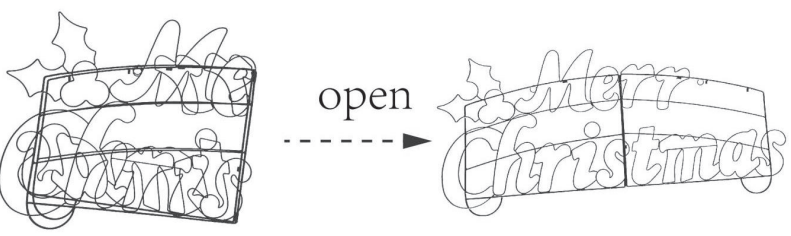

3. Connect the tree & Christmas sign by inserting the posts of the tree into corresponding holes of the Christmas sign. Inserting the rods of the base into corresponding rings on the sign and secure the installing points with zip ties.



4. Secure the base to the soft ground by fully inserting stakes into the ground.

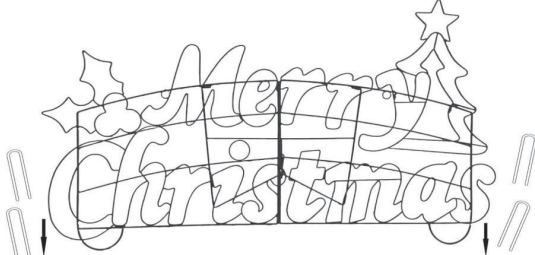

5. Or hang it anywhere you want with the rings on the sign;

Fig.1




2

6. **VERY IMPORTANT:** Secure the installing points with plastic ties(D) and secure the base to the soft ground by fully inserting Ground stakes(E) into the ground.

WARNING: Those step are **MUST-HAVE** or it will be less of wind rating and stability for outdoor use! It is NOT supposed to be a quality issue.

7. Connect the plug to the extension cord with A to A, B to B... and plug the light set into a standard 120-volt AC electrical outlet. (see Fig.1)

Fig.1

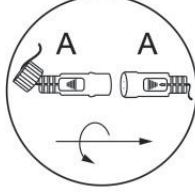


72IN Christmas Sign Light

PRE-ASSEMBLY:

PARTS LIST

■ Ensure there are no missing pieces pieces by firstly separating and identifying all parts before assembling.

■ Make sure to check packing material for small parts when shipment received to avoid any parts missing during shipment.

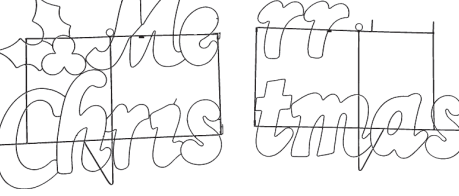Part	Descripti on	Illustration	Qty
A	Christmas Sign		2
B	Tree		1
C	Metal stand		1

3

TIPS :

■ To ensure the final unit is secure and sturdy, it is highly recommended to secure each component with the zip ties provided after connecting each component together in the steps.

■ Remove all components from the box and lay flat on the floor before assembling to make it easier for you to assemble accordingly.

■ Some parts are connected by a string of lights and should NOT be separated. Any separation or disconnection of the light set may cause the unit to malfunction or not light completely.


Assembly:

MAKE SURE TO FOLLOW THE STEPS STRICTLY FOR A SUCCESSFUL & EASY ASSEMBLY

1. Remove all components from the box & packaging and lay flat them on the floor to make it easier for you to assemble later.

NOTE: Parts are connected by a string of lights and **SHOULD NOT** be separated, Any separation or disconnection of the light set may cause the unit to malfunction or not light completely.

2. Connect the Christmas sign's two parts by connecting the iron rods with corresponding rings as shown below, fix by zip ties;

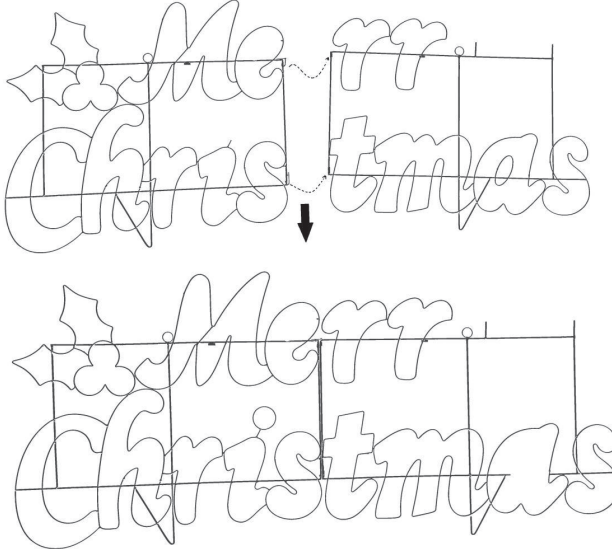

4