

ASSEMBLY INSTRUCTIONS


DINING TABLE WITH LEAF



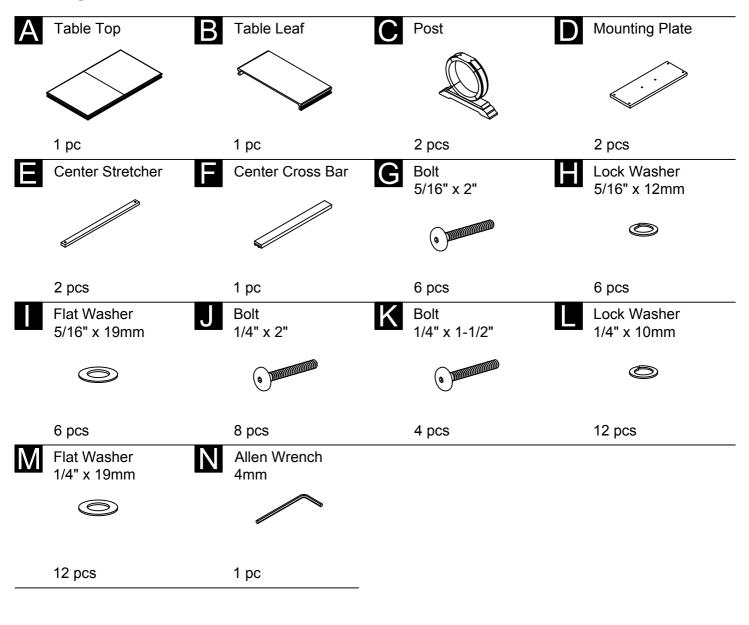



This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

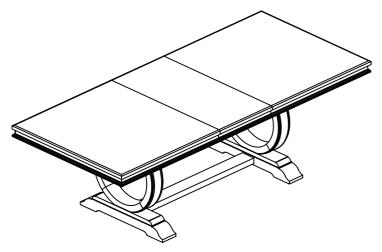

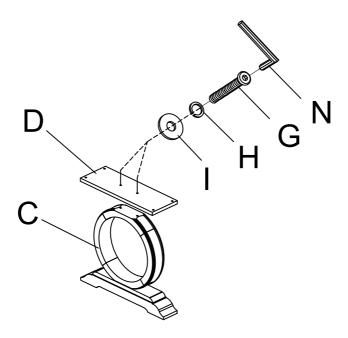


- Place the Table Top (A) upside down on the smooth carpeted surface.
 - Attach the Mounting Plate (D) to the Table Top (A) using Bolt (J), Lock Washer (L) and Flat Washer (M) with the Allen Wrench (N).
 - Attach the Center Stretcher (E) to the Table Top (A) using Bolt (K), Lock Washer (L) and Flat (ii) Washer (M) with the Allen Wrench (N).
 - (iii) Attach the Center Cross Bar (F) to the Post (C) using Bolt (G), Lock Washer (H) and Flat Washer (I) with the Allen Wrench (N).

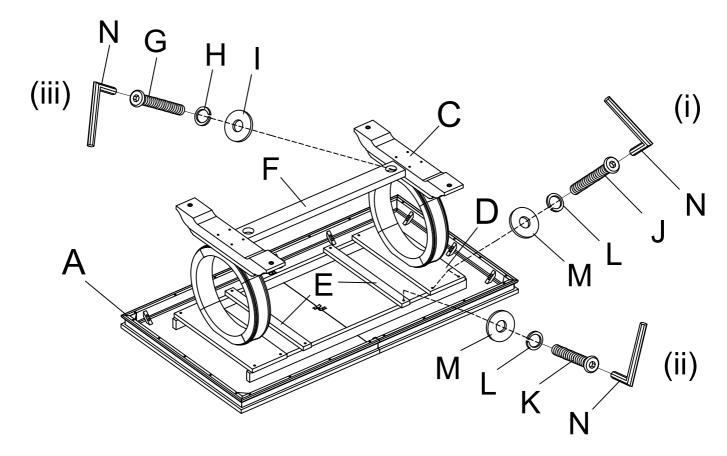


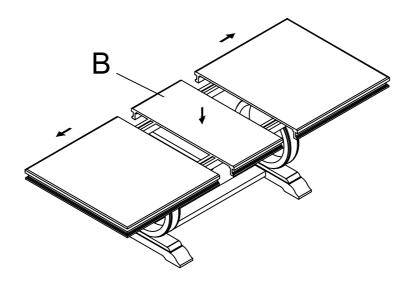

Close the Table Top (A).

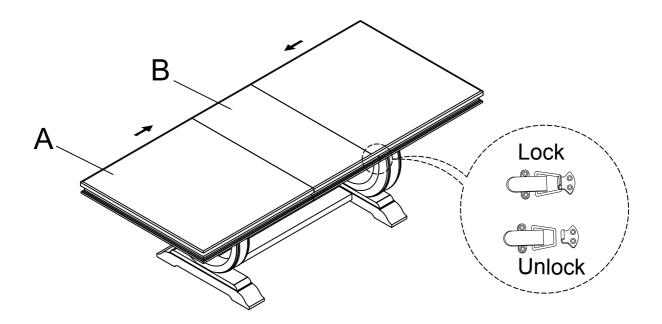

Adjust the spike to balance table.

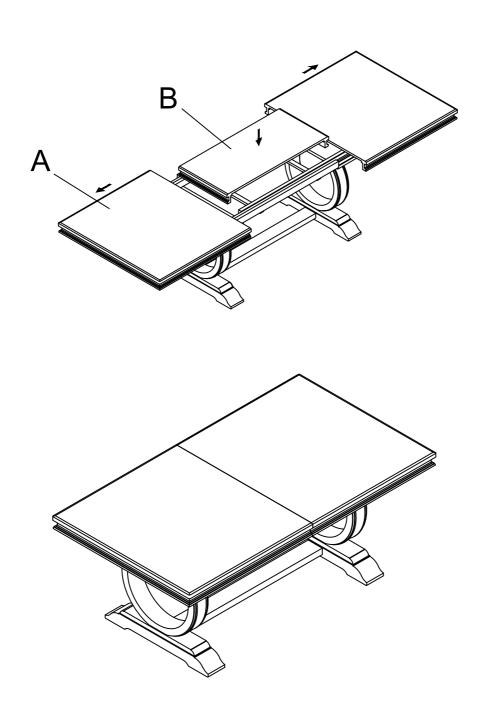

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.