

ASSEMBLY INSTRUCTIONS

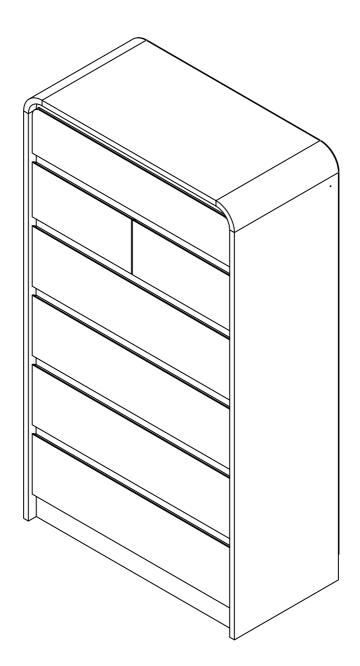



PACKAGE INCLUDE

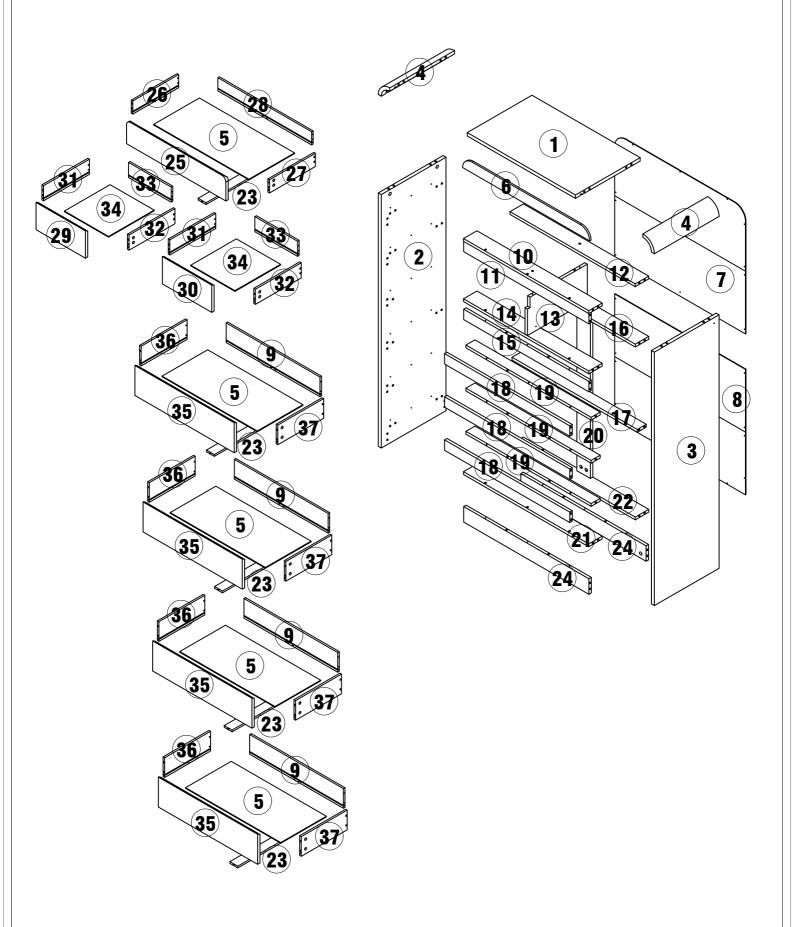


PACKAGE INCLUDE


CODE	DESRIPTION	QTY
1	Top Panel	1
2	Left Side Panel	1
3	Right Side Panel	1
4	Bent Wood Board	2
5	Upper And Lower Drawer Bottom Panel	5
6	Upper Front Strip	1
7	Upper Back Panel	1
8	Lower Back Panel	1
9	Lower Drawer Back Panel	4
10	Upper Front Ruggedized Strip	1
11	Upper Front Strip	1
12	Upper Back Ruggedized Strip	1
13	Middle Vertical Panel	1
14	Middle Front Ruggedized Strip	1
15	Middle Vertical Strip	1
16	Middle Back Ruggedized Strip	1
17	Lower Back Ruggedized Strip	1
18	Lower Front Vertical Panel	3
19	Middle Ruggedized Strip	3

PACKAGE INCLUDE


CODE	DESRIPTION	QTY
20	Back Vertical Panel	1
21	Front Bottom Panel	1
22	Rear Bottom Panel	1
23	Drawer Bottom Strip	5
24	Front And Back Footboard	2
25	Upper Drawer Top Panel	1
26	Upper Drawer Left Side Panel	1
27	Upper Drawer Right Side Panel	1
28	Upper Drawer Back Panel	1
29	Middle Left Drawer Top Panel	1
30	Middle Right Drawer Top Panel	1
31	Middle Drawer Left Side Panel	2
32	Middle Drawer Right Side Panel	2
33	Middle Drawer Back Panel	2
34	Middle Drawer Bottom Panel	2
35	Lower Drawer Top Panel	4
36	Lower Drawer Left Side Panel	4
37	Lower Drawer Right Side Panel	4

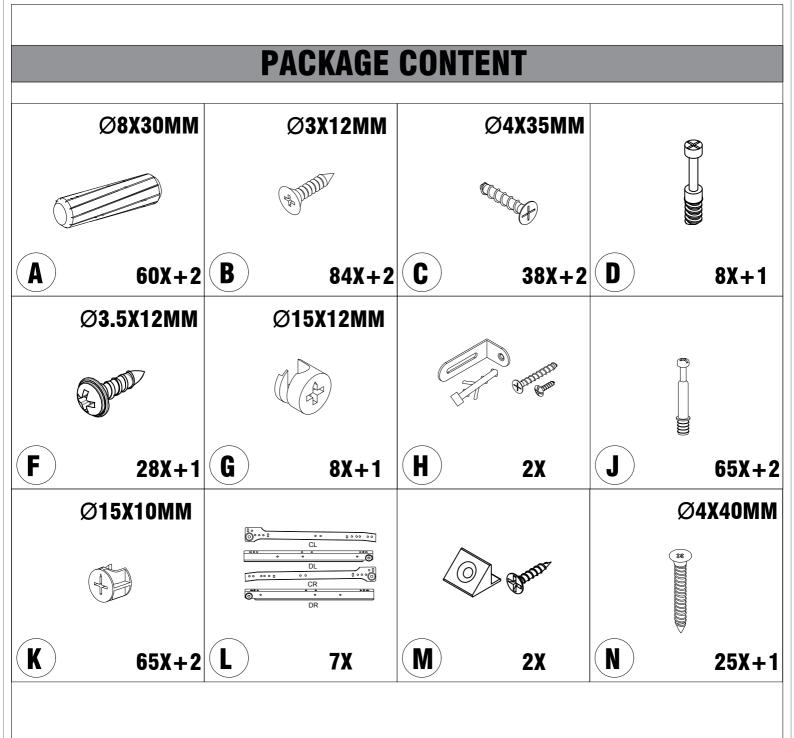


How to use the cam lock system

 


1.Screw cam boit into panel

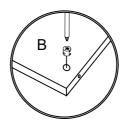


2.Push cam into panel - arrow feature on cam top points to panel edge

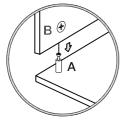

3.Aligu cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

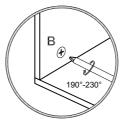


4.Rotate cam(s) clockwise 190°-230° to lock panels together

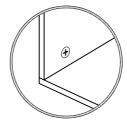


5.Panels should be tight against each other and connection should be rigid


Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

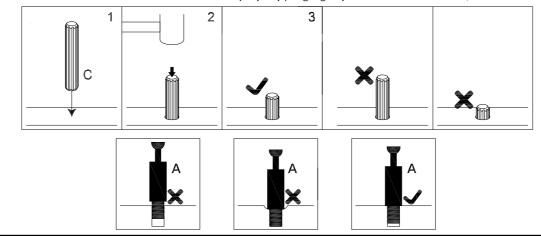


WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- · Do not use without installing the tip restraint.
- · Unit can tip over causing severe injury or death.
- · Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

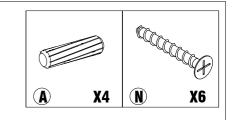


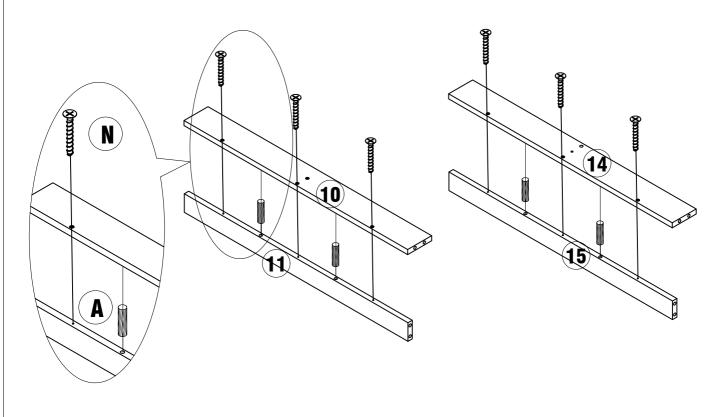


 


 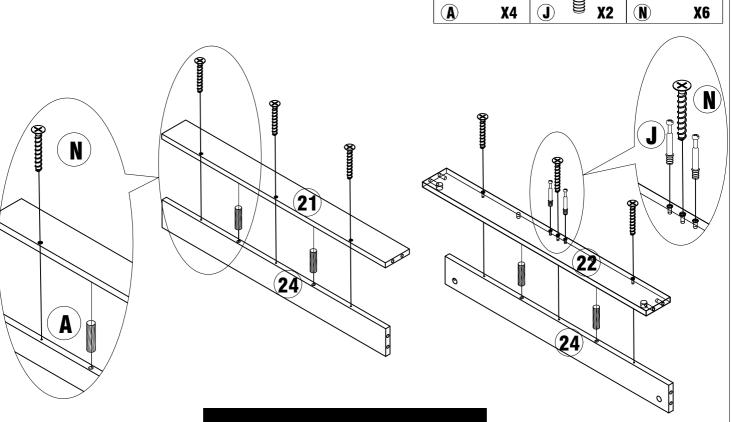


 


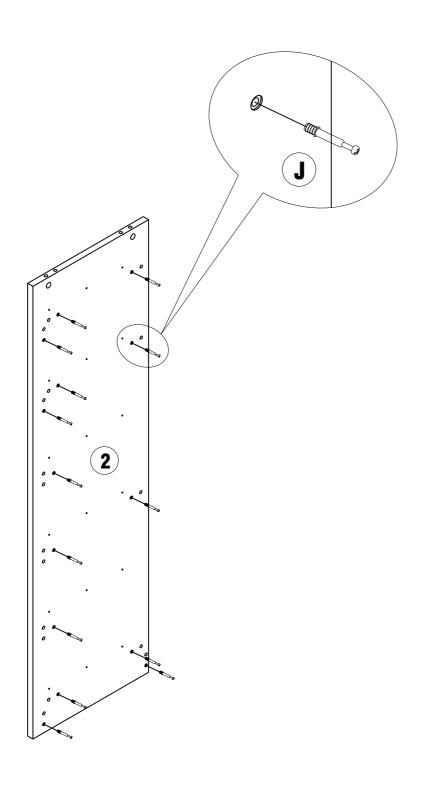


 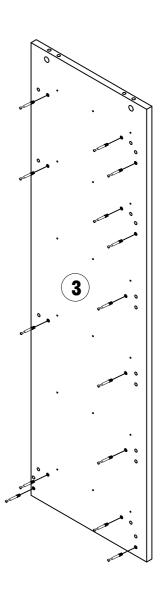


 


 





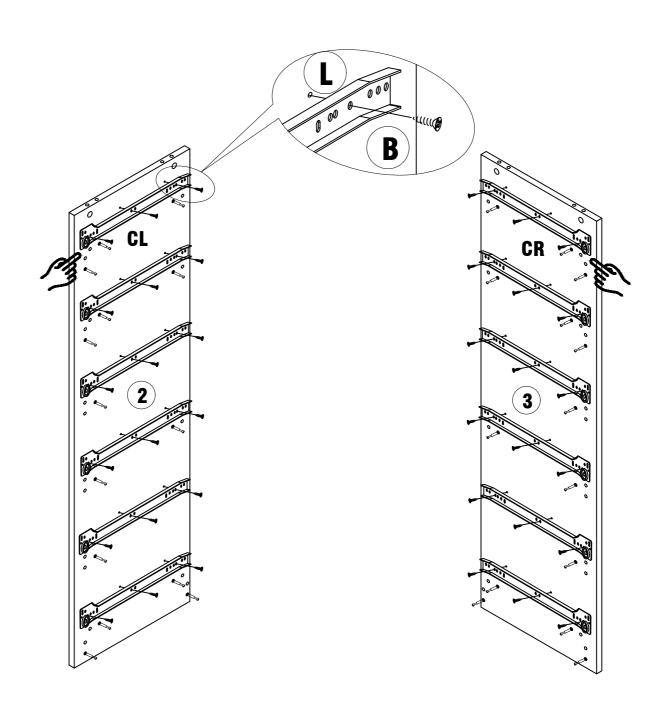







 


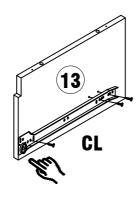




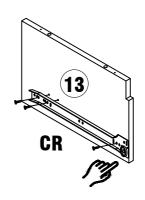


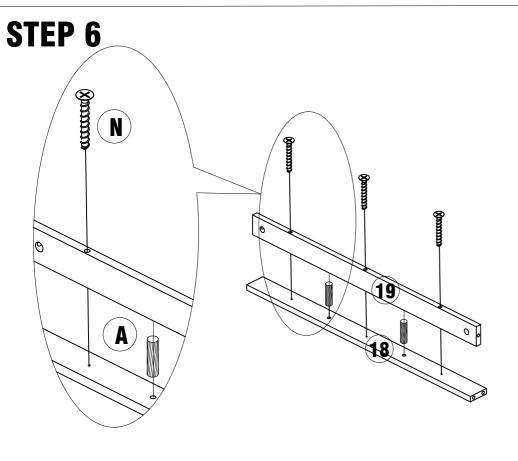




X3

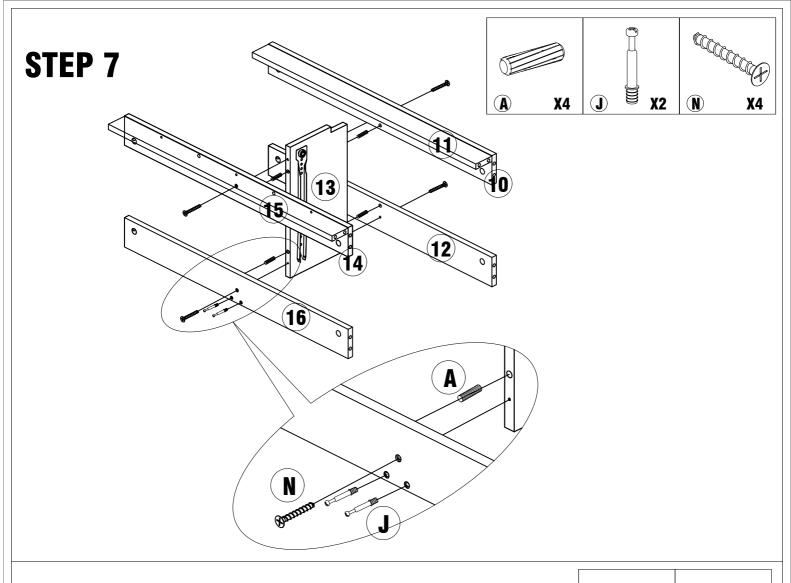


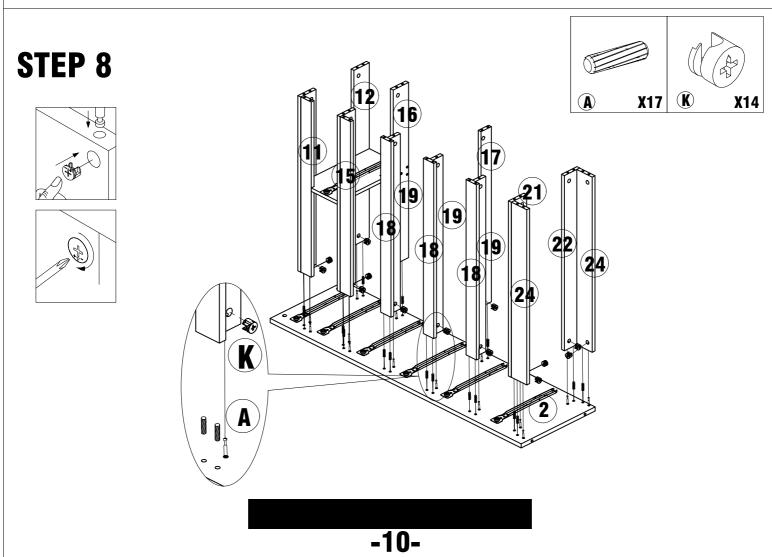


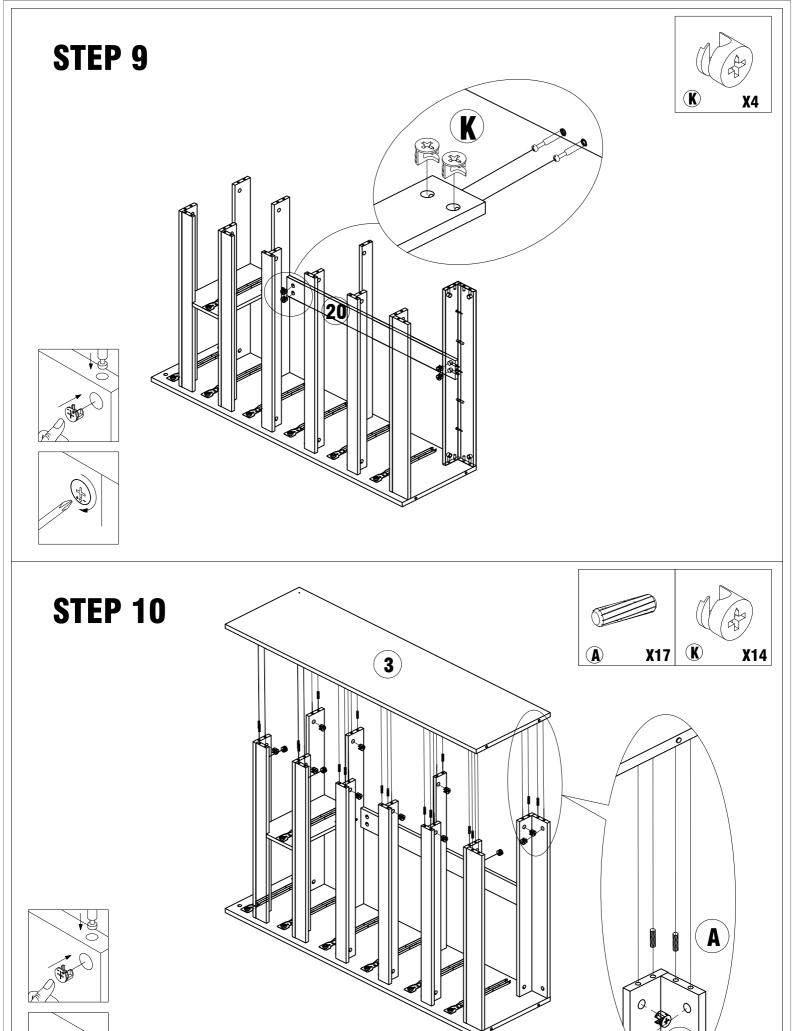



-11-



 

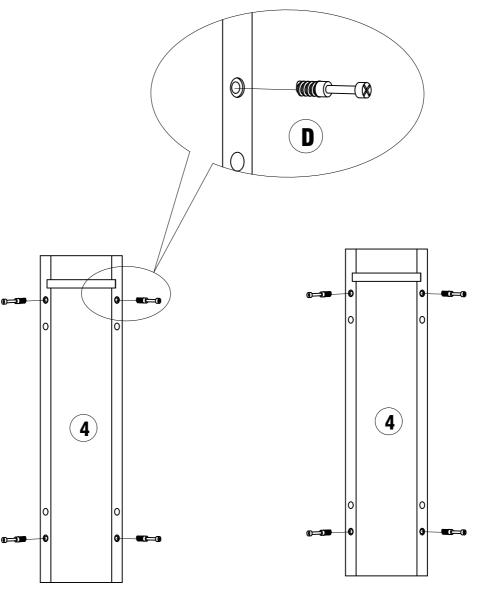

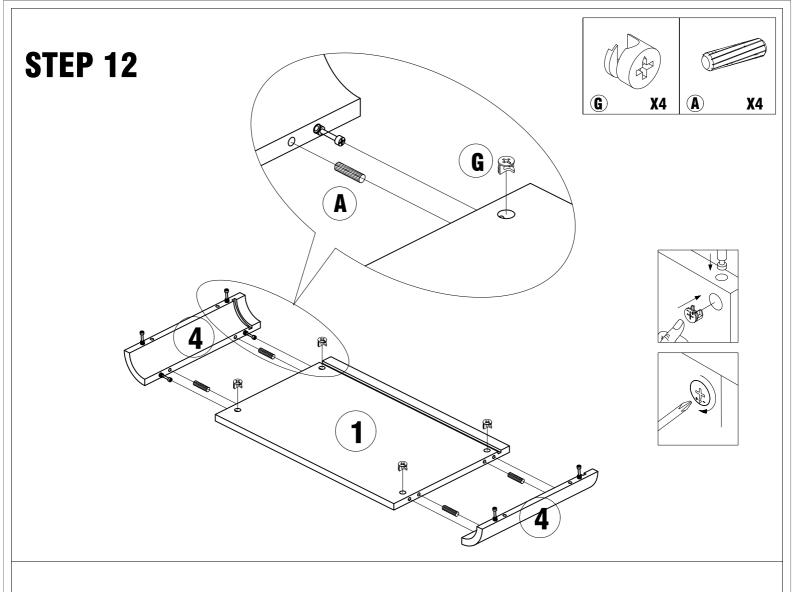


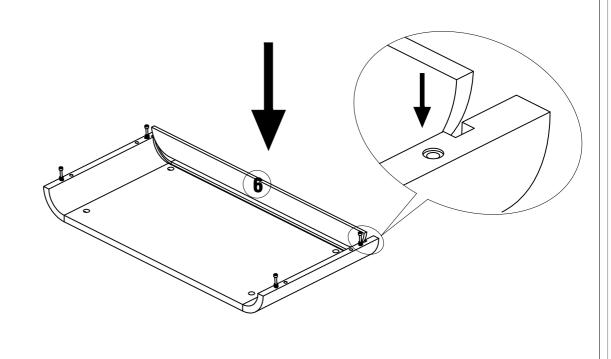



STEP 14 X2 M **STEP 15 G X4** A **X4**


-14-




 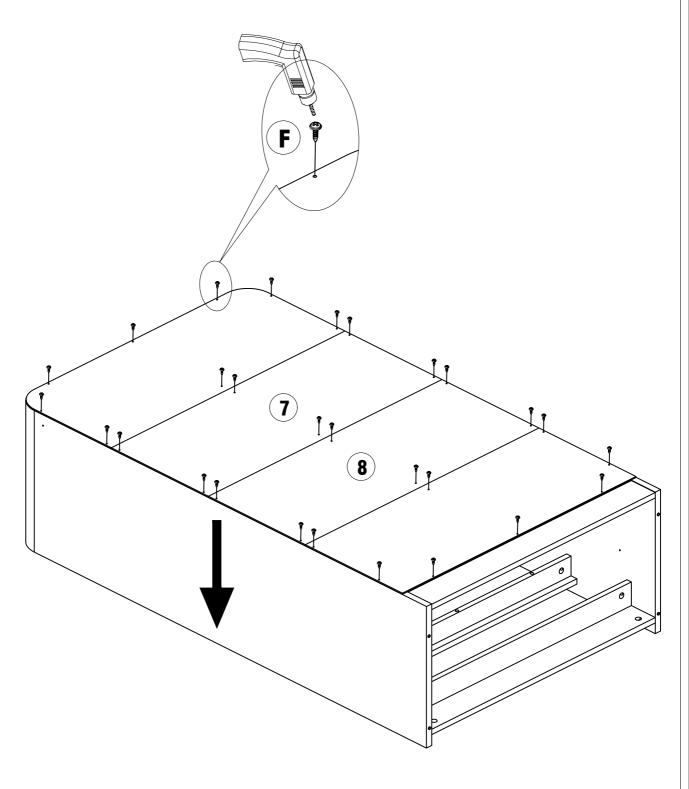


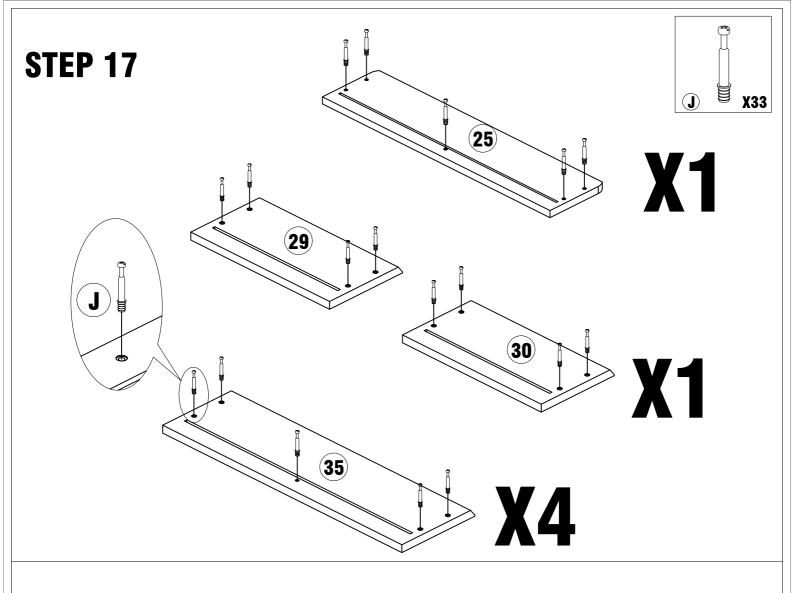

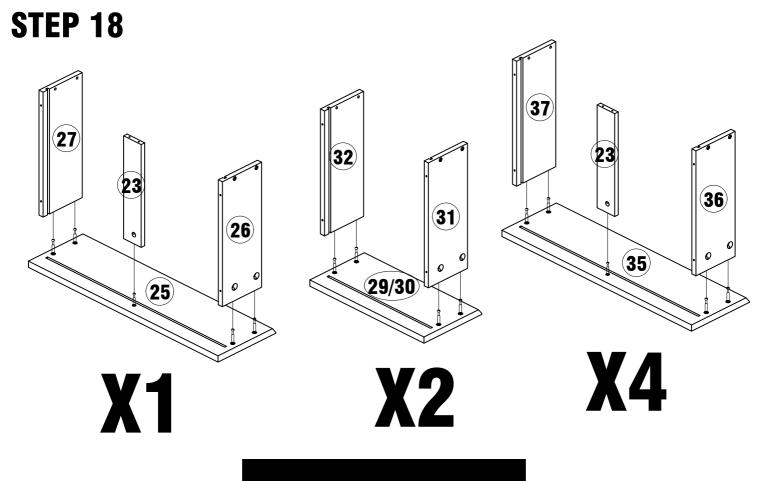


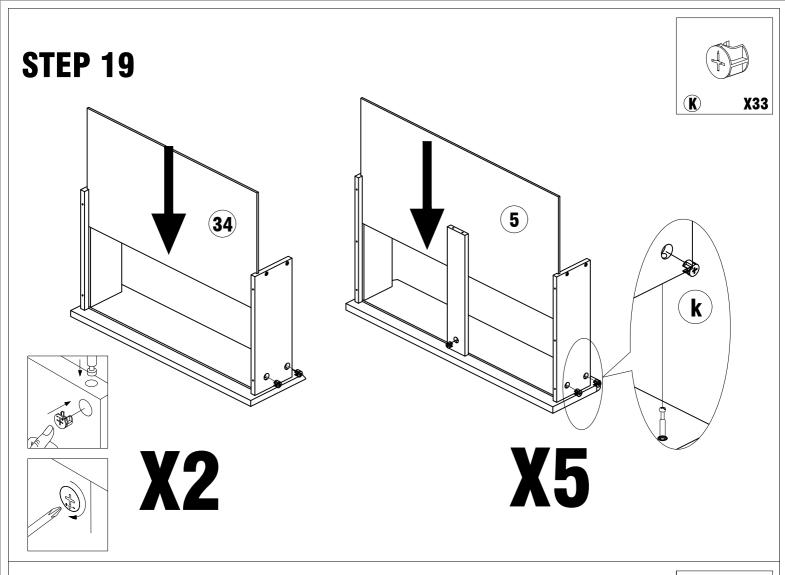


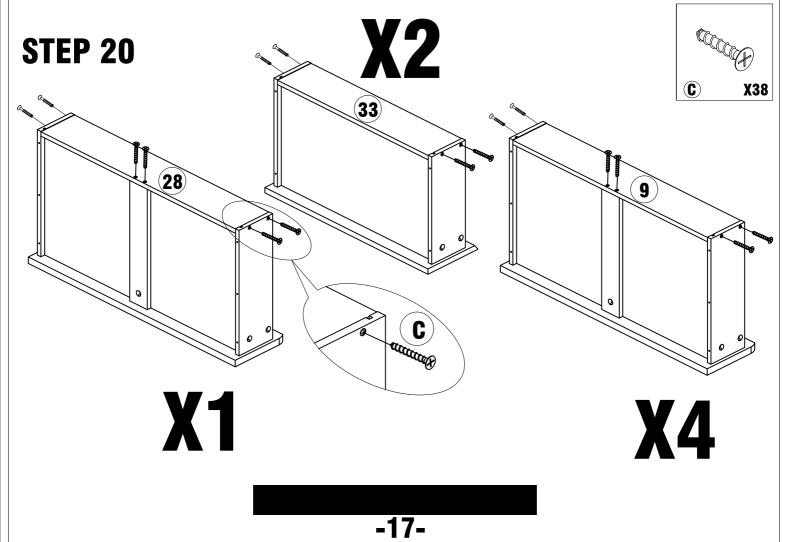





B

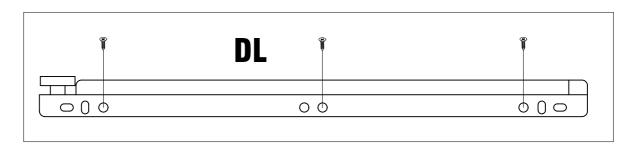


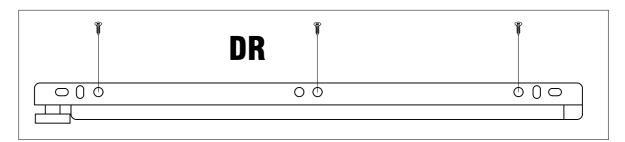

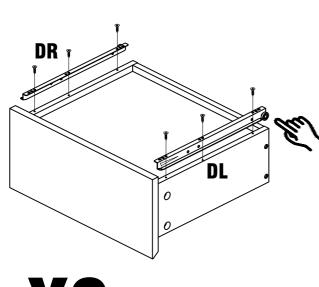



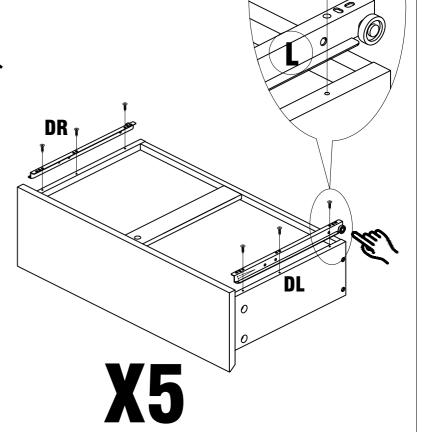

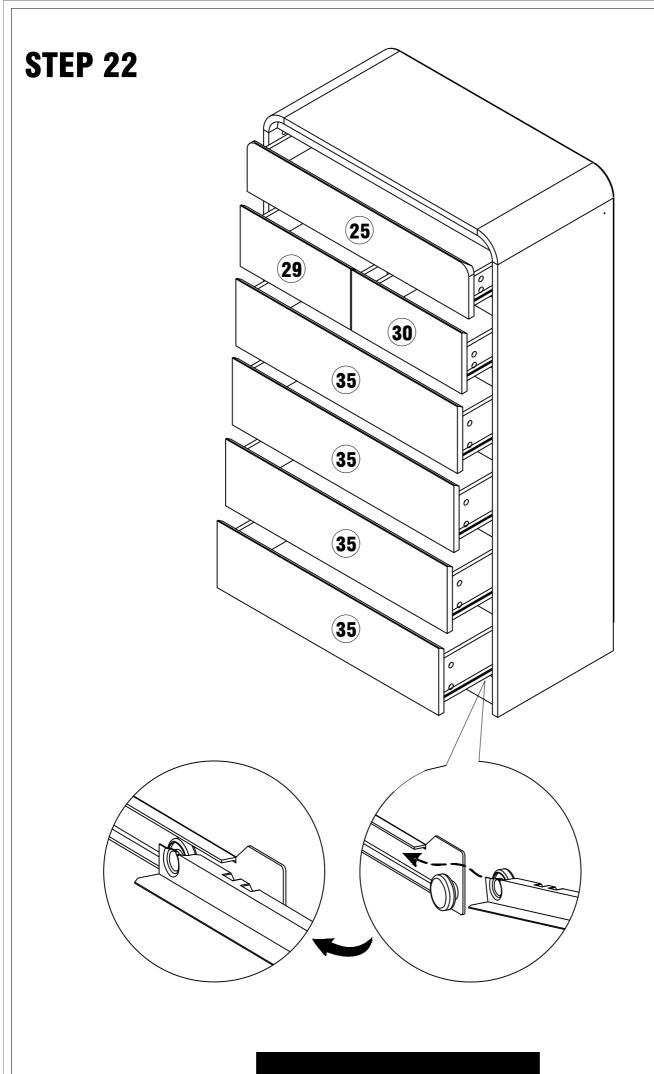



WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:ALWAYS install anti-tip device

- provided.
- NEVER put a TV on this product.
 NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at
- Place heaviest items in the lowest

