 




INSTALLATION

Product Manual

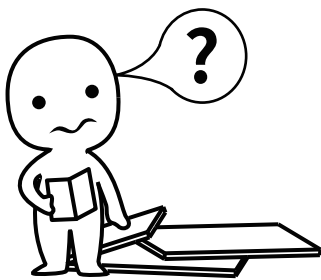


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

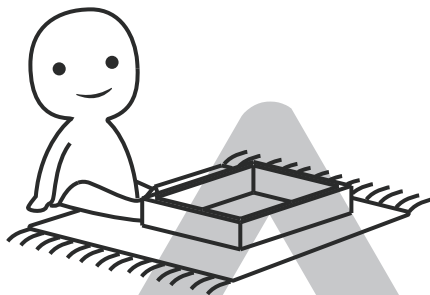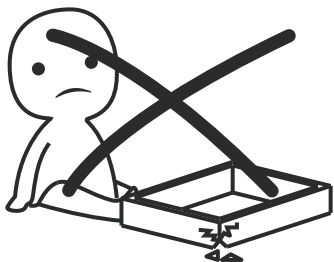



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

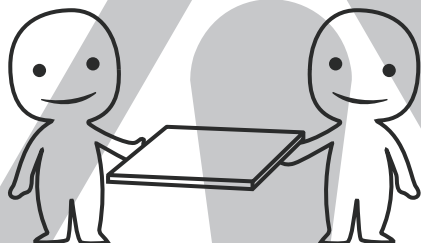

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

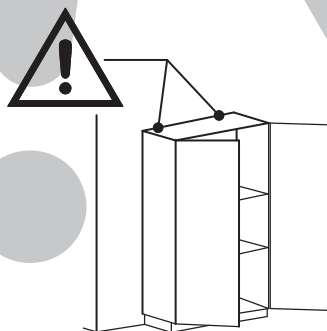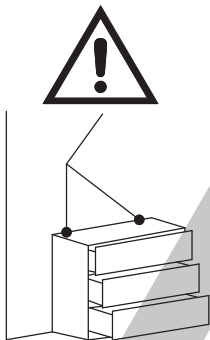

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

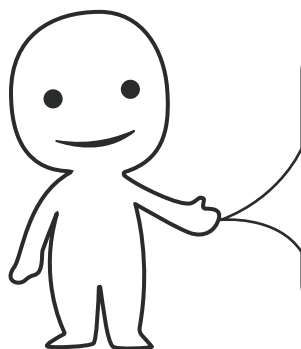


Please prepare the following tools

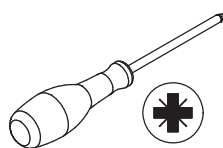 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 74

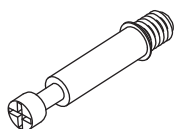


Ø 6 x 28 mm

B x 78




Ø 12 x 10 mm

 C x 72

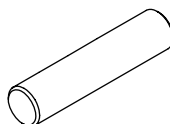

Ø 6 x 30 mm

 D x 24

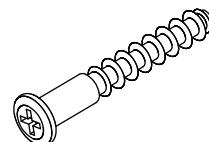

Ø 5 x 50 mm

E x 28



 
Ø 3.5 x 12 mm

F x 4




M6 x 10 mm

G x 4

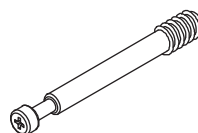


M6 x 40 mm

 H x 4

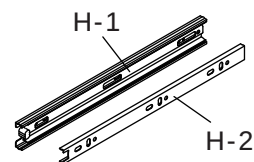


280 mm

 J x 6




K x 1

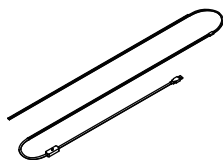 


L x 12



 M x 1

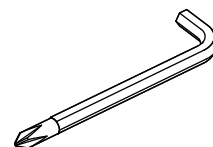

#4

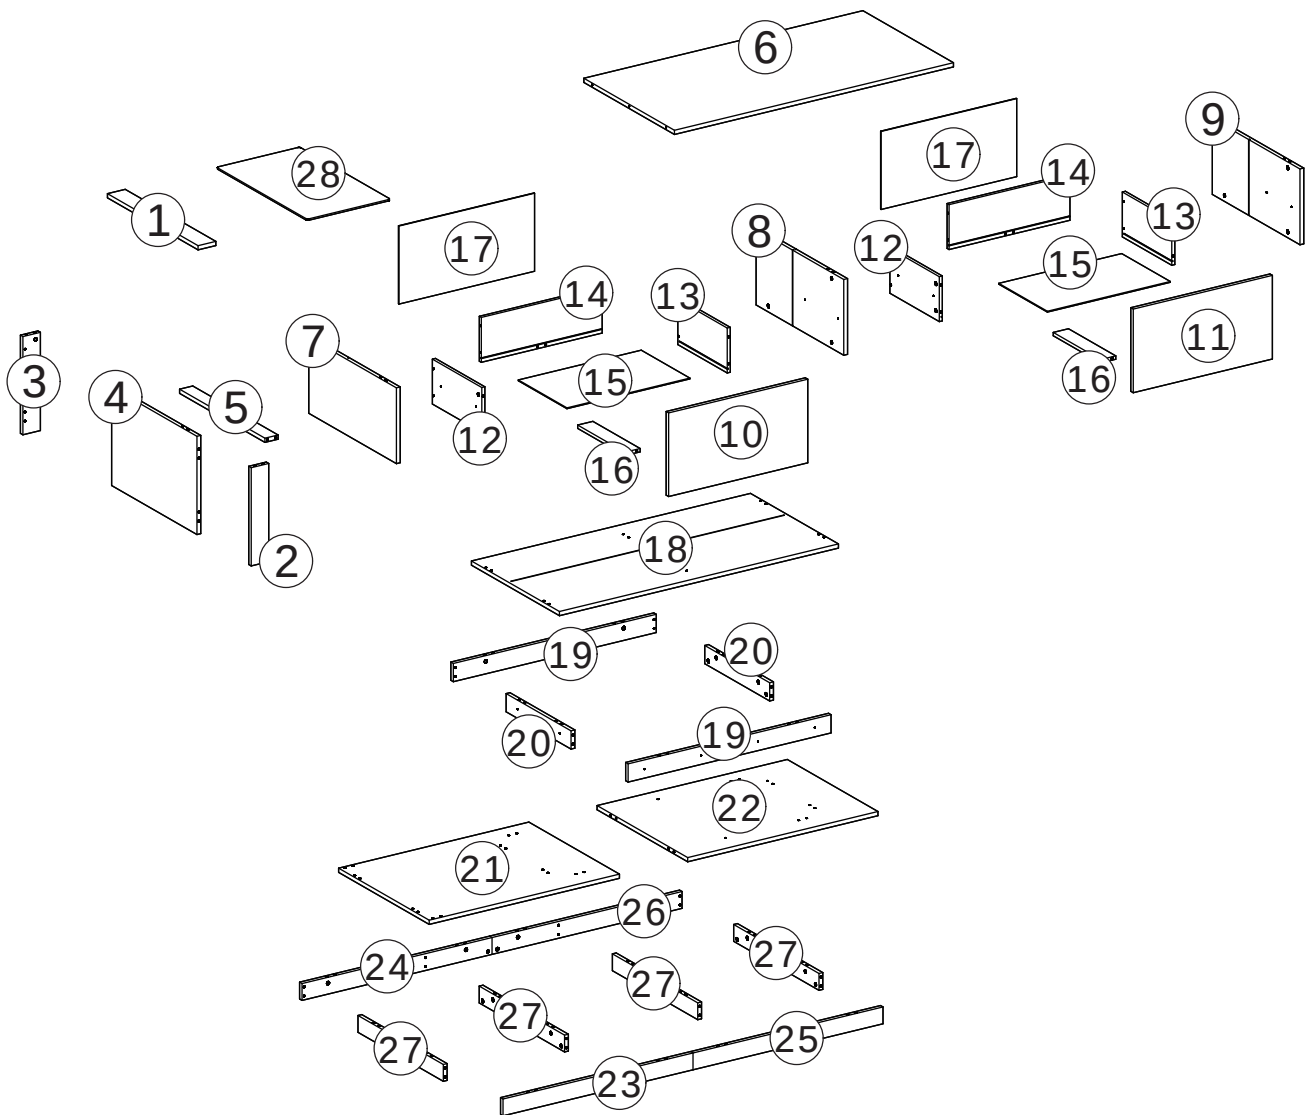 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

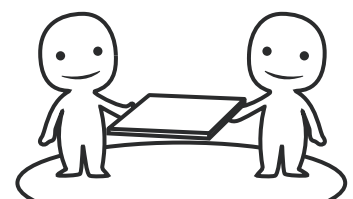


ASSEMBLED BY 2 ADULTS


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

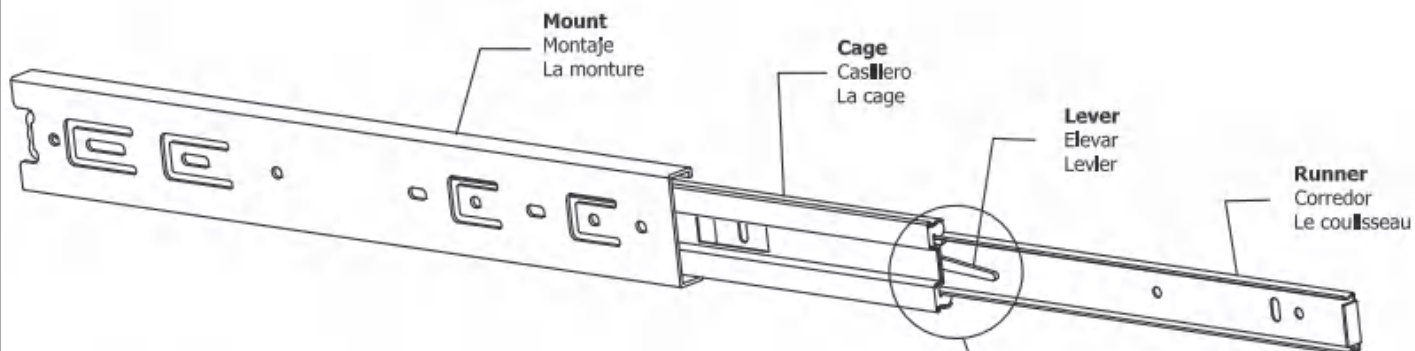

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

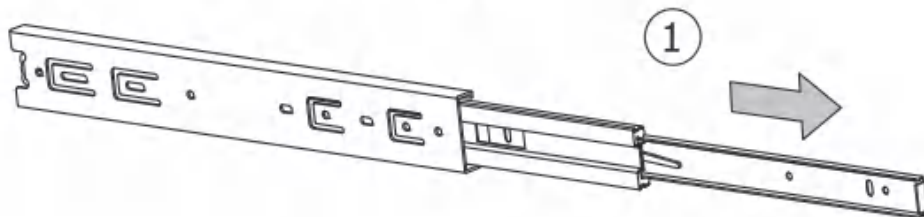

 STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

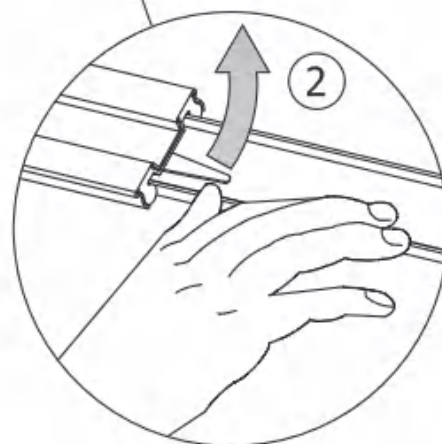

 STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

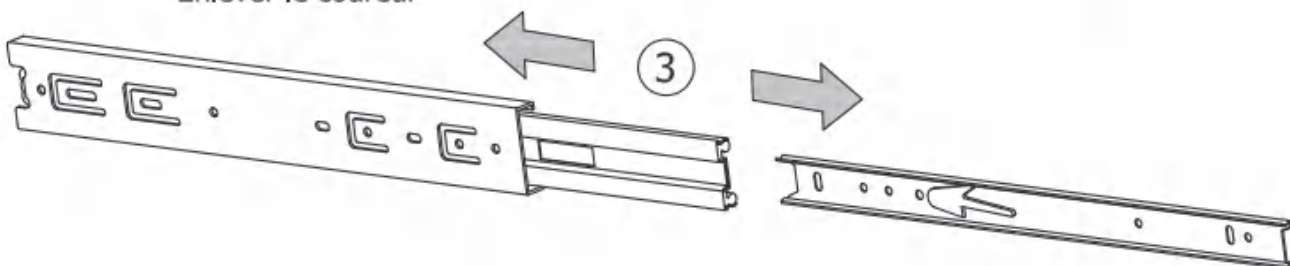


1

E x 4




Ø 3.5 x 12 mm





 
H x 2



280 mm

 

     Secure slide rail (H-1) to panels 7 and 9 using screw (E).

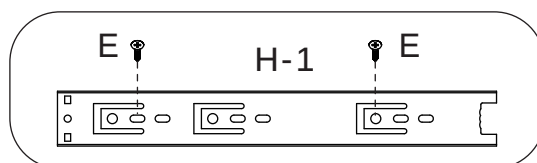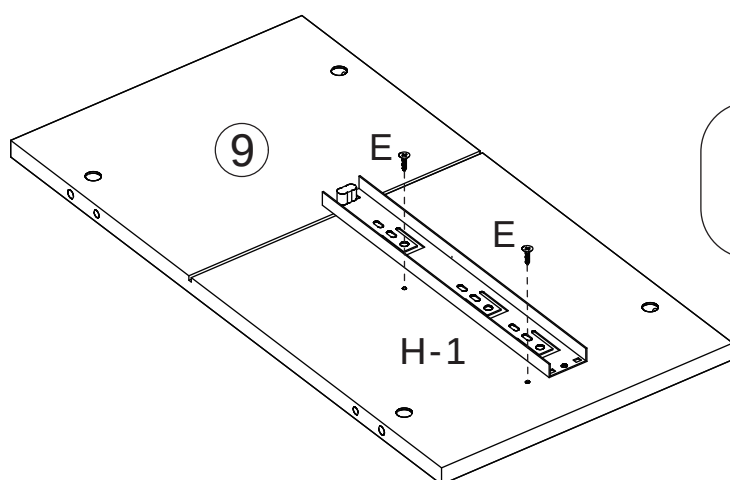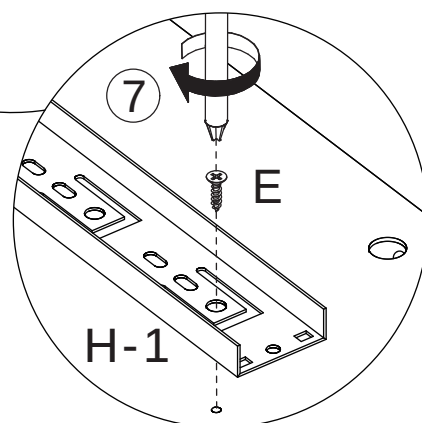
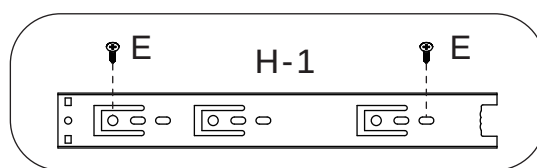
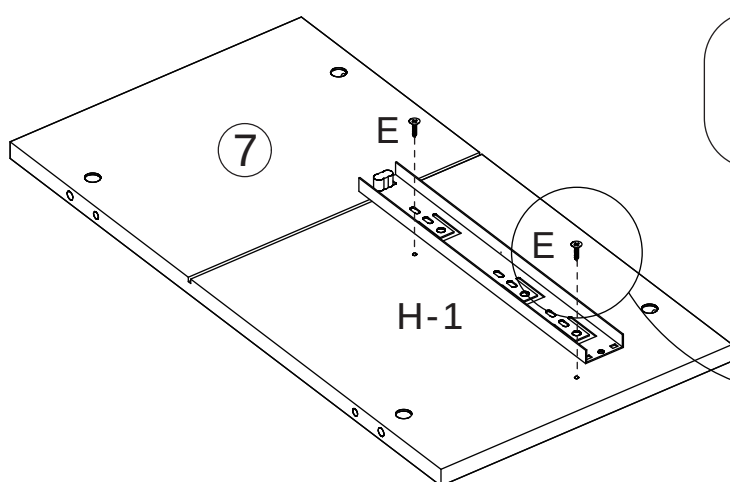


- Please note that the hole positions of the screws on these two slide rails are different.



2



   Secure slide rail (H-1) to **both sides of panel 8** using screw (E).

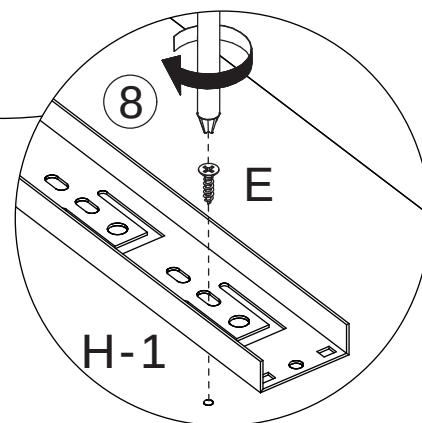
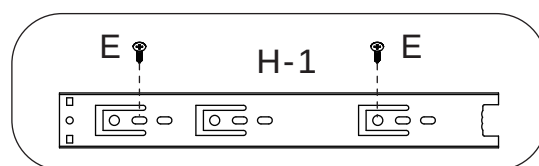
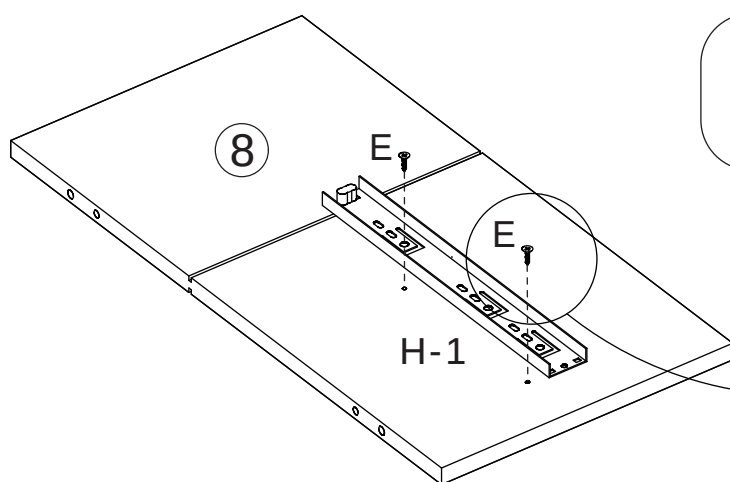


Flip to back

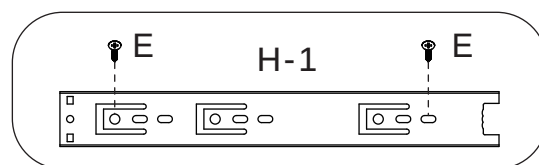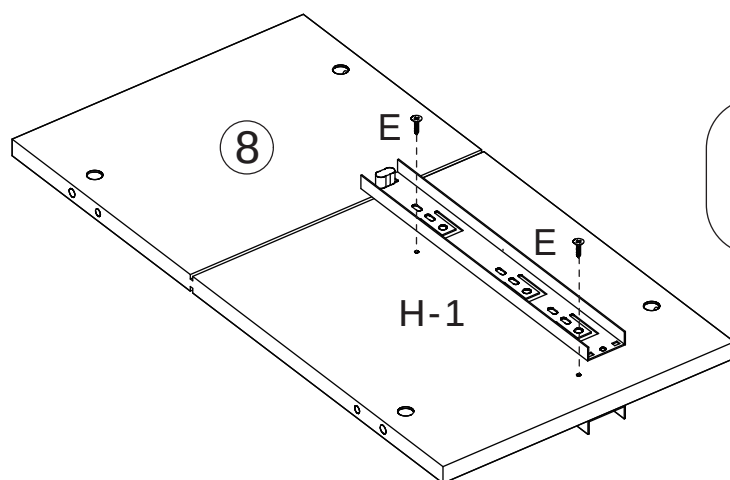  


- Please note that the hole positions of the screws on these two slide rails are different.

   3

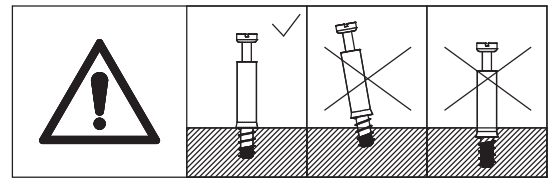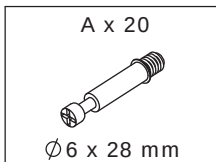

 Screw eccentric rod (A) to panels 6 and 18.
Flip panel 18 to other side, then screw eccentric rod (A).

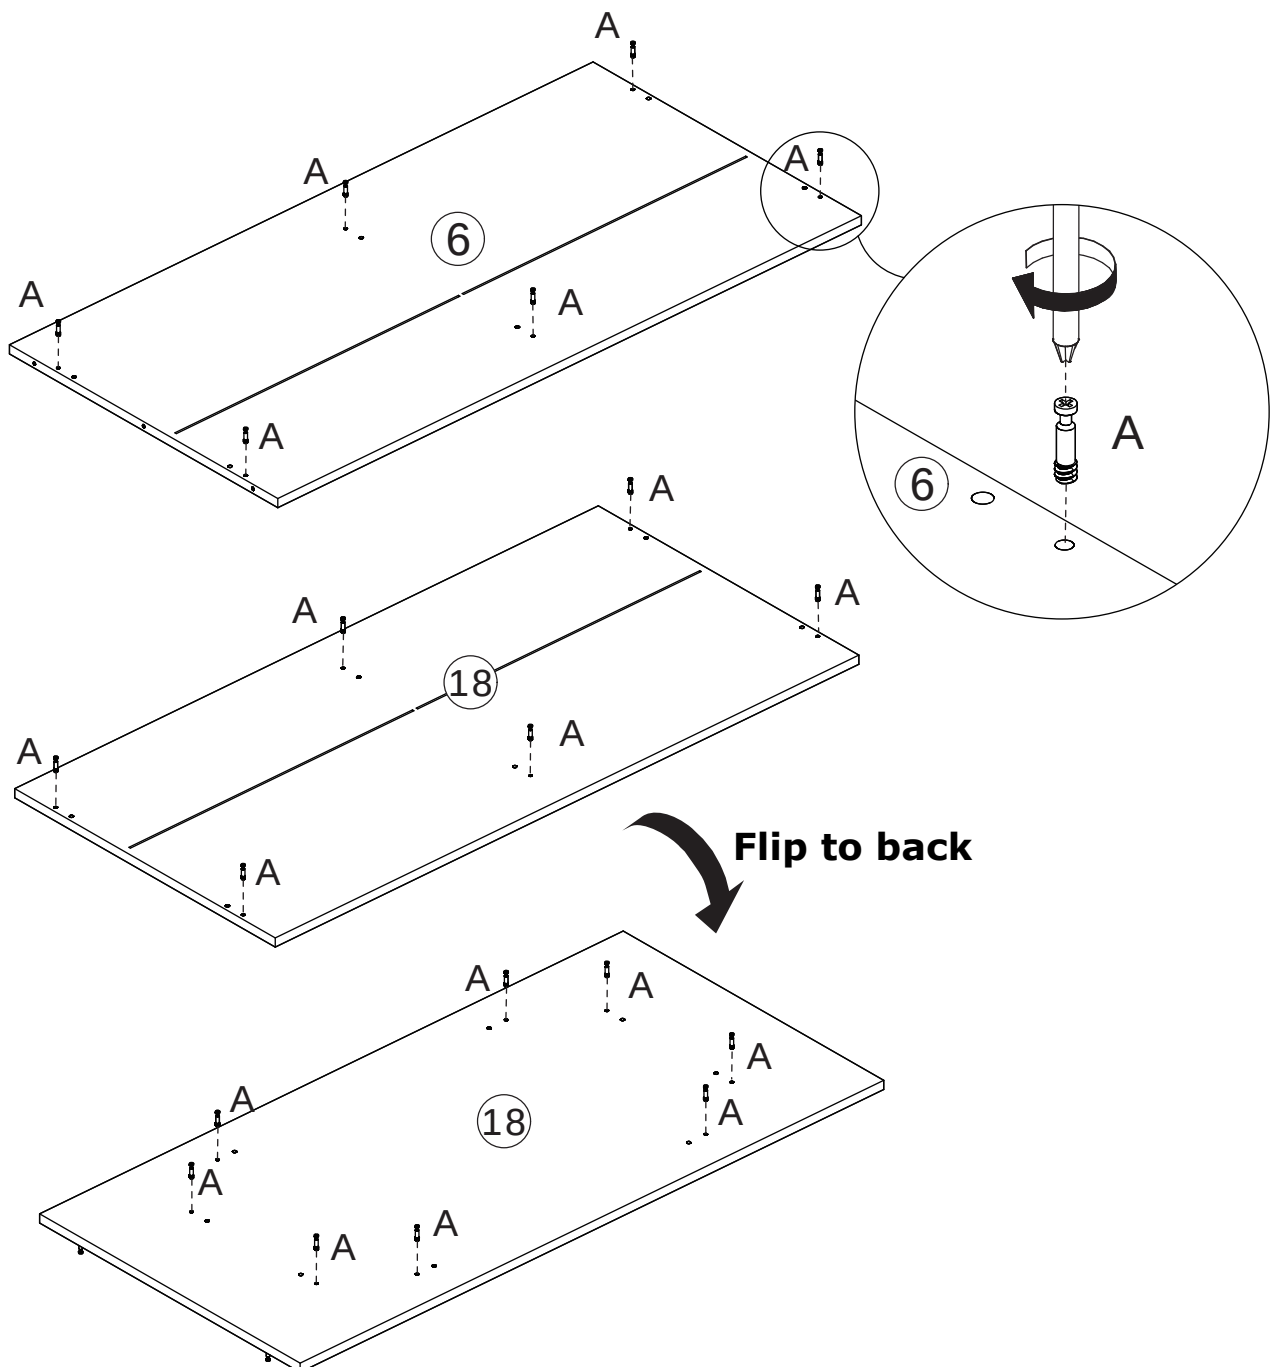


4

B x 6





Ø 12 x 10 mm

 
C x 6



Ø 6 x 30 mm

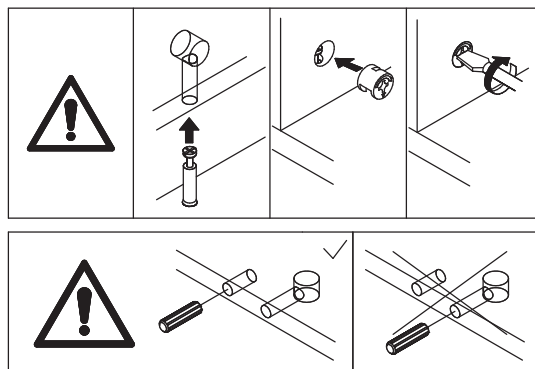  


 Connect panel 6 to panels 7, 8, and 9 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

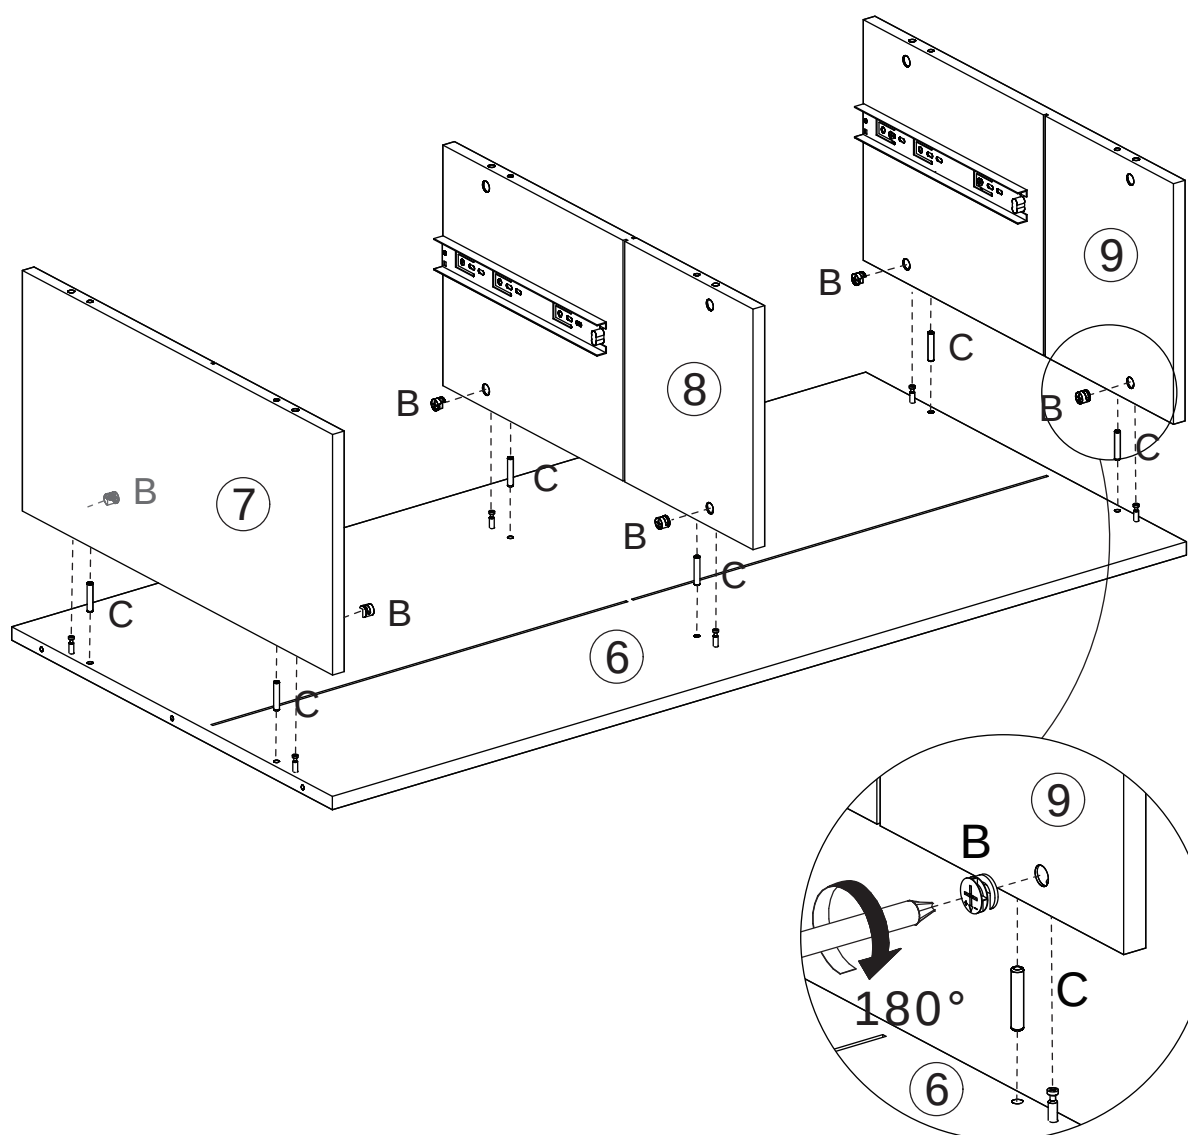

5

 Insert panel 17 into the cabinet along the arrow.

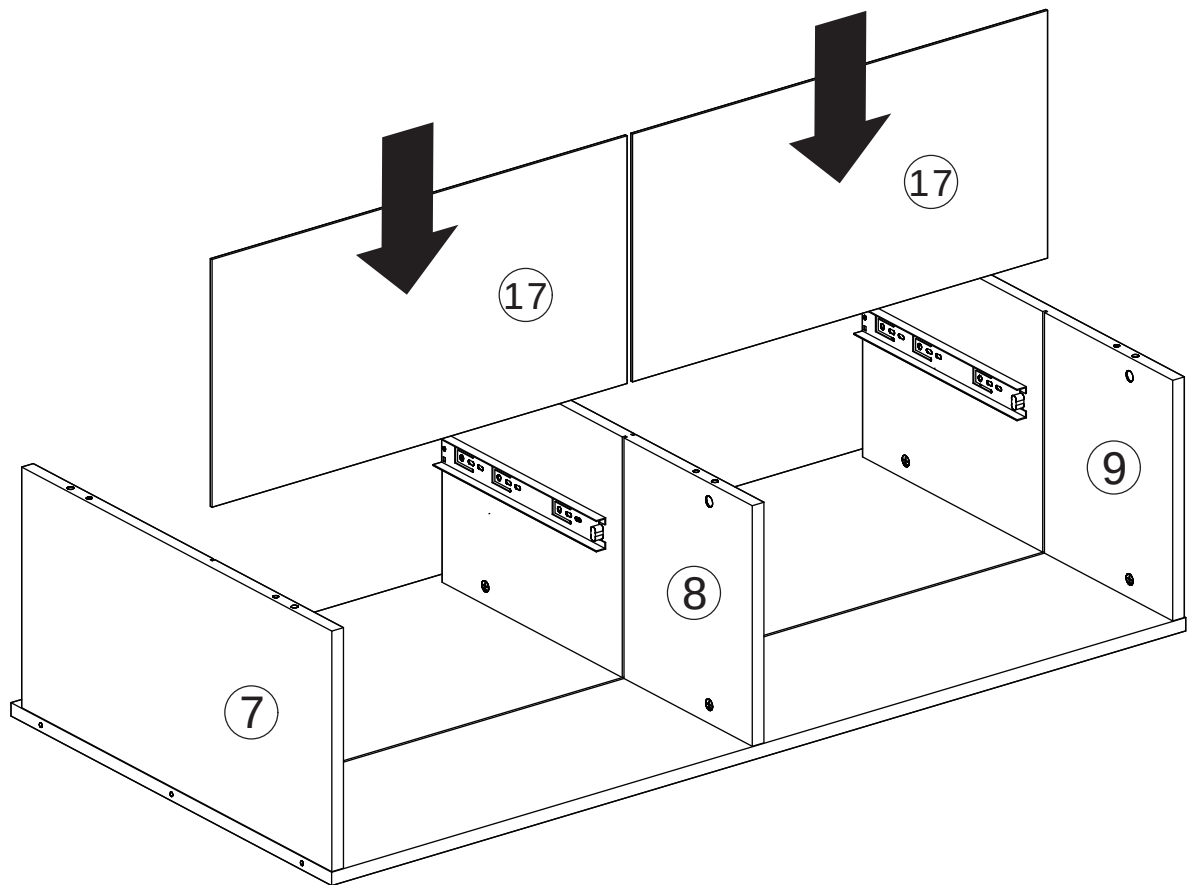


6

B x 6









Ø12 x 10 mm


 
C x 6






Ø6 x 30 mm

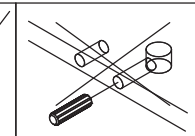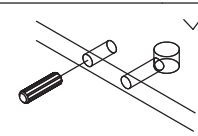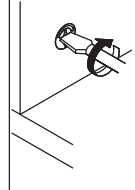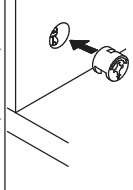      

  
Connect panel 18 to panels 7, 8, and 9 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

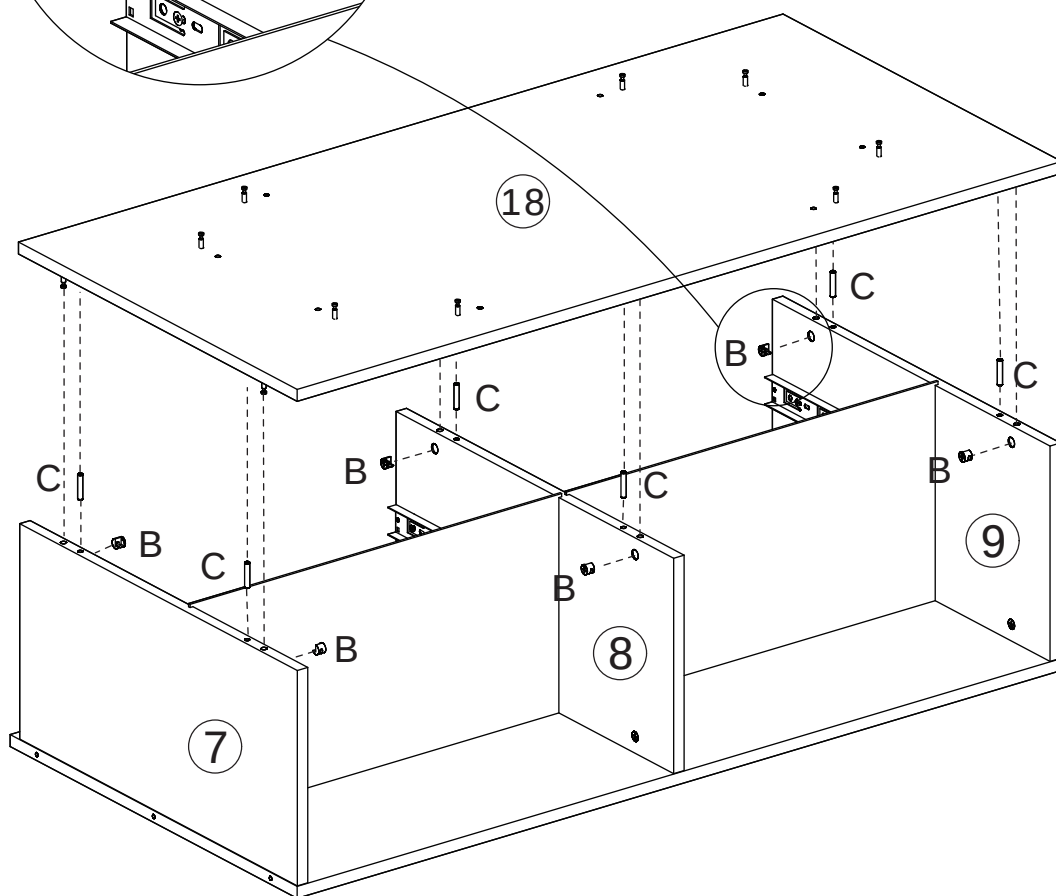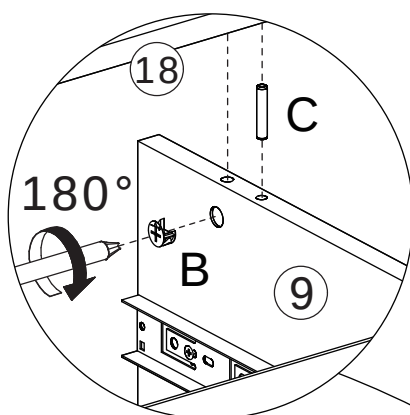

7

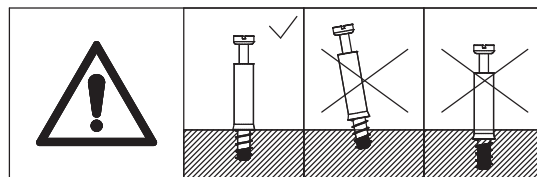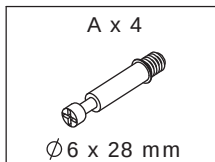   

Screw eccentric rod (A) to panel 19.







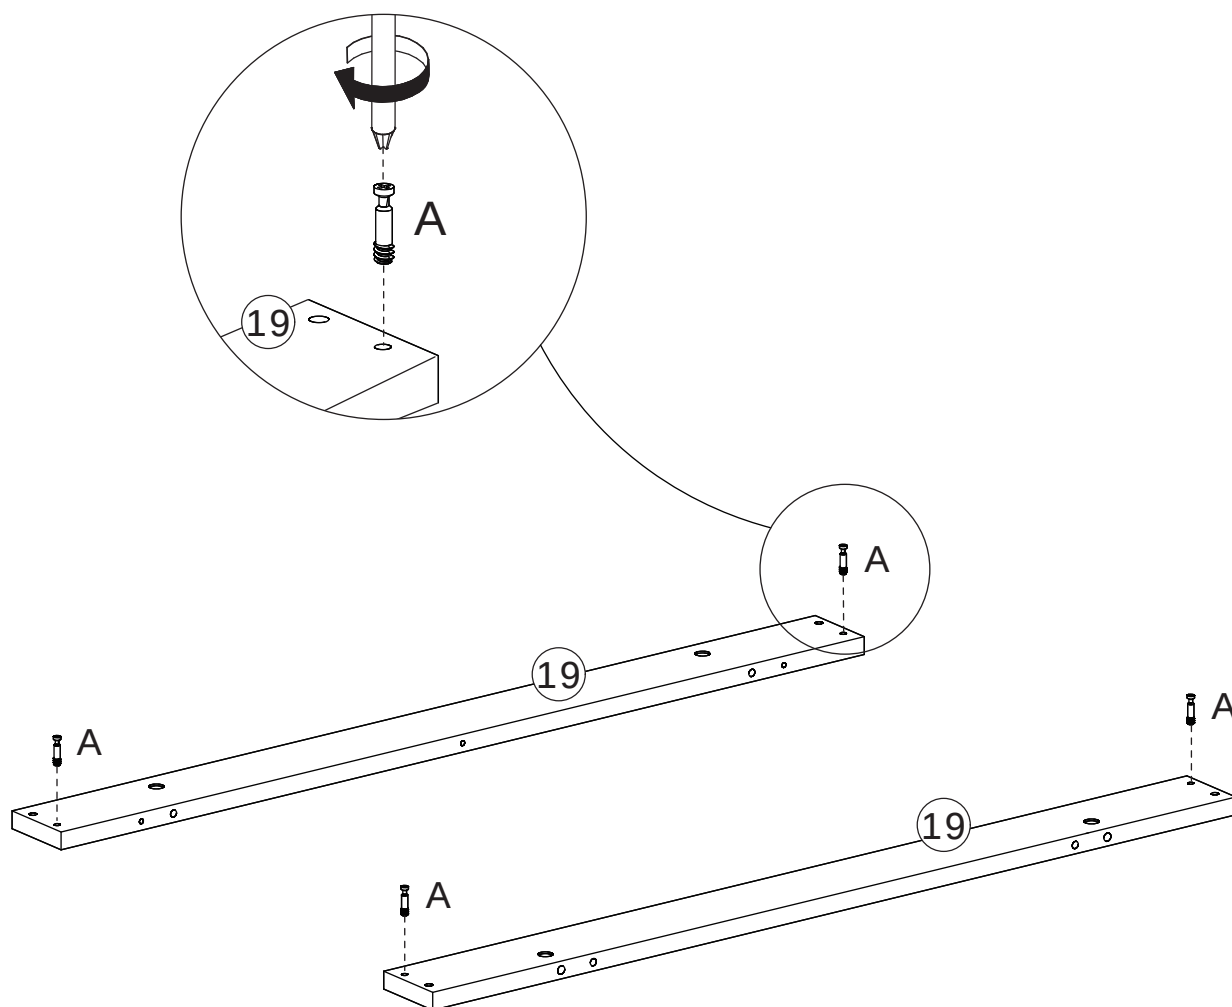 


8


B x 4

 $\varnothing 12 \times 10 \text{ mm}$

       C x 4

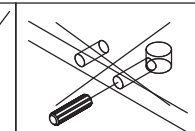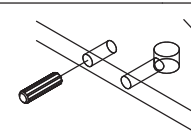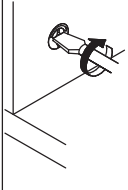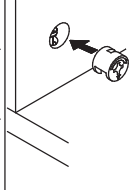 $\varnothing 6 \times 30 \text{ mm}$ 

 Connect panel 19 to panel 20 using wooden dowel (C),
then tighten by turning eccentric wheel (B) clockwise.

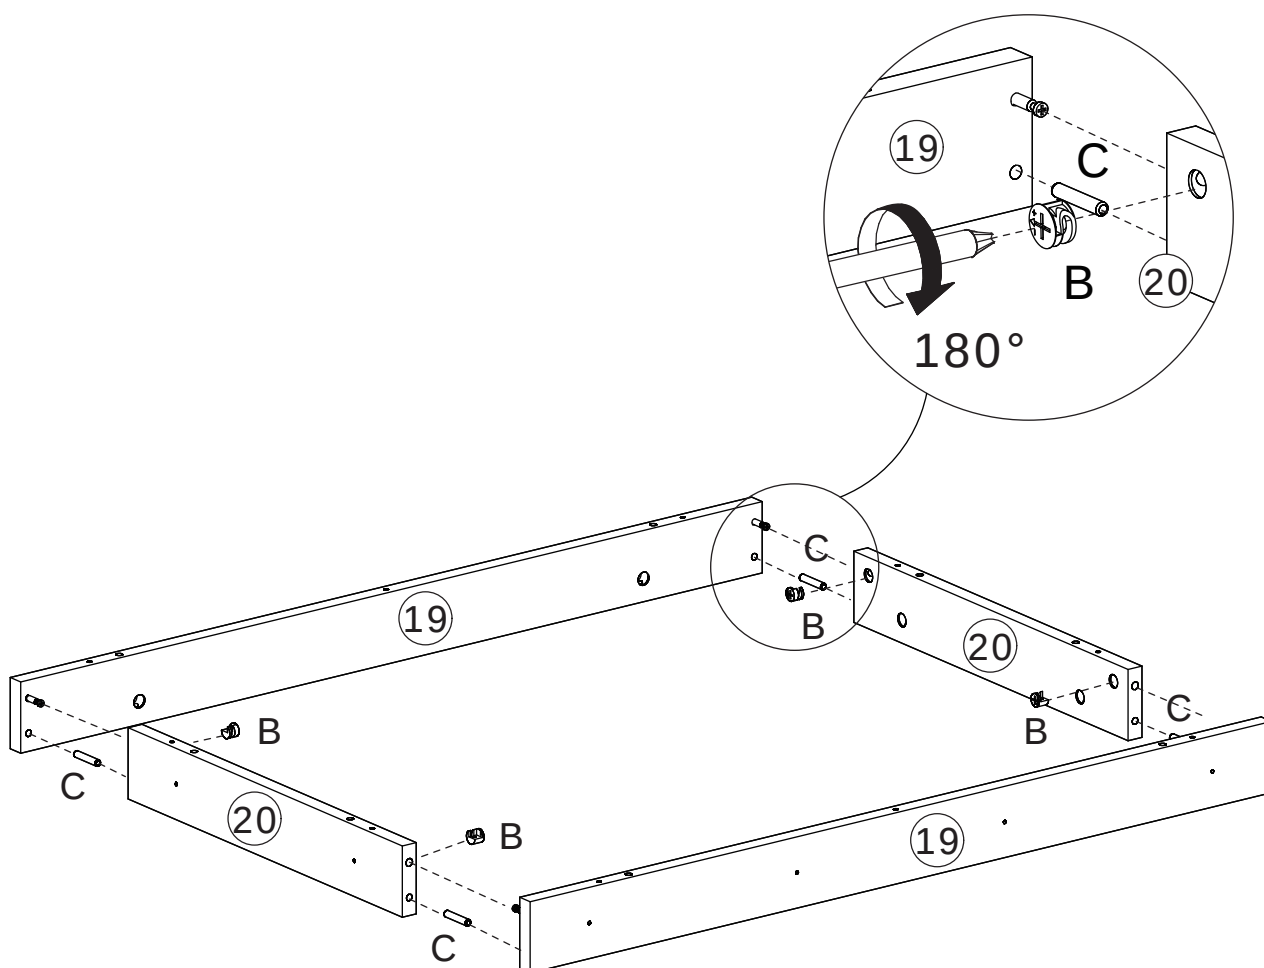


9

B x 8









Ø 12 x 10 mm

 
C x 8



Ø 6 x 30 mm

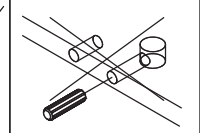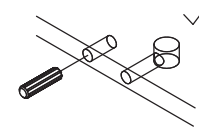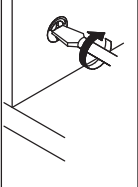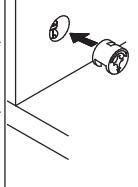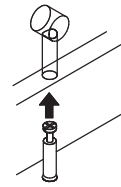      

 Connect panel 18 to panels 19 and 20 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

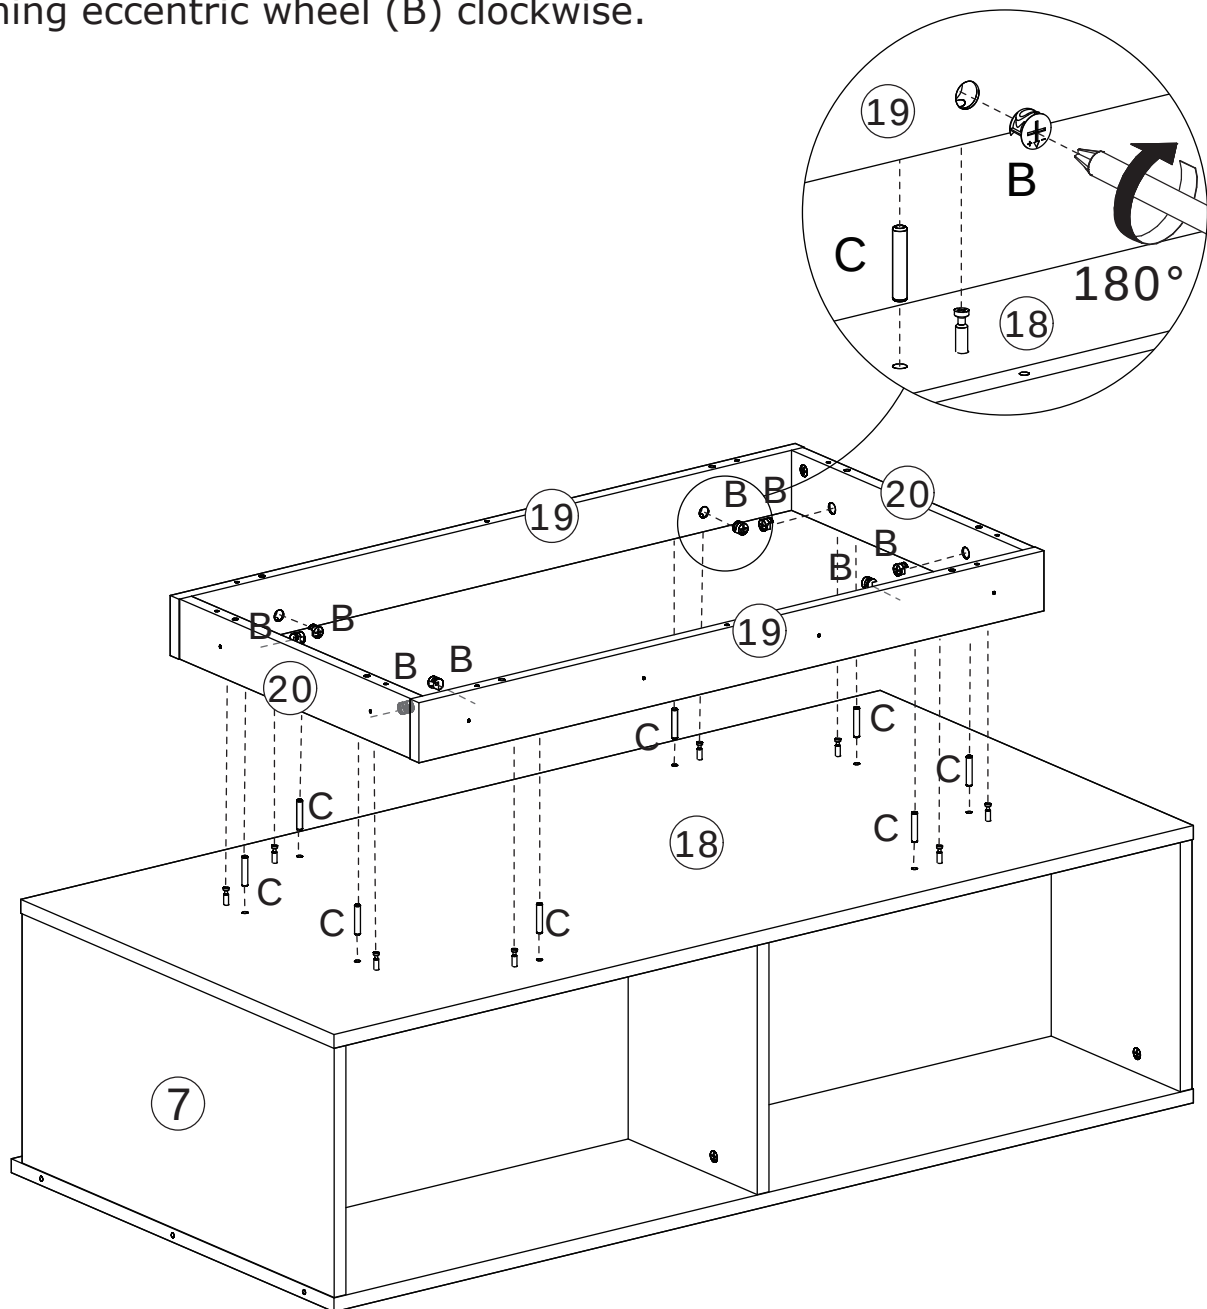


10

E x 12




Ø 3.5 x 12 mm

 
K x 1




L x 12


 


 Secure light strip (K) to panels 19 and 20 using buckle (L) and screw (E). Please note the power connection direction of the light strip.



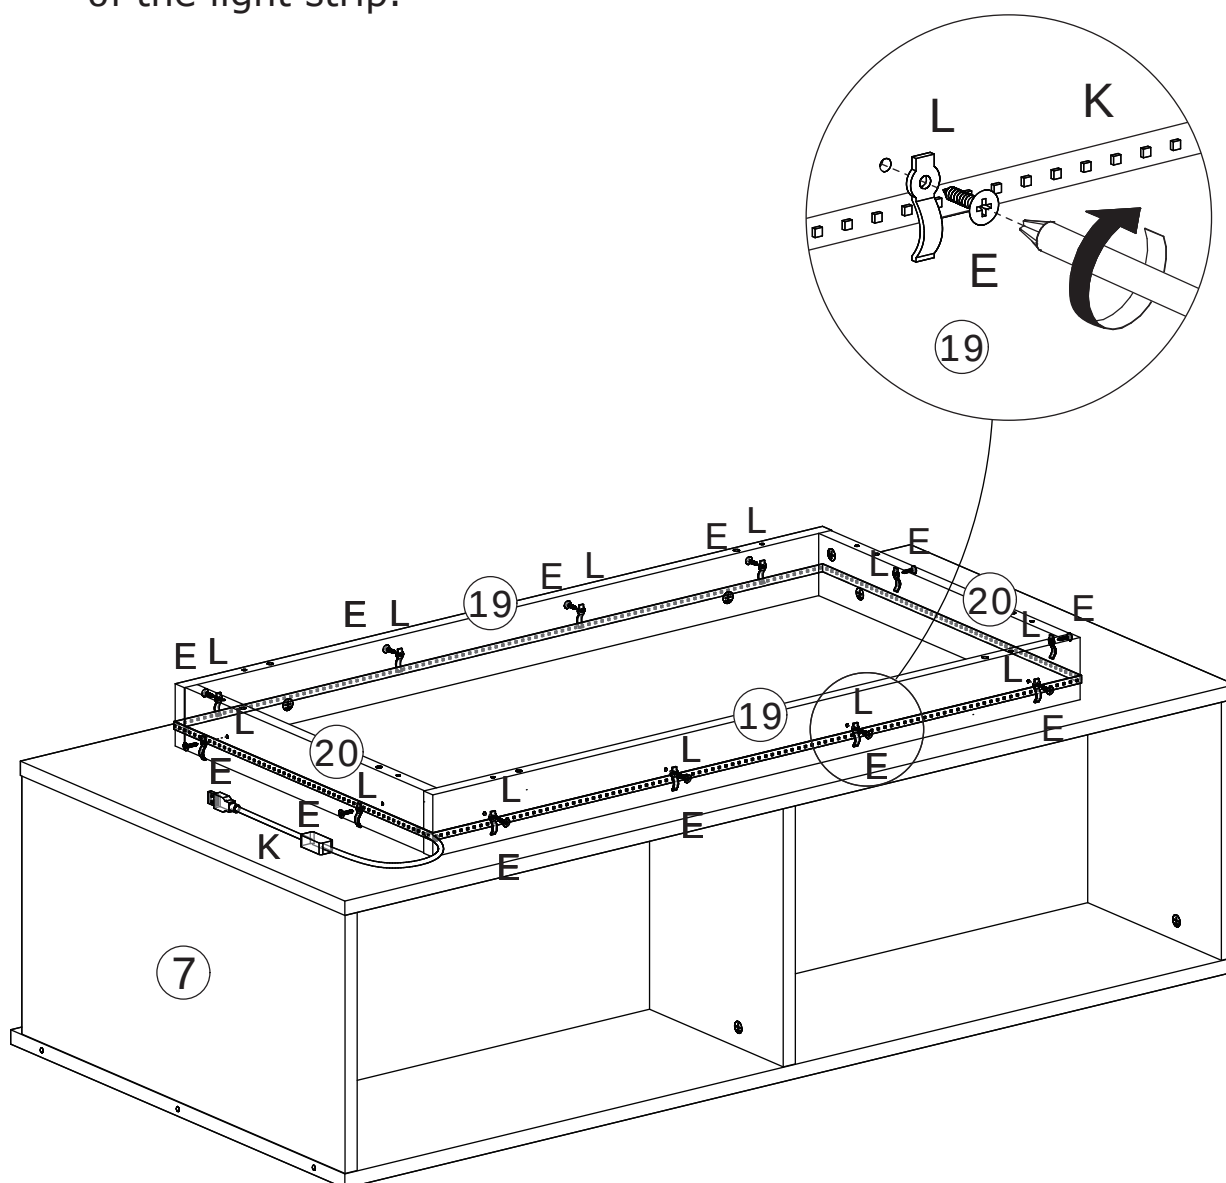


11

 A x 10

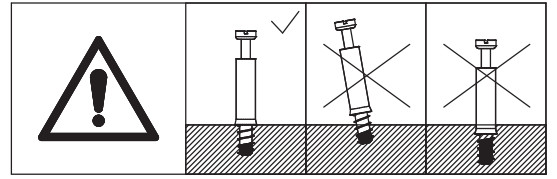   Ø6 x 28 mm

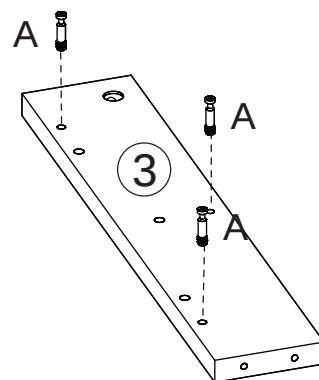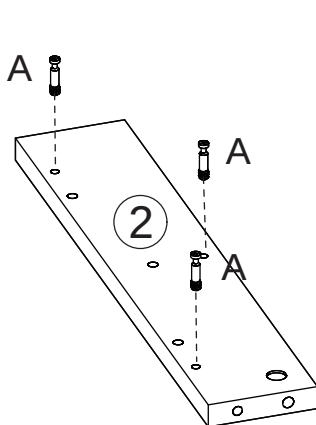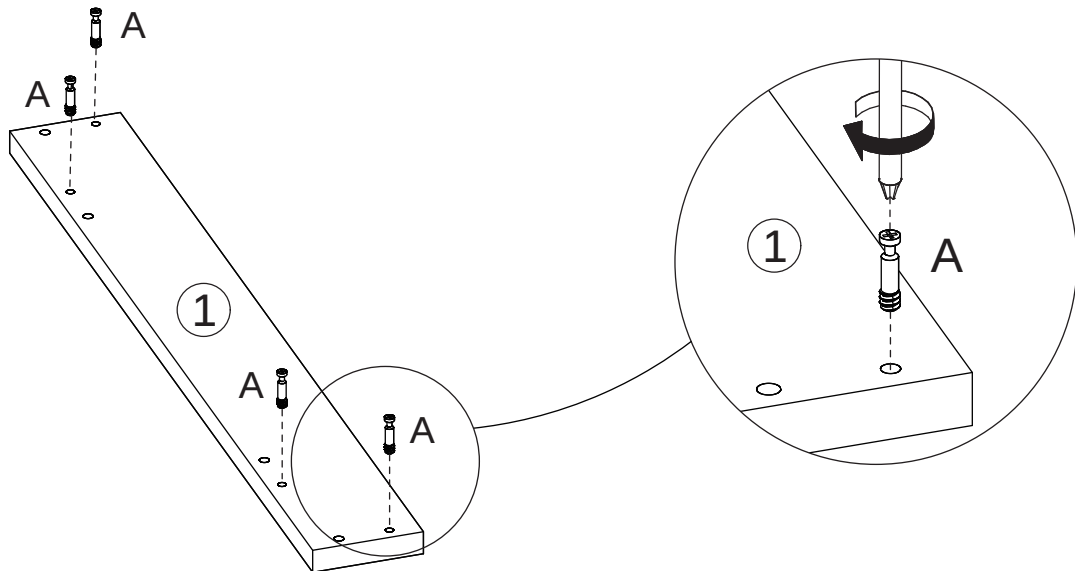   

Screw eccentric rod (A) to panels 1, 2, and 3.



 
12

B x 6





Ø 12 x 10 mm


C x 6



Ø 6 x 30 mm

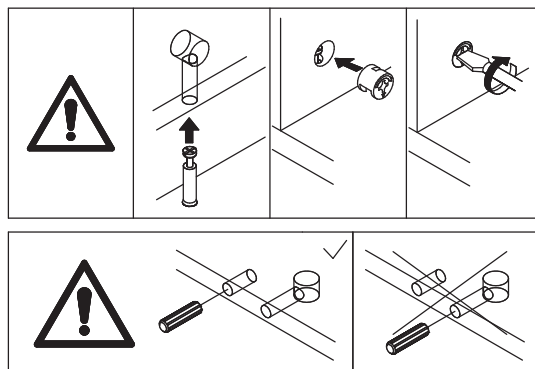  

 Connect panels 2 and 3 to panels 4 and 5 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

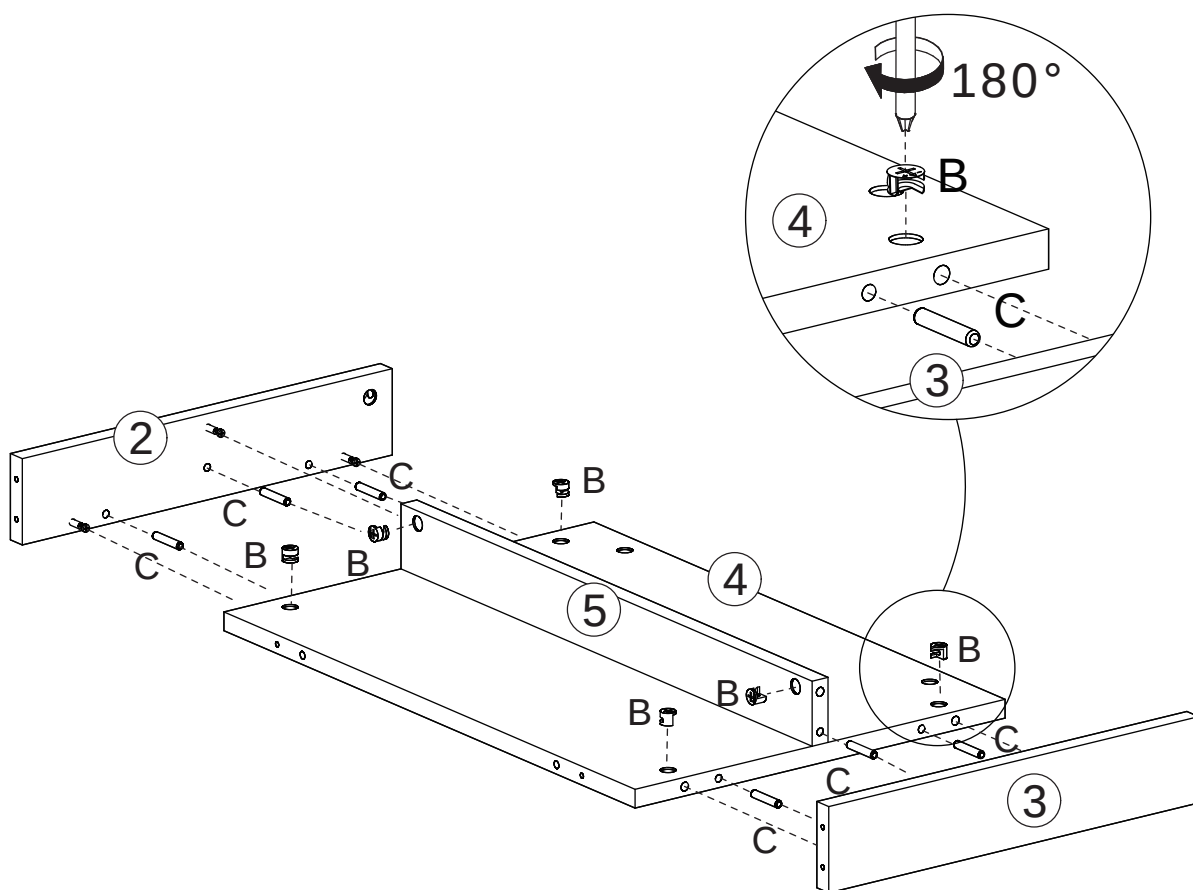


13

B x 4









Ø 12 x 10 mm

 
C x 4



Ø 6 x 30 mm

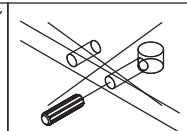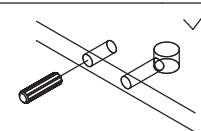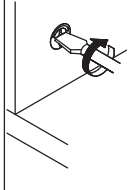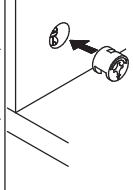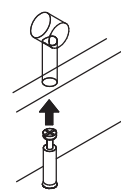      


 Connect panel 1 to panels 2, 3, and 4 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.


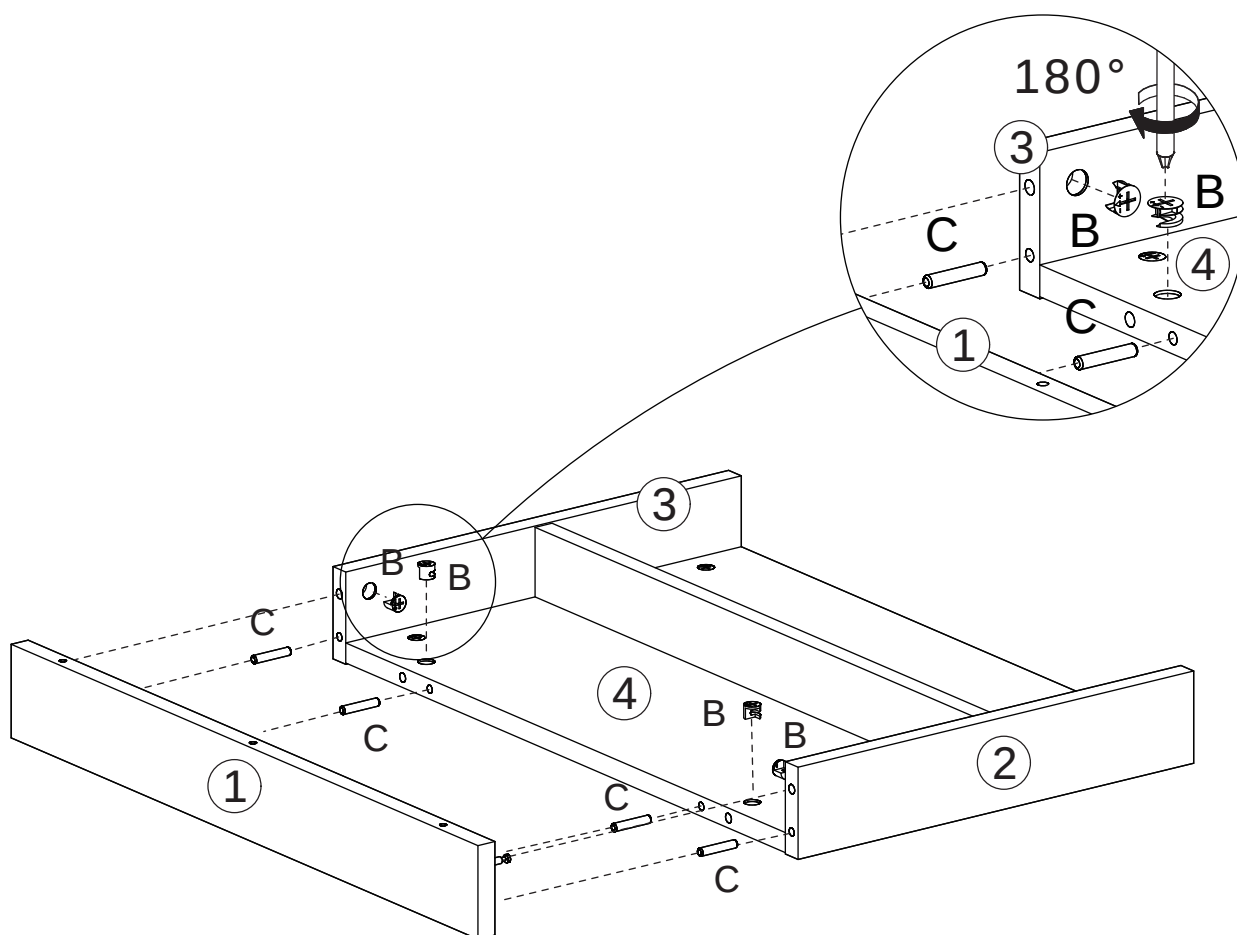


14


 
A x 16




Ø6 x 28 mm

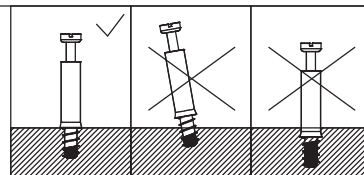 
 


  Screw eccentric rod (A) to panels 21 and 22.

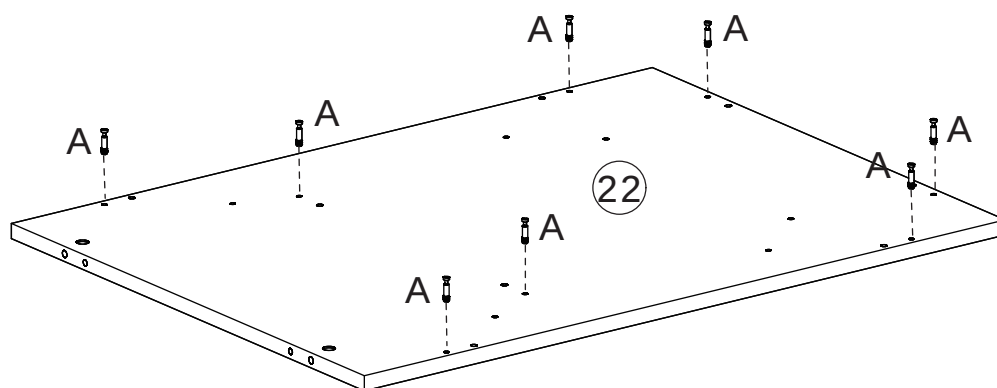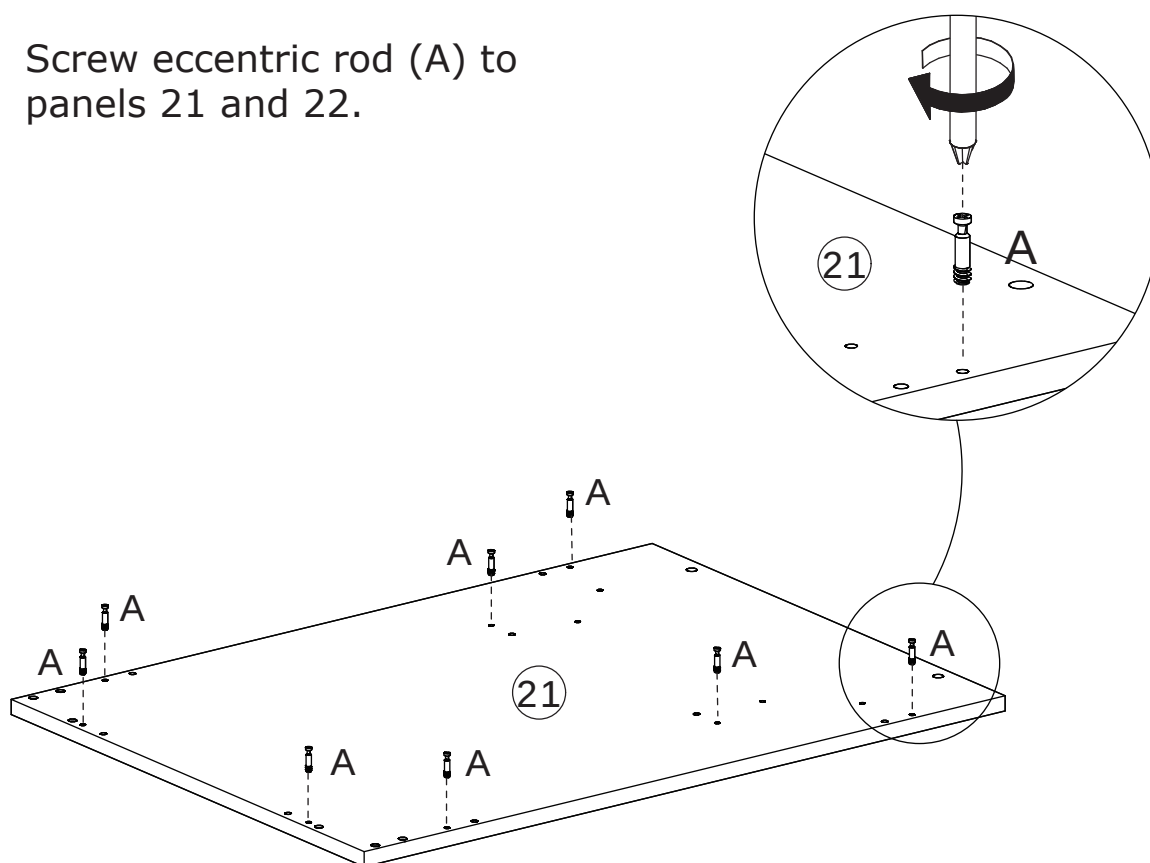


15

 A x 8

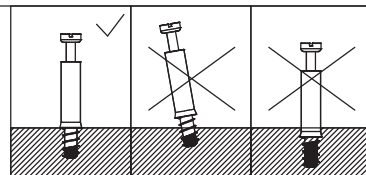   Ø6 x 28 mm

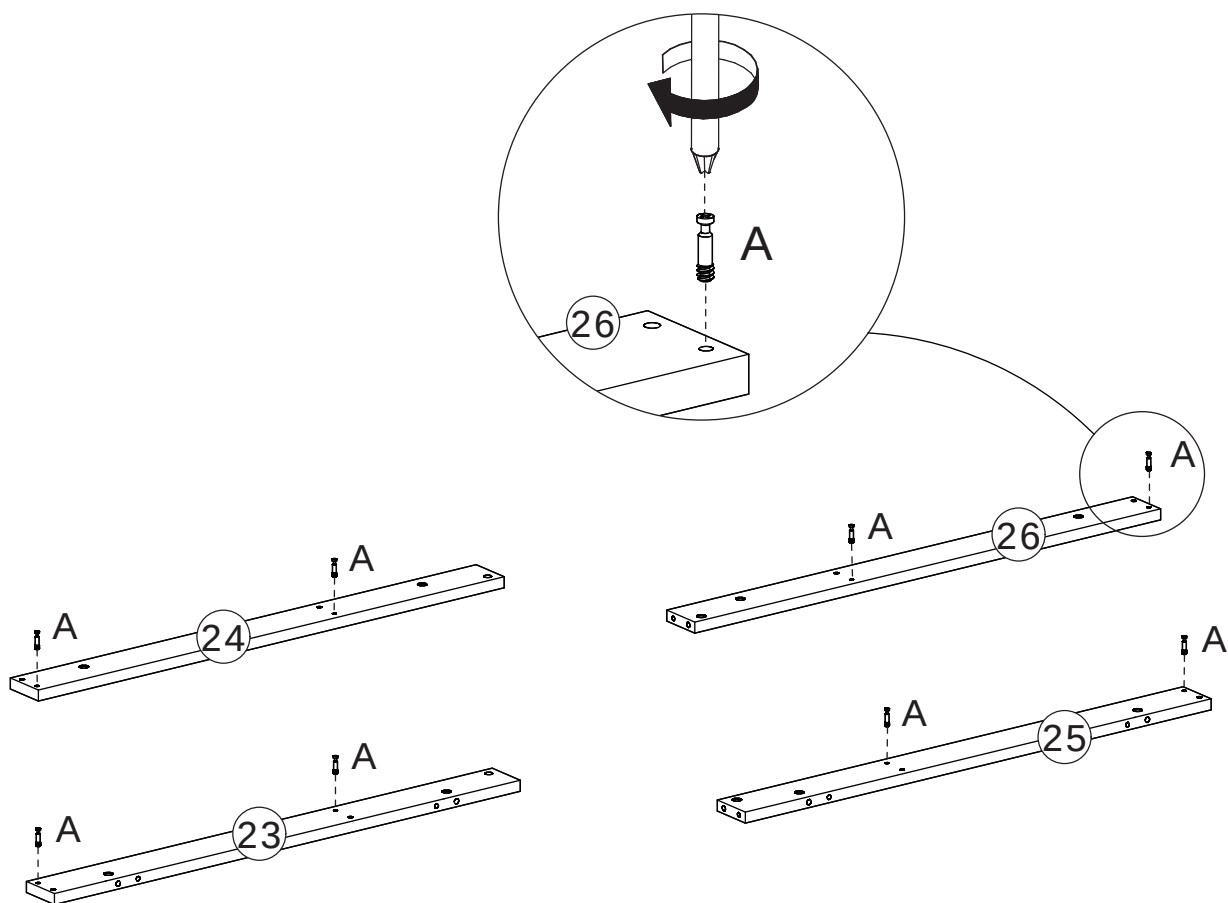 


Screw eccentric rod (A) to panels 23, 24, 25, and 26.




16

 C x 2






Ø6 x 30 mm

 
D x 6



Ø5 x 50 mm

   

 Connect panel 21 to panels 2, 4, and 3 using wooden dowel (C), and secure them with screw (D).

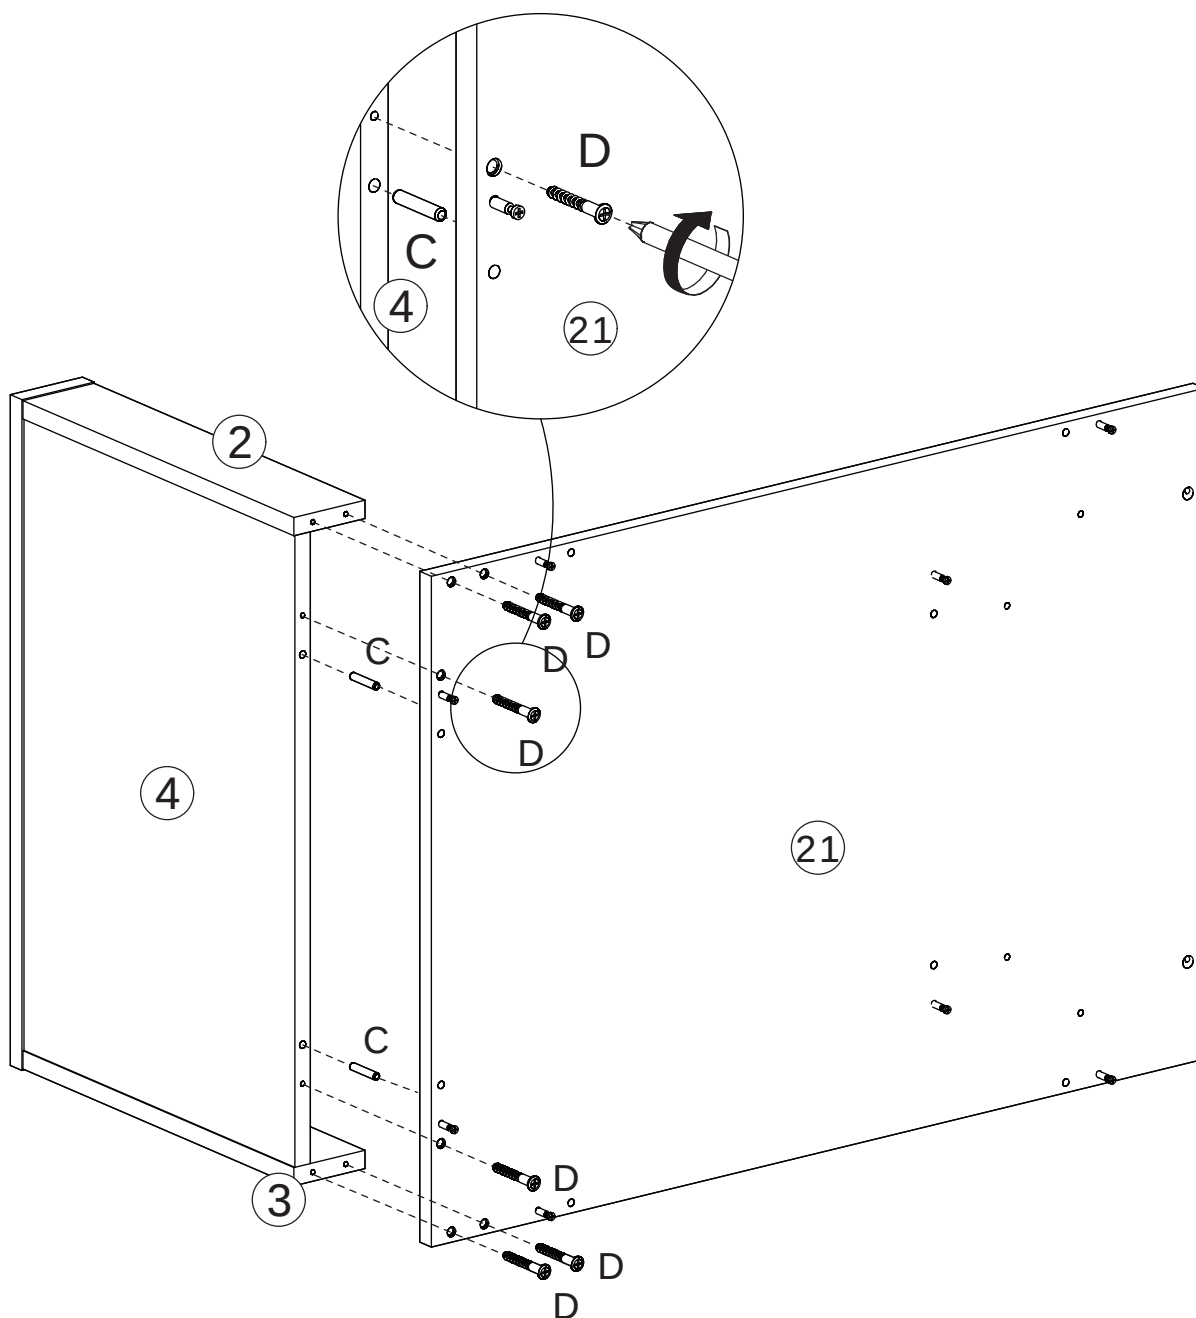


17

B x 4









Ø 12 x 10 mm

 
C x 4



Ø 6 x 30 mm

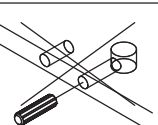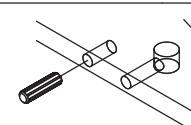      

 Connect panels 25 and 26 to panel 27 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

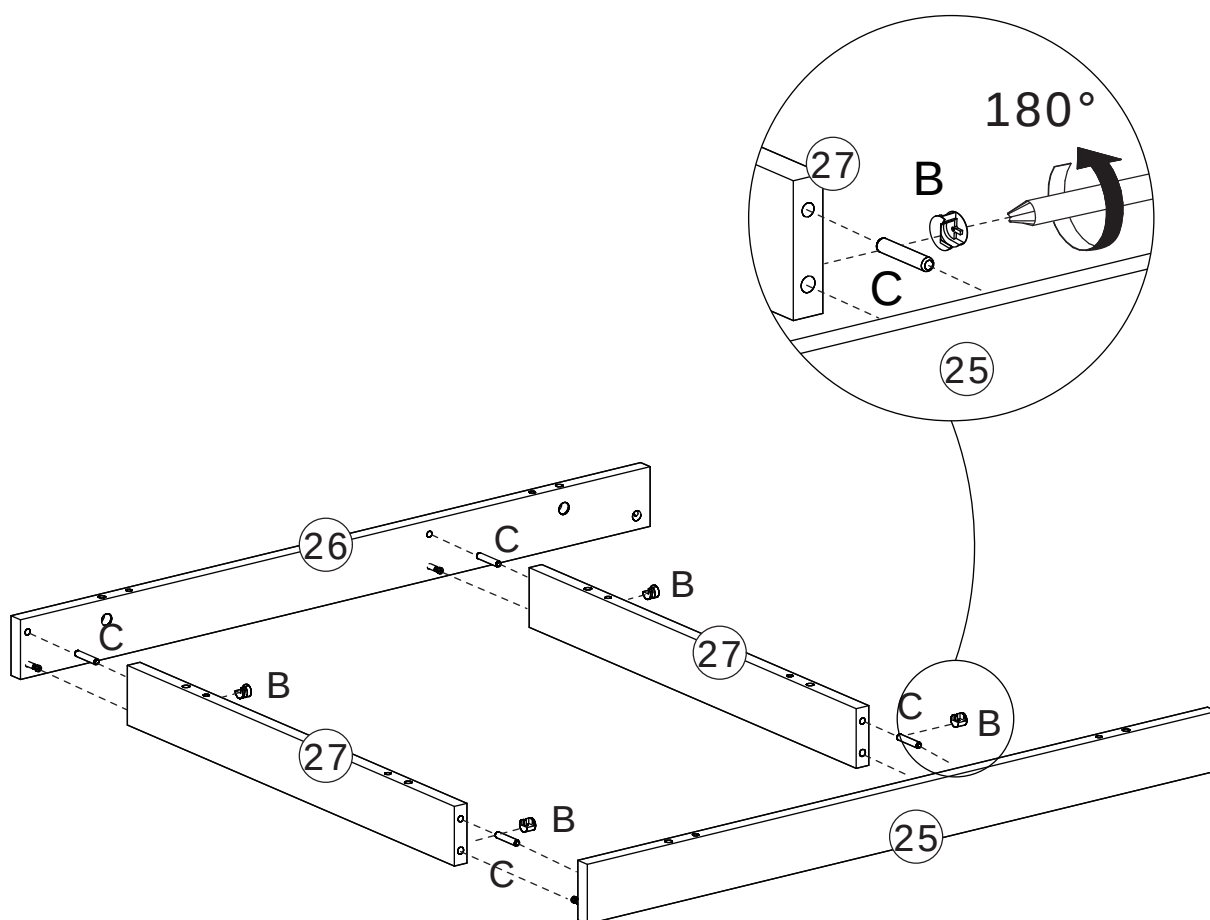


18

B x 4









Ø 12 x 10 mm

 
C x 4



Ø 6 x 30 mm

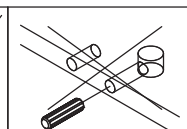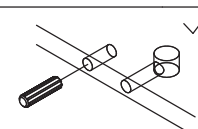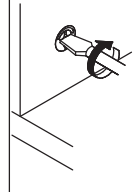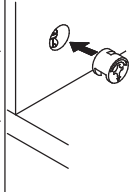      

 Connect panels 25 and 26 to panel 27 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

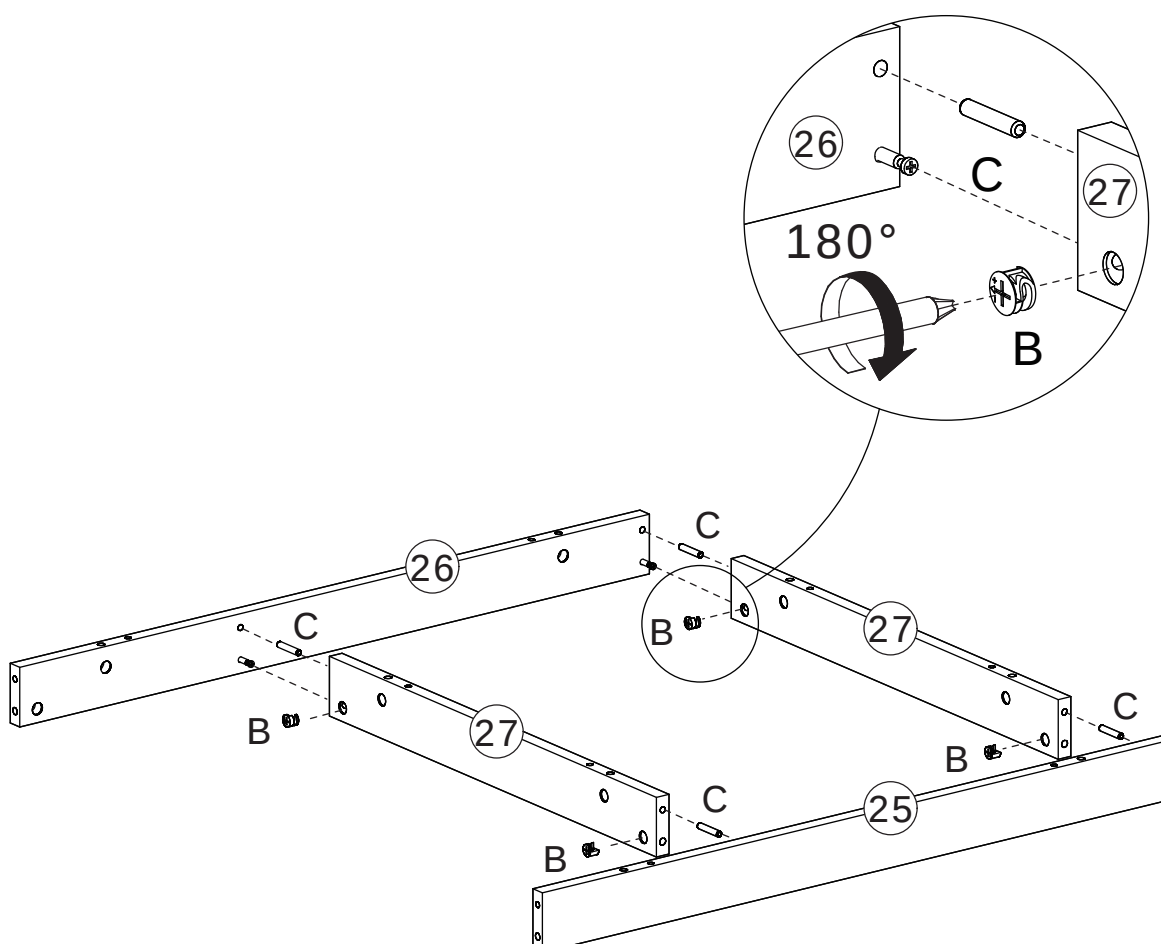


19

B x 8









Ø 12 x 10 mm

 
C x 8




Ø 6 x 30 mm

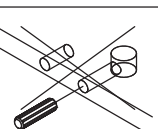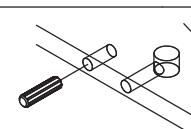      

 
Connect panels 23, 24, and 27 to panel 21 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

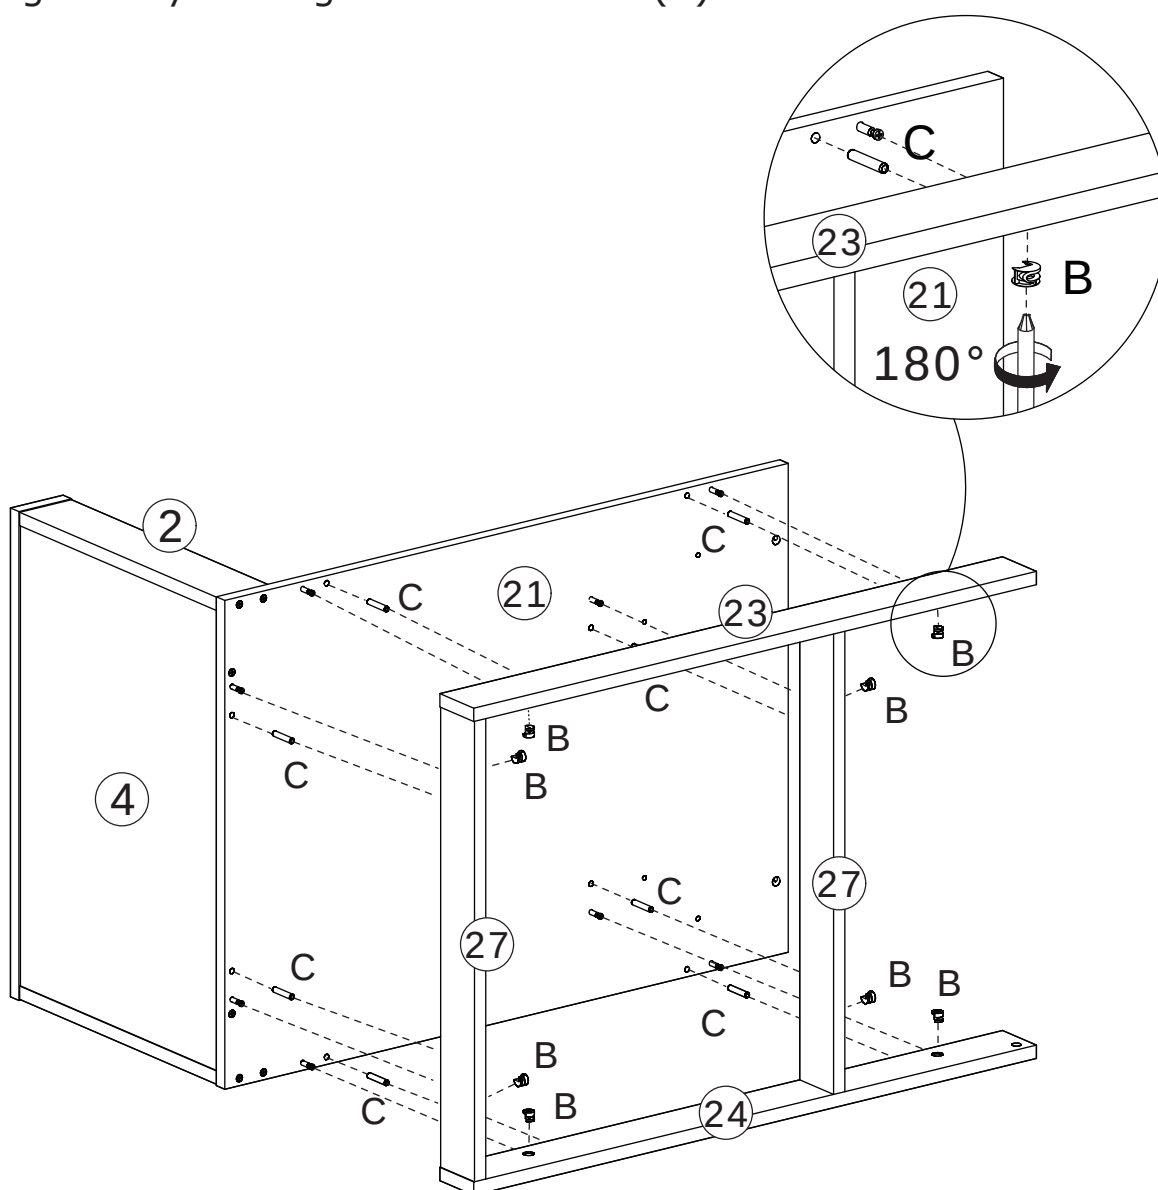

20

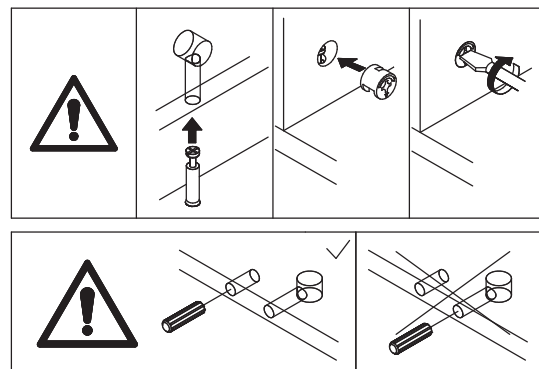 


 
Connect panels 25, 26, and 27 to panel 22 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

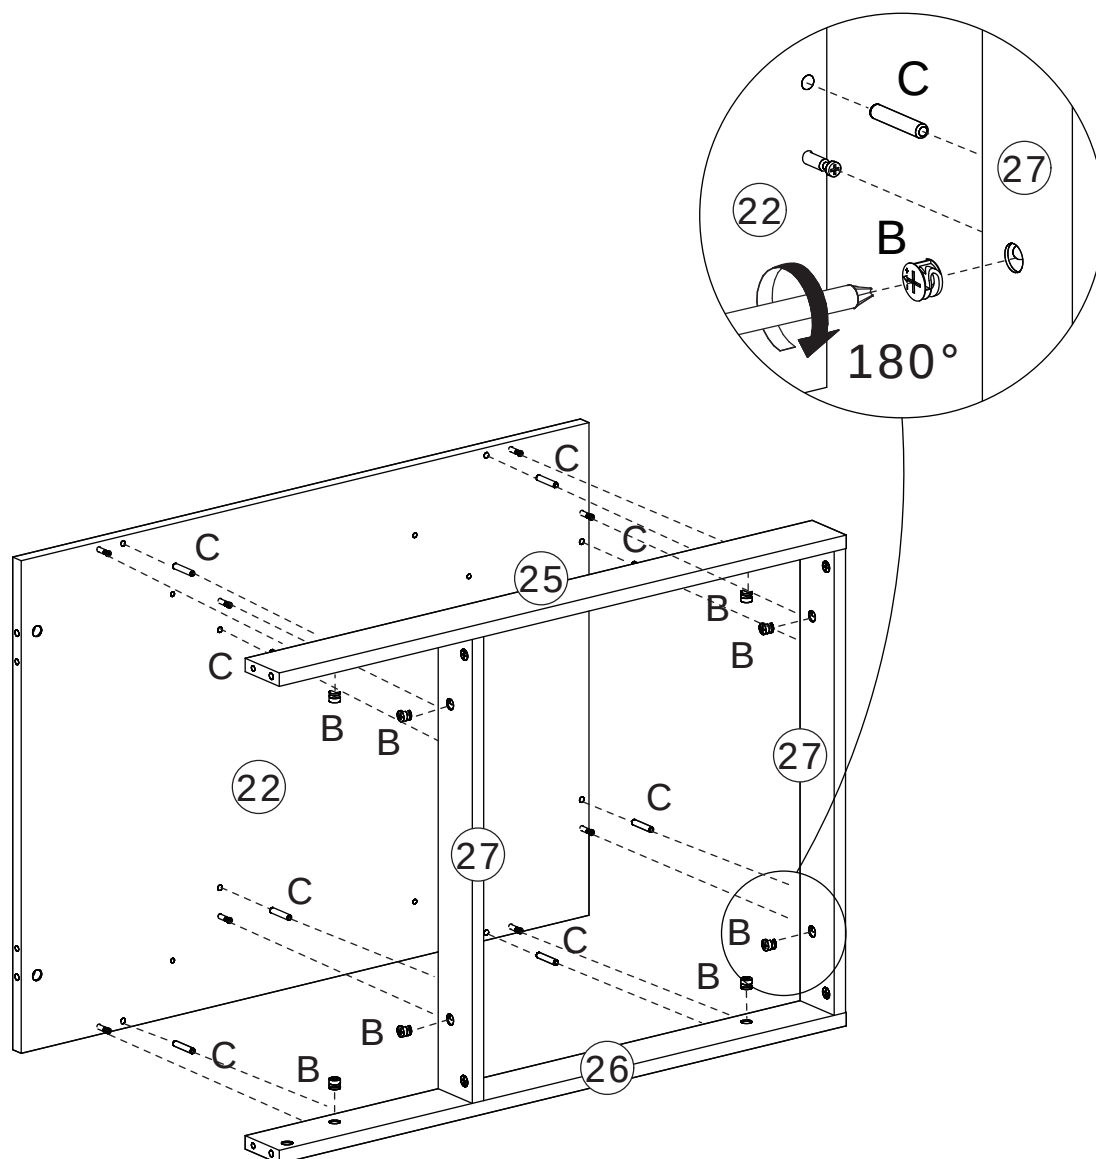




21

B x 4 Ø 12 x 10 mm	C x 4 Ø 6 x 30 mm	F x 4 M6 x 10 mm	G x 4 M6 x 40 mm	
----------------------------------	---------------------------------	--------------------------------	--------------------------------	--

  
Put nut (F) to panels 21 and 23, then screw eccentric rod (G) into. Connect panel 21 to panel 22 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

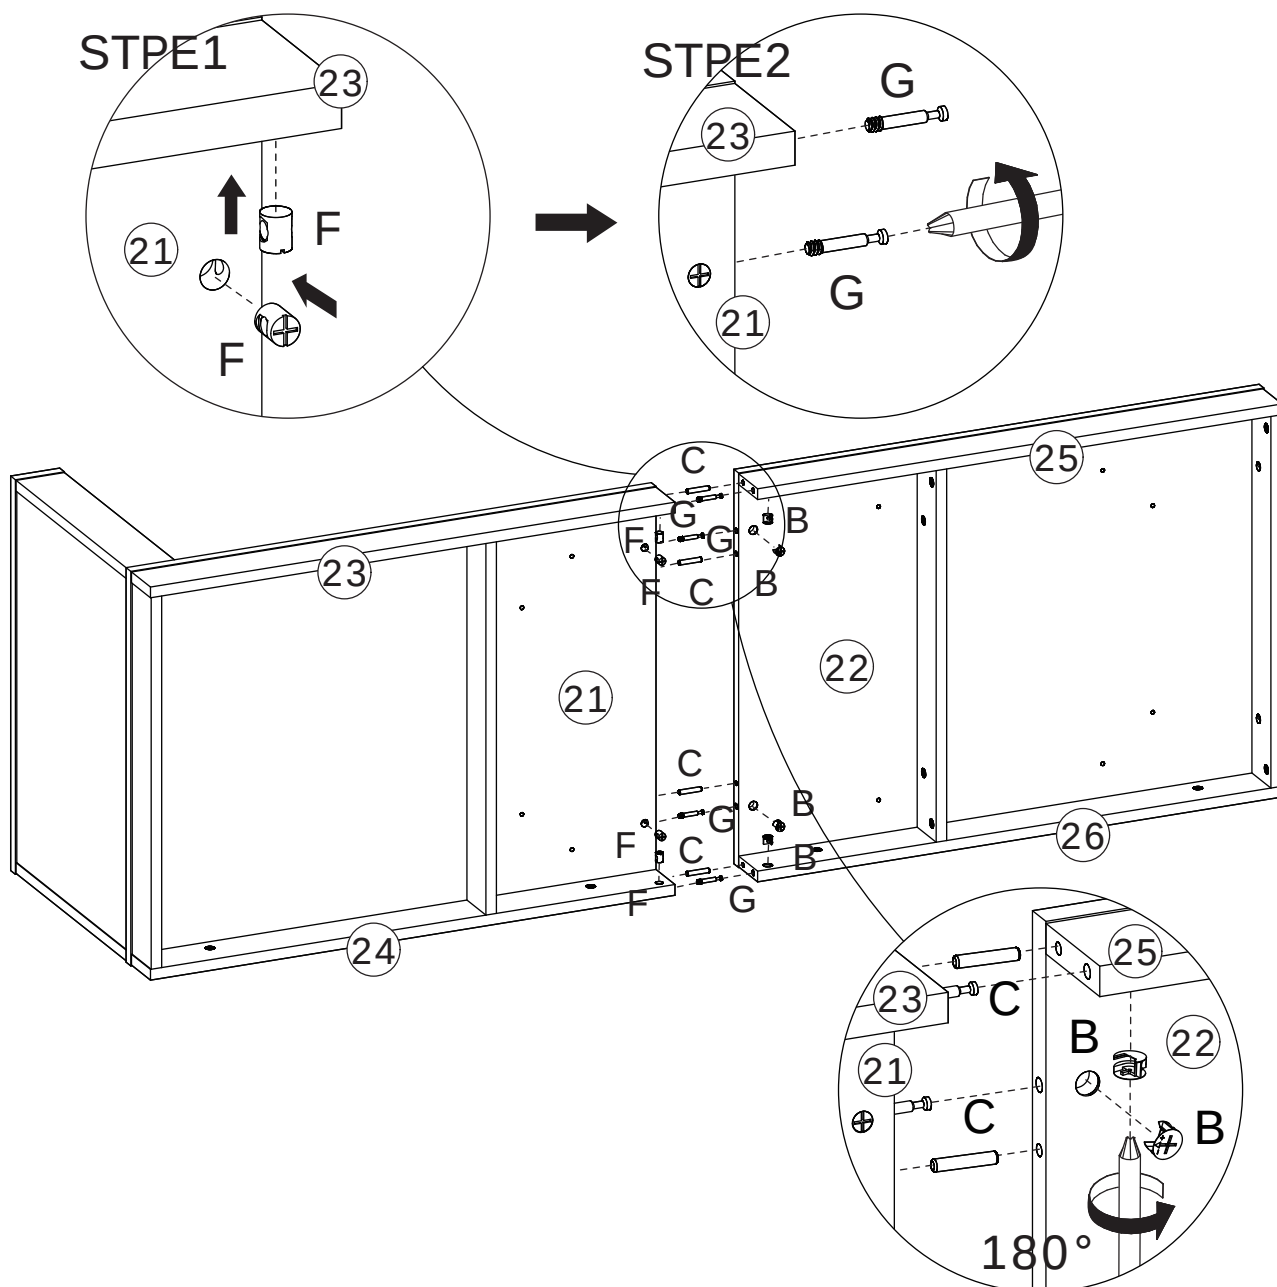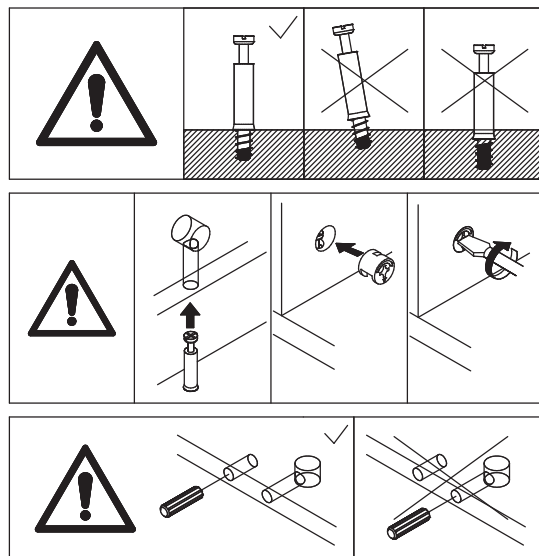




22

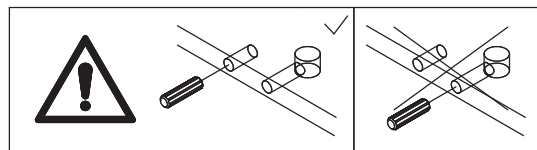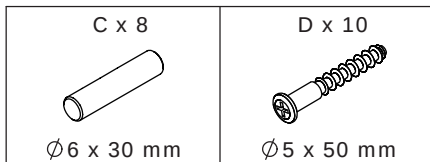   

 
Connect the two assembled components using wooden dowel (C) and secure them with screw (D).

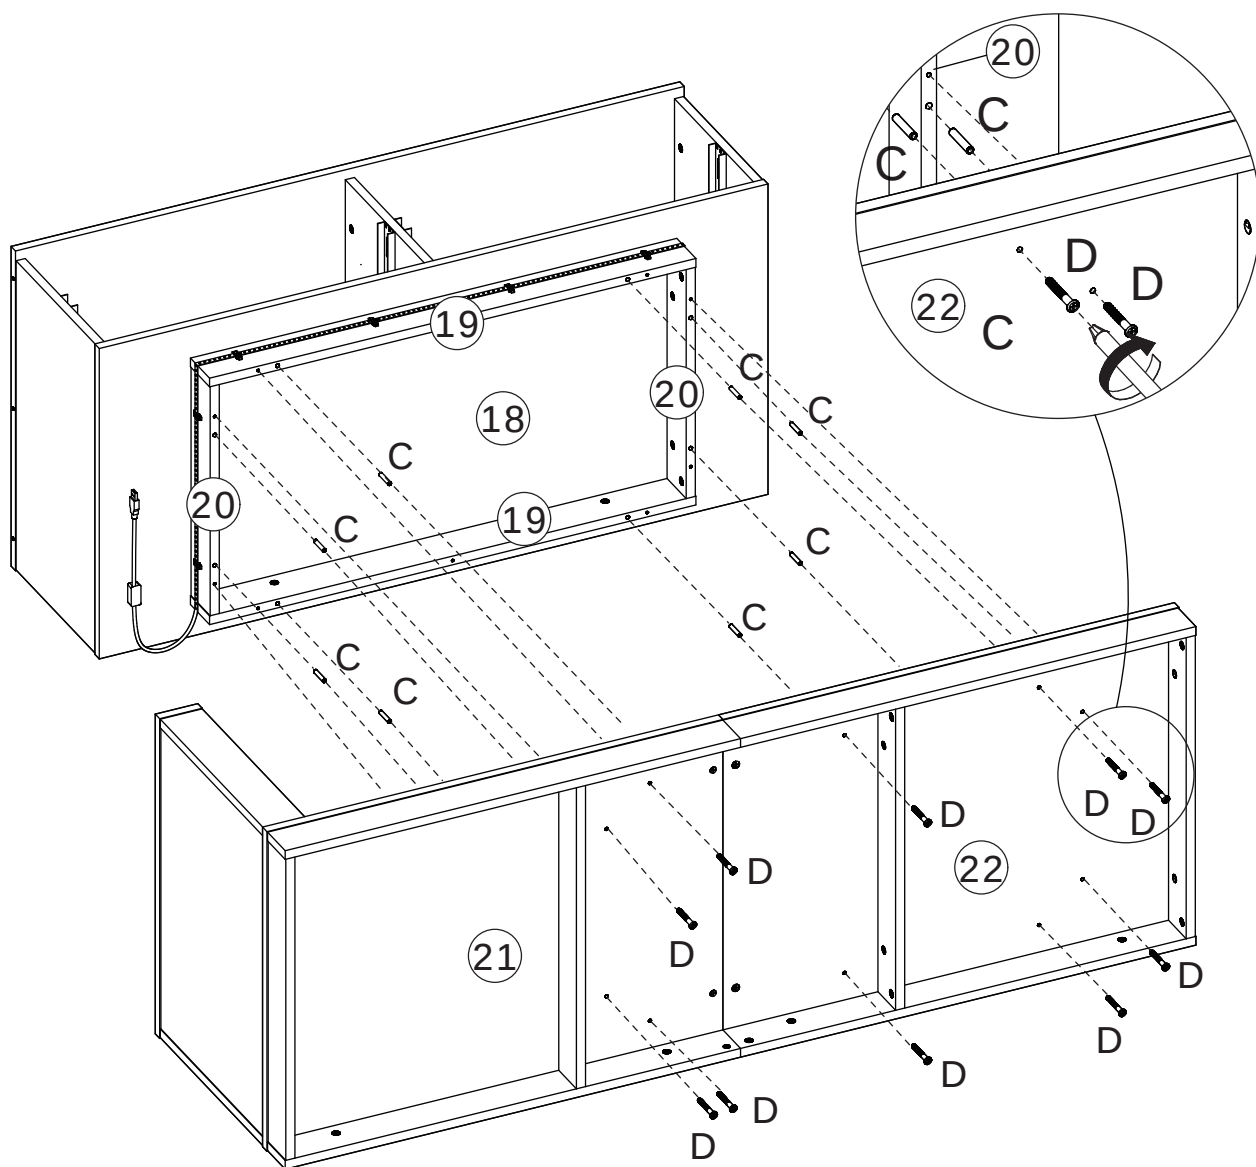

23

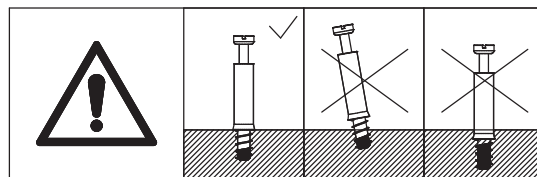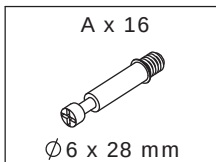   



 
Screw eccentric rod (A) to panels 10, 11, and 13.

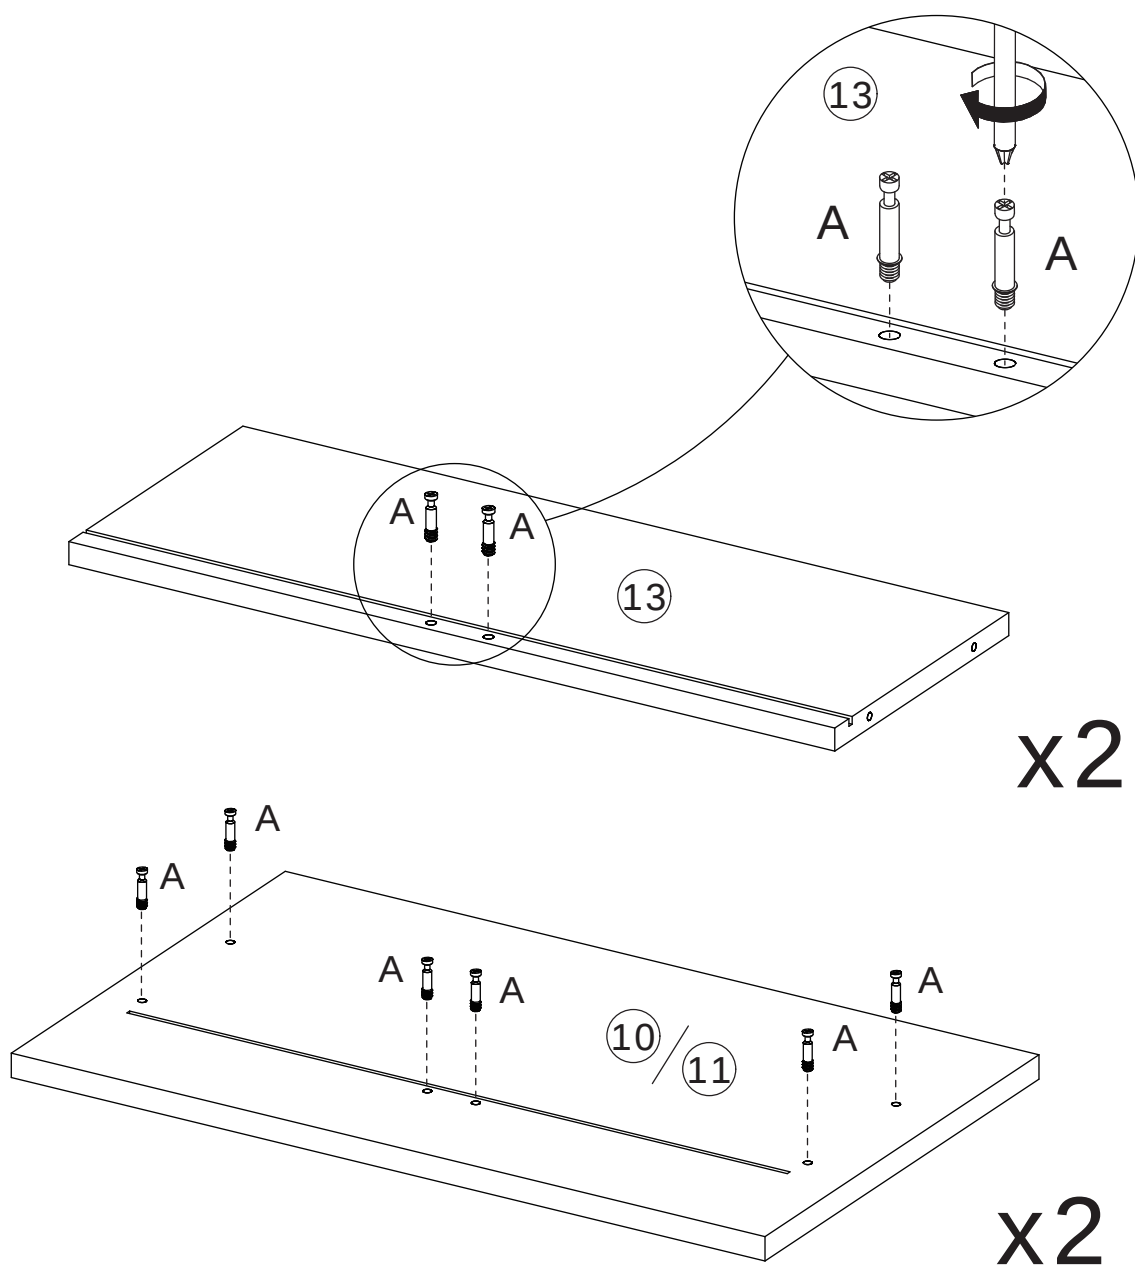


24



   Secure slide rail (H-2) to panels 12 and 13 using screw (E).

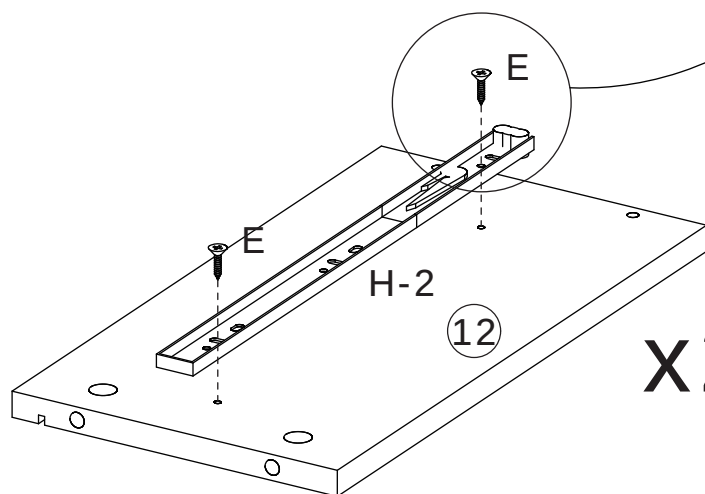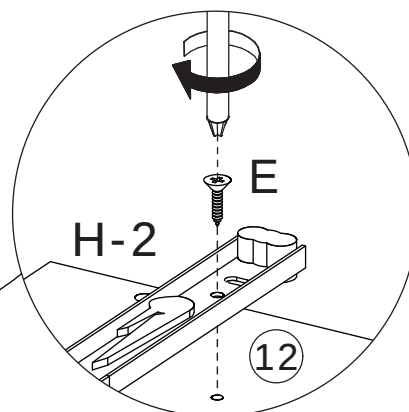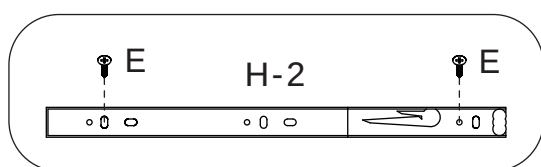

x2

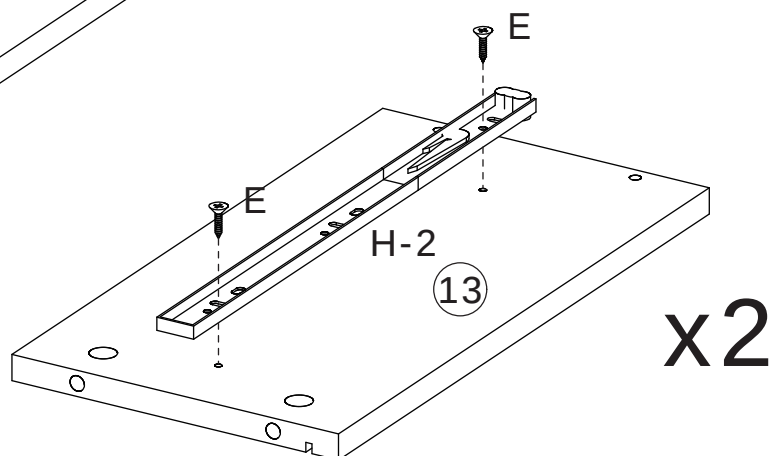 

x2

 
25

B x 4







Ø 12 x 10 mm


D x 8



Ø 5 x 50 mm

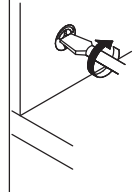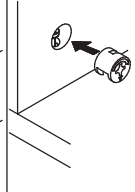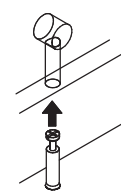    

 
Secure panels 12 and 13 to panel 14 using screw (D).
Connect panel 16 to panel 14, then tighten by turning
eccentric wheel (B) clockwise.

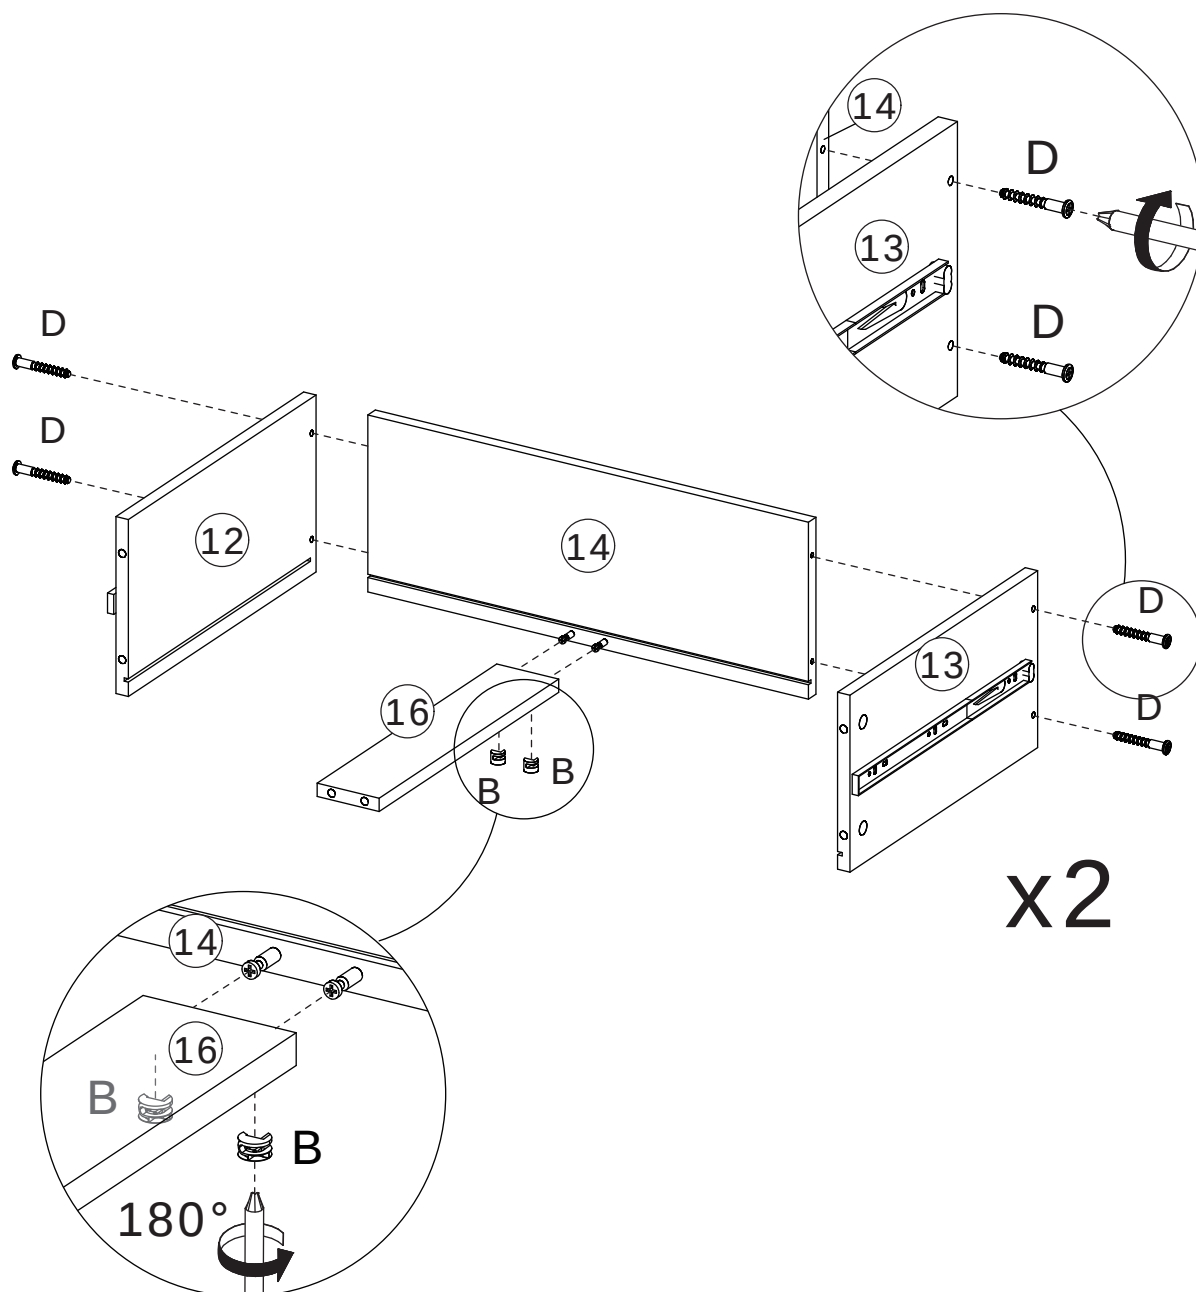

x2

26

 Insert panel 15 along the arrow.


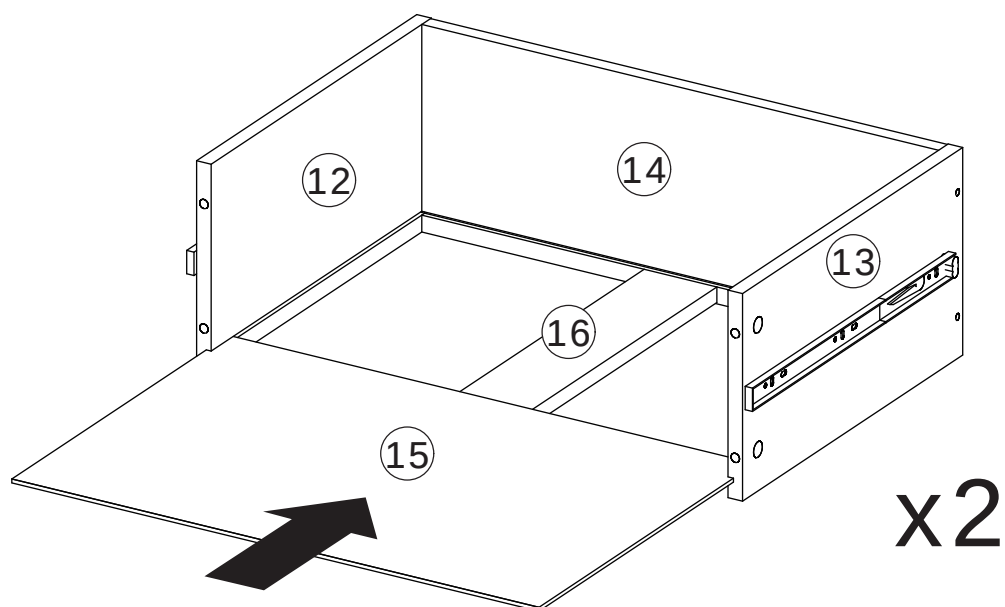


27


B x 12



  
Ø12 x 10 mm

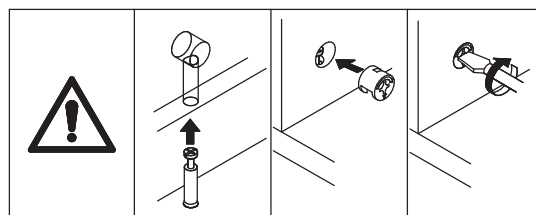

 Connect panels 10 and 11 to panels 12, 15, and 13 respectively, then tighten by turning eccentric wheel (B) clockwise.

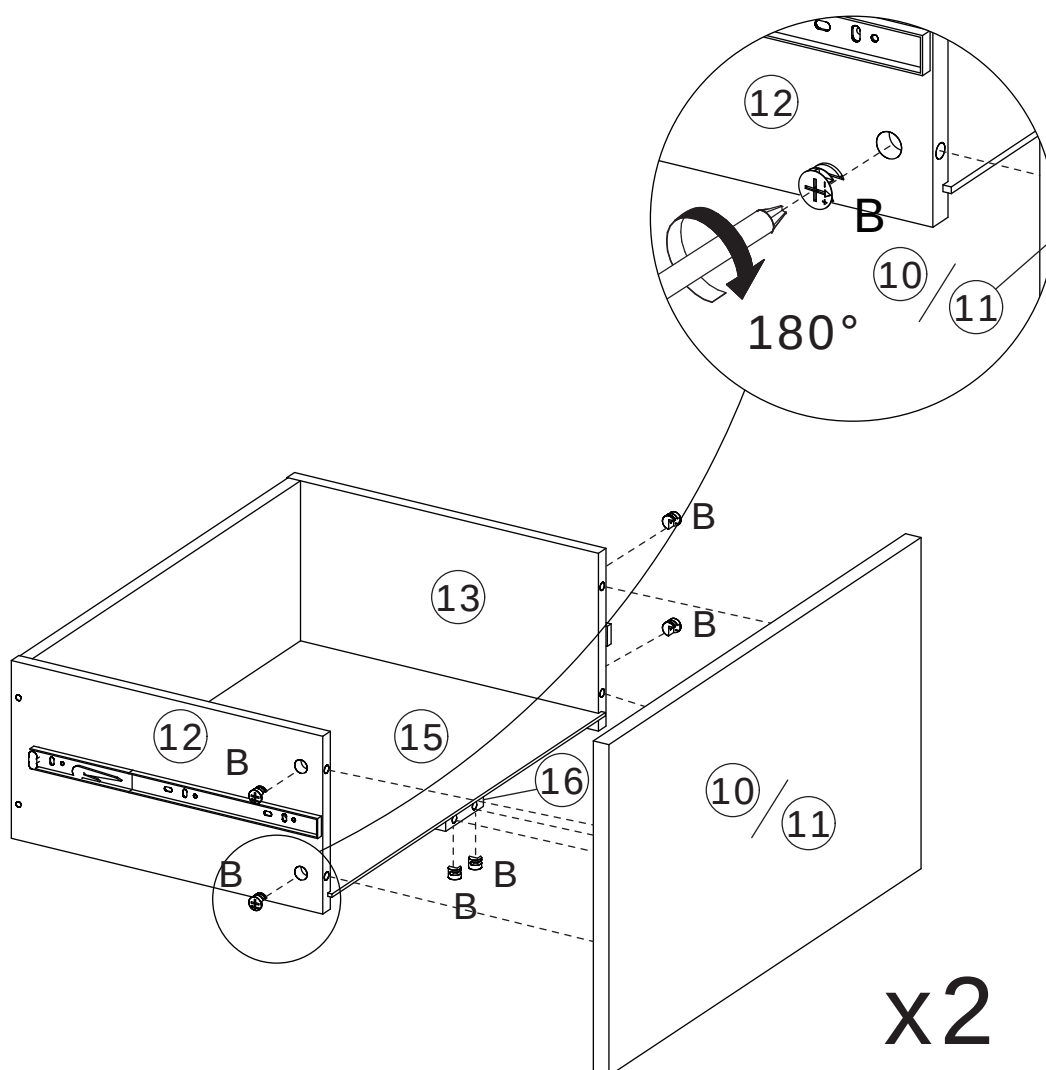

Insert the drawers into the unit.

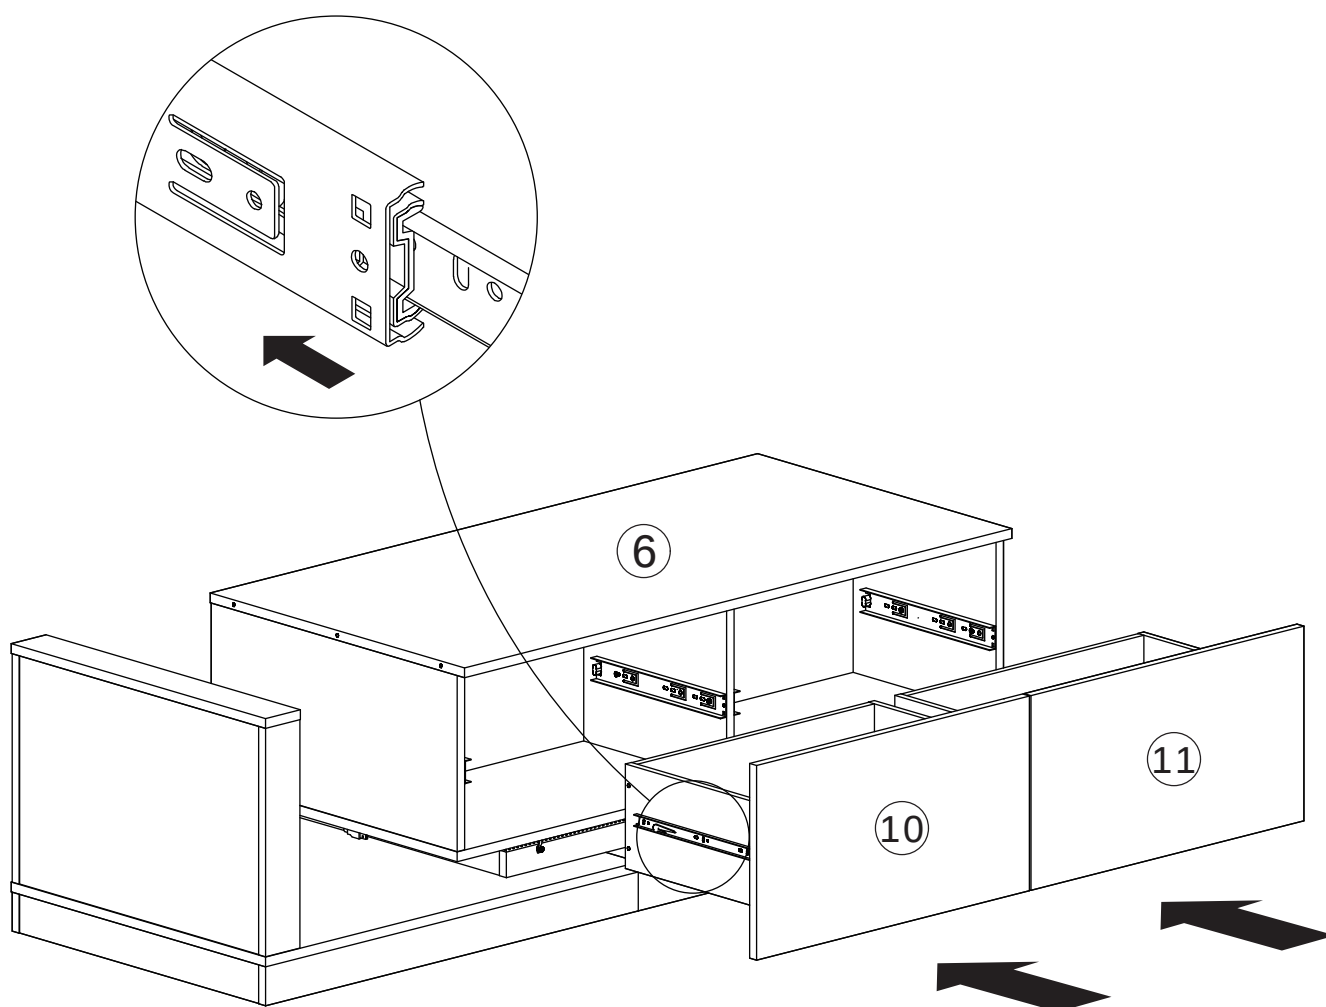 


29

J x 6



 Insert pin (J) to panel 6, then place panel 28 on.

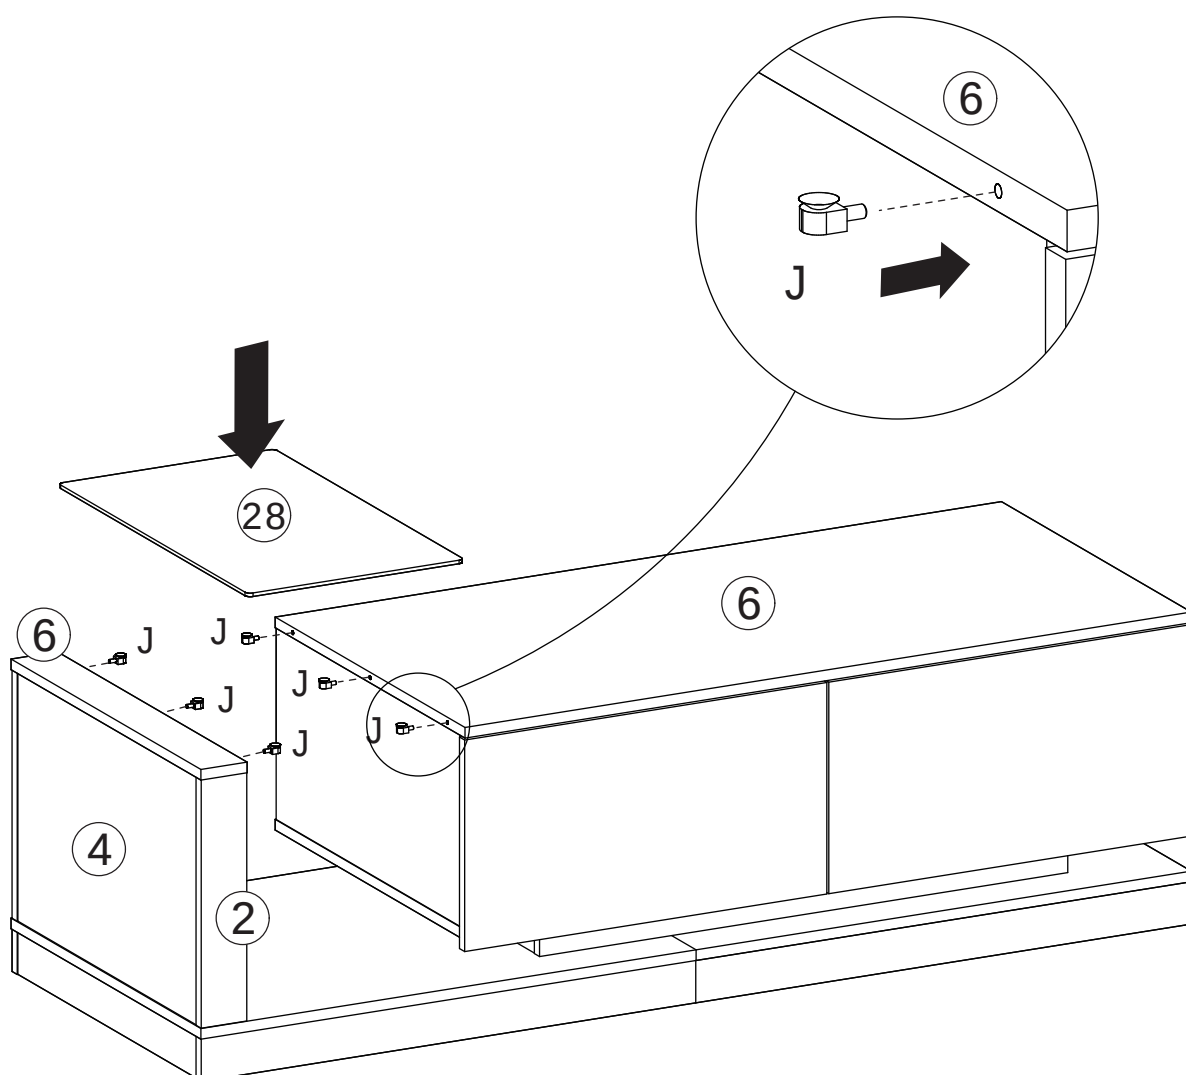

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.