 


Fan Heater

Instruction Manual

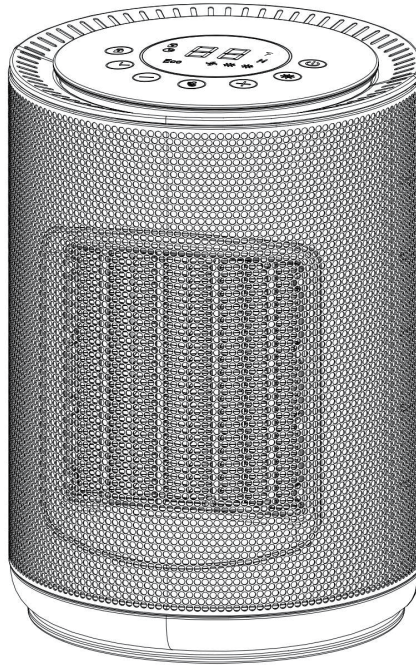

ITEM NO.: 36016HSH0

MODEL NO.: ZFH016E

Voltage: 120V~, 60Hz Power: 1500W



Scan the QR code to watch the
product videos



Web: www.electacticshop.com



Email: service@electacticshop.com


IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0,9 m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect heater, turn controls off, then remove plug from outlet.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, do not block air intake or exhaust in any manner. Do not use it on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
13. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
14. Always plug heaters directly into a wall outlet/receptacle. Never use it with an extension cord or relocatable power tap (outlet/power strip).
15. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
16. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.
17. This product is intended ONLY for indoor household or office use. It is NOT intended for industrial or commercial use. Do not use the product outdoors.


HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

Product Overview

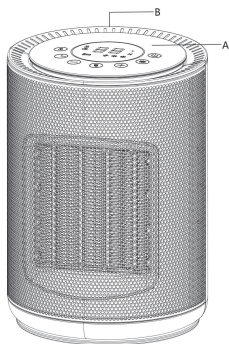

- A. Control panel
- B. Rear handle (not shown)

Control Panel

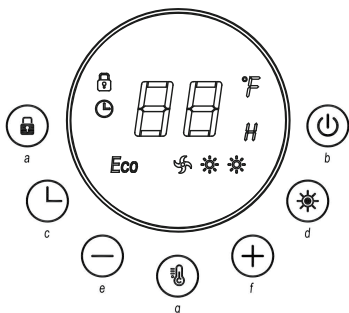

- a. Child lock button
- b. Stand-by button
- c. Timer button
- d. Mode button
- e. -: Temperature & hours decrease button
- f. +: Temperature & hours increase button
- g. Thermostat button

Remote Control



- Uses 2pcs AAA batteries (not included).
- Install batteries according to the +/- polarity markings.
- Point the remote toward the sensor on the control panel for proper operation.

Operating Instructions

Power On

 

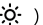 
Plug in the power cord. The heater enters standby mode.

The following settings can be performed using the touch panel or the remote control. And a beep sound is emitted at every key press.

Press the Stand-by button to exit the stand-by mode and begin selection of the different modes. The unit starts in ECO mode by default.

Heating Modes

Press the stand-by button, it will start working under ECO mode ();

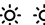After that, press the Mode button, it will cycle from High power ( : ) → Low power ();

Fan mode () → ECO mode ();

Note: Higher power heats the room faster but consumes more energy. Lower power is more energy-efficient for extended use.

ECO mode

Automatically adjusts heating power based on room temperature to save energy.

Activate by cycling through the Mode button until the ECO indicator lights up.

Thermostat Setting

Set the temperature between 40, 60–86°F (default is 73°F).

1. Select a power mode (High, Low, or ECO).
2. Press the thermostat button, the temperature digits will blink.
3. Use "+" / "-" to adjust to the desired temperature.
4. The setting temperature will appear on screen and the temperature digit will stop blinking. The heater will maintain room temperature by cycling on and off automatically.

Note: If no operation is performed for 50 seconds, the display dims to 25% brightness.

 
 
Note: After plug in the heater, during the first time thermostat setting under High and Low power, when the heater reaches the temperature setting, it still will keep heating for some minutes.

Timer Function

Important: The heater may turn on/off while unattended. Always follow safety precautions when using timer functions.

Auto Power-On (Delayed Start)

Use only in standby mode:

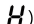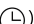1. Press the timer button, the light () and timer icon () will turn on, the start hour digit (0) will blink.

2. Set the delay time(1-24 hours) using "+" / "-" buttons. This function will activate once the hour digit stops blinking. The count down digits will show on the display.
3. The heater will automatically turn on when the time runs out.

Note: After setting the timer, you can choose your preferred power and temperature settings in advance.

Auto Power-Off

Use when the heater is running:

1. Press the timer button, the light (H) and timer icon(⌚) will turn on, and the digit (0) will blink.
2. Set a countdown (1-24 hours) using "+" / "-" buttons.
3. The heater will automatically shut off when the time runs out.

Note: When a power-on timer is set, the countdown remains continuously displayed.

When a power-off timer is set, the countdown and setting temperature alternate on the display, and the timer icon stays on.

Child Lock

Press the child lock button to disable all controls.

Press again to unlock.

Beep Sound On/Off

To mute button sounds: press and hold "+" and "-" for 3 seconds.

Repeat to restore sound.

Power Off

To turn off, press the standby button. The fan will run for 20 seconds before stopping.

To fully disconnect, unplug from the outlet.

Safety Features

Tip-Over Protection

The heater will automatically shut off if tipped over. It will resume operation when returned to an upright position.

Overheat Protection

If overheating occurs, the heater shuts off automatically.

Unplug the unit, wait 30 minutes to cool, remove any obstructions, and check for damage before restarting.

If it does not restart, please contact customer service for assistance.

Cleaning and Maintenance

The appliance should be regularly cleaned in accordance with the following instructions:

1. Unplug and let the heater cool completely.
2. Clean the exterior and control panel with a soft, damp, lint-free cloth.
3. Use a vacuum or blower to clear dust within the slits of the device.
4. Do not use harsh chemicals or solvents as they may damage the appliance.

Storage age

1. Retain original packaging for storage.
2. Store the unit in a dry, clean location.
3. Keep out of reach of children.

8:30am-5:30pm P.S.T.
Monday to Friday



Web: www.electacticshop.com



Email: service@electacticshop.com