 


WOOD GUEST CHAIR

OPERATING INSTRUCTIONS

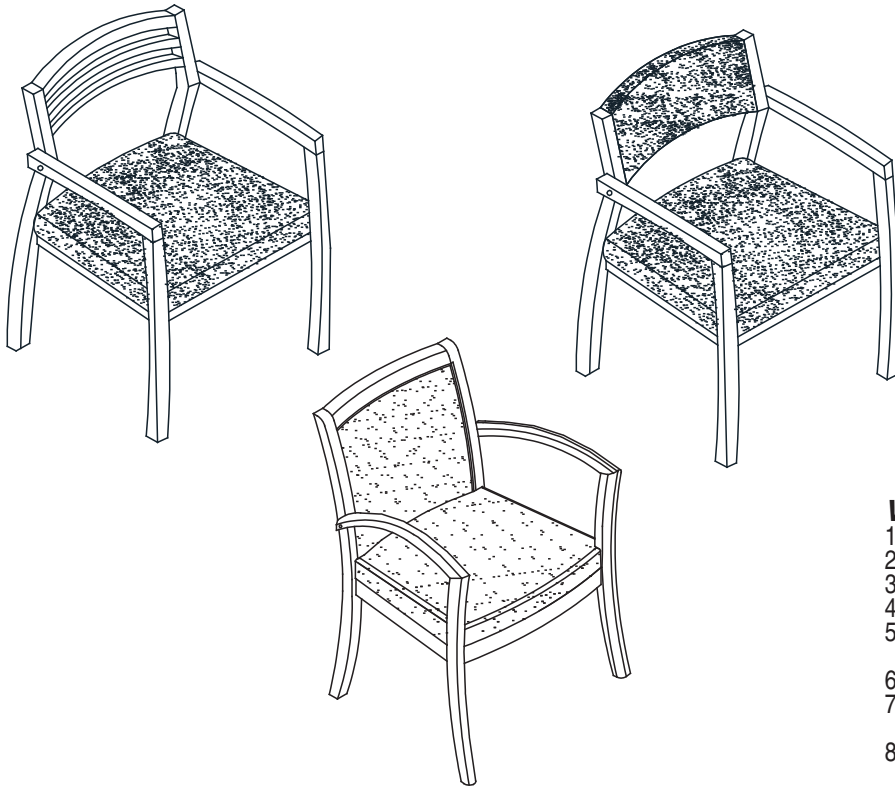

WARNING

1. Use this product only one person at a time.
2. Use this chair for its intended purpose.
3. Do not stand on chair.
4. Do not use this chair as a step stool or ladder.
5. Do not use chair unless all screws are tight. At least every six months, check all screws and joints to ensure they are tight.
6. Do not modify chair in any way.
7. If any parts are missing, broken, damaged or worn, stop use of the chair until repairs are made using factory authorized parts.
8. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
9. Failure to follow these warnings could result in serious injury.

LIMITED WARRANTY

Our Furniture is warranted from the original purchase date to the original purchaser for normal commercial usage – defined as a standard forty-hour work week and by persons weighing 250 lbs. or less – according to the below-listed schedule and limitations.

Reception, Wood Guest and Lounge Seating

- 5 years structural integrity of frame
- 3 years on seating wood finishes
- 3 years on upholstery fabric and Foam against wear and deterioration (except leather)
- Leather is not warranted against routine scratching and scuffing, as leather is subject to minor blemishes in use. Minor variations in color, texture and grain are a natural part of leather hides, and therefore, are not covered by this warranty.
- C.O.M. Fabrics are not warranted by us.

Grain, color and finishes

Variation of grain and color are natural, inherent characteristics of wood, a living material. This variation is part of the beauty of real wood and anticipated in wood furnishings. Therefore, our Furniture is not warranted to match in grain or color or texture. It is a natural phenomenon for wood grain to change in color as it ages, and wood finishes are not warranted for color-fastness.

Warranty Exclusions

This warranty will not cover labor, freight, or damage from misuse, abuse, negligence, alteration, assembly, installation, attachments, accident, vandalism, acts of nature or any other event beyond the control of us. The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damage is excluded. The user assumes all risk of injury resulting from use of this product.

This warranty applies only to products purchased through authorized dealers and products sold within the United States of America and the Commonwealth of Canada. This warranty does not apply to products used for rental purposes.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Claims

To make a warranty claim, contact us with the following:

- Model number
- Description of problem
- Digital images
- Original invoice number or customer purchase order number

At our option, we will:

- a) Supply compatible components of current manufacture
- b) Repair the customer's component. The customer must prepay freight on any components returned to the factory. Return freight on components still in warranty will be paid by us.

 
Contacts

The Parts Department will do everything possible to promptly review and remedy any problem. If you cannot contact us via email, either fax or call toll-free.


WOOD GUEST CHAIR

ASSEMBLY INSTRUCTIONS


STEP 1

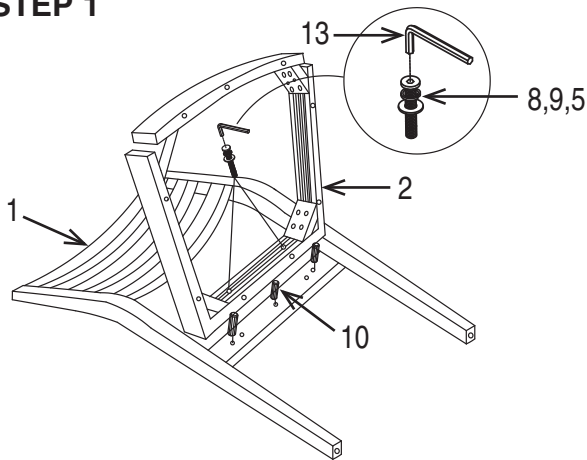

 
STEP 2

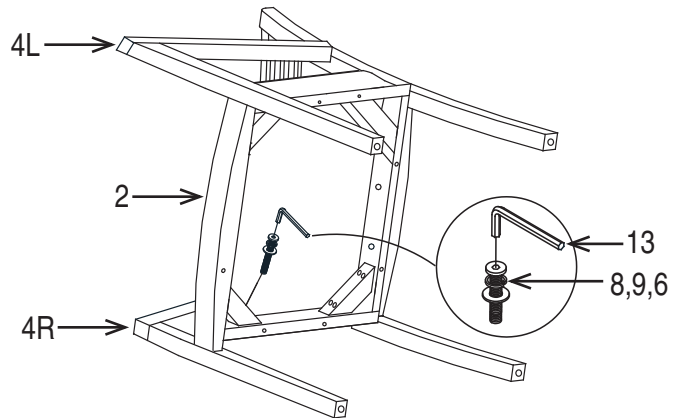

 STEP 3

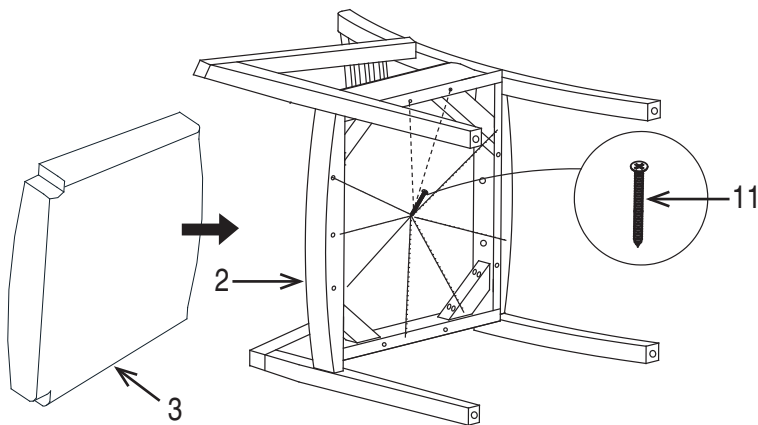

 STEP 4

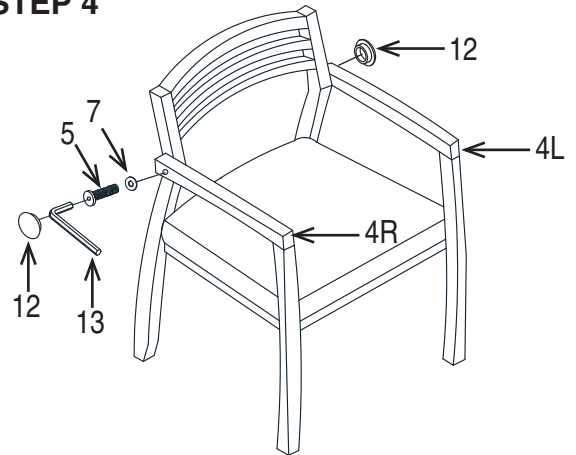

Remove all the parts from carton, separate them into part numbers indicated on the list and make sure part quantities are correct.

STEP 1 Insert three Wooden Dowels (10) into Chair Back (1). Attach Seat Frame (2) to Chair Back (1) and secure using two Large Flat Washers (8), two Lock Washers (9) and two Short Bolts (5). **FULLY TIGHTEN BOLTS USING ALLEN WRENCH (13).**

STEP 2 Secure Arms (4L & 4R) to Seat Frame (2) using one Large Flat Washer (8), one Lock Washer (9) and one Long Bolt (6) for each Arm (4). **DO NOT FULLY TIGHTEN BOLTS.**

STEP 3 Place Seat Cushion (3) onto Seat Frame (2), secure Seat Cushion (3) to Seat Frame (2) using nine Wood Screws (11). **DO NOT FULLY TIGHTEN SCREWS.**

STEP 4 Turn chair to the upright position, secure Arms (4L & 4R) to Chair Back (1) using one Small Flat Washer (7) and one Short Bolt (5) for each Arm (4). **APPLY FIRM PRESSURE TO ALIGN & FULLY TIGHTEN ALL BOLTS & SCREWS.** Cover holes in Arms (4L & 4R) using one Wooden Cap (12) for each Arm (4).

ATTENTION: MAKE SURE ALL BOLTS & SCREWS ARE FULLY TIGHTENED BEFORE USING CHAIR.

PART	QTY
1. Chair Back.....	1
2. Seat Frame.....	1
3. Seat Cushion.....	1
4. Arms (4L & 4R).....	2
5. Short Bolt.....	4
6. Long Bolt.....	2
7. Small Flat Washer.....	2
8. Large Flat Washer.....	4
9. Lock Washer.....	4
10. Wooden Dowel.....	3
11. Wood Screw.....	9
12. Wooden Cap.....	2
13. Allen Wrench.....	1

*Phillips Screwdriver also needed
for assembly (not provided)*