

Product Name:	20-Inch Round Light Wreath and Red Light Bow Holiday Decoration with Timer
SKU #:	WHHD2084

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.


Before You Start

Decide on an appropriate location for your product, please read assembly and instruction procedure carefully. *Retain the instructions for future use and save the carton for storing your wreath.*

Assembly and Instruction Procedure (no tools required for assembly):

- Remove the wreath and plug from the packaging.
- Connect the LED light connector to the transformer. Twist it to tighten it.
- Assembly is now complete.
- Timer function: Press the button once and the light will turn green. This starts the timer: 6 hours on / 18 hours off.

Assembly Illustration:

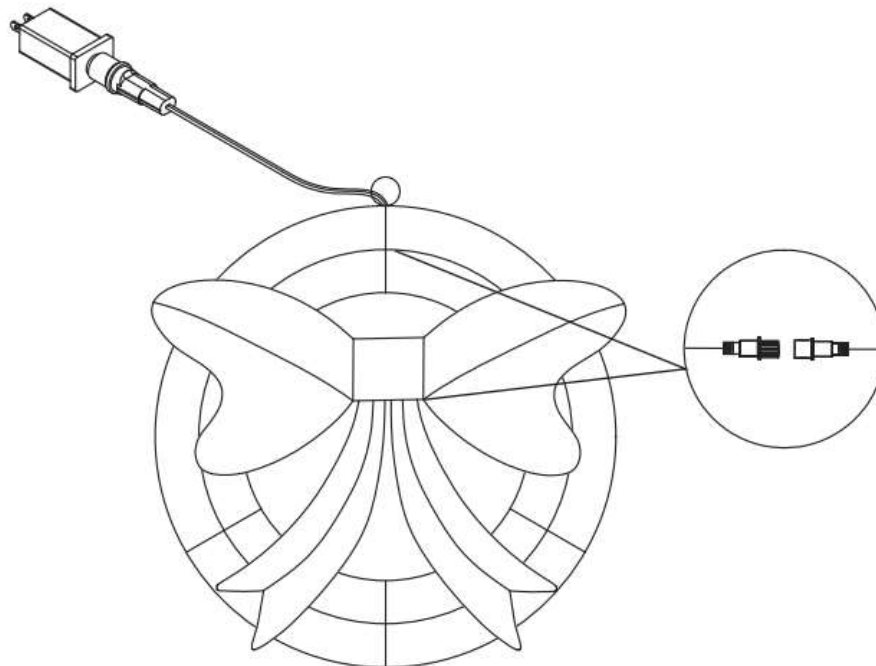

Product Name:	20-Inch Round Light Wreath and Red Light Bow Holiday Decoration with Timer
SKU #:	WHHD2084



Warnings:

1. Do not place it near fireplaces, candles, outdoor heaters, or other similar sources of heat. The wreath is not flame retardant.
2. Do not install near pools, fountains, tubs, sinks, or other areas of standing water that the decoration may fall or blow into.
3. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.

Troubleshooting:

- Lights not working: check that the connection to the lights is secure and tight.

Note: If this does not solve the problem with the wreath, please contact customer service for assistance.

Storage:

- Unplug the light wreath, and place it in the carton.
- Store the product in a cool and dry place, avoid direct sunlight, and ensure that the temperature does not exceed 35 degrees Celsius ° C (95 ° F).