

OVENTE®

4-SANDWICH DIGITAL
PANINI GRILL
WITH TEMPERATURE CONTROL
GP1000 SERIES



Before use, please read this manual thoroughly and save for future reference.

ovente.com

OVENTE®



4-SANDWICH DIGITAL
PANINI GRILL
WITH TEMPERATURE CONTROL
GP1000 SERIES

OVENTE

ovente.com

4-SANDWICH DIGITAL PANINI GRILL WITH TEMPERATURE CONTROL

GP1000 SERIES

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS		4
PARTS & FEATURES		6
USING YOUR PANINI GRILL		7
PANINI GRILL TIPS		8
CARE & MAINTENANCE		9



IMPORTANT SAFEGUARDS

When using this Panini Grill, basic safety precautions should always be followed, including:

Read all instructions carefully before using the Panini Grill.

- ❗ Before connecting the grill check whether the voltage indicated on the bottom corresponds to the local mains voltage.
- ❗ DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. If the mains cord is damaged, contact Customer Support at 1-855-926-2626 immediately.
- ❗ To protect against electrical hazards, DO NOT immerse the cord, plugs, or the appliance in water or other liquid.
- ❗ DO NOT let the cord hang over the edge of the table or counter, or touch hot surfaces.
- ❗ Regularly check whether the main cord is still in a safe condition.
- ❗ To avoid circuit overload, do not operate another high-voltage appliance on the same circuit.
- ❗ Panini grill should always be used on a dry and level surface.

- ❗ Do not place the panini grill on or near a hot gas or electric burner.
- ❗ Do not touch hot surfaces while the grill is operating. These can become very hot.
- ❗ Close supervision is necessary when any appliance is used by or near children.
- ❗ The grill is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- ❗ Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts, and before cleaning.
- ❗ Do not use outdoors or for purposes other than intended use.
- ❗ DO NOT touch hot surfaces. Use handles or knobs. ⚠ indicates that the surface temperature is very high, pay particular attention not to touch.



IMPORTANT SAFEGUARDS

When using this Panini Grill, basic safety precautions should always be followed, including:

- ❗ DO NOT move the panini grill when it is still hot.
- ❗ Always place the grill on a heat-resistant surface.
- ❗ Turn the switch off before connecting or disconnecting the plug from the power outlet.
- ❗ DO NOT leave the unit unattended while in use.
- ❗ The panini grill is not intended to be operated with an external timer or separate remote-control system.
- ❗ Never place anything between the grill plate and the food i.e. dish, aluminum foil, etc.
- ❗ CAUTION: This panini grill generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires or other damage to property caused by touching the sides or top while in use or during cooling.



PARTS & FEATURES

4-SANDWICH NON-STICK COATED PLATES

Fast, even grilling and toasting with double-sided 10.2x9-inch contact cooking plates to achieve the grill marks desired

BUILT-IN LCD DISPLAY PANEL WITH DIGITAL HEAT TEMPERATURE & TIMER SETTINGS

Large LCD display with temperature control and 30-minute timer

DRIP TRAY

Catches excess fat and grease

COOL-TOUCH HANDLE

To avoid burns or slippage

1500W HEATING ELEMENT

Instantly heats up your favorite panini or sandwich; can also be used to grill steak, fish, chicken, chops, or kebabs

CONTACT GRILL BRUSH

Easily cleans grill plates





USING YOUR PANINI GRILL

BEFORE FIRST USE

- Carefully unpack your Panini Grill. Remove all packaging materials.
- Place the panini grill on a flat, level surface close to a 120-volt wall outlet.
- Wipe off both cooking plates with a damp cloth so that they are clean and free of any manufacturing oils that may be left on the surface.
- Wipe the outside of the grill housing with a soft, damp cloth. NEVER immerse the grill, power cord or plug in water or any other liquid.
- Plug into the wall outlet and heat for 5 minutes. This will burn off any residue from the manufacturing process.
- NOTE: There may be a small amount of smoke or odor during this time but it will not last longer than a few minutes.

- 1 Place your panini grill on a flat, dry surface close to a 120-volt wall outlet.
- 2 Close the grill and plug into a 120-volt A.C. outlet. Press the power button and the red "Power" light will illuminate.
- 3 The default temperature setting is 150°F. Use the arrow button to select desired cooking temperature. The grill will start to heat up.
- 4 When the green "Ready" light comes on, the grill has reached the correct temperature to start cooking.
- 5 Alternatively, at the same time, you can press the time button, and use the arrow button to adjust desired cooking time based on the type and thickness of food and personal taste. When the time is up, the beeper will sound 5 times to let you know your food is ready.
- 6 Open the grill and place food on the bottom grill plate. Close the lid and press down gently. The floating hinge will adjust to the height of the food and the weight of the top grill plate will gradually and evenly press the food down during cooking.

Note: The green "Ready" light will turn on and off as the grill cycles to keep the correct cooking temperature.



USING YOUR PANINI GRILL

- 7 Grill until the food is done to your taste. The grilling time will depend on the type and thickness of food and personal taste. Check doneness during grilling by lifting the cool-touch handle.

Note: Check the progress about every 2 minutes as the food is cooking rapidly from both the top and bottom.

WARNING: All parts of the grill, except the cool-touch handle, will be very hot during and after toasting. **DO NOT** touch any parts of the grill except the handle until the unit cools.

- 8 When toasting is complete, lift the cool-touch handle and remove the food using a plastic spatula.

Note: Never use metal utensils as they may scratch the non-stick cooking plates.

- 9 When done grilling, unplug the grill and remove the food.

Note: **DO NOT** leave empty grill plugged in.



PANINI GRILL TIPS

- ★ Always preheat the grill until the green “Ready” light illuminates.
- ★ It is not necessary to use butter or margarine on the outside of sandwiches although a thin coating of butter or margarine on the outer surfaces of the bread will speed up browning and enhance flavor.
- ★ Most types of bread can be used. Bread with high sugar content will brown more quickly.
- ★ **DO NOT** use fresh fruit in fillings.
- ★ **DO NOT** use non-stick cooking sprays.
- ★ Sandwich filling can get very hot. Be careful when biting into sandwiches.
- ★ Unplug from the outlet and allow the grill to cool completely before disposing of drippings that have accumulated in the drip tray.



CARE & MAINTENANCE

- Unplug the grill from the wall outlet and allow it to cool completely.
- Wipe the cooking plates with a sponge or cloth dampened in warm, soapy water.
- For stubborn grease, cover with a small amount of cooking oil and leave on for several minutes. Remove with a paper towel. Wipe cooking plates with a damp cloth.
- Do not use abrasive cleaning materials.
- Wipe exterior grill surfaces with a damp cloth.
- Do not immerse grill housing in water or any other liquid.



ELECTRICAL REQUIREMENTS

Voltage: 120V

Wattage: 1500W

Hertz: 60Hz

OVENTE®

4-SANDWICH DIGITAL

PANINI GRILL

WITH TEMPERATURE CONTROL

GP1000 SERIES





OVENTE WARRANTY

LIMITED ONE (1) YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our panini grills with a one-(1) year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email support@ovente.com or call **1-855-926-2626**.

Visit us at ovente.com



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



[youtube.com/ovente](https://www.youtube.com/ovente)

ovente.com

OVENTE®

Defining Housewares