








HARDWARE LIST

A	WASHER Ø1/4"		12 PCS.
B	WOOD BEAD (FOR SCORE		42 PC.
C	PIN (FOR SCORE COUNTER)		4 PC.
D	BOLT Ø1/4" X 1		12 PCS.
E	METAL ROD (FOR SCORE COUNTER)		2 PCS.
F	PUCK		4 PCS.
G	RE- ASSEMBL		12 PCS.
H	BASE		3 PCS.
I	GAME TOP 1 PC		1 PC
J	PUKC NATURAL		4 PCS
K	PUCK CARBONIZE D BLACK		4 PCS
L	OPPRESSO R SCREW Ø3/16" X		2 PCS
M	ALLEN WRENCH		1 PC


ASSEMBLY INSTRUCTIONS FOR SHUFFLE BOARD TABLE

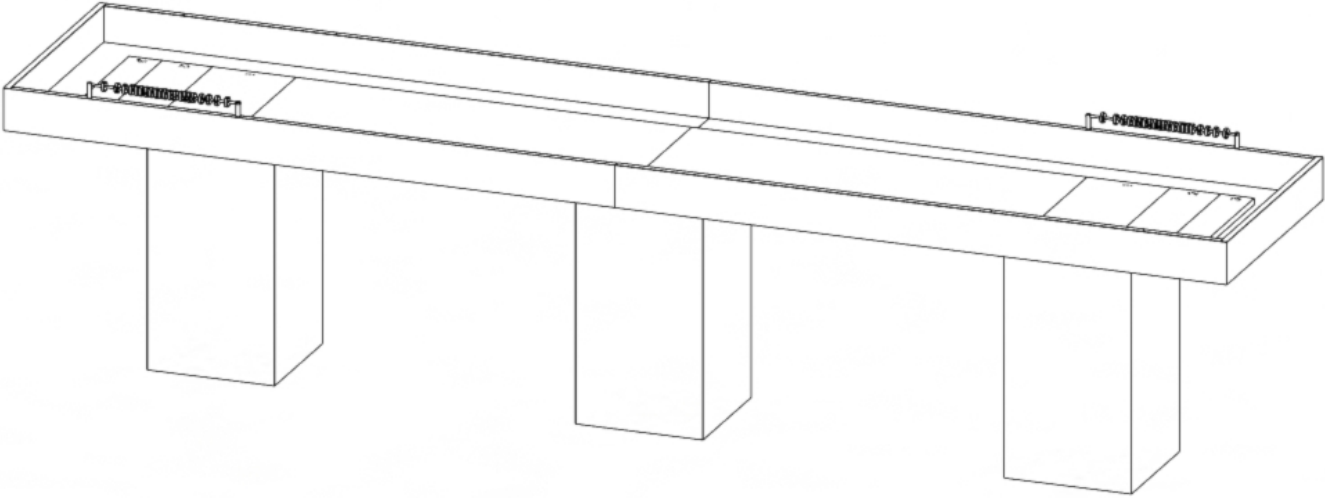

**“HEAVY ITEM HANDLE WITH CARE,
CAREFULLY ASSEMBLE COMPONENTS
TO AVOID DAMAGE”**

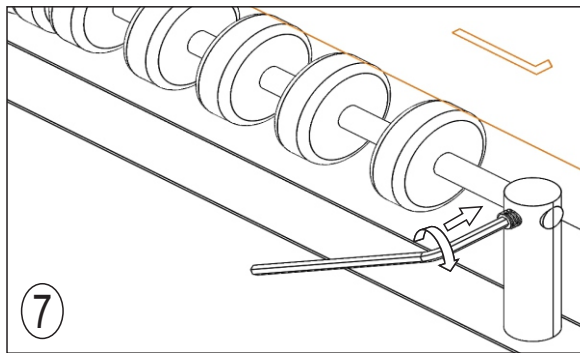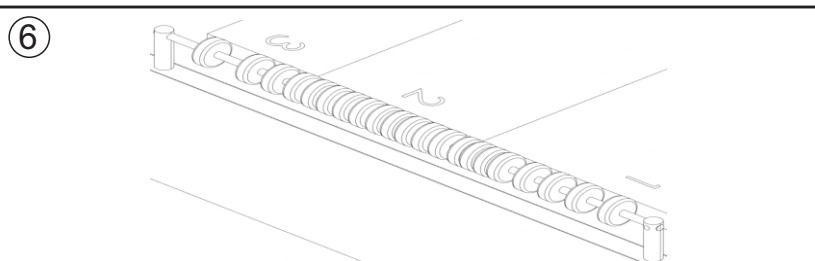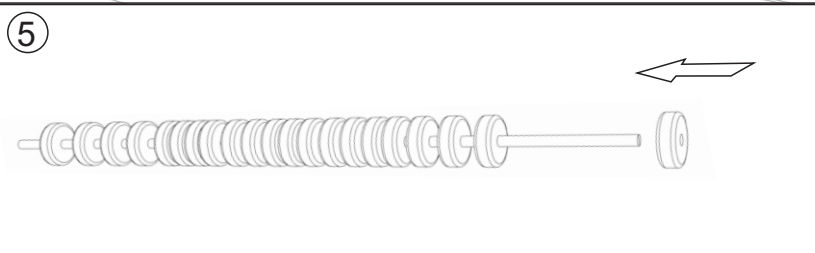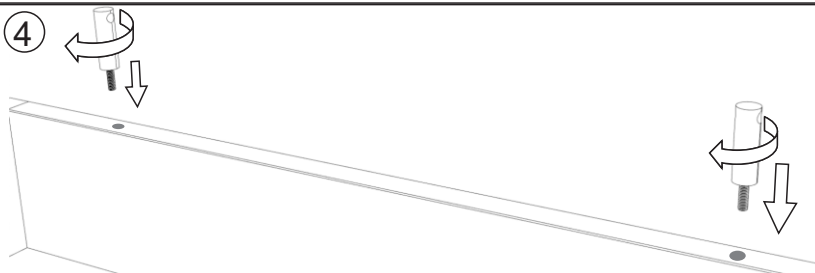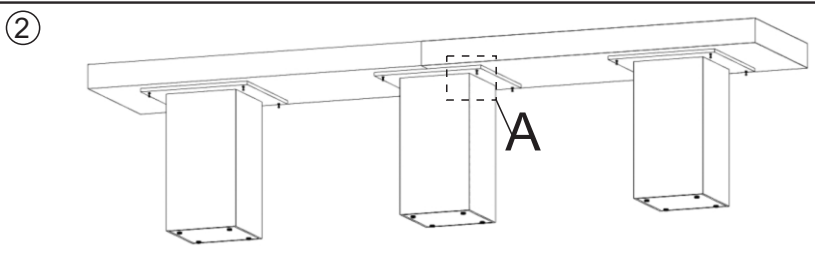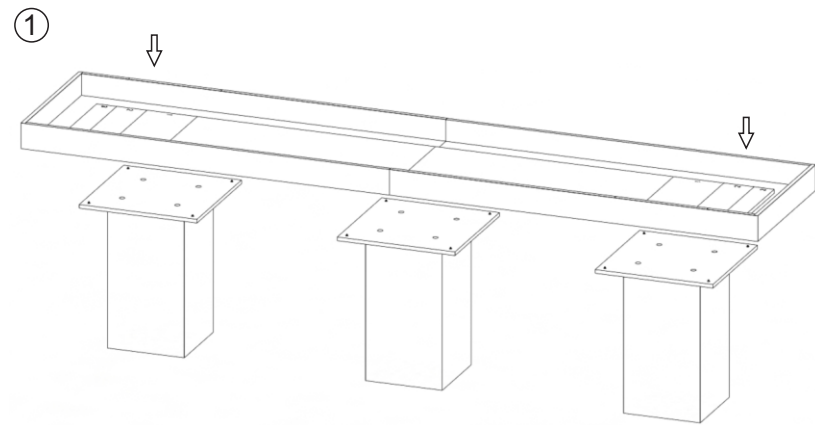



**“HEAVY ITEM HANDLE WITH CARE,
CAREFULLY ASSEMBLE
COMPONENTS
TO AVOID DAMAGE”**

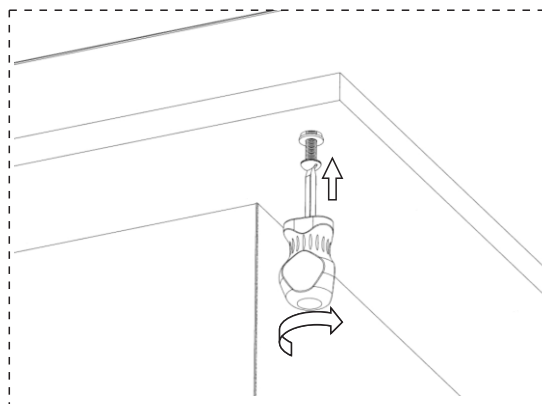

DET. A

**NOTE: SCREWDRIVER
NOT INCLUDED**

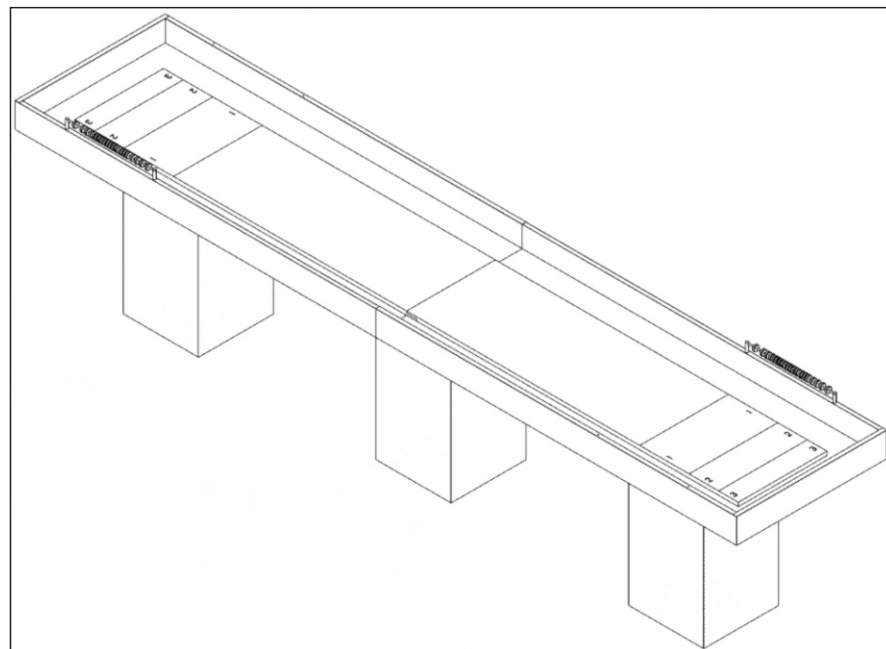

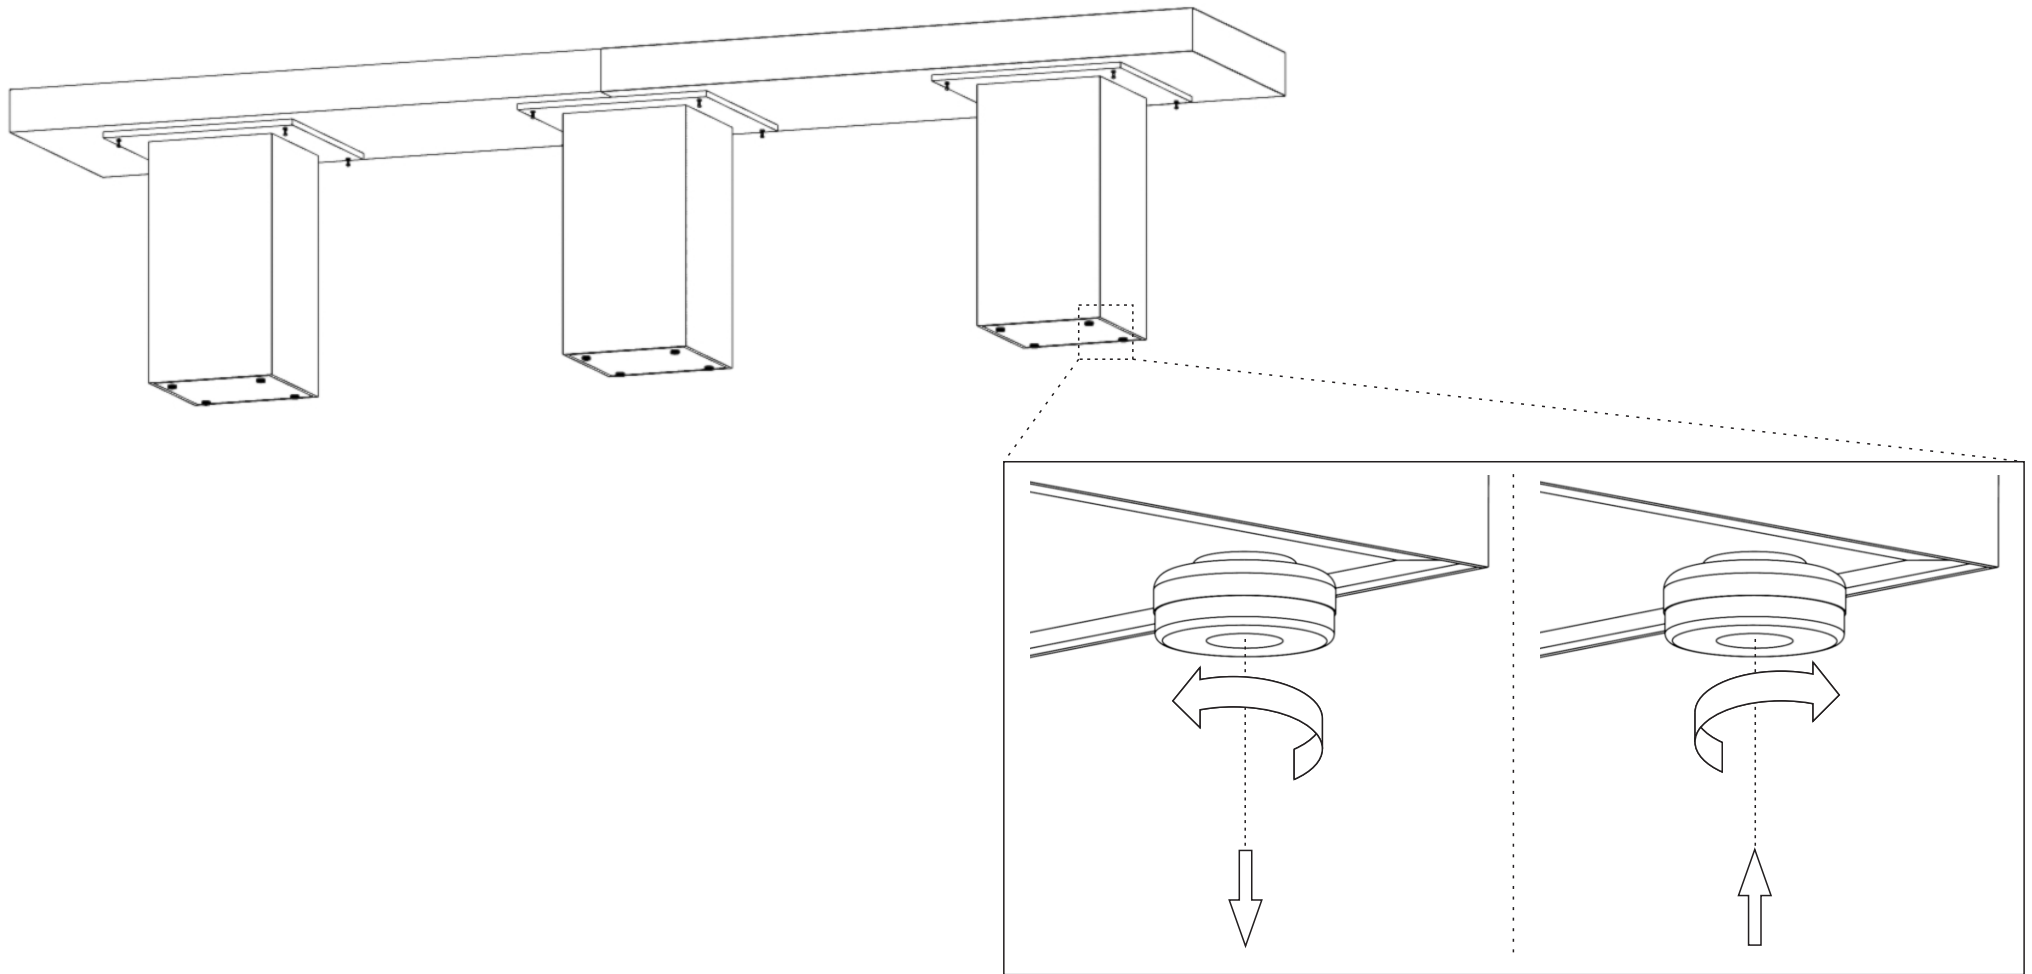

Adjusting Floor Levelers

Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

Adjust the Floor Levelers

Check for Stability – Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the Levelers – These are small adjustable feet found at the bottom corners of your furniture.

Adjust as Needed – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.