


PACKING LIST

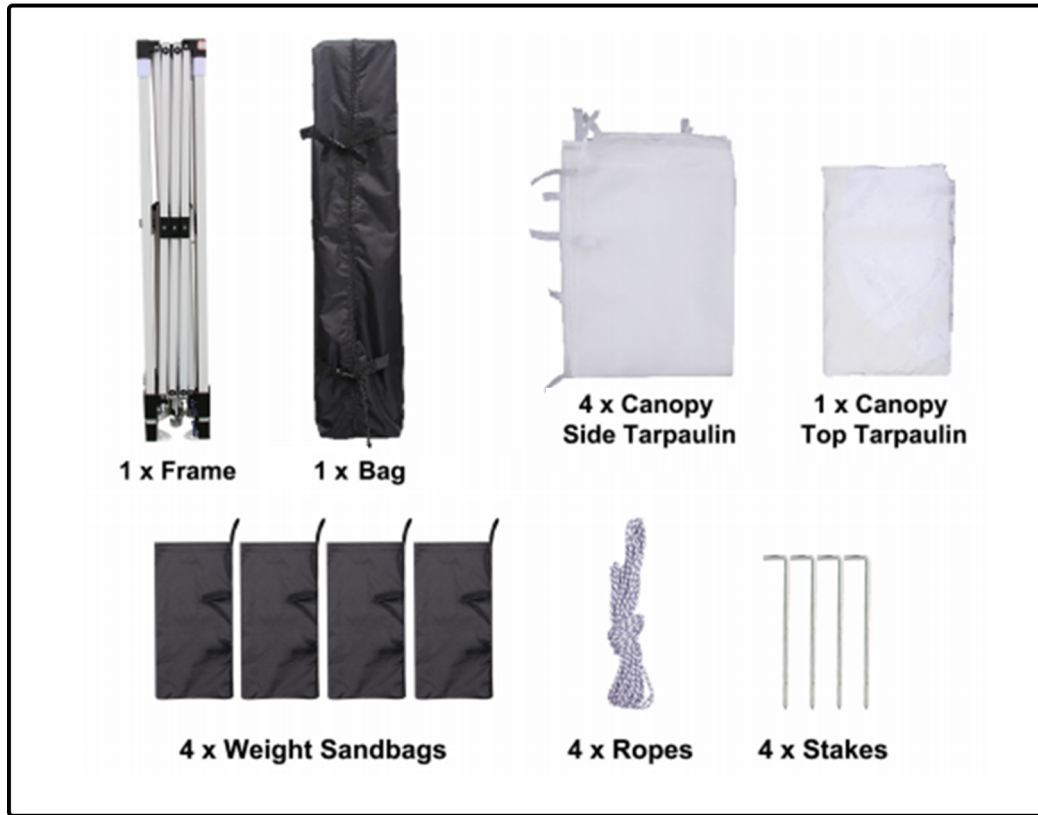

TENT MAINTENANCE INSTRUCTIONS

***Storage Requirements**

Store dry to prevent mildew. If the canvas is stored in a humid environment for a long time, mold will occur. Please allow the tent to dry completely before storing. And carefully unpack and fold it carefully to ensure the tent is not attached to sand. ***Clean Requirements**

Do not use soap or any chemical cleaner to clean the tent to damage the waterproof layer of the fabric; wash it with water.

***Nursing Method**

If there is slight mildew, please use diluted white vinegar + water 5:1 mixed solution with a soft brush to wipe, and then rinse thoroughly with water;

***Precautions.**

Canopy Tarpaulin is flammable; please keep away from open flames to avoid accidents.

AFTER-SALE SERVICE:

If there is any problem with the product, please feel free to contact our seller the first time; we will solve it for you. Thank you!


SIHANM

Pop up Canopy Tent Instruction Manual


Use - Precautions

1. To make the tent stable, who must use reinforcement nails during installation? After the installation, you need to check whether the facility is fixed. If used regularly, the stable structure of the tent needs to be checked periodically.
2. In windy conditions, you must use pile bags or weight bags to hold down the corners of the four corners. When the wind force is more remarkable than 40KM, or the heavy rainfall is more unique than 25~50mm/min, it is forbidden to use the tent. Otherwise, the consequences should be at your own risk, and using it in a snowy environment is not recommended.
3. The storage conditions of the tent must be a cool and dry place. Ensure that the surrounding cloth of the tent is dry, and store it separately from the structure during storage.
4. In the use process, carrying out the fire, barbecue, and other open fire activities under the tent are forbidden.
5. Folding tent has a limited lifespan and cannot under any circumstances replace a permanent shelter(long-term patio tent, garage, etc.).


Assembly

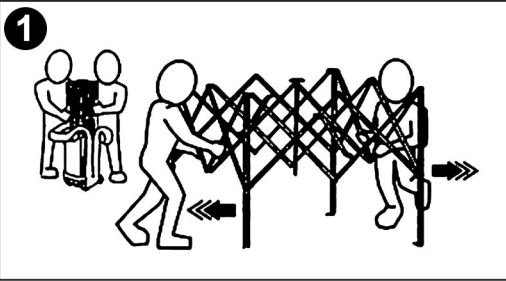


After taking everything out of the carry bag, Place the gazebo frame in the center of the area to be sheltered. Stand on opposite sides, grasp outer legs, lift off the ground and pull out, and be careful not to pinch fingers.

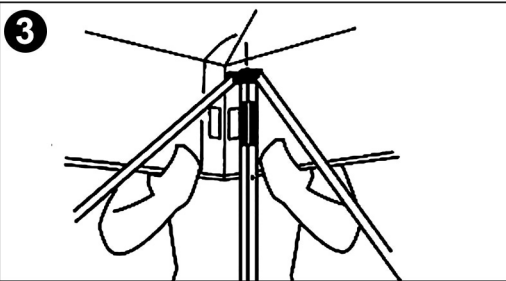


Attach to each hook and loop corner.

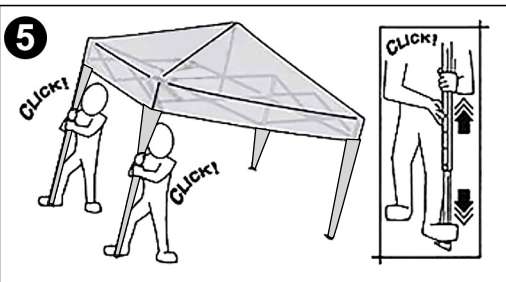


Lift each leg and slide the lower leg extension until the snap is locked.

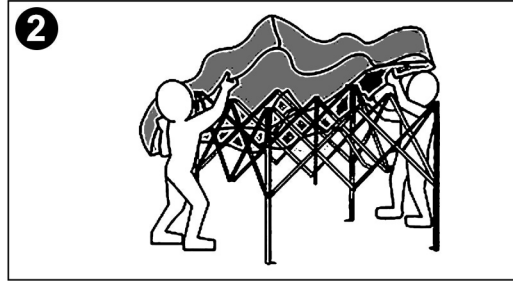


Pull frame out halfway—place fabric top on the framework.

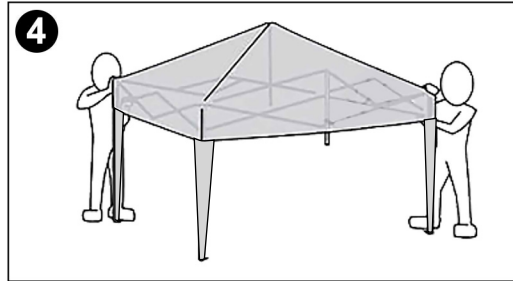


Pull frame entirely out. Push the leg socket over the button so that it is resting on top of the controller, Do this to each leg in the up or extended position.

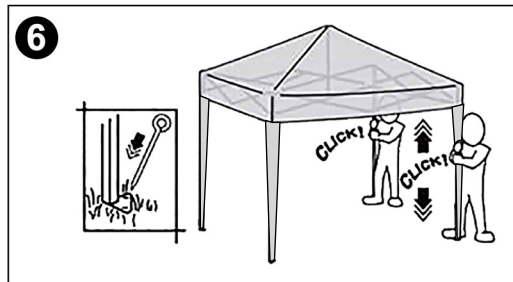

For height or leveling adjustment, depress leg latching buttons and slide the lower leg extensions as required to latch at any of the three adjustment holes. Put the four ground spikes through each hole in the bottom legs to secure them to the ground.

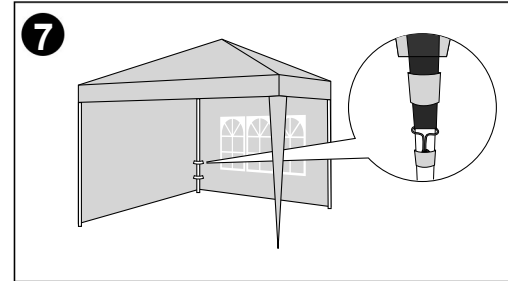


Two velcro stickers need to be fixed here. The first piece needs to be passed under the hook, as shown in the picture, and the second piece needs to be given in the middle of the elastic rope, as shown in the picture, because it can help. Your tent is better protected against strong winds.

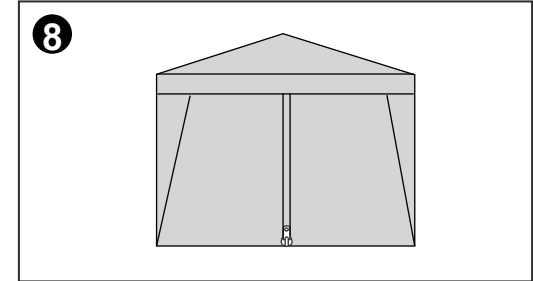


Use Velcro to attach the side tarpaulin around


De-Assembly

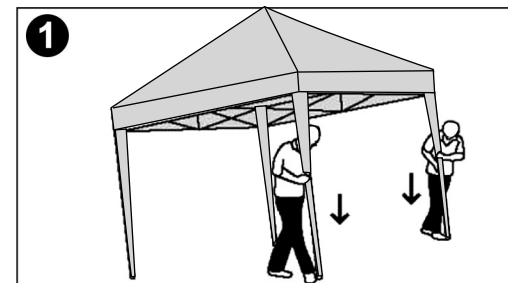

To make the tent stable, that must use reinforcement nails during installation. After the installation, you need to check whether the facility is fixed. If used regularly, the stable structure of the tent needs to be checked periodically.

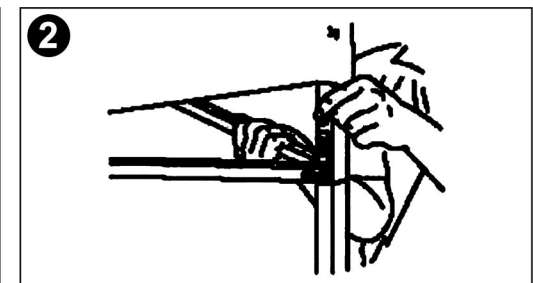

Release the auto slider at each top corner by pushing the snap button, and repeat at all four corners.

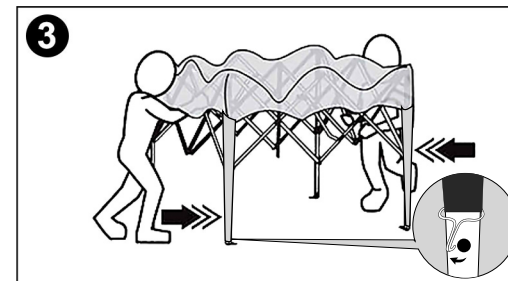

When you are ready to put away the tent, be sure to please take out the hook as shown in the picture so that it can be folded smoothly.

PACKING LIST

- 1 x Canopy Top Tarpaulin
- 4 x Canopy Side Tarpaulin
- 4 x Stakes
- 4 x Ropes
- 1 x Frame
- 1 x Bag
- 4 x Weight Sandbags