


SKU: HK-ED-002-N-63

JX-0405UL

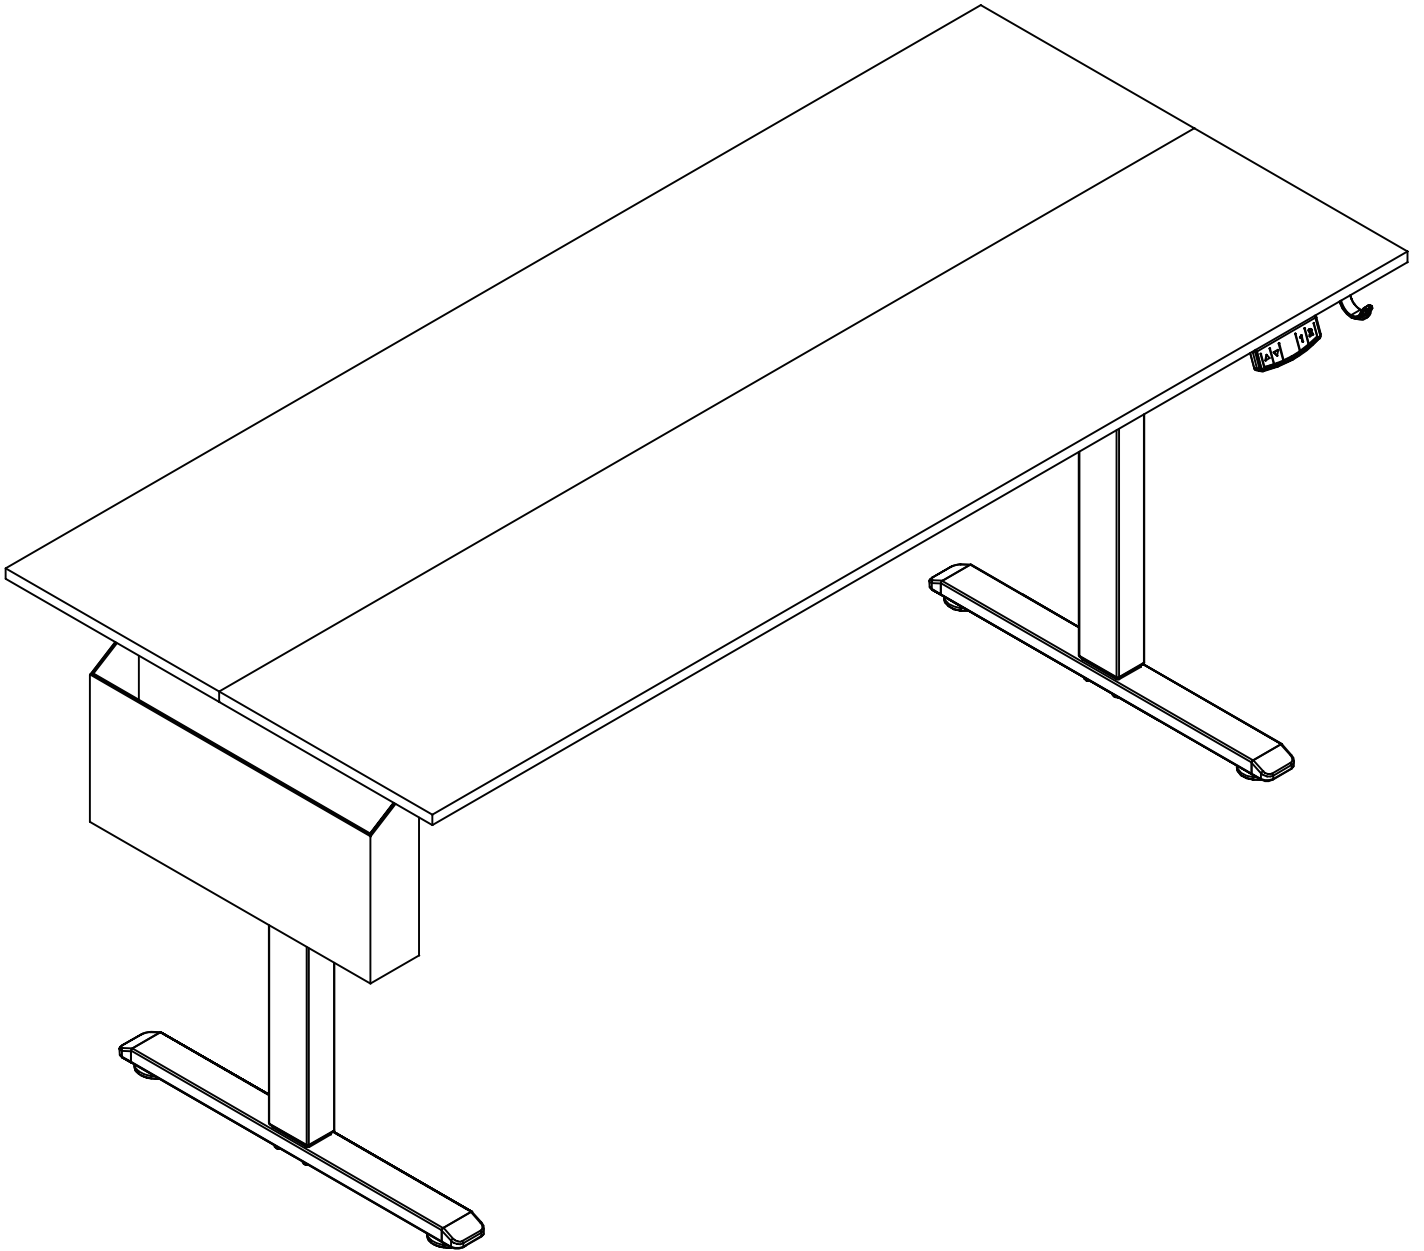

C9-20250830

63 Inch Electric Standing Desk User Manual

Before Assembly

Please check all accessories before installation and follow the user manual thoroughly for easy assembly.



Child Safety:

Children aged 8 and above should use this device under supervision and guidance. Children should not play with this device as a toy.



Team Installation:

For larger product, we recommend that you install the product together with other people




Laying Protection:

To protect the product and your flooring during installation, please lay protection before installation



No Electric Drill:

For longer use, please use the installation tools supplied with the product.

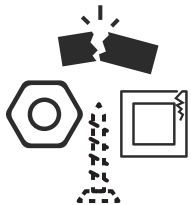

Missing Parts or Broken:

Please feel free to contact us via our Customer Support Email: Support@korfile.com. We promise to ship the missing or replacement parts to you free of charge.




Any questions?


Please do not hesitate to contact us!



Support@korfile.com

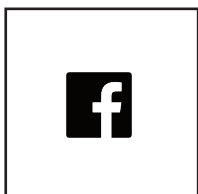

Facebook

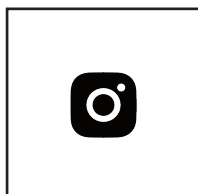

Instagram




YouTube



TikTok

Content

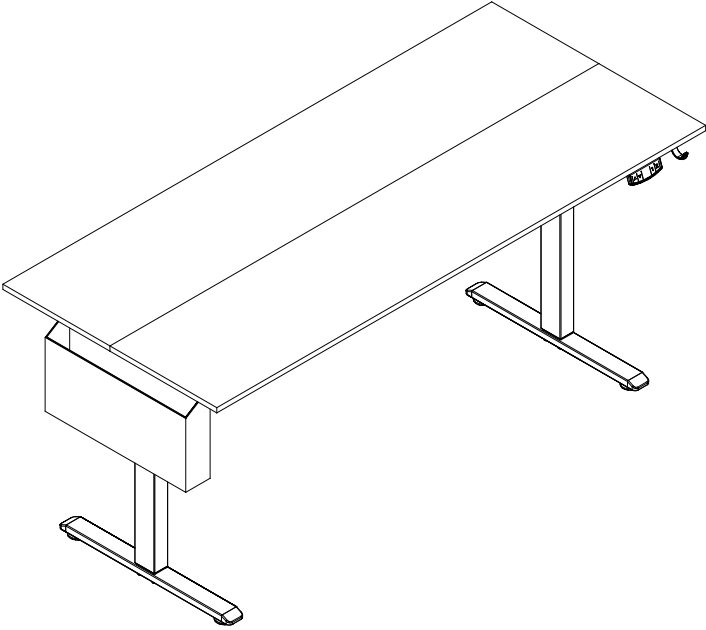○ Instructions	01
○ Disassembly Diagram	02
○ Accessories	03-04
○ Assembly Instructions	05-20
	
○ Operating Instructions	21
○ Problems You May Encounter	22-23

Instructions


Technical Data

Input	100-240VAC, 50/60HZ
Standby Power Consumption	≤1W
Operating Humidity	20%-80%
Operating Temperatures	0°C-40°C (32°F-104°F)
Sound Level	<55dB(A)
Height Setting Interval	72-120cm (28.3-47.2Inch)
Maximum Load	80KG (176.4LB)





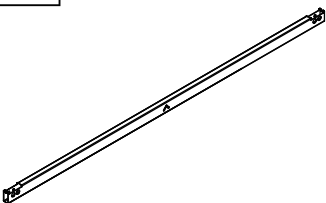
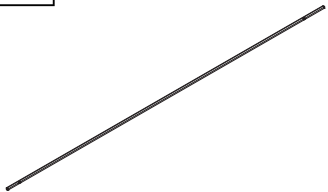
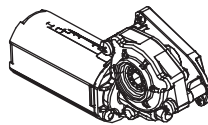
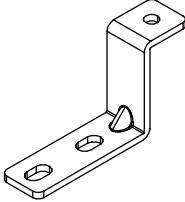
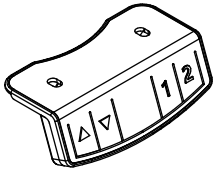
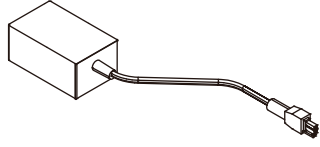
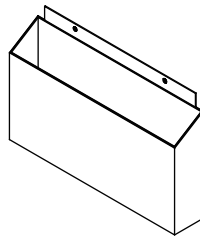
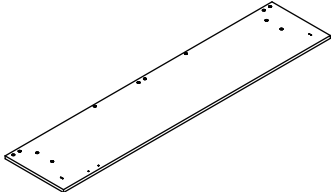
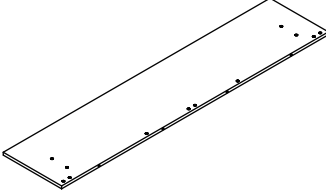
NOTE

1. The product must run a reset program before it is used for the first time after installation and each time the power supply is reconnected.
2. This product can only be used with the power supply device included with the product.
3. When using the product, make sure that the power cord is long enough for the table to be raised and lowered.
4. Use this product indoors or in a dry environment. Do not use the product in dusty environments. Avoid exposing the product to corrosive gases or liquids.
5. Avoid long-term (Over 2 minutes) use of the adjustment system. This may trigger the product's overheating protection, and it must be left unused for 18 minutes.
6. Ensure that there are no obstacles affecting the product's height adjustment range during use.
7. When using the desk height adjustment function, be sure to take precautions to prevent injury to others or damage to other items.
8. When maintaining the power system, be sure to disconnect the power cord from the outlet.


 
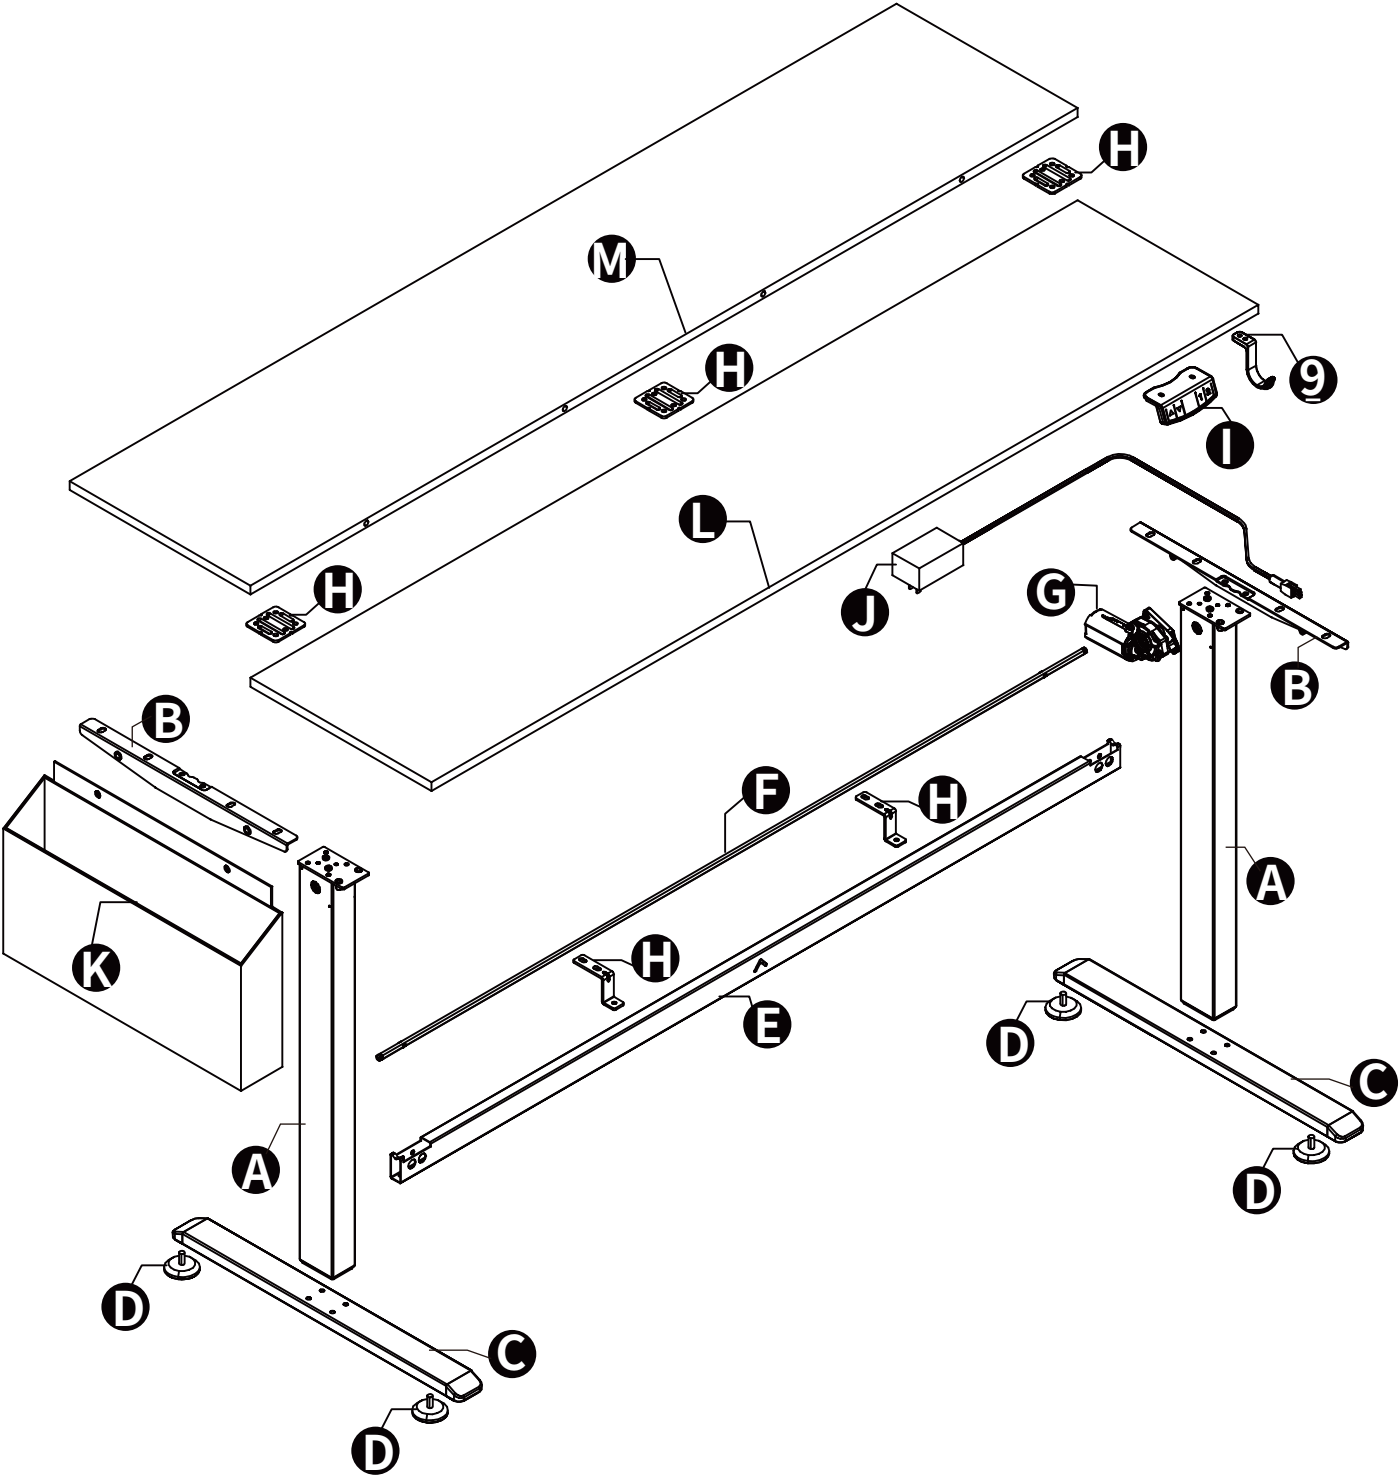


 
 



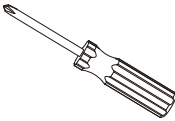
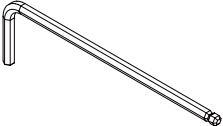
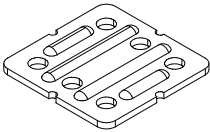
Disassembly Diagram

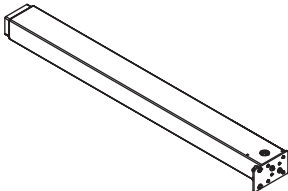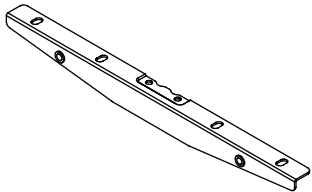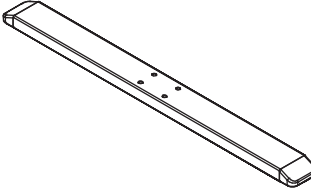

Accessories



<p>A x2</p> 	<p>B x2</p> 	<p>C x2</p> 	<p>D x4</p> 
<p>E x1</p> 	<p>F x1</p> 	<p>G x1</p> 	<p>H x2</p> 
<p>I x1</p> 	<p>J x1</p> 	<p>K x1</p> 	<p>L x1</p> 
<p>M x1</p> 			

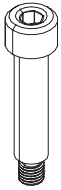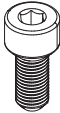Accessories
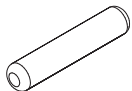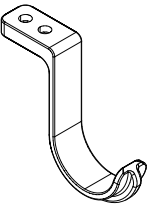
<p>① x8 +1</p>  <p>M6X32mm</p>	<p>② x2 +1</p>  <p>M6X8mm</p>	<p>③ x4 +1</p>  <p>M6X14mm</p>	<p>④ x2 +1</p>  <p>M4X12mm</p>
<p>⑤ x4 +1</p>  <p>M5X35mm</p>	<p>⑥ x30 +3</p>  <p>M6X12mm</p>	<p>⑦ x4 +1</p>  <p>ST4.8X13mm</p>	<p>⑧ x4 +1</p>  <p>φ8X40mm</p>
<p>⑨ x1</p> 	<p>⑩ x4</p> 	<p>⑪ x1</p> 	<p>⑫ x1</p> 
<p>⑬ x3</p> 			

Assembly Instructions



Step1: Check the heights of the two table legs A are consistent, and if have significant discrepancy, press down to ensure that the heights of both legs are the same.

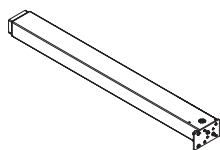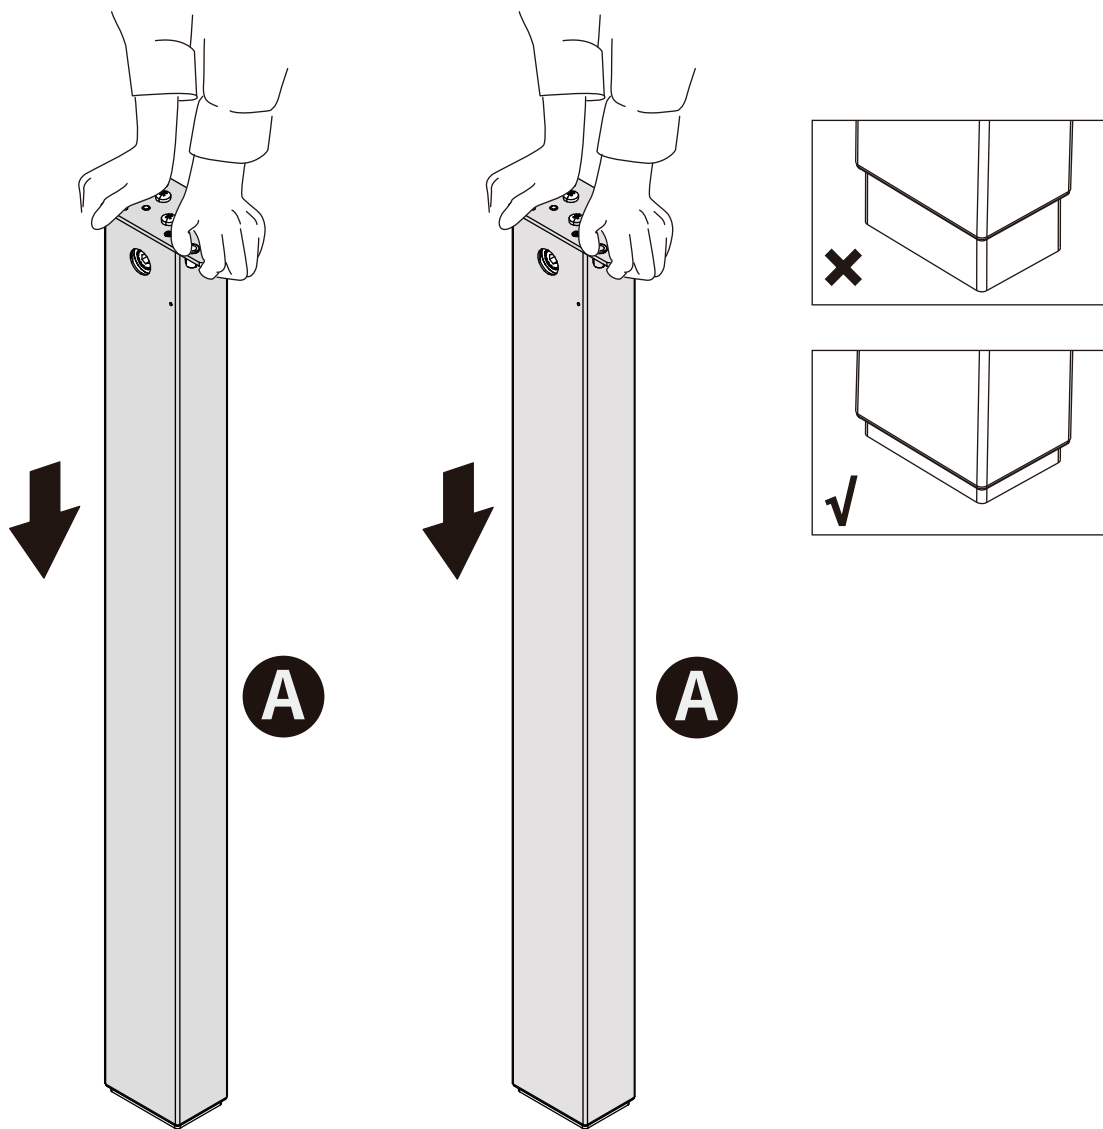

A 2PCS

Assembly Instructions


Step2: Fix part C to leg A with screw 1 . Screw the adjustable feet D into part C.

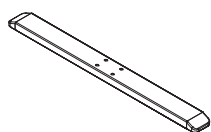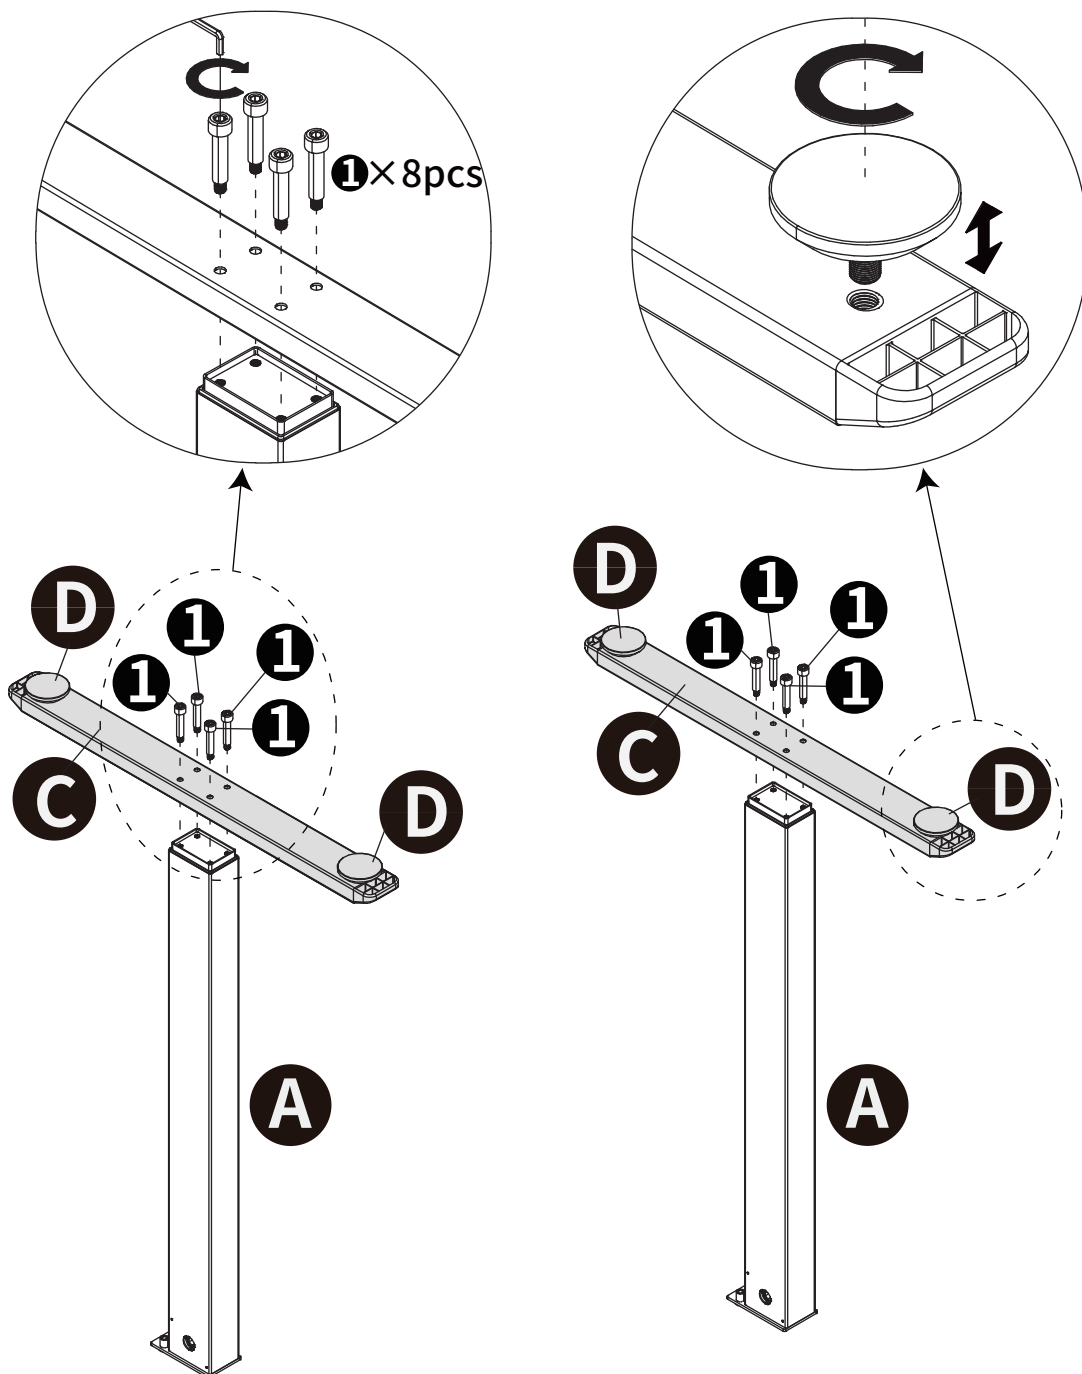

C 2PCS




 
D 4PCS




1 8PCS

Assembly Instructions

- Step3:**
- 1.Insert the long end of rod F into the motor G .
 - 2.Insert rod F with motor G into leg A .
 3. Check that the position of the protrusions on rod F matches the diagram.

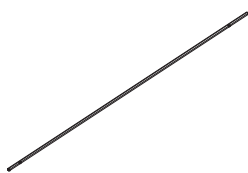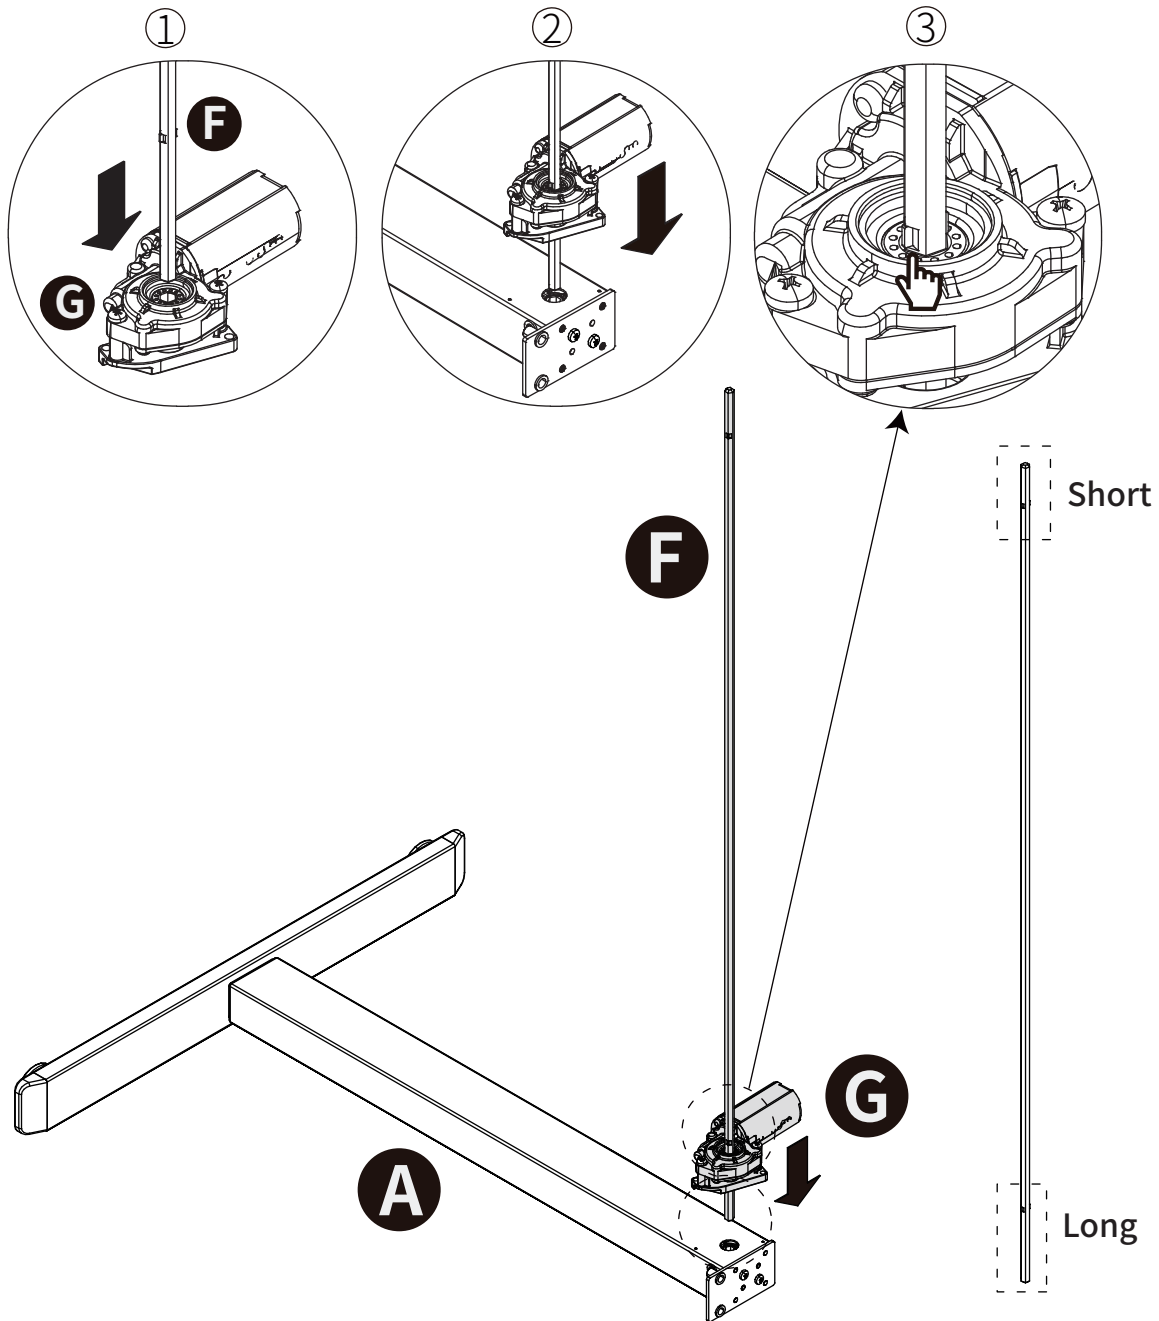


F 1PC

 

G 1PC


Assembly Instructions

- Step4:**
1. Adjust the position of the motor G to keep the motor holes are aligned with the holes on the table legs A.
 2. Insert the short end of rod F into another leg A.
 3. Check that the position of the protrusions on rod F matches the diagram.

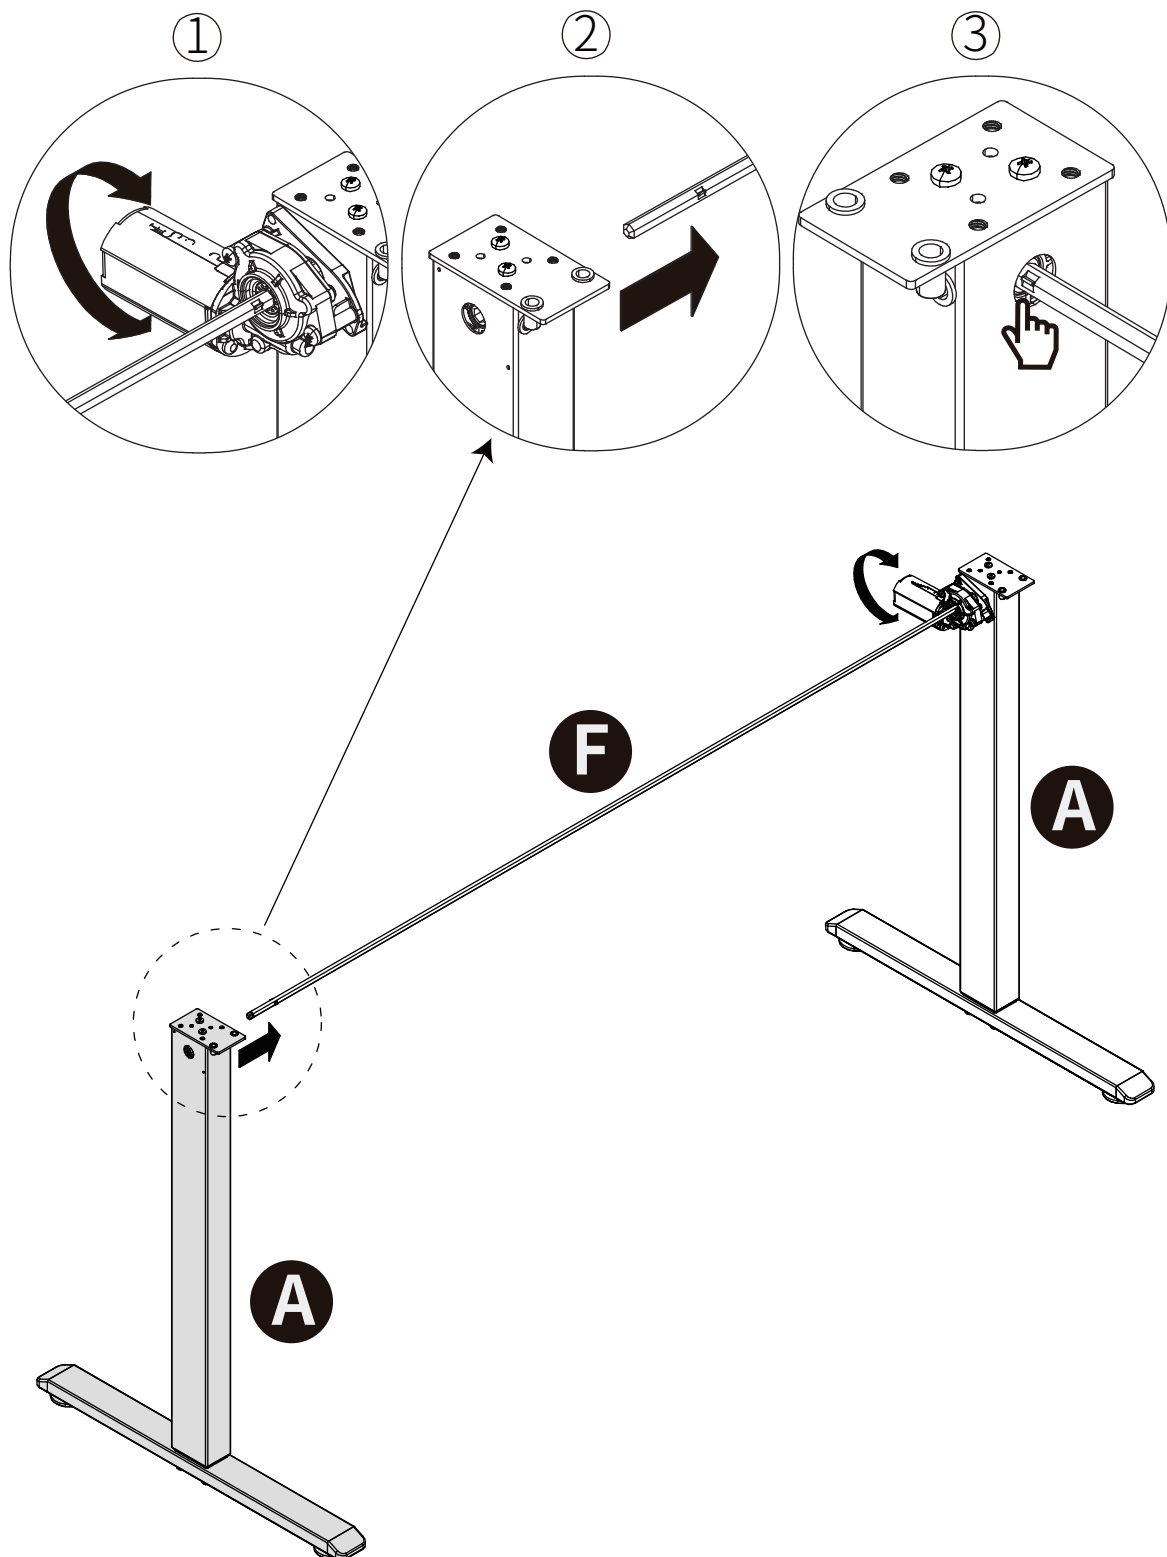

Assembly Instructions



Step5: Fix the motor G on the leg A with screw 4 .

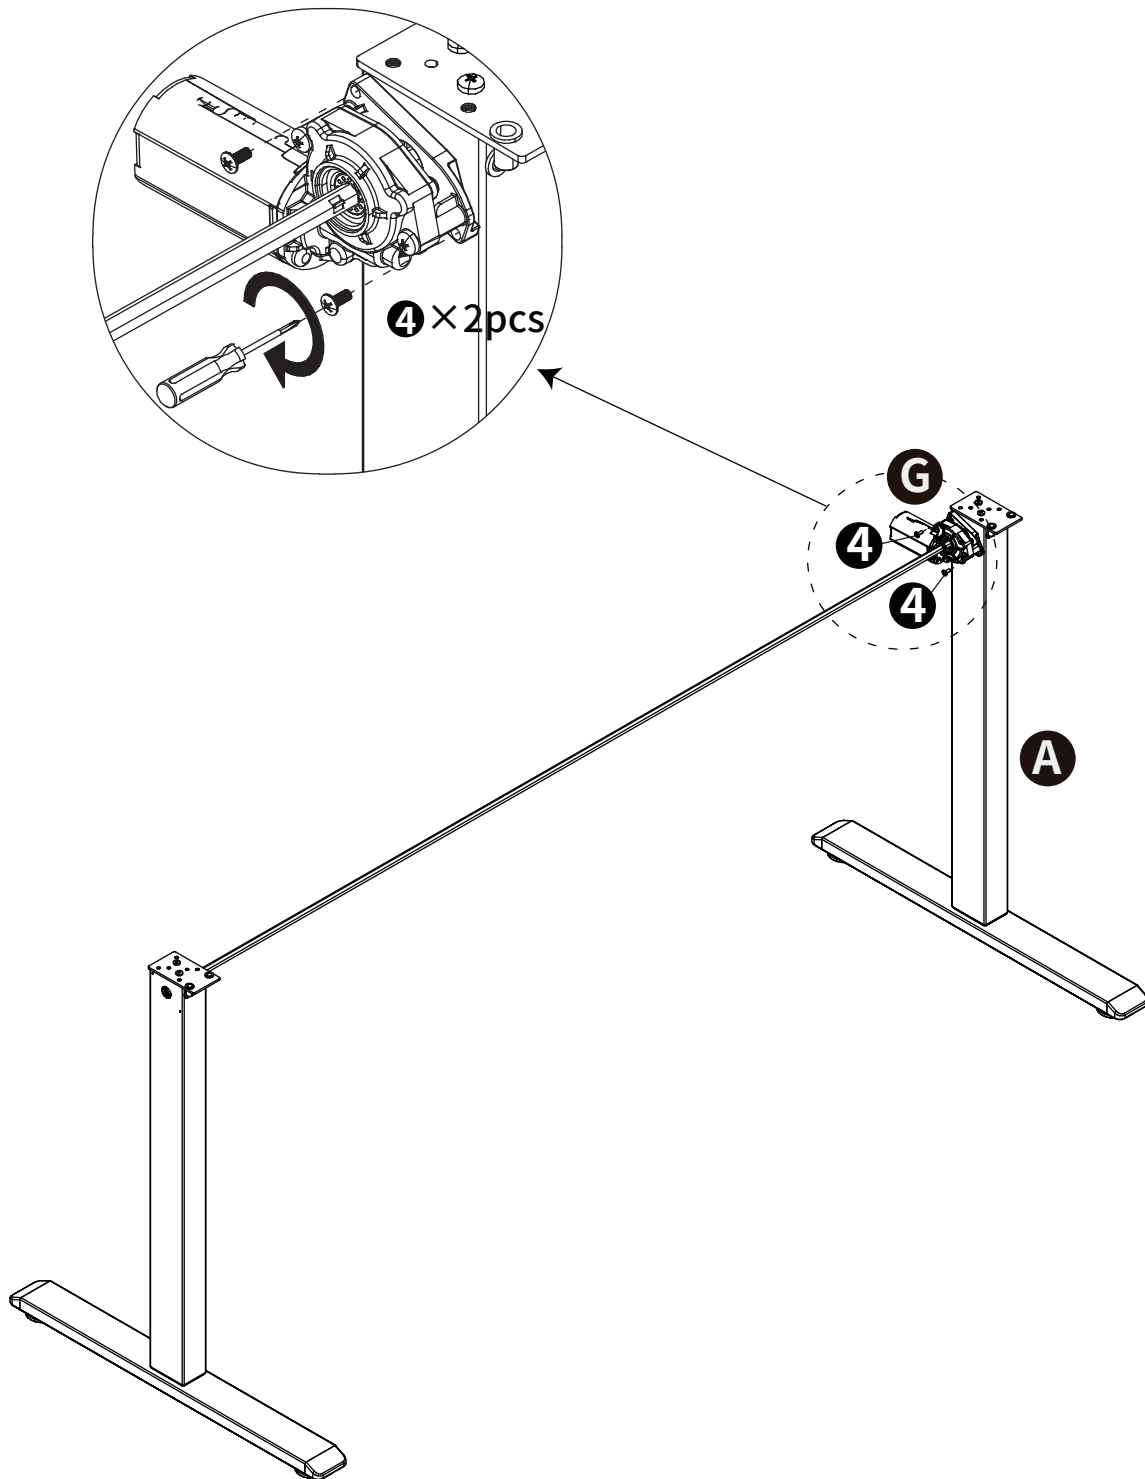


4 2PCS

Assembly Instructions

- Step6:** 1.Align the notch on tube E with the extended part on leg A.
2.Fix the tube E on the leg A with screw 3

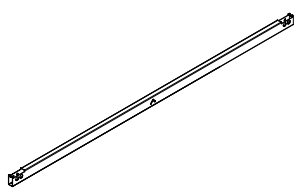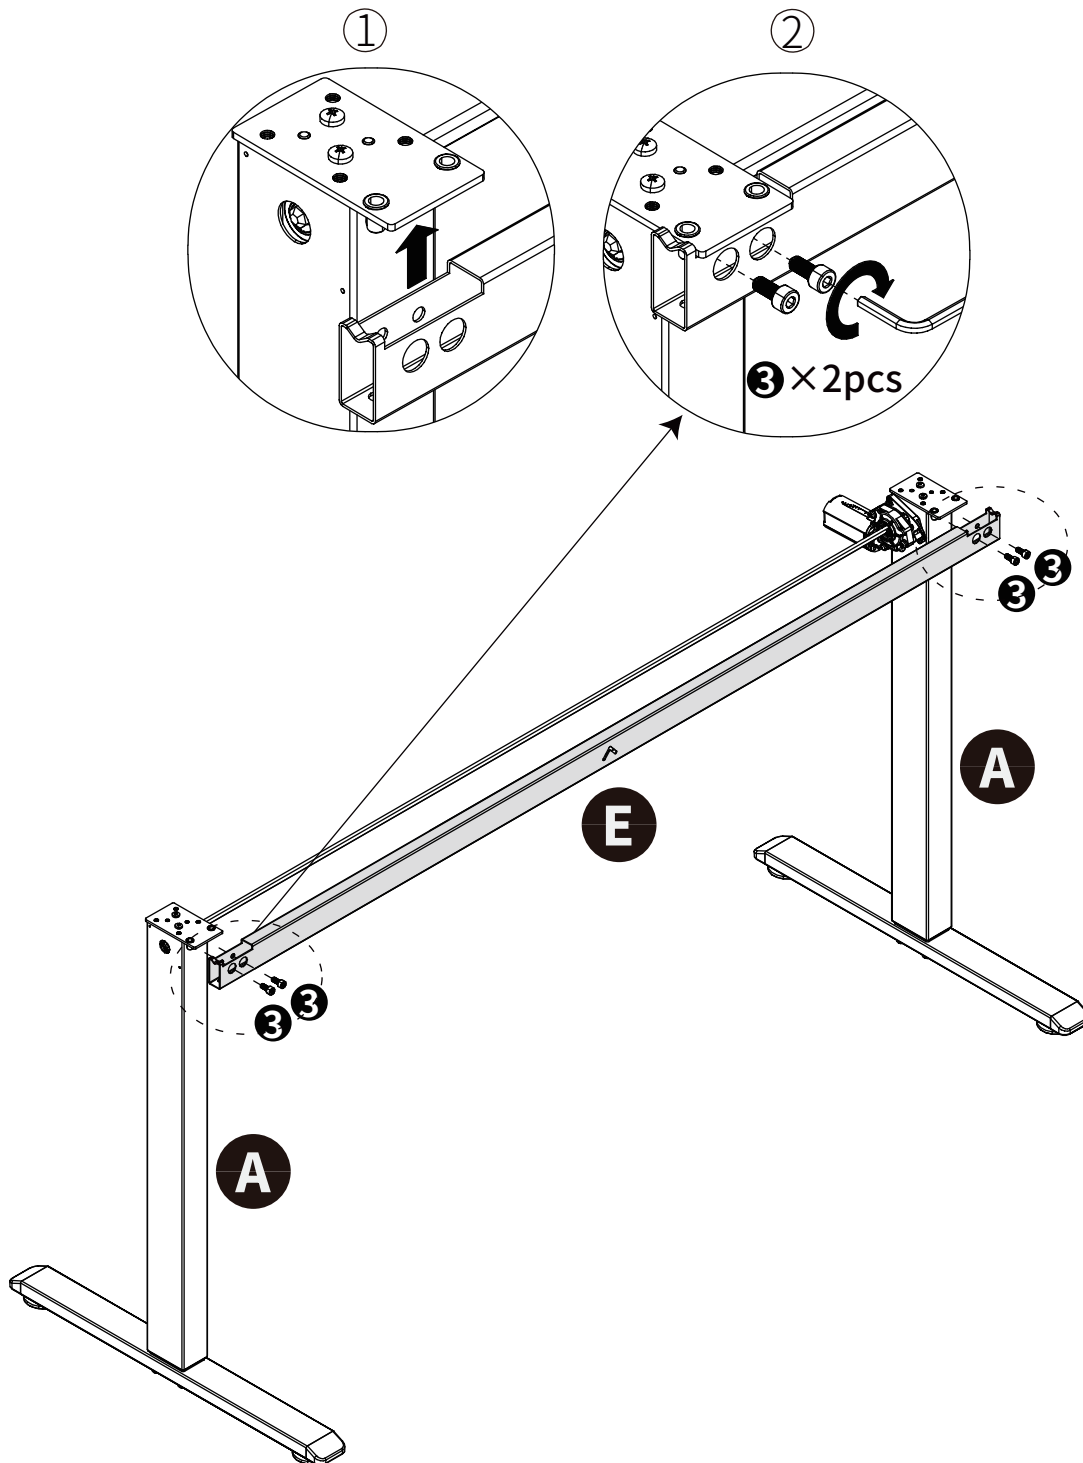


E 1PC

 

3 4PCS



Assembly Instructions

Step7: Fix tube E with leg A by using screw 5.

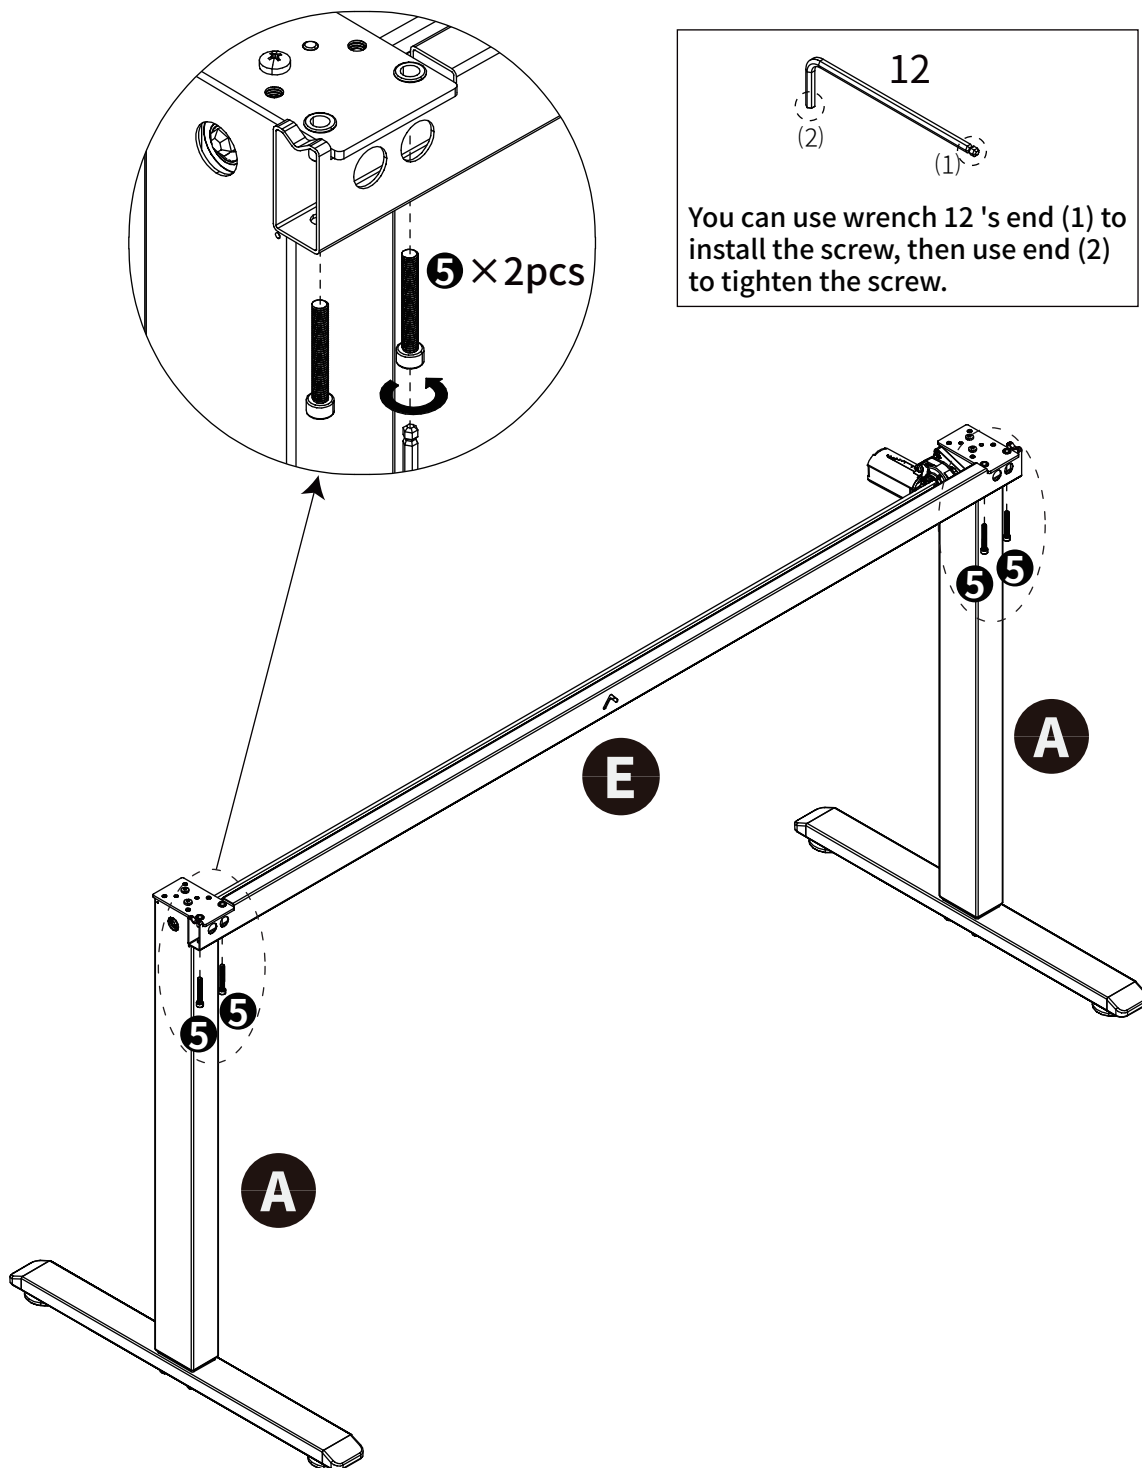

Assembly Instructions

Step8: Fix the part B on the leg A with screw 6 .

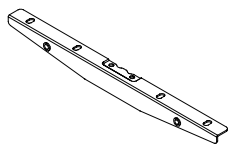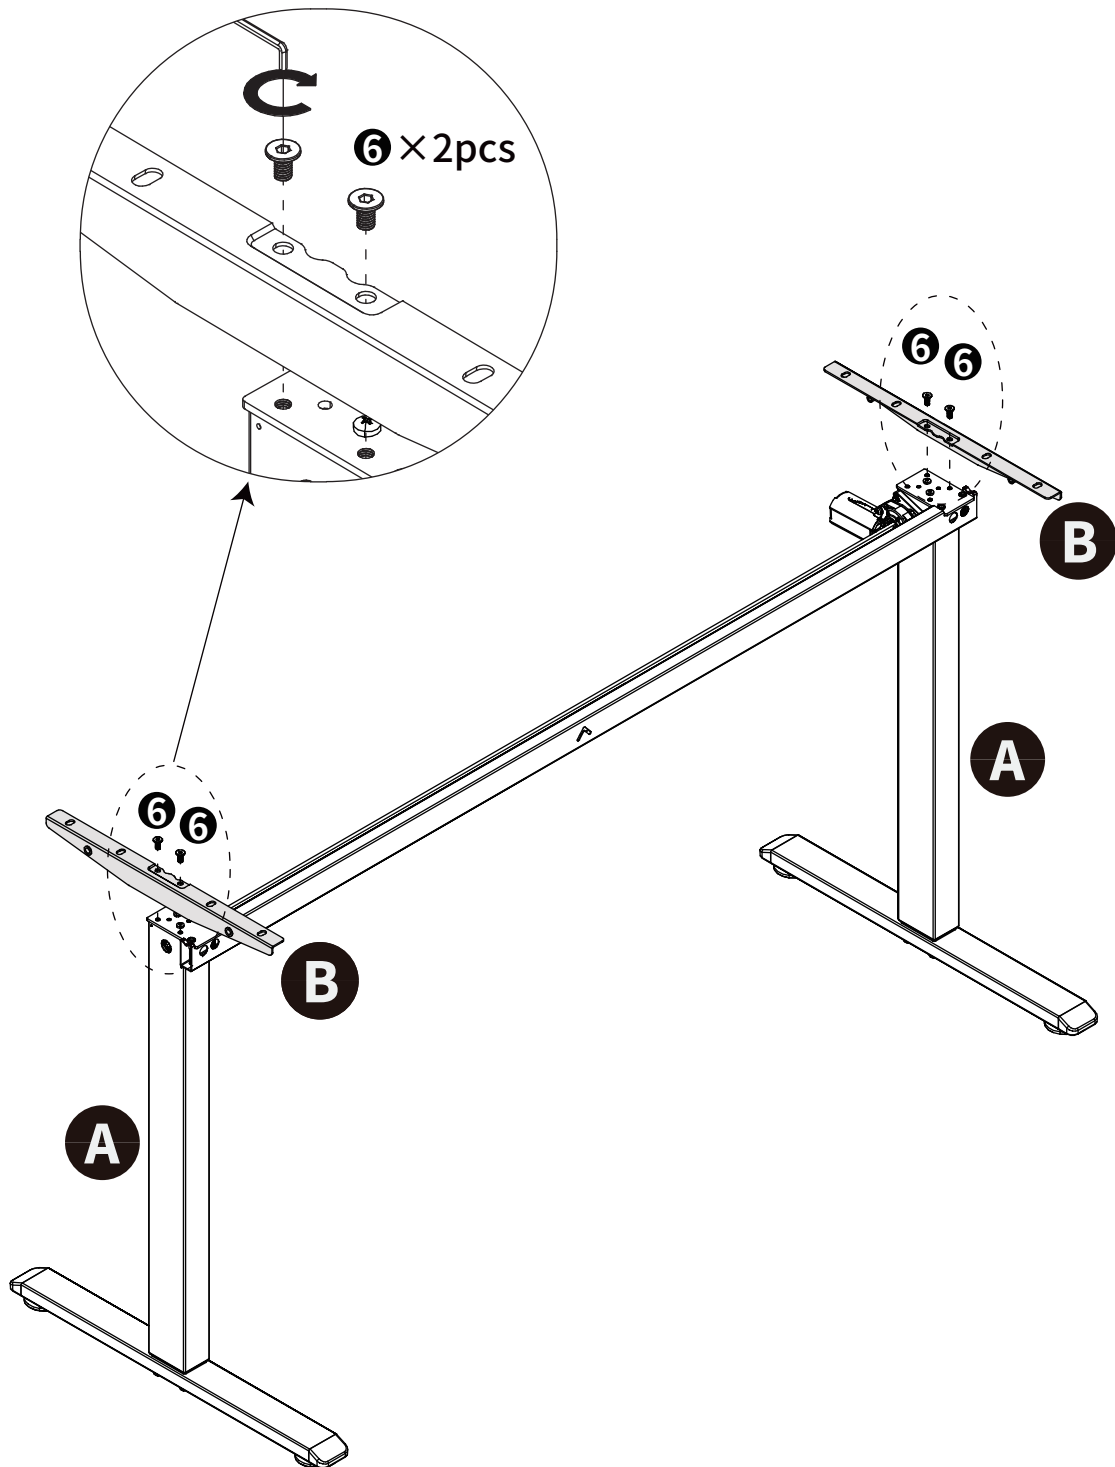



B 2PCS



6 4PCS




Assembly Instructions

Step9: Connect the board L to board M with wooden pin 8.

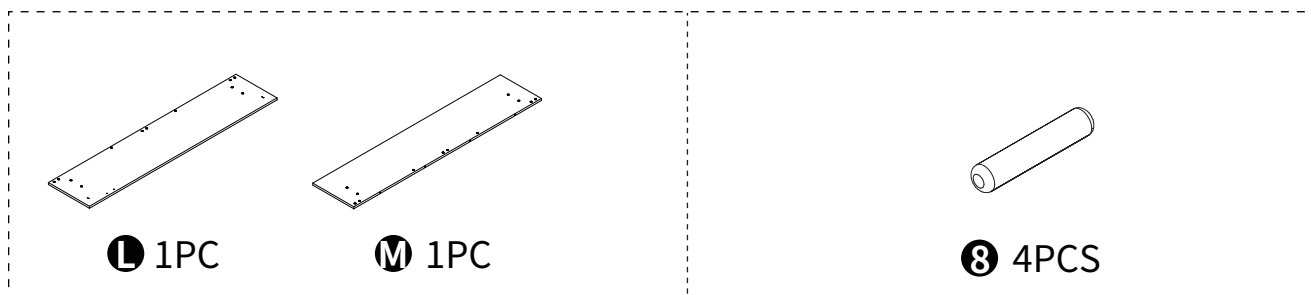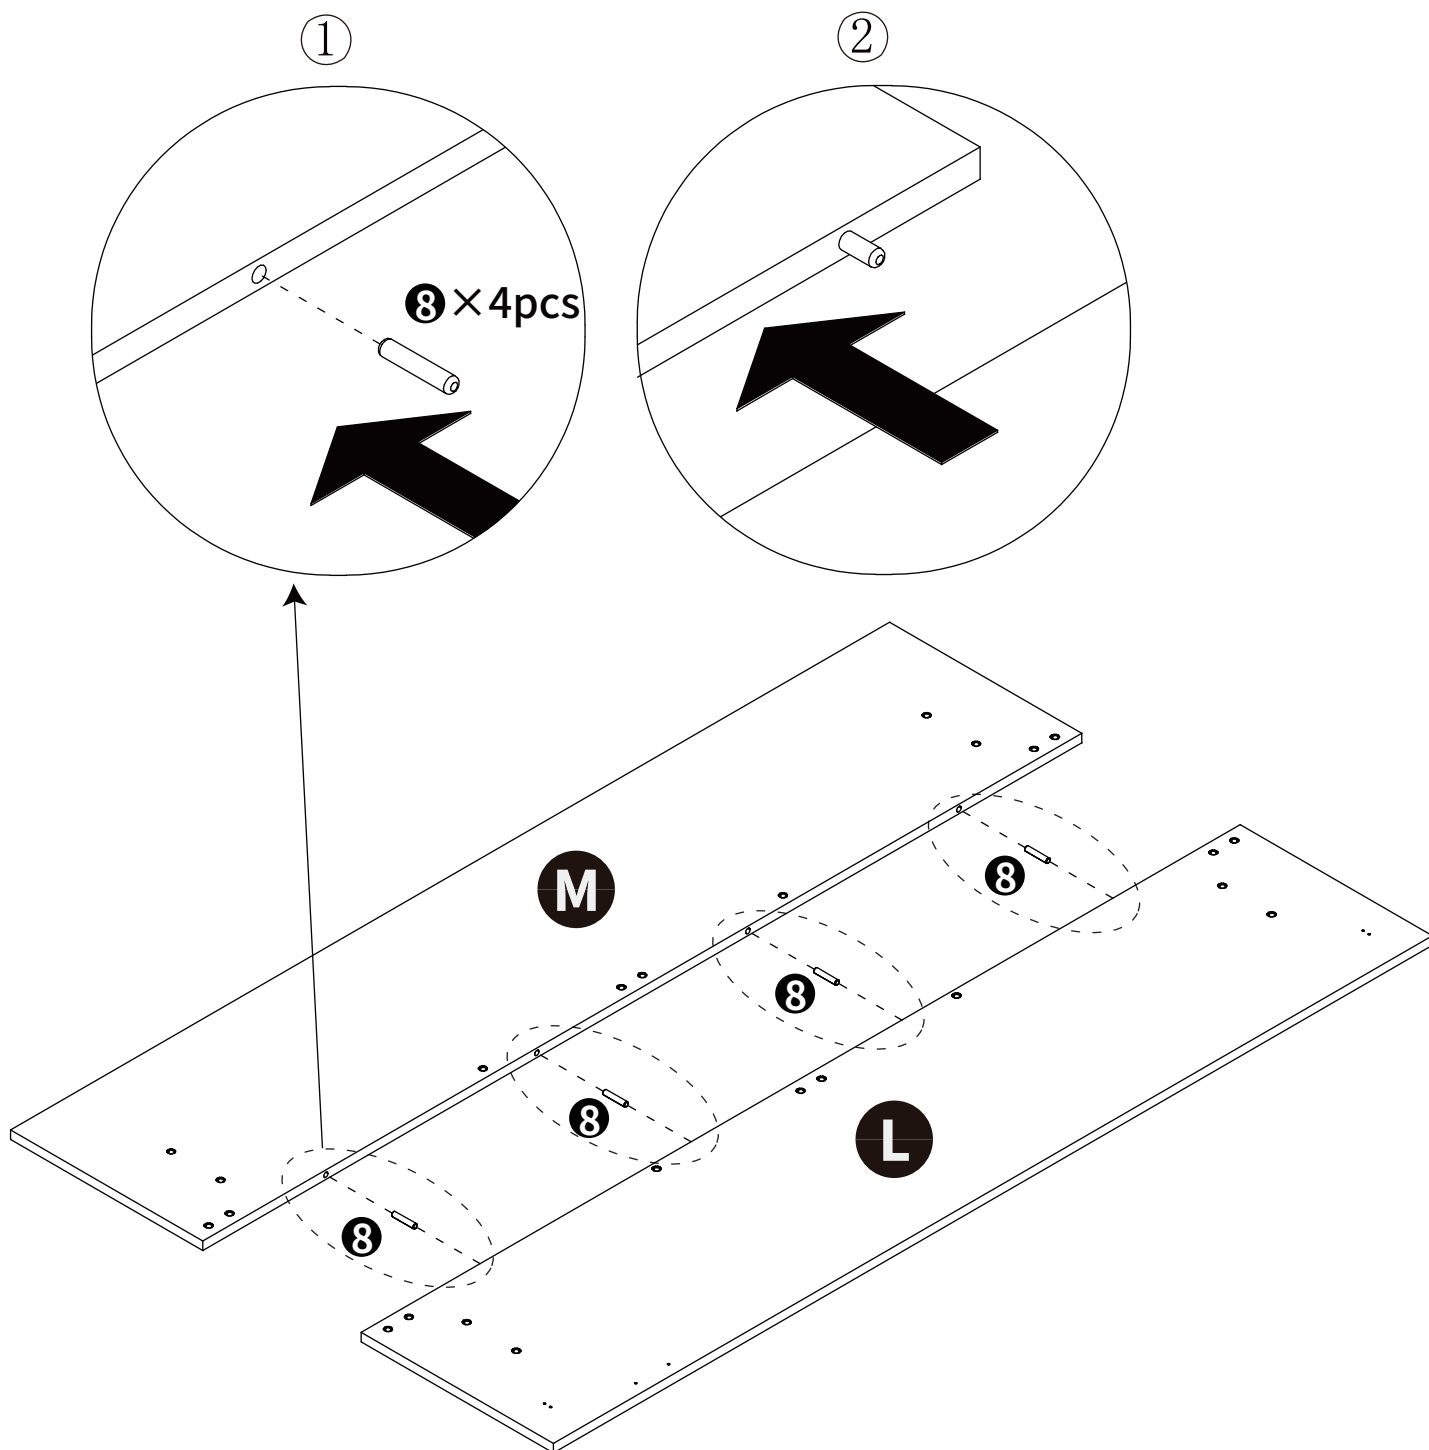


Assembly Instructions

Step10: Fix board L & M by using part 13 and screw 6.

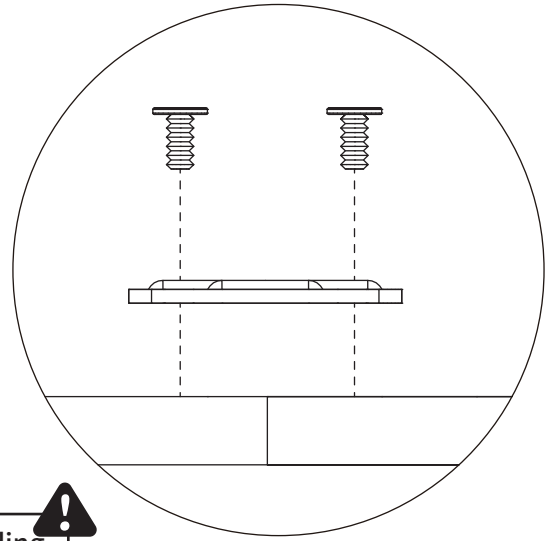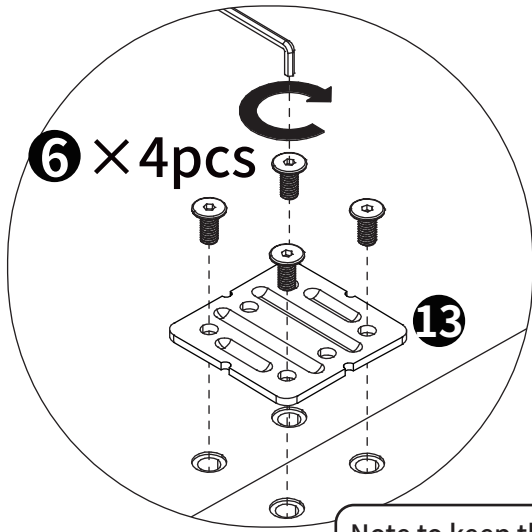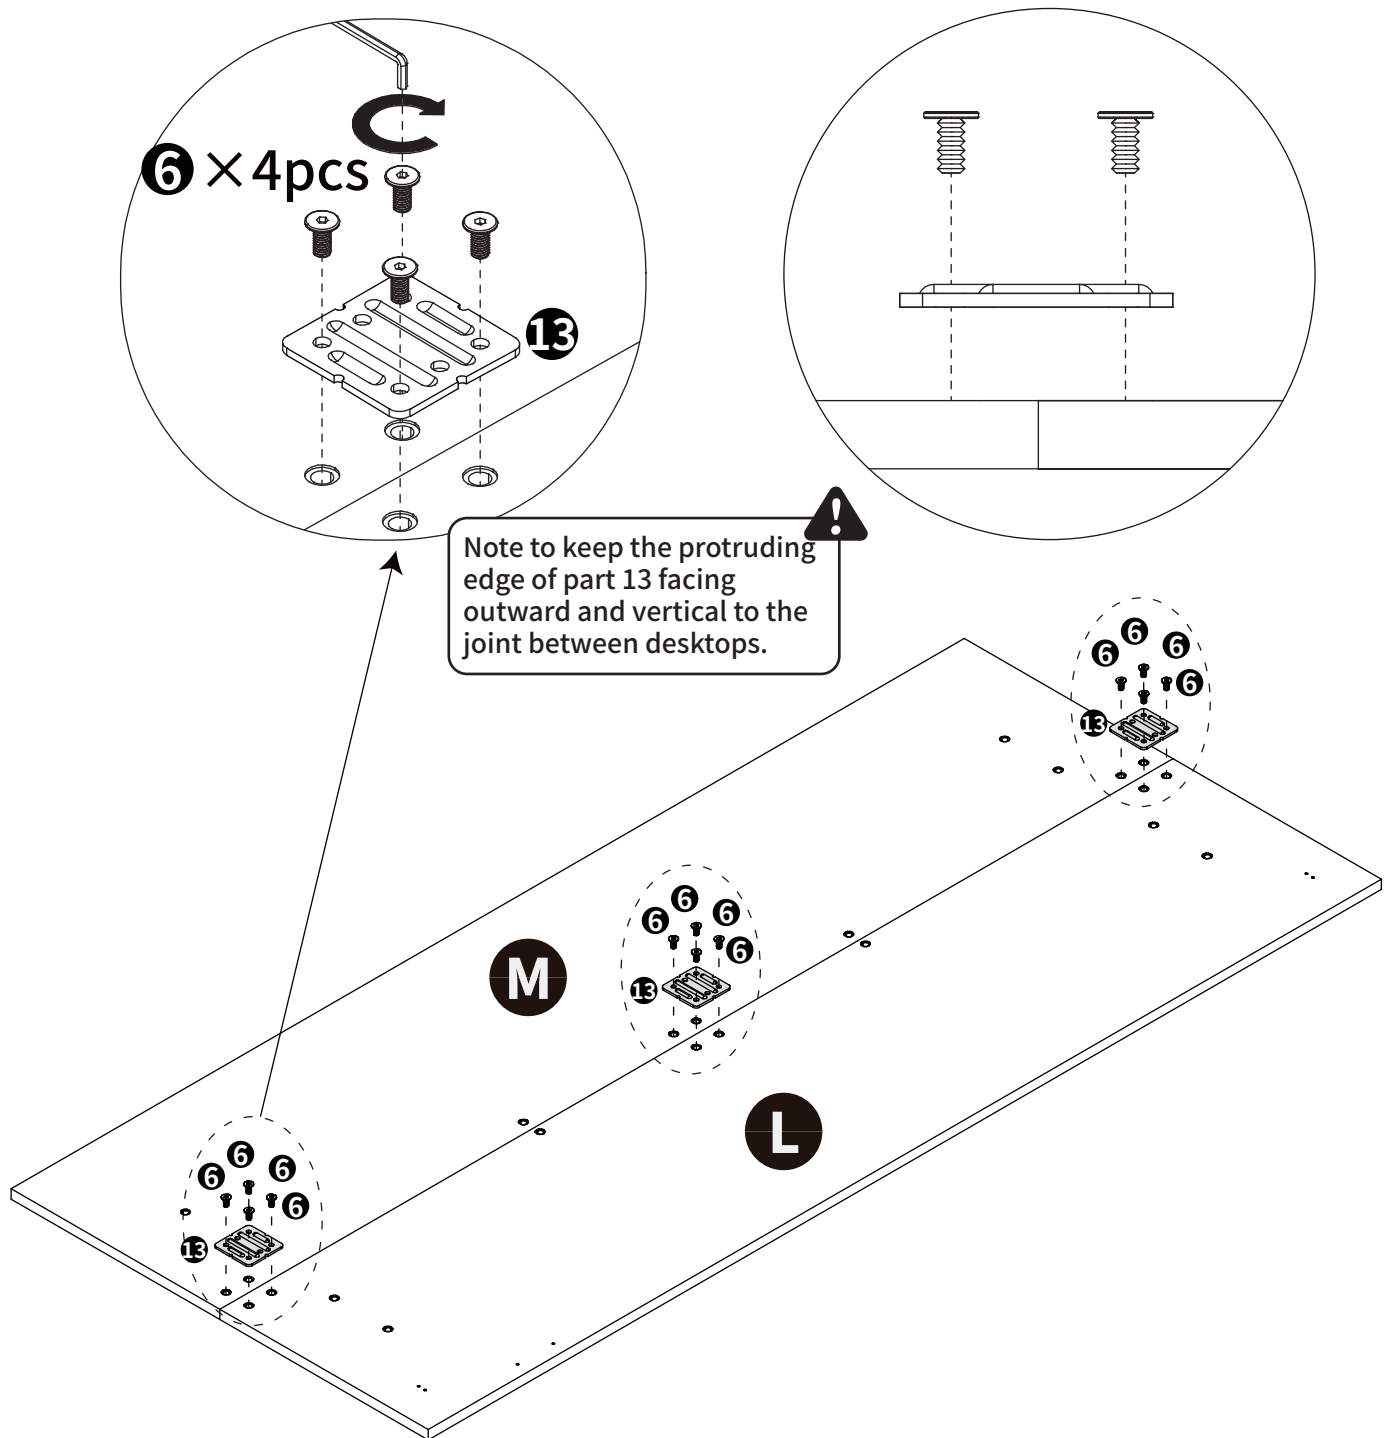


Note to keep the protruding edge of part 13 facing outward and vertical to the joint between desktops.

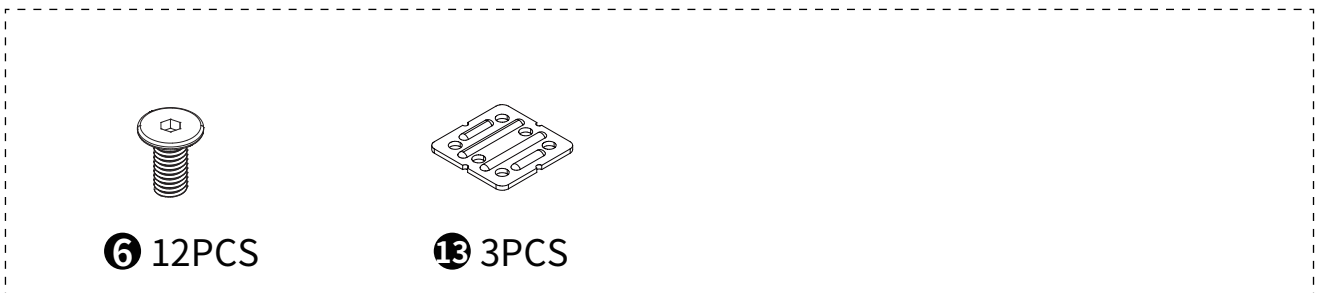

Assembly Instructions


Step11: Fix the board L & M on the part B with screw 6 .

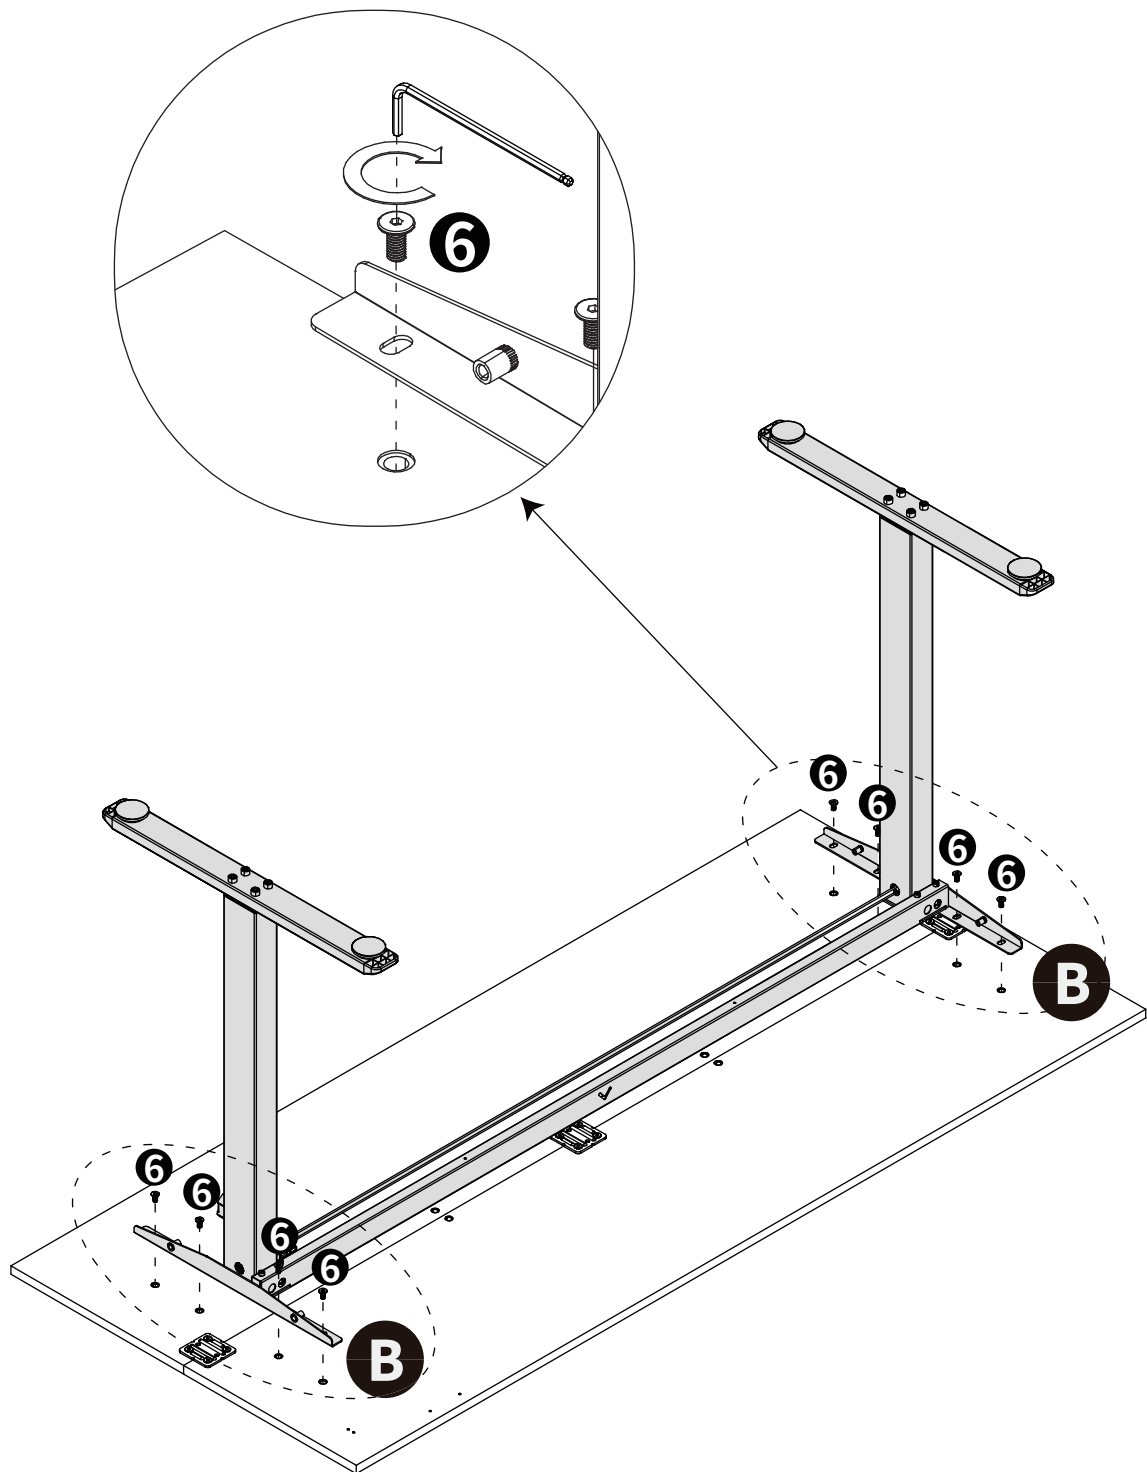


6 8PCS

Assembly Instructions

Step12: Fix the part H on the tube E with screw 2&6.

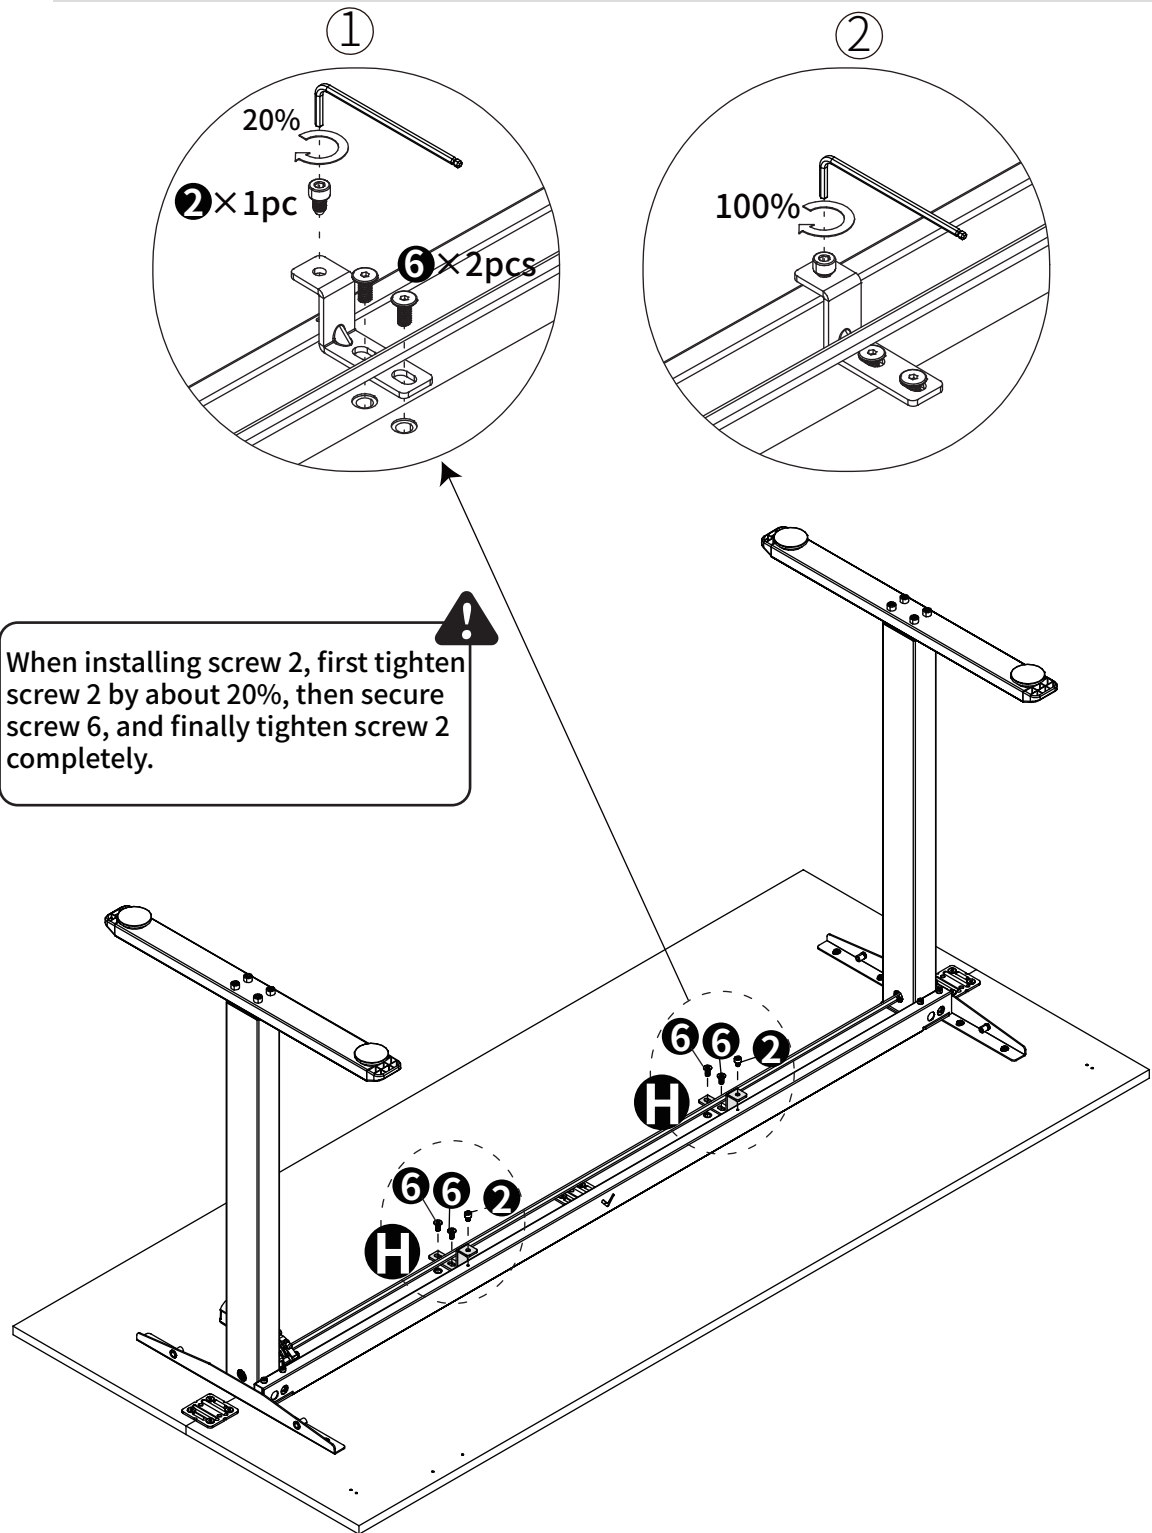

When installing screw 2, first tighten screw 2 by about 20%, then secure screw 6, and finally tighten screw 2 completely.

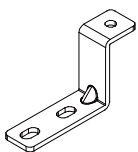

H 2PCS





2 2PCS



6 4PCS

Assembly Instructions


Step13: Fix controller I on the board with screw 7. Install hook 9 on the board with screw 7.

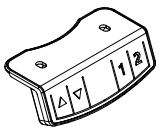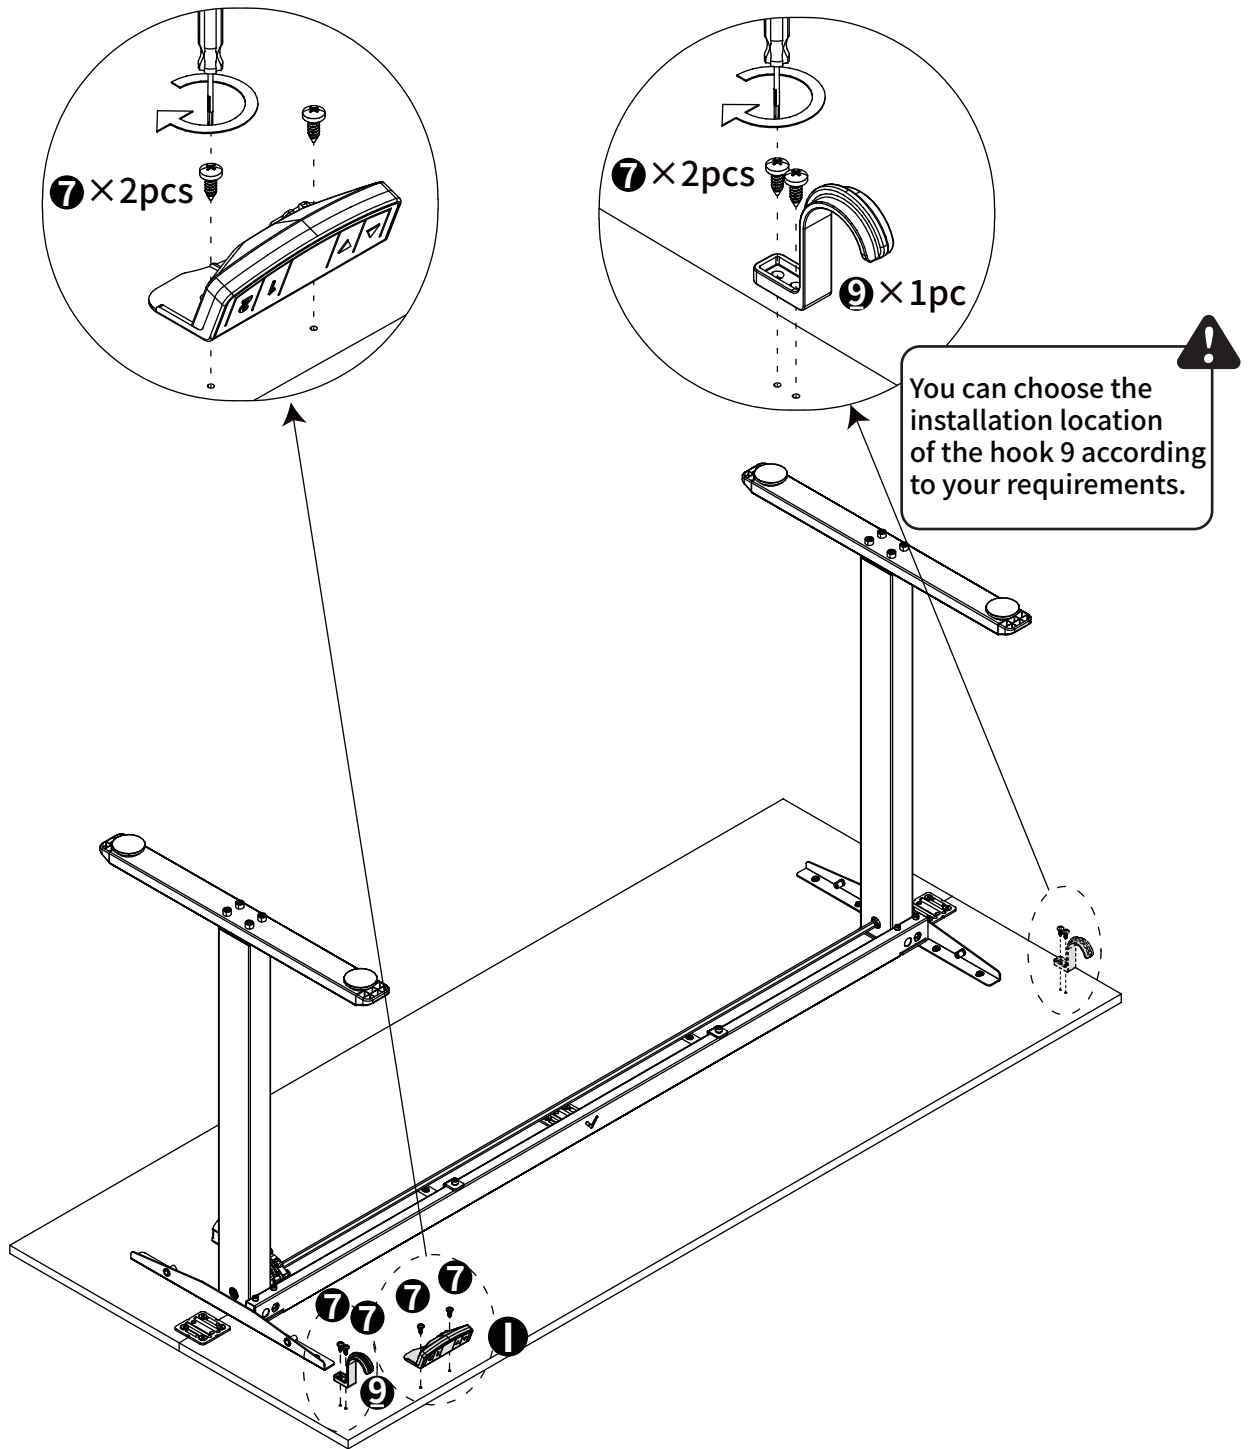

1 1PC




 
7 4PCS



9 1PC

Assembly Instructions

 Step14: Connect power cables J and motor's cable with controller .

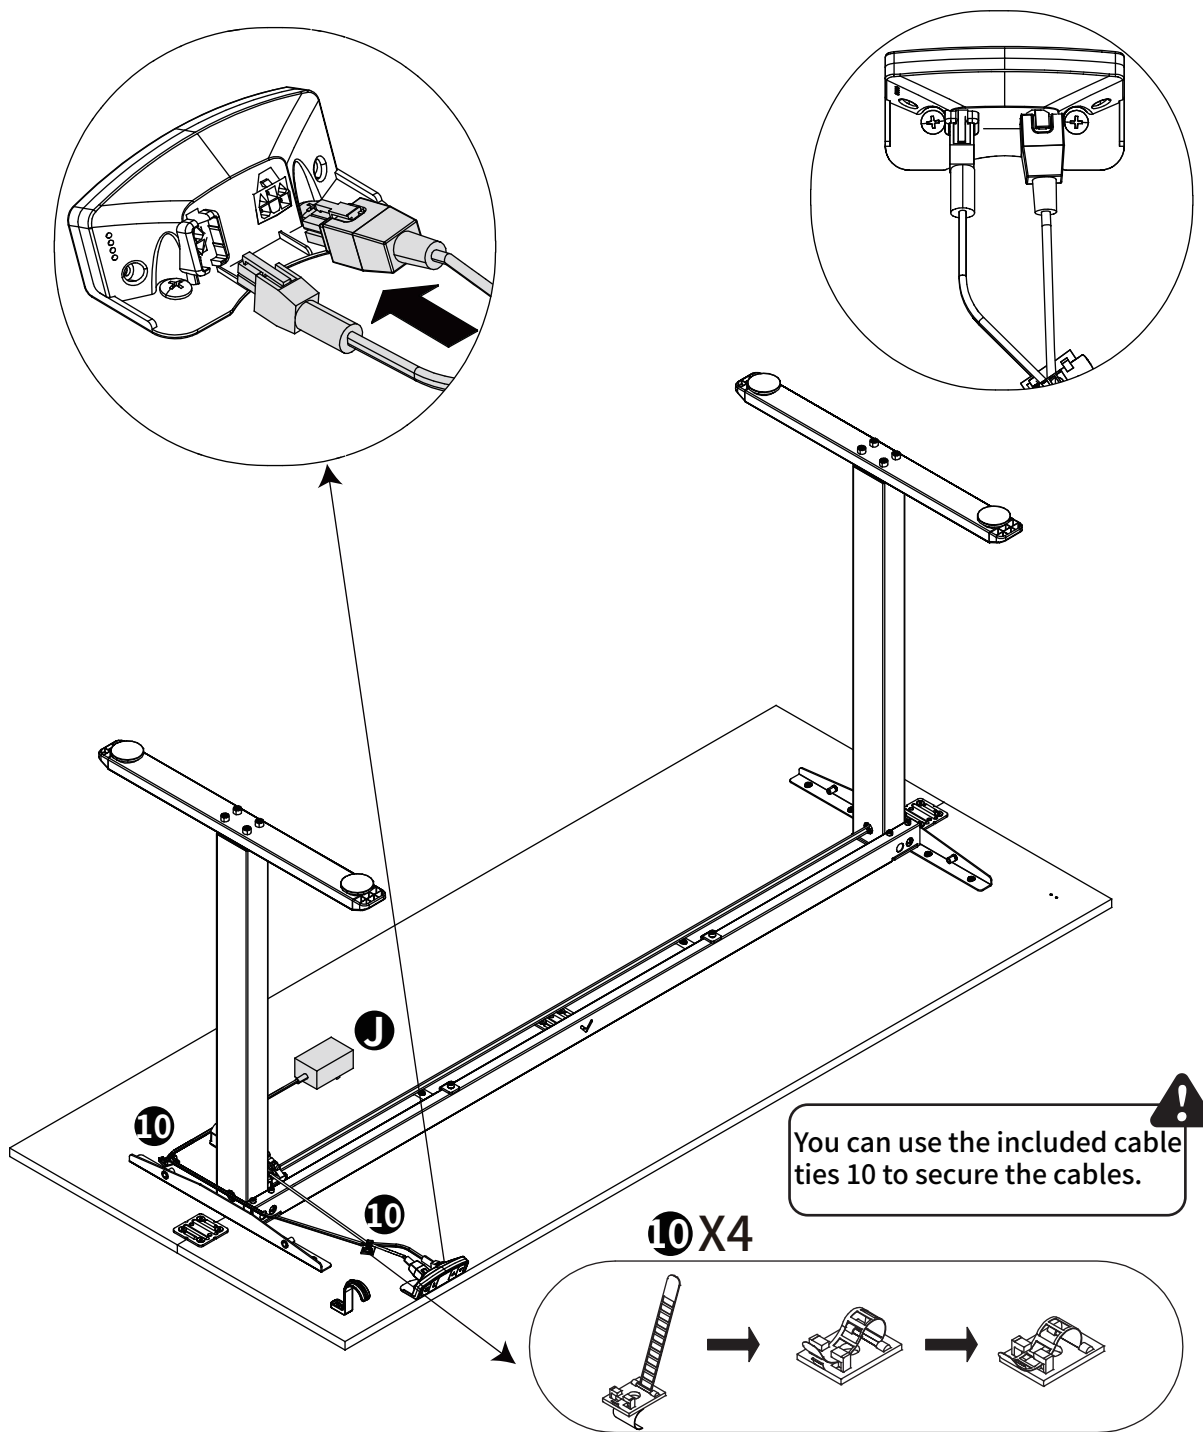



J 1PC



10 4PCS

Assembly Instructions

Step15: Fix the bag K to part B with screw 6 .

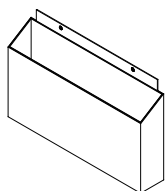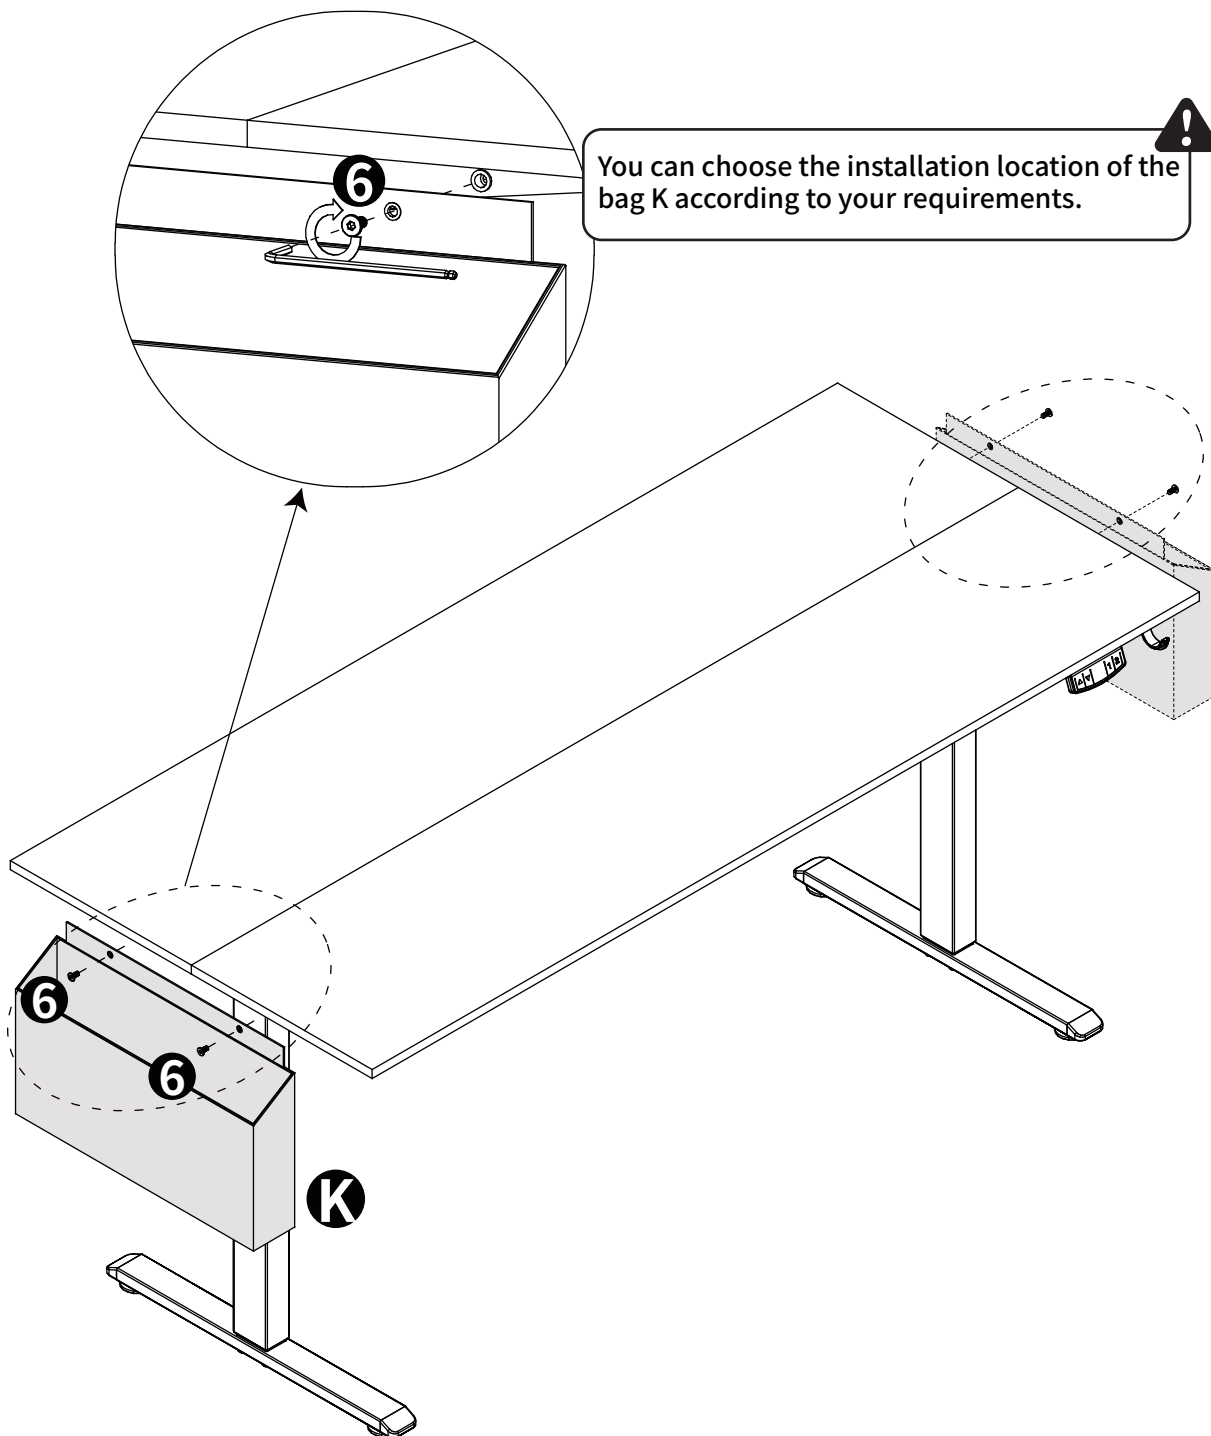


K 1PC




6 2PCS

Assembly Instructions

Step16: Check that all screws are tightened and the product is stable, then connect the power supply and run the reset program (see the Operating Instructions).

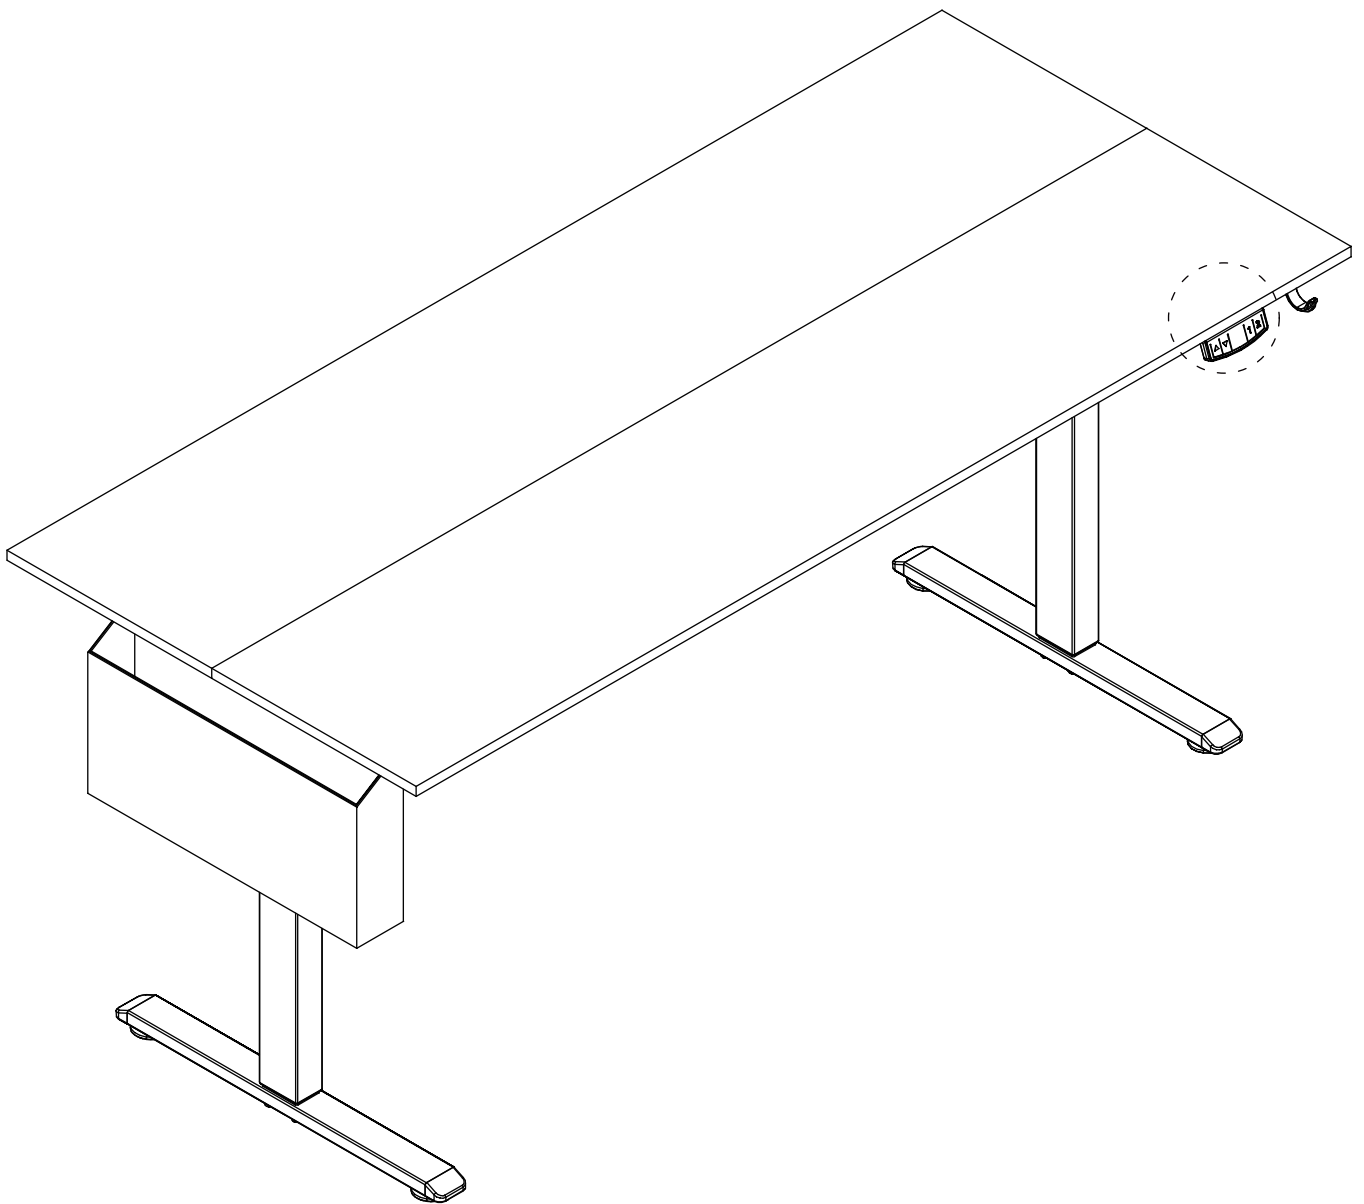

Operating Instructions

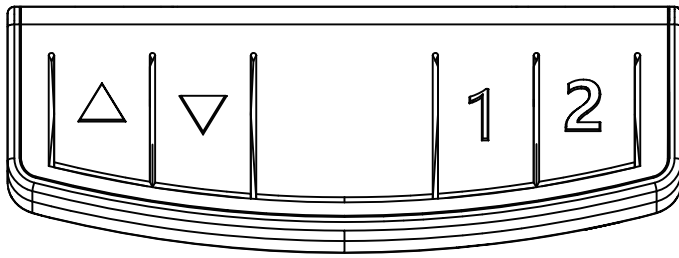

1

Memory 1 Button

Press to adjust the height to the position 1

Long press to save the current height as position 1



UP Button

Press and hold to raise the desktop



DOWN Button

Press and hold to lower the desktop

LED

Screen

Displays the current desktop height (cm) and code information

2

Memory 2 Button

Press to adjust the height to the position 2

Long press to save the current height as position 2







Functions

Up	Press and hold “△” button until reaching the target height or maximum height.
Down	Press and hold “▽” button until reaching the target height or minimum height.
Set Memory Position	Long press the “1” or “2” button until the screen displays “H1” or “H2”.
Memory Position	Press the “1” or “2” button, and the table will automatically adjust to the memorized position.
Awaken	The screen will automatically turn off after a period of inactivity. Press any button to awaken the device.
Rebound Sensitivity Adjustment	The rebound sensitivity has four settings: OFF, H (HEAVY), N (NORMAL), and L (LIGHT). Press and hold the “1” or “2” buttons together until the screen flashes the corresponding setting to adjust it once. When the screen stops flashing and displays the height number, press and hold the buttons again to adjust it again.
Reset	Operate the device to its minimum height or the screen displays the E10 or E20 error code, press and hold “▽” button until the screen displays “E5” then the product will automatically run down to the bottom and bounce back slightly.

Problems You May Encounter

ERROR CODE	SOLUTIONS
HOT Overheating protection	Continuous operation of the motor for a long period of time may trigger this error. Disconnect the power supply and allow the motor to stand by for about 18 minutes to resume normal operation.
E02 Obstruction protection	When the table is subjected to vibration, collision, or tilting during operation, this error will be triggered. The product will automatically reverse for a certain distance and then stop. During reverse operation, you can also press any button to stop the operation.
E10 Motor fault protection	After disconnecting the power supply, check whether the cable connection between the motor and the controller is correct.
E20 Overload protection	When this error is triggered during upward movement, remove some of the heavy objects on the table and try again. When this error is triggered during downward operation, remove heavy objects from the table, reconnect the power supply, and try again.
E31 Undervoltage protection E32 Overvoltage protection	After disconnecting the power supply, check whether the cable connection between the power outlet and the controller is correct.
Product malfunction	Try to reset the product. Check if the installation is correct. If the problem still cannot be solved. Please send us photos that clearly show the bottom of the desktop, including the motor and transmission rod, and we will provide technical support as soon as possible.

Problems You May Encounter

PROBLEMS	SOLUTIONS
Non-human caused damage during usage.	Please Keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide a satisfactory solution.
Mismatch of screw hole positions between components.	<ol style="list-style-type: none"> 1. Please tighten the screws on the board by 70%, do not tighten completely. 2. Adjust the direction of the component to check that the wrong hole position has not been selected.
Product is unstable after being assembled.	<ol style="list-style-type: none"> 1. Check if the screws are tightened. 2. Read through out the manual, check are there any parts installed incorrectly or missing assembled.
Any missing or damaged components.	To solve the problem. We are committed to providing you with Free component shipping and replacement
<p>More problems or the above problems could not be solved.</p>	<p>  Contact us, We will support you! </p> <p>  Support@korfile.com </p> <div style="display: flex; flex-wrap: wrap; justify-content: space-around;"> <div style="border: 1px solid black; width: 40px; height: 40px; margin: 5px; display: flex; align-items: center; justify-content: center;">  </div> <div style="border: 1px solid black; width: 40px; height: 40px; margin: 5px; display: flex; align-items: center; justify-content: center;">  </div> <div style="border: 1px solid black; width: 40px; height: 40px; margin: 5px; display: flex; align-items: center; justify-content: center;">  </div> <div style="border: 1px solid black; width: 40px; height: 40px; margin: 5px; display: flex; align-items: center; justify-content: center;">  </div> </div>