

Installation Instructions (cont.)

UNDER COUNTER MOUNTING

Glass Sinks with a flat top rim can be under mounted. In the "under counter method" the sink is held in place by the adhesive between the top of the sink and the underside of the countertop.

Ensure you have the appropriate sized hole in your countertop to match the dimensions of your under-mount sink opening. Use the actual sink as a template for best results.

Apply a moderate amount of clear kitchen and bath rated adhesive / caulking to the top of the sink rim. Place your sink under the countertop, lining up the hole in your sink and the hole in the countertop.

DRAIN ATTACHMENT

From underneath the countertop, attach the lower most rubber gasket and the nut onto the drain pipe. Ensure the drain tail pipe is seated inside the P trap adapter / female trap adapter as shown.

Thoroughly tighten the nut onto the threaded pipe of the drain, securing the sink and drain in place.

Tighten the female trap adapter attached to your drainage pipe until it securely grips the drain's tailpipe.



* Occasionally plumbers putty or silicone may be required between the drain and sink to ensure a leak proof seal. Test this by running the water and evaluating.

Warranty Information

Product Warranty:

- Eden Bath™ glass sinks have a one-year limited warranty.
- This warranty can be applied for issues related to manufacturing failures, defects and functionality issues.
- This warranty excludes damage from negligent or inappropriate use from mishandling, scratches, heat, chemicals, incorrect installation and improper care and maintenance.
- This warranty excludes small color variations
- This warranty does not extend to items that are physically damaged under abnormal operating conditions as a result of misuse.
- This warranty does not extend to items that are damaged due to improper installation.
- This warranty does not extend to items that are damaged due to use of improper cleaning products/ supplies/procedures.
- This warranty does not cover labor or installation costs for the installation or un-installation of any product.
- This warranty applies to the structure only, not the finish. See care instructions for items that can damage the finish.
- This warranty covers the cost of shipment of repaired/replaced items/parts to US destinations only. The customer is responsible for shipping costs for the repaired/replaced item that are in excess of US shipping costs as well as any taxes, duties and brokerage fees on the repaired/replacement item returned to the customer.
- Items covered under warranty will be fixed or replaced or replacement parts will be sent at Eden Bath's sole discretion. The customer is responsible for shipping the item back to Eden Bath and Home Group, if needed.



WWW.EDENBATH.COM



Tempered Glass Sinks

www.EdenBath.com
Phone: 877-578-5584
Email: sales@edenbath.com
760 Kacena Rd, Ste 5, Hiawatha, IA 52233

Disclaimer:

By purchasing and installing Eden Bath™ products, you agree that Eden Bath™ & Eden Bath and Home Group, its employees and affiliates cannot be held responsible for any accidents, liabilities, misuse of products or damage caused. Eden Bath™ & Eden Bath and Home Group cannot be held responsible for discrepancies, or inconsistencies that may occur due to manufacturing changes.

Care & Cleaning Guide

Thank You for Choosing an Eden Bath™ Tempered Glass Bathroom Sink

To help you stay as happy with your Eden Bath™ sink as the day it was installed, please follow the care and cleaning instructions provided in this document.

GENERAL

For the best cleaning & care results when maintaining your Eden Bath™ glass vessel sink, please follow all instructions carefully and only use the suggested cleaning products and supplies. Using other cleaning agents may cause discoloration or damage to your sink and could potentially affect the beauty and functionality of your sink.

Always test all cleaning products and supplies on an inconspicuous area of your Eden Bath™ sink before applying to the entire surface.

Wipe all surfaces clean and rinse them completely with water immediately after applying a cleaning product. Rinse and dry any excess cleaner that may land on adjacent areas. Do not allow cleaning product to sit on the sink, as it may soak in and cause damage.

Use a soft, damp cloth or sponge. **DO NOT** use an abrasive material like a scouring pad, brush, or steel wool, to clean the surface of your Eden Bath™ sink.

The effectiveness of all cleaners depends on factors like water hardness and temperature, consistency of cleaning product formulas, and age/condition of the product being cleaned. Variations in these, and other, factors mean that Eden Bath™ cannot guarantee the effectiveness of any cleaner or procedure used.

Please see our product warranty for further information on what is covered under normal conditions of use at <http://www.EdenBath.com/TermsPolicies.asp>.

GLASS VESSEL SINKS

To prevent water spots and clouding, rinse and wipe the inside of your glass sink with a microfiber cleaning cloth after each use.

Clear Frosted Glass Sinks: For a more thorough cleaning, use water and a mild (ammonia-free) liquid soap detergent. Apply the cleaner to the sink's interior only with a soft sponge. Rinse with lukewarm water and pat dry with a microfiber cleaning cloth. To keep the exterior of the sink spot-free, simply wipe off excess water with a microfiber cleaning cloth after each use. For a more thorough cleaning of the exterior, use a mixture of a mild (ammonia-free) liquid soap detergent and water.

Multi-Color Glass Sinks: For a more thorough cleaning, use water and a mild (ammonia-free) liquid soap detergent. Apply the cleaner to the sink's interior only with a soft sponge. Rinse with lukewarm water and pat dry with a microfiber cleaning cloth. To keep the exterior of the sink spot-free, simply wipe off excess water with a microfiber cleaning cloth after each use. **Do not** use any cleaners or abrasive pads on the exterior as it may damage the paint, foil or other exterior materials.

For hard water deposits or lime scale on the bowl's interior, consider one of the following cleaners: Cinch Streak Free Multi-Surface Cleaner, Mr. Clean Antibacterial Multi-Surface Spray, or Formula 409 Glass & Surface Cleaner. Apply the cleaner to the inside of the sink and immediately rinse with warm water and pat dry with a soft cloth. To prevent streaks, use a microfiber cleaning cloth to dry the sink.

Do not use cleaners containing any abrasive powders, bleach, ammonia, alcohol, or chlorine. These products may damage the sink surface.


Do not use any abrasive pads.

Installation Instructions

The following installation guide and its associated photos are merely an informative example of how a glass vessel sink is installed and is not an exact representation of the sink you are installing. We recommend that installation should only be completed by a trained plumber. Eden Bath, its dealers, and affiliates take no responsibility for the information provided below and will not be liable for any misuse or damages caused by using this information.

VESSEL / ABOVE COUNTER MOUNTING

In the "above counter method" the vessel sink is held in place by either 1) the drain, a mounting ring between the sink and the countertop and the weight of the sink itself or 2) the drain, adhesive between the flat bottom of the sink and the countertop, and the weight of the sink itself. We recommend using a mounting ring with glass sinks for sink stability, a cleaner look and to allow space for cleaning under the sink.

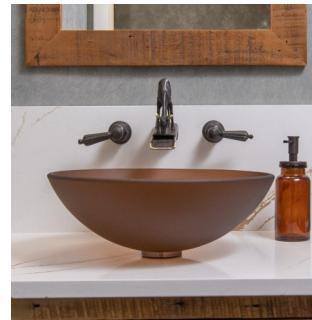

Ensure you have the appropriate sized hole in your countertop. It should be just large enough to allow the threaded drain pipe to fit through it but not the nut that is screwed on to this pipe. A 1-3/4" hole is recommended for the Eden Bath Tempered Glass Vessel Sinks.

Place the mounting ring and rubber gaskets on the counter, centered with the drain hole. If you are not using a mounting ring, apply a moderate amount of clear kitchen and bath rated adhesive / caulking underneath the sink on the flattest part around the drain. Flip the sink over and set it on the mounting ring or countertop, lining up the hole in your sink and the hole in the countertop.

Remove the nut attached to the threaded pipe of the drain and place the drain assembly along with the upper most rubber drain gasket (if provided) into the sink's drain hole.

SEMI-RECESSED MOUNTING

Glass Sinks with a smooth exterior can be semi-recessed. Ensure you have a hole cut out in your countertop large enough to accommodate the sink without letting it fall through the opening. This type of mounting does not require a mounting ring.

Place the sink in the cut out area, leveling each axis to make sure the fit is correct. From underneath the counter, apply a bead of silicone between the sink and countertop.

Remove the nut attached to the threaded pipe of the drain and place the drain assembly along with the upper most rubber drain gasket (if provided) into the sink's drain hole.

