 


MANUAL INSTRUCTION

TV STAND

BDGS95-80WC

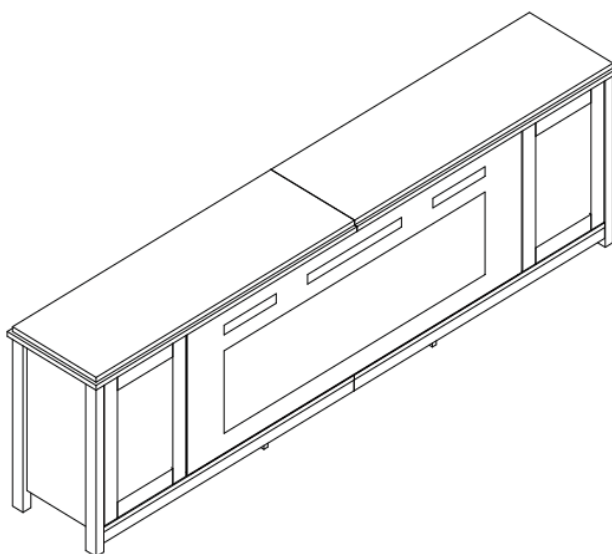

We offer a diverse range of products to meet the needs of customers.

Indoor Furniture

We are a professional furniture provider with top-notch factories and outstanding designs, Our mission is to provide consumers with new lifestyles. By collecting consumer feedback, we constantly improve our products and create more choices for consumers. If you want to create your space, We are an ideal choice.

Always.



WARNING

All the TV Stands have passed strict quality inspections before delivery . Read this manual carefully to ensure proper usage

Ensure that all parts and hardware are available before beginning assembly

NOTICE

1. Children are not allowed to operate.
2. Faster installation is possible with power tools.
3. Do not pull the door vigorously to prevent the storage cabinet from tipping over.
4. Please attach the storage cabinet to the wall with an anti-tip device after installation is complete.
5. When using the storage cabinet for the first time, please keep it in a ventilated environment to allow the smell to fully evaporate.
6. When placing the partitions, please make sure the nails are firmly installed to prevent the partitions from falling off.
7. If any parts are missing, broken, damaged or worn, discontinue use of the product until repairs are made and/or factory replacement parts are installed.
8. Do not use this product in a manner inconsistent with the manufacturer's instructions, as this may void the product warranty.
9. If accessories are missing, please contact customer service for communication in time, we provide 7x24 hours customer care.
10. Do not use any attachments or accessories other than the original factory attachments and accessories.
11. Do not alter this equipment. Any alteration will create a safety hazard.

WARNING

The product must be assembled by adult before use. Serious or fatal injury may occur from unexpected assembly or use.

1. During the assembly process, keep all parts away from babies or children.
2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
3. Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.
4. Unless specially designed to accommodate, do not set heavy objects on top of this product.
5. Place the heaviest items on the lowest shelf.
6. Never allow children to climb or bang on drawers, doors or shelves.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



2Persons Assembly



Minimum 60 Minutes For Assembly

 
HARDWARE

1



3 PCS

2




2 PCS

3




1 PC

 4

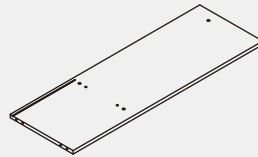


1 PC

 5

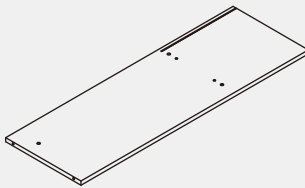


1 PC

 6

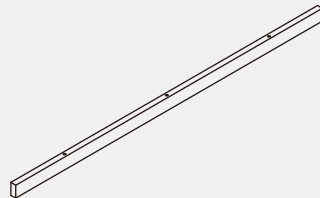

1 PC

 7

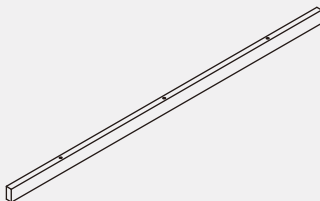











1 PC

8




1 PC

          HARDWARE

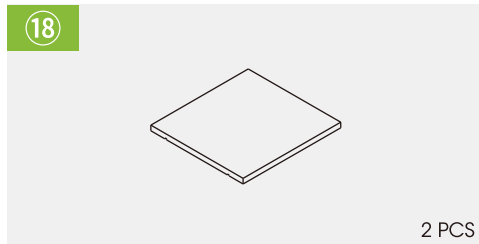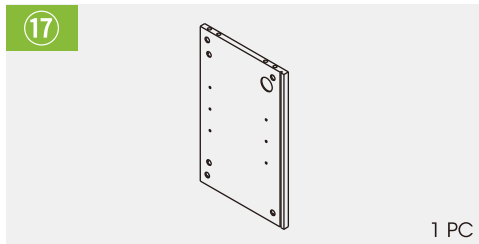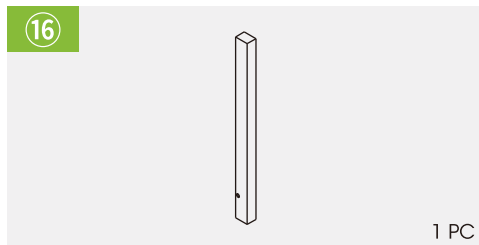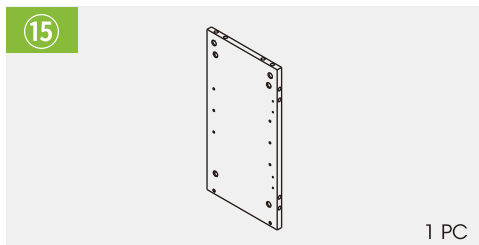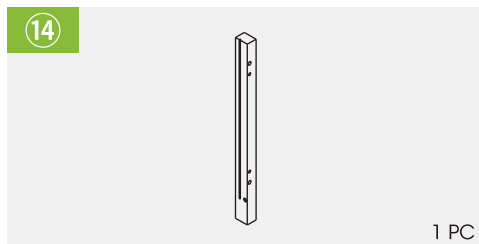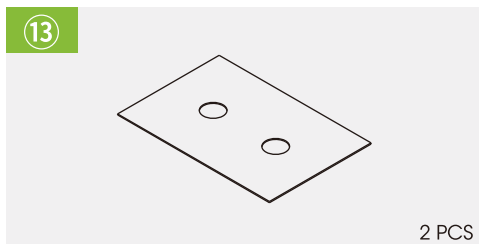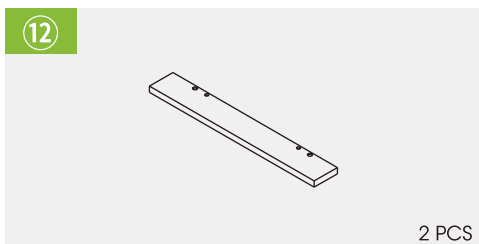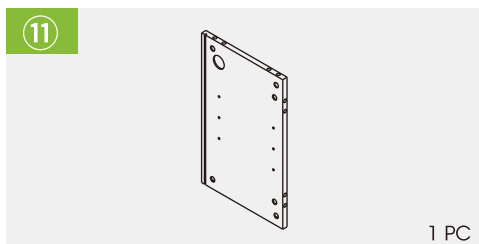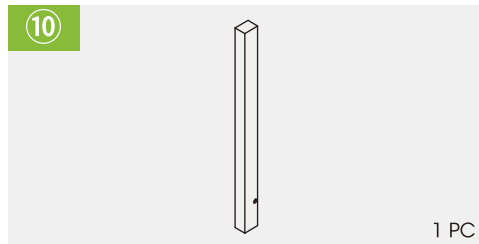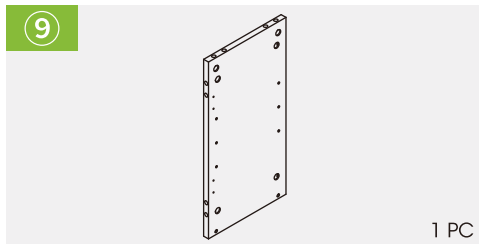


HARDWARE

 19

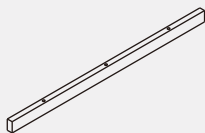


1 PC

 20

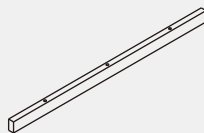


1 PC

 21

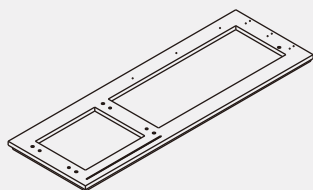


1 PC

 22

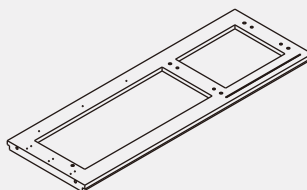

1 PC

 23



1 PC

 
PARTS

A Ø5x31mm



38 PCS

B Ø15x11mm



38 PCS

C Ø8x30mm



 
38 PCS

D Ø3.5x14mm



56 PCS

E




8 PCS

F Ø4x50mm




12 PCS

 G

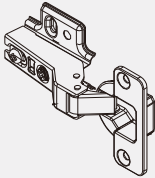


4 PCS

 H



8 PCS

 J

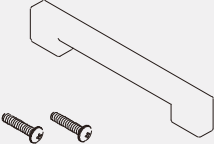


2 PCS

K



2 PCS

 BOARD IDENTIFICATION

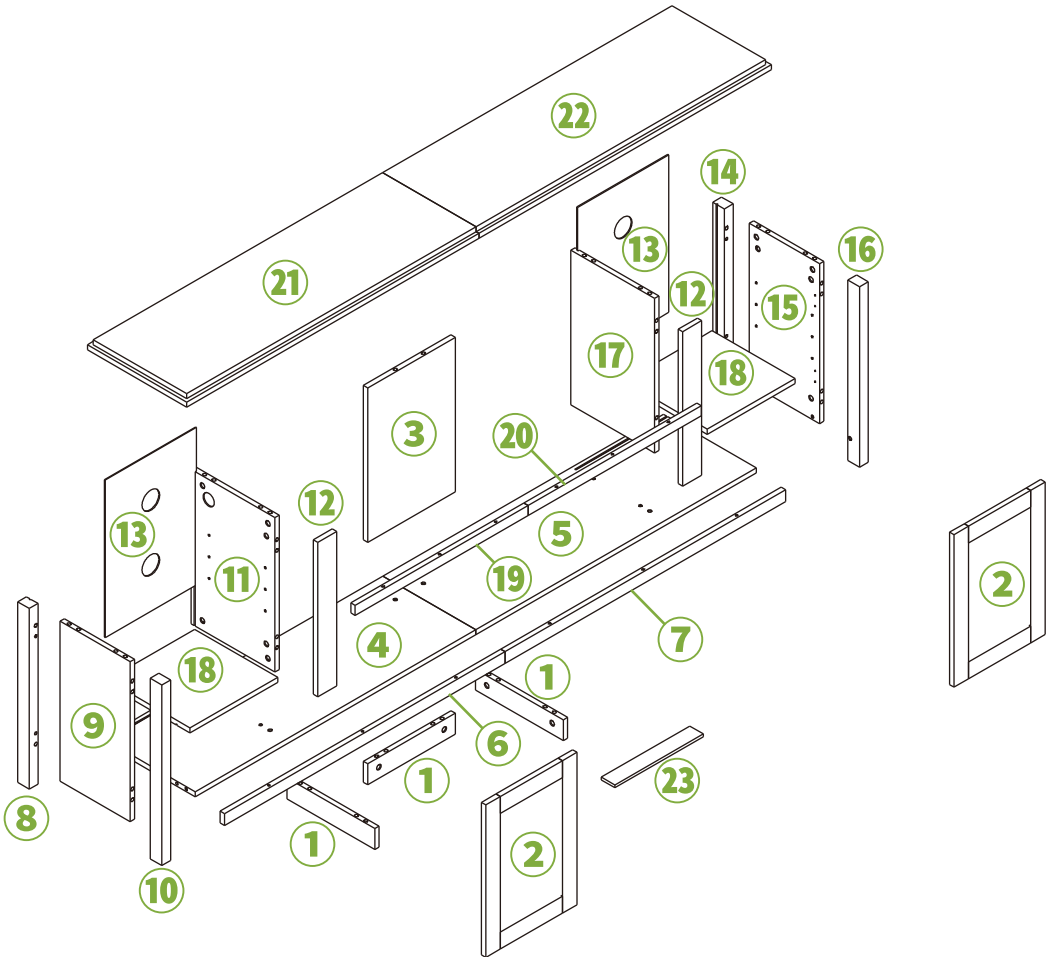


PRODUCT ASSEMBLY

1



 
Insert wood dowel (C) into parts (4,5) Attach parts (4) and (5).

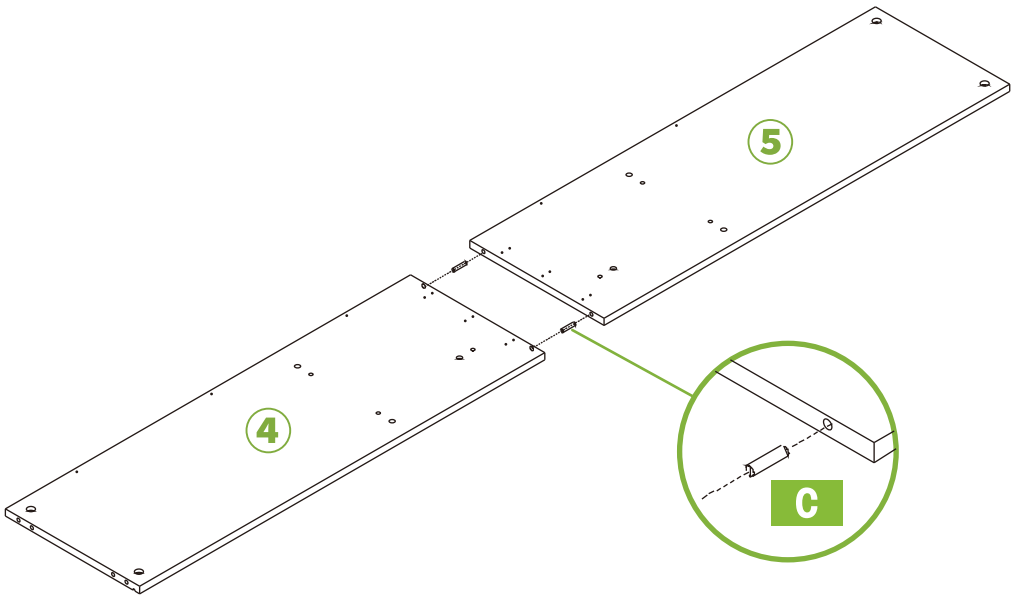PART	NO.	QTY.
	C	2




PRODUCT ASSEMBLY

2

PART	NO.	QTY.
	D	16
	E	4
	F	6

 2. Attach pieces (E) to secure the connection in parts (6) and part (7) using screw (D) and a Phillips head screwdriver.

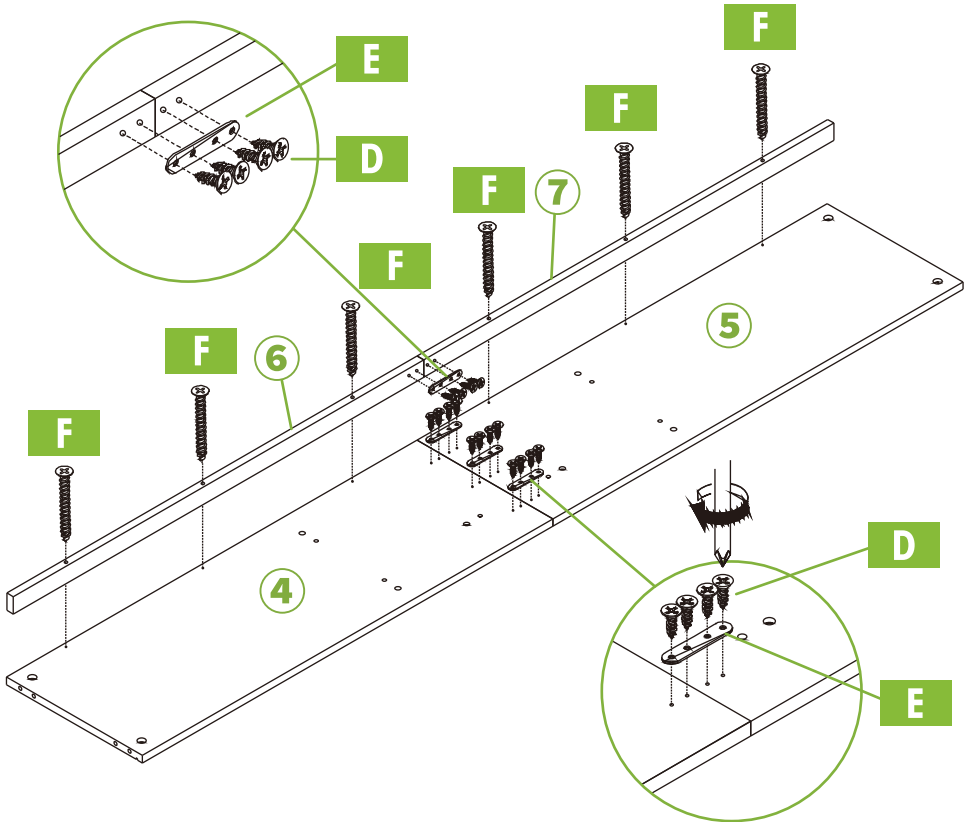


3. Attach parts (6,7) to parts (4,5) using screw F and a Phillips head screwdriver.




1. Attach pieces (E) to secure the connection in part (4) and part (5) using screw (D) and a Phillips head screwdriver.

PRODUCT ASSEMBLY



3

PART	NO.	QTY.
	A	6
	B	6
	C	6

   1. Insert cam bolt (A) into parts (4, 5)

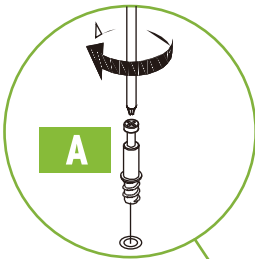

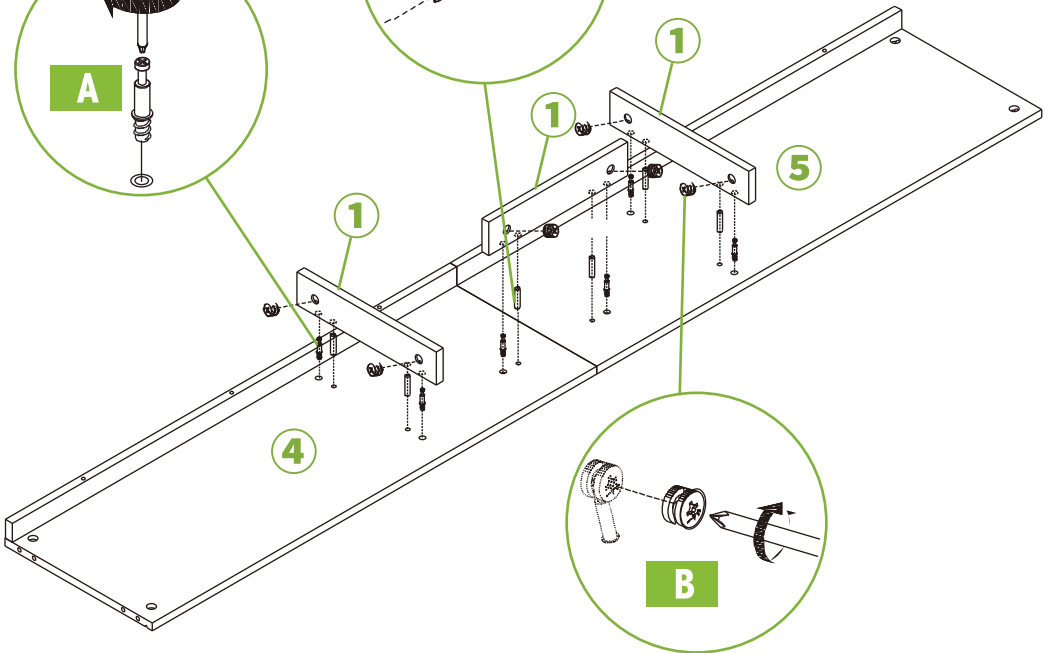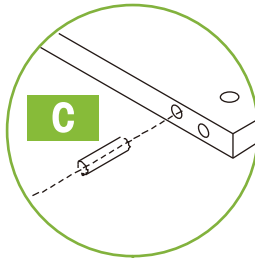


2. Insert wood dowel (C) into parts (1).




3. Attach part (1) to the wood dowels of parts (4) and (5) using cam lock (B) and Phillips head screwdriver.

PRODUCT ASSEMBLY


4

PART	NO.	QTY.
	A	8
	B	8
	C	8

  1. Insert cam bolt (A) into parts (8, 10, 14, 16)

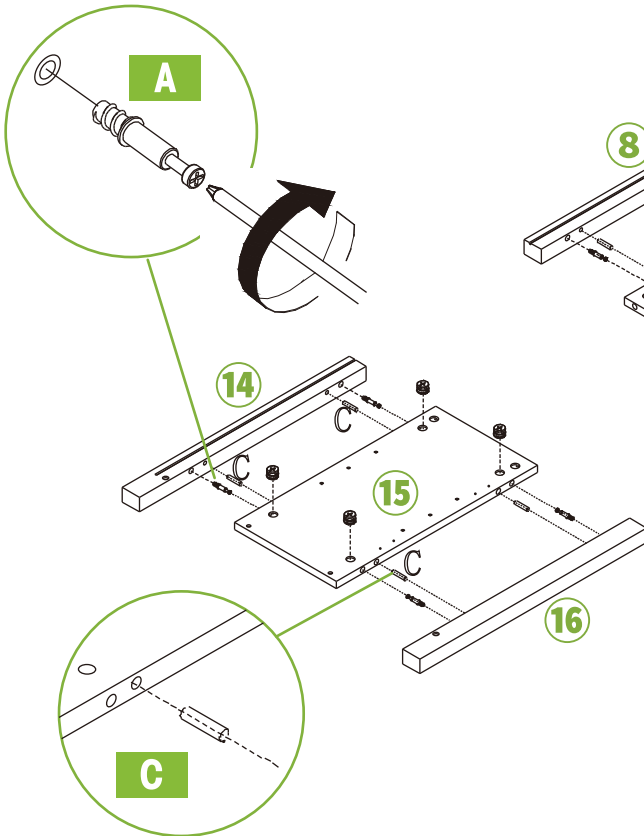

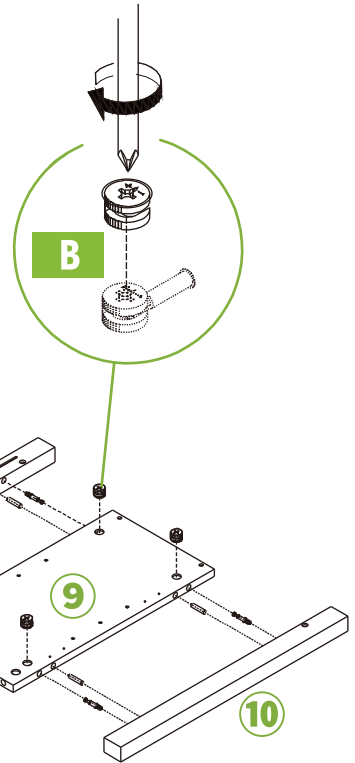


2. Insert wood dowel (C) into parts (9, 15).




3. Attach part (8, 10) to parts (9), attach part (14, 16) to parts (15) using cam lock (B) and Phillips head screwdriver.

PRODUCT ASSEMBLY

5

PART	NO.	QTY.
	A	4
	B	4
	C	4

 1. Insert cam bolt (A) into parts (8, 10, 14, 16)

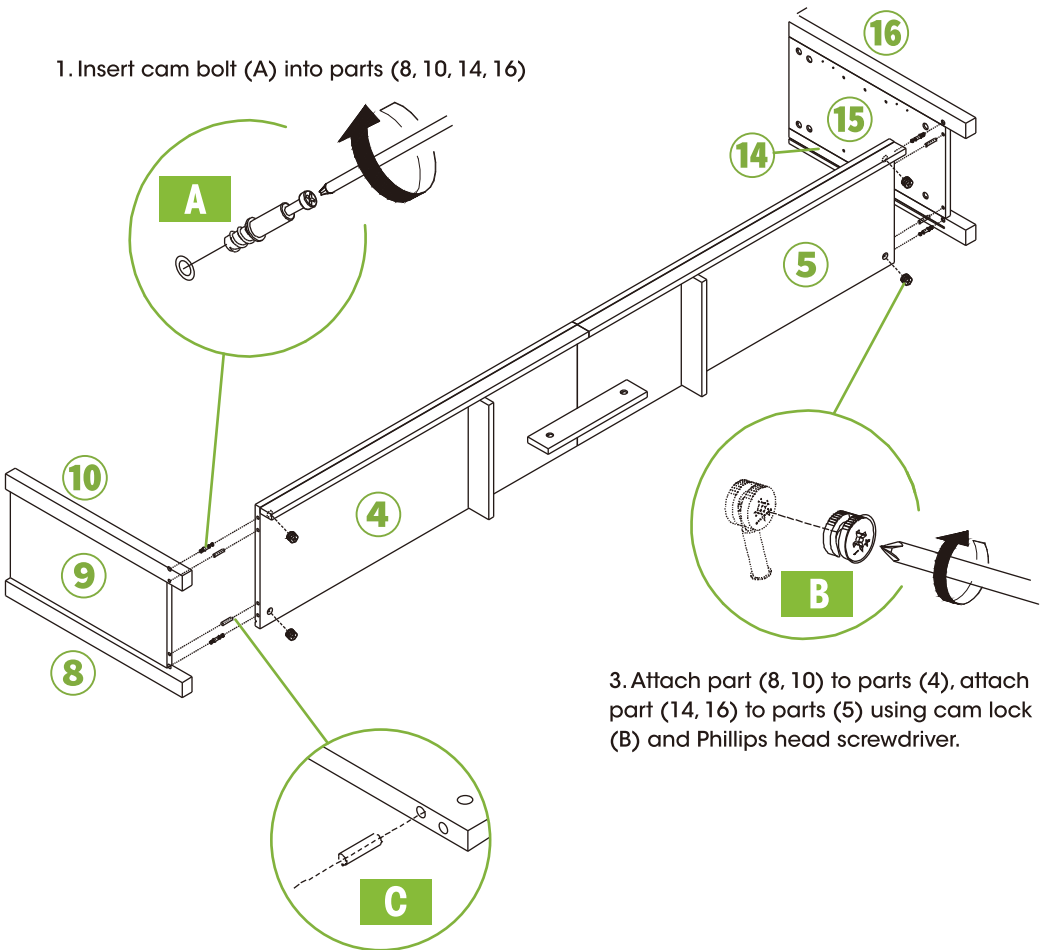




2. Insert wood dowel (C) into parts (4, 5).

3. Attach part (8, 10) to parts (4), attach part (14, 16) to parts (5) using cam lock (B) and Phillips head screwdriver.


PRODUCT ASSEMBLY

6

PART	NO.	QTY.
	A	4
	B	4
	C	4

 1. Insert cam bolt (A) into parts (12).

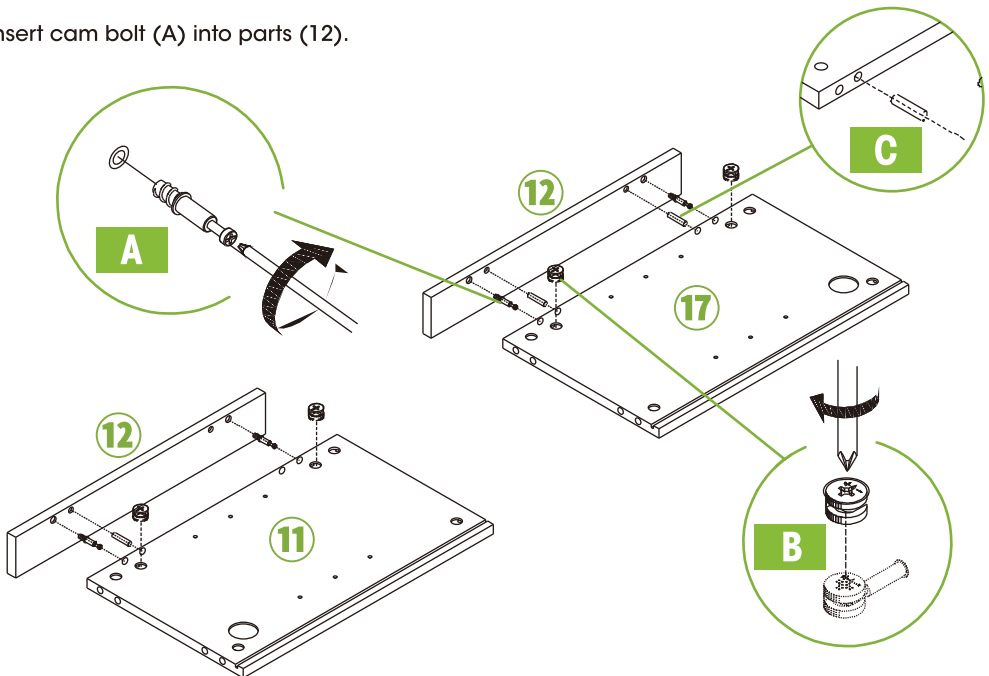


2. Insert wood dowel (C) into parts (11, 17).



3. Attach parts (12) to parts (11, 17) using cam lock (B) and Phillips.


PRODUCT ASSEMBLY

7

PART	NO.	QTY.
	A	4
	B	4
	C	4

1. Insert cam bolt (A) into parts (4, 5)

 3. Attach part (11) to parts (4), attach part (17) to parts (5) using cam lock (B) and Phillips head screwdriver.

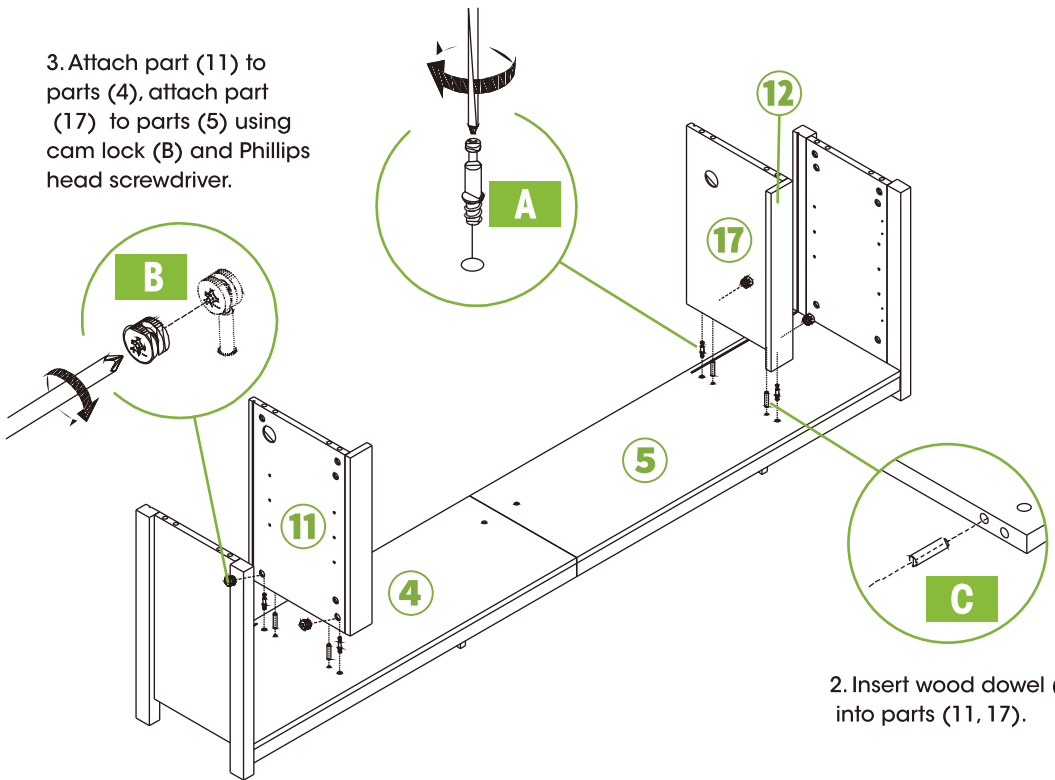


2. Insert wood dowel (C) into parts (11, 17).

PRODUCT ASSEMBLY

8

 Slide panel (13) into the grooves.

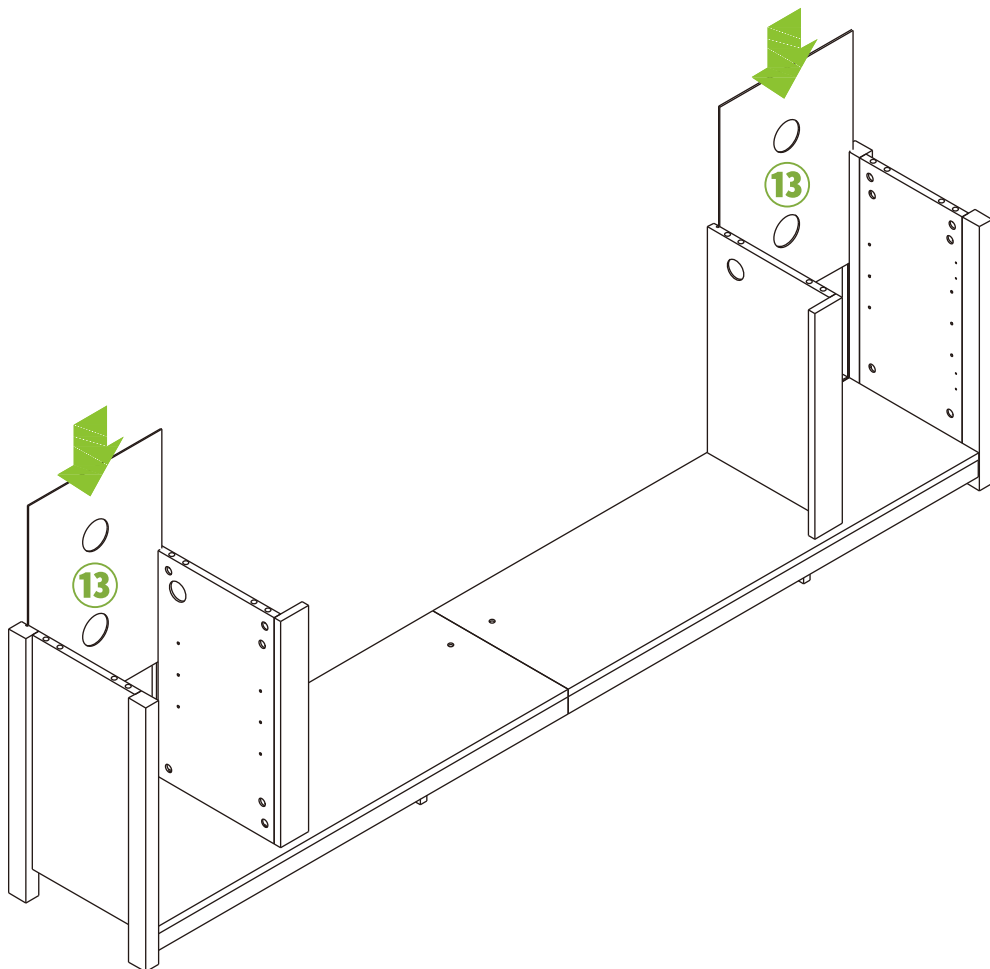


PRODUCT ASSEMBLY

9



 
Insert wood dowel (C) into parts (21), (22). Attach parts (21) and (22).

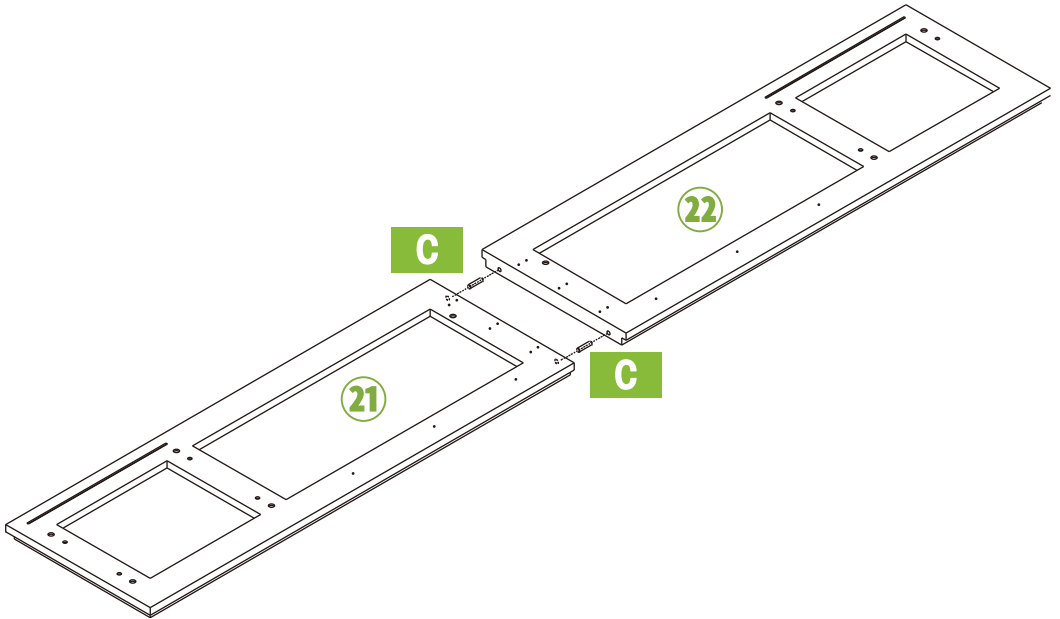PART	NO.	QTY.
	C	2




PRODUCT ASSEMBLY

10

PART	NO.	QTY.
	D	16
	E	4
	F	6

 2. Attach pieces (E) to secure the connection in parts (19) and part (20) using screw (D) and a Phillips head screwdriver.

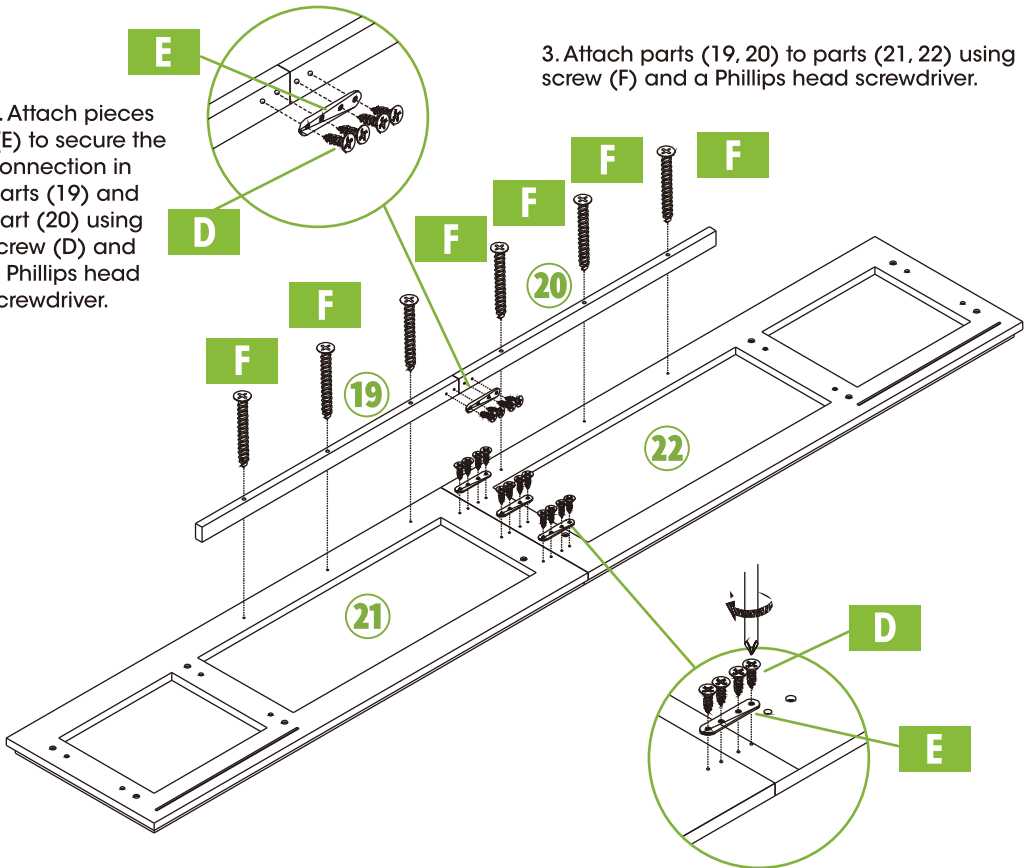

3. Attach parts (19, 20) to parts (21, 22) using screw (F) and a Phillips head screwdriver.




1. Attach pieces (E) to secure the connection in parts (21) and part (22) using screw (D) and a Phillips head screwdriver.

PRODUCT ASSEMBLY

11

PART	NO.	QTY.
	A	2
	B	2

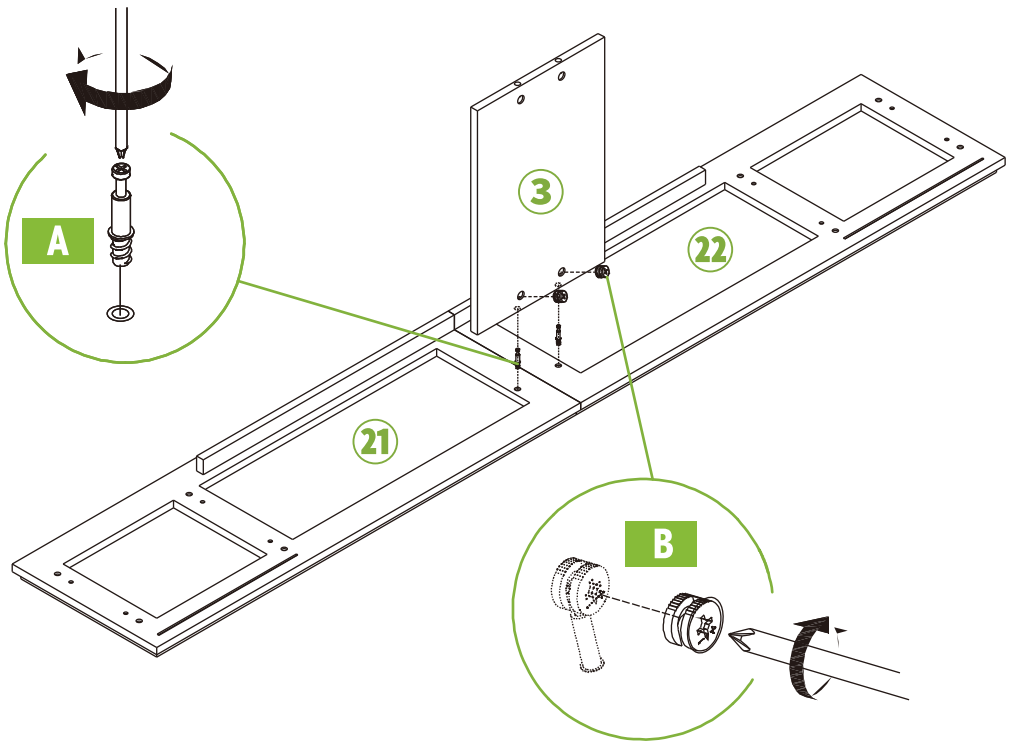 


1. Insert cam bolt (A) into parts (21, 22).




2. Attach part (3) to parts (21, 22) using cam lock (B) and Phillips head screwdriver.


PRODUCT ASSEMBLY

12

PART	NO.	QTY.
	A	10
	B	10
	C	8

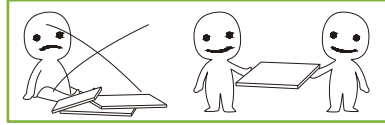 

Require two people.

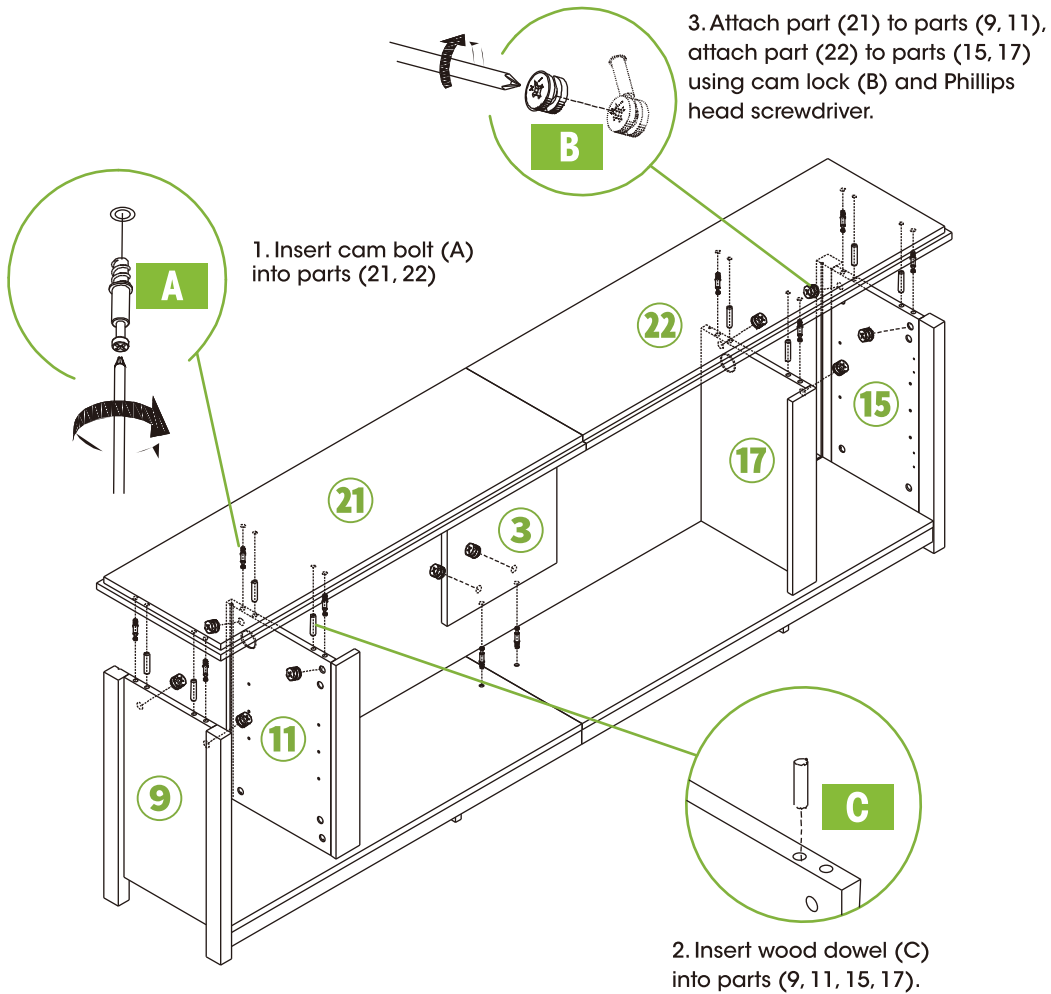 


PRODUCT ASSEMBLY

13



 
Insert shelf support pins (H) into parts (9, 11, 15, 17).

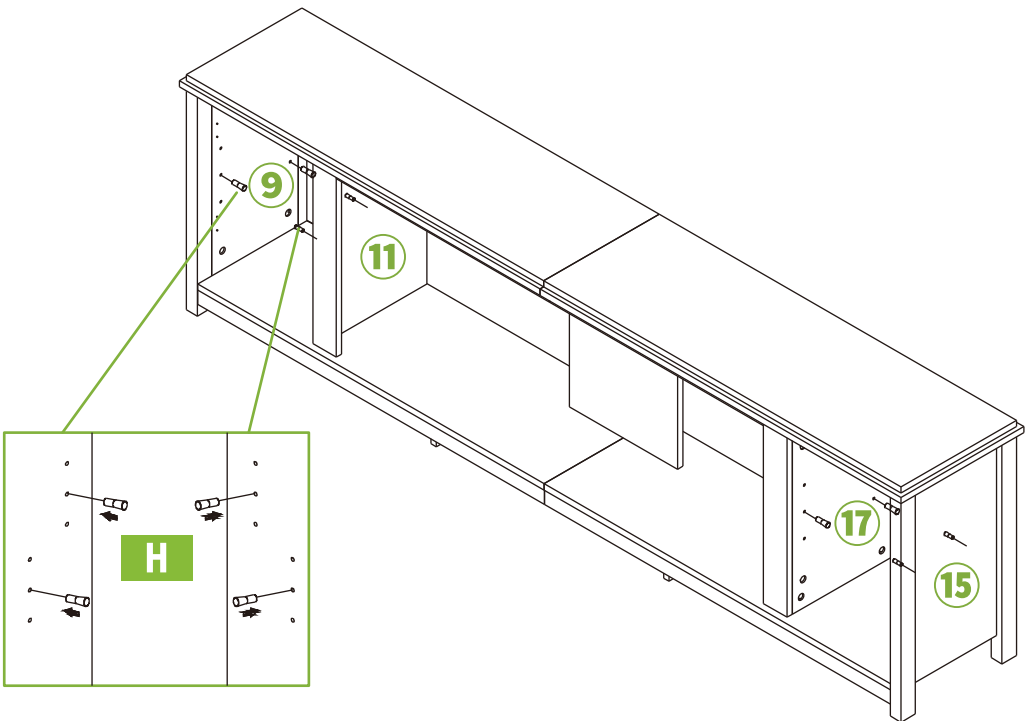
PART	NO.	QTY.
	H	8




PRODUCT ASSEMBLY

14

PART	NO.	QTY.
	D	8
	G	4
	J	2

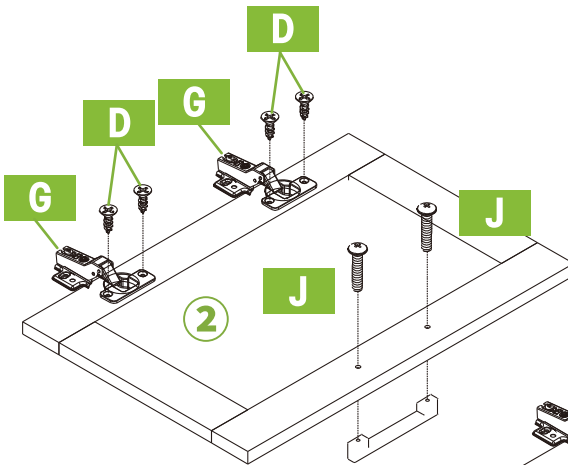 

 1. Insert door hinges (G) on part (2) using screw (D) and a Phillips head screwdriver.

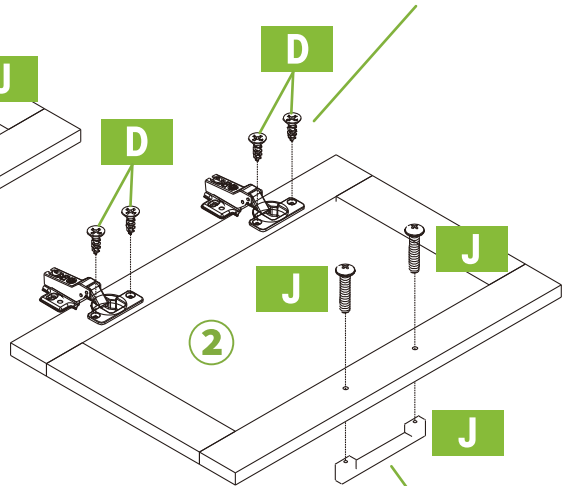


2. Insert door handles (J) on part (2) using screw (J) and a Phillips head screwdriver.

PRODUCT ASSEMBLY


15

Attach part (2) to parts (9, 15) using screw (D) and a Phillips head screwdriver.


PART	NO.	QTY.
	D	16

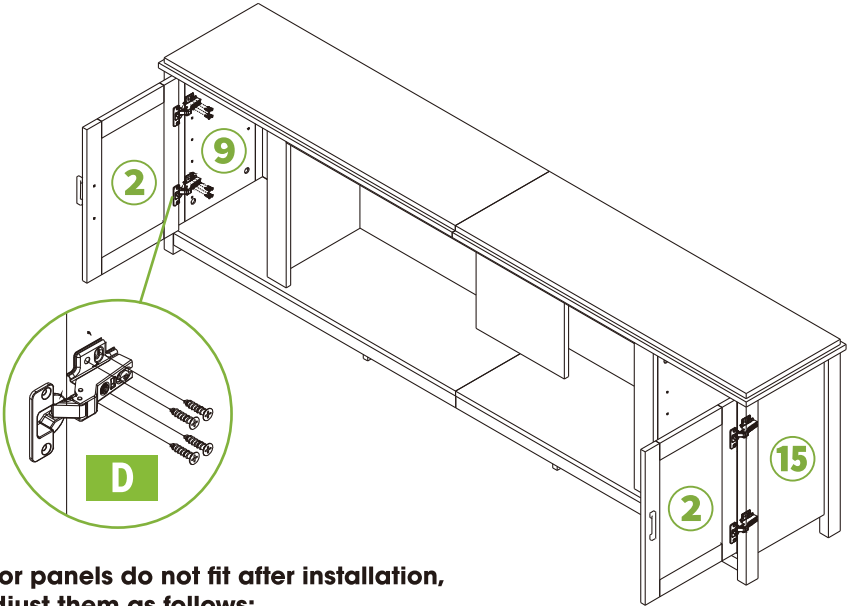 

 
If your door panels do not fit after installation, please adjust them as follows:

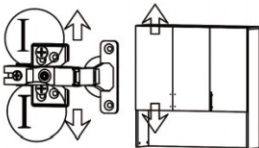

 
I: Adjust the screws at I to move the hinge up and down to adjust the up and down position of the door panel.

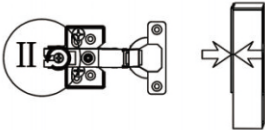

 II: Adjust the screws at II to adjust the distance between the door panel and the vertical panel.

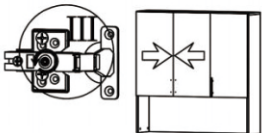

 III: Adjust the screws at III to adjust the distance between the door panels




Tighten the screws again after adjustment.

PRODUCT ASSEMBLY

16

PART	NO.	QTY.
	K	2

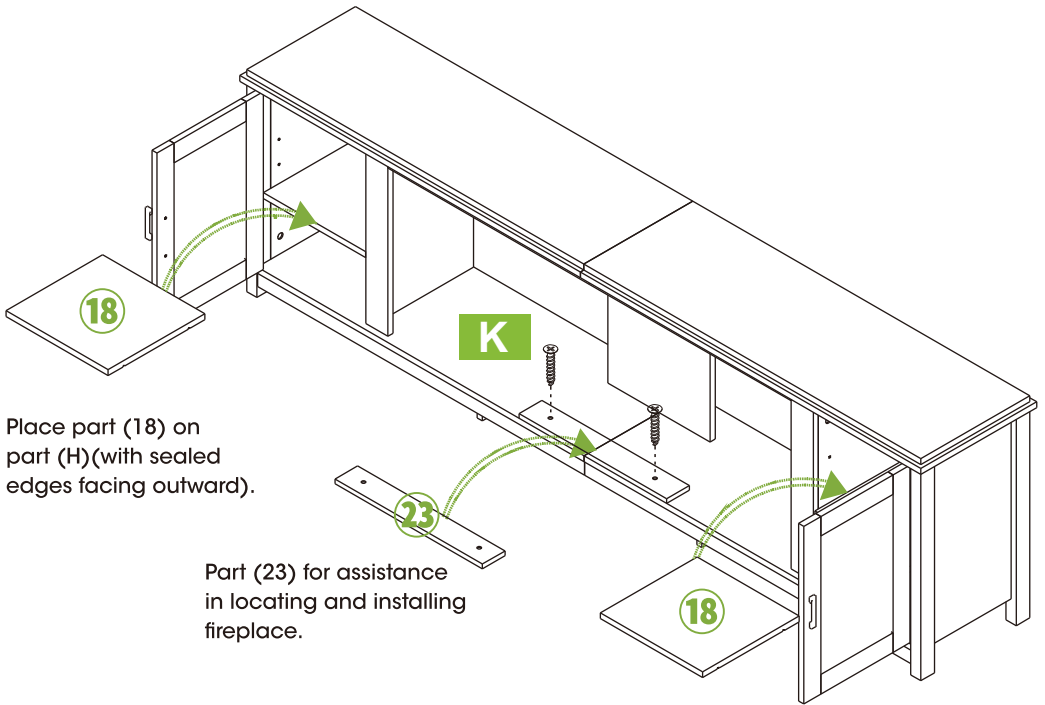 

Place part (18) on part (H)(with sealed edges facing outward).

 
Part (23) for assistance in locating and installing fireplace.

PRODUCT ASSEMBLY

17

NOTE: Dear customer, if you purchase a TV stand & fireplace set, the package for the fireplace and the package for the TV stand will be delivered separately. If you purchase only the TV stand, the fireplace is not included.


Remove four silver screws from the sides of the heater (two screws on each side)
Remove the tempered glass by lifting it from the lugs on the side.

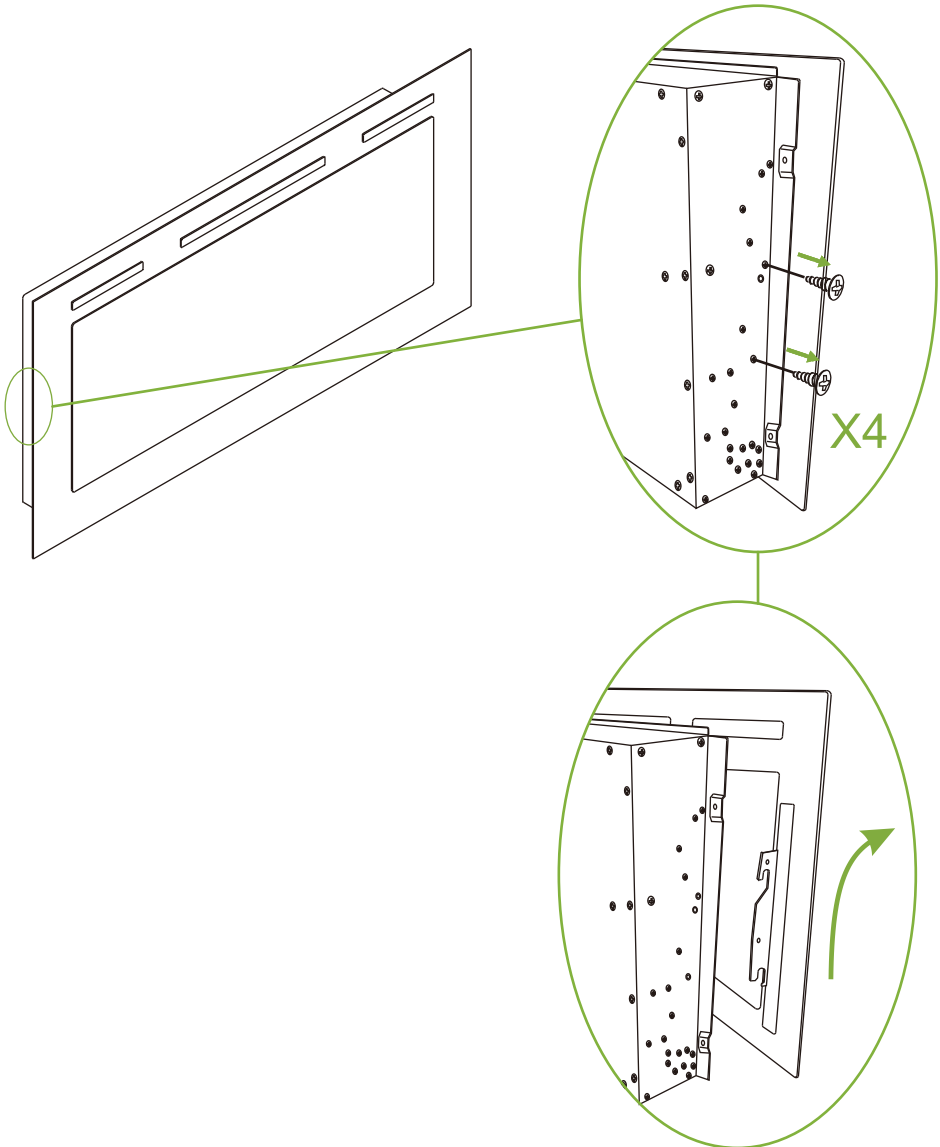

Remove the fireplace panel.

PRODUCT ASSEMBLY

 18

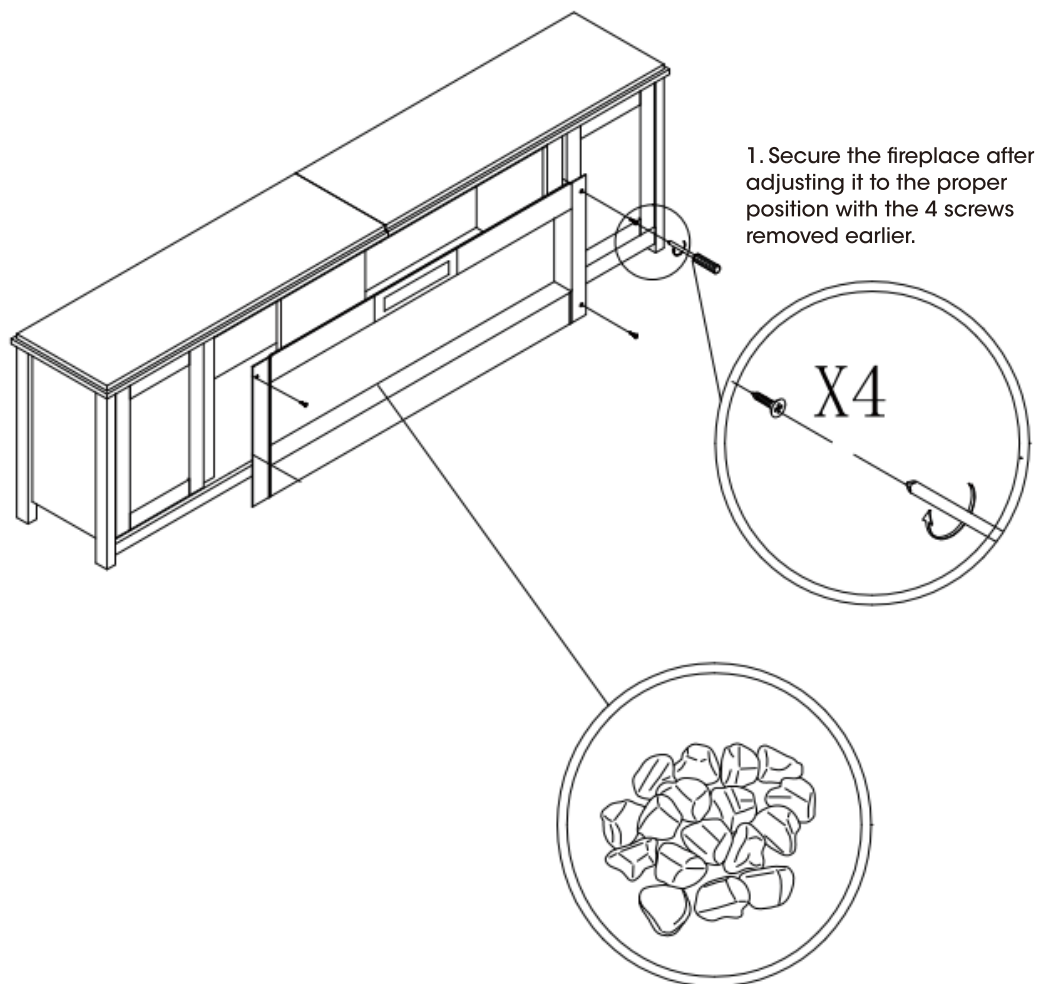


2. Place the crystal stones in the groove of the fireplace.

PRODUCT ASSEMBLY

19

 
Place the front glass surround over the front of the fire aligning the slot in the bracket at each side of the glass panel with the lugs on the sides of the fire.

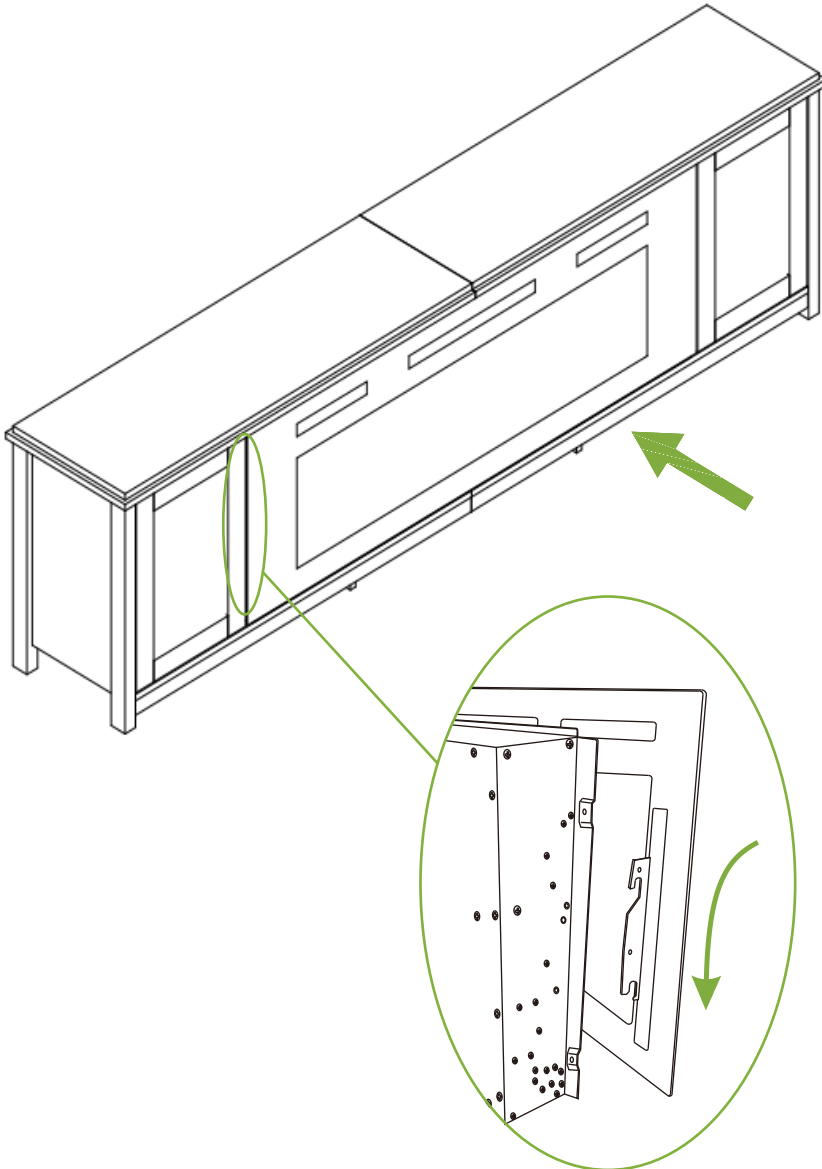


Put the fireplace panel back on.

HELP CENTER

 
Question about your product? We're here to help. Visit us at:



Chat Support

 

Product Inquiry

 

Orders FAQ



Product Assembly



Returns & Refunds

We Stand Behind the Quality of Their Furniture

If you have any issues with your item please let us know! We will always do our best to come up with a solution that you will be happy with.

Please get in touch with our customer service team before returning the product.

And pls do not throw the original box(es) if you have not finished assembling or confirmed no quality issues.

Length of return period:

Items can be returned within 30 days of purchase.

In the meanwhile, everything you purchased from us comes with a one-year warranty.

Who is responsible for the return shipping fee:

We will cover the return shipping fees if:

1. Your item has a manufacturing defect in its materials or workmanship. For example, torn wicker or misaligned screw holes. We will send you a prepaid shipping label after photos are sent.
2. Your item has been damaged in transit. For example, glass is broken or wicker is damaged. We will send you a prepaid shipping label after photos are sent.
3. You receive the wrong box(es) due to a warehouse error. We will send you a prepaid shipping label after photos are sent of the wrong SKU numbers on the outer box(es).
4. One or more boxes are lost in transit. We will send you a prepaid shipping label if you no longer want the item.

* However, we still hope to work with you for a better solution instead of a return. Please don't hesitate to contact our customer service team.

Customer will cover the return shipping fees if:

1. You don't like the product(s) after receiving the box(es).
2. You no longer need the product(s) but you have received the box(es).
3. You buy the product(s) by mistake but you have received the box(es).
4. Order/shipment cancellation failed and you have received the box(es).

Return Request

In order to get a full refund as described in this return policy, all items must be: (1) In a brand new/unused condition, please provide photos before and after packaging. (2) When returning, all accessories and parts are firmly packed in all original packaging.

If your return does not meet the requirements, you may not get a full refund.

When will I be refunded?

The refund is released once the goods have been returned to our warehouse.

What if the product is damaged/defective outside of the valid return period?

We want you to be a happy customer. Please reach out to us by email and we will come up with a solution to make sure you are satisfied.