

OVENTE®

DOUBLE
**INFRARED
COOKTOP**

BGI202 SERIES



Before use, please read this manual thoroughly and save for future reference.

ovente.com

OVENTE®

DOUBLE
**INFRARED
COOKTOP**

BGI202 SERIES



DOUBLE INFRARED COOKTOP

BGI202 SERIES

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	• • • • • • • • • •	4
PARTS & FEATURES	• • • • • • • • • •	6
USING YOUR COOKTOP	• • • • • • • • • •	8
RECIPES	• • • • • • • • • •	9
CARE & MAINTENANCE	• • • • • • • • • •	11



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to prevent the risk of fire, electric shock, burns, or other injuries or damages.

- ⚠ Before connecting the cooktop, check whether the voltage indicated at the bottom of the burner corresponds to your local mains voltage.
- ⚠ DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. If the mains cord is damaged, contact Customer Service on **1-855-926-2626** immediately.
- ⚠ To protect against electrical hazards, DO NOT immerse cord, plugs, or the cooktop itself in water or other liquid.
- ⚠ Do not operate if the electrical cord is frayed or if wires are exposed.
- ⚠ DO NOT let cord hang over the edge of a table or counter, and do not let it touch hot surfaces.
- ⚠ Regularly check the mains cord to see whether it is in a safe condition.
- ⚠ To avoid circuit overload, do not operate another high-voltage appliance on the same circuit.
- ⚠ Cooktop should always be used on a dry and level surface.
- ⚠ Do not place the cooktop on or near a hot gas or electric burner.
- ⚠ Close supervision is necessary when the cooktop is used near children.
- ⚠ This cooktop is not intended to be used by persons (including children) with reduced physical, sensory and mental capabilities. This appliance is not for persons with lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
- ⚠ Unplug from outlet when not in use and allow to cool completely before cleaning.
- ⚠ Do not use the cooktop if the surface is cracked.
- ⚠ Do not use without a pan or pot on the crystallite ceramic glass top as it may lead to internal damage.
- ⚠ Do not remove the pan when in use as the temperature on the glass top is high.



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to prevent the risk of fire, electric shock, burns, or other injuries or damages.

- ⚠ The glass top is hot when in use or shortly after use. The power cord and other non-heat resistant items are strictly prohibited from touching hot surfaces.
- ⚠ When using the cooktop or the cooktop is still hot, keep away from flammable materials, such as oil, curtains, tablecloths etc.
- ⚠ Never put aluminum foil, plastic wrap or other flammable objects on the ceramic glass top.
- ⚠ The center surface gets extremely hot; refrain from touching the cooktop.
- ⚠ The crystallite ceramic glass top is designed only for heating and cooking food, and must only be used with cooking pots and pans placed on it.
- ⚠ For maximum heat efficiency, use pots and pans with an even flat base smaller than the size of the cooktop.
- ⚠ Do not use outdoors or for purposes other than intended use.
- ⚠ DO NOT touch hot surfaces. Use handles or knobs.
- ⚠ DO NOT touch or move the cooktop when it is still hot.
- ⚠ Always place the cooktop on a heat-resistant surface.
- ⚠ Turn the switch "OFF" before connecting or disconnecting plug from power outlet.
- ⚠ DO NOT leave cooktop unattended while in use.
- ⚠ The cooktop is not intended to be operated with an external timer or separate remote control system.
- ⚠ **CAUTION:** This cooktop generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires, or other damage to property caused by touching the parts while in use or during cooling.



PARTS & FEATURES

DURABLE STAINLESS STEEL HOUSING

Fire and heat resistance in a sleek design

1500W INFRARED COOKTOPS

Compatible with virtually all cookware

CERAMIC GLASS

Quick to heat, easy to clean



TEMPERATURE CONTROL

6 power settings for all your cooking needs

INDICATOR LIGHT

Turns on when the cooktop is active

DOUBLE INFRARED COOKTOP

BGI202 SERIES



PASTA CARBONARA

With its fast boiling time, the cooktop is perfect for making classic pasta carbonara that is easy to cook, and full of flavor.



PARSLEY-GARLIC BUTTERED RIBEYE STEAK

Soak a ribeye steak in parsley-garlic butter and pamper your senses.



SHRIMP FAJITAS

Use this cooktop to make shrimp fajitas with enough spice to give your guests a little kick!



CHOCOLATE DULCE DE LECHE BARS

Fudgy cookies with an infusion of dulce de leche can definitely satisfy your sweet tooth!

USING YOUR COOKTOP

- 1 Make sure that the temperature control is in the “0” position.
- 2 Plug the cooktop into an electric outlet.
- 3 Use any high temperature-resistant cookware with a flat bottom.
- 4 Place your food into the cookware and put the cookware on the center of the crystallite ceramic glass top.
- 5 After use, turn the temperature control to the “0” position and unplug the cooktop from the electric outlet.



- 1 High-quality cookware produces the best cooking results. The base of the cookware should be as flat as possible.

HEATING SELECT SWITCH

Knob	Temperature
1	105°F
2	125°F
3	155°F
4	180°F
5	212°F



RECIPES

PASTA CARBONARA



Ingredients:

Salt
3 ounces spaghetti or linguine
1-2 slices of bacon or pancetta, cut into pieces
½ clove garlic, chopped
1 large egg
Ground black pepper
¼ cup grated parmesan cheese

Directions

- 1 Boil water for the pasta in a pan over the cooktop, adding salt to taste.
- 2 Cook the pasta, then remove the pan and drain.
- 3 In a small skillet, cook the bacon for 2-3 minutes, then add the garlic and cook together for an additional minute.
- 4 Remove from heat and then whisk together the egg, pepper and cheese in a small bowl.
- 5 Pour the pasta into a large mixing bowl and then add the bacon and garlic and the egg mix.
- 6 Toss until the pasta is fully coated and serve.



RECIPES

SHRIMP FAJITAS



Ingredients:

2 teaspoons vegetable oil
½ red pepper, sliced
½ yellow pepper, sliced
½ small yellow onion, sliced
3 ounces shrimp, peeled and deveined
½ teaspoon chili powder
¼ teaspoon red pepper flakes
¼ teaspoon cumin
¼ teaspoon paprika
Flour tortillas

Directions

- 1 In a small skillet placed on the cooktop, heat the oil over medium heat.
- 2 Add the peppers and onions and saute until tender. Then add the shrimp to the pan and cook fully.
- 3 Toss with the spices and peppers and onions.
- 4 To serve, distribute a small serving of the mix into a tortilla - you can heat the tortillas over the cooktop before serving for an extra treat.



CARE & MAINTENANCE

- Always unplug the cooktop immediately after use, and allow to cool before cleaning and storing.
- Clean the cooktop after every use.
- When cleaning the cooktop, do not use any caustic cleaning agents and make sure that no water penetrates the cooktop.
- Wipe the crystallite ceramic glass top with a damp cloth, containing a mild soap solution.
- Wipe the metal housing and temperature control with a soft cloth containing a mild detergent.
- Dry with a soft cloth after cleaning.
- Do not immerse the cooktop in water or any other liquid.
- Do not use any flammable, acidic, or alkaline materials near the cooktop, as these may reduce the service life of the cooktop and lead to deflagration when the cooktop is turned on.



ELECTRICAL REQUIREMENTS

Voltage: 120V

Hertz: 60Hz

Wattage: 1500W



OVENTE WARRANTY

LIMITED ONE (1) YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our cooktops with a one-(1) year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email support@ovente.com or call **1-855-926-2626**.

Visit us at ovente.com



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



[youtube.com/ovente](https://www.youtube.com/ovente)

ovente.com