




Part List

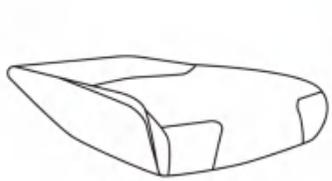


A Cushion×1

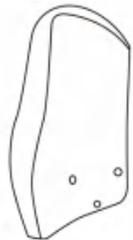

B Back Cushion×1

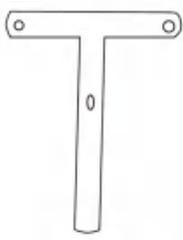


C Connecting rod×1

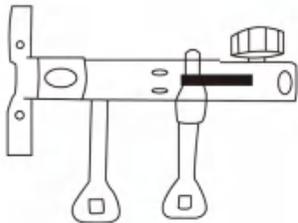

D Adjustment handle×1




E Base×1

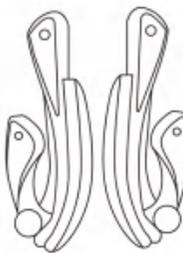


F Armrest×2



 G Wheel×5




H Gas lift×1

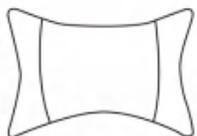


I Head pillow×1




J Lumbar pillow×1

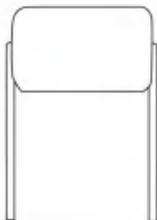


K Foot rest×1

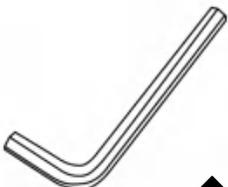


L Wrench×1

 


M Screw×1

 

N Screw×3

 

O Screw×4

 


P Screw×4




Q Plastic cap×4

1.

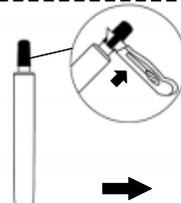


★ Caution: Remove the plastic cap before assembly. This is a part of packaging only. Sometimes the cap cracked firmly inside the seat plate, you'd better to remove it by tools like knife scissor.


2.

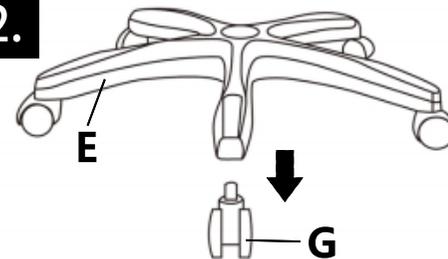


3.

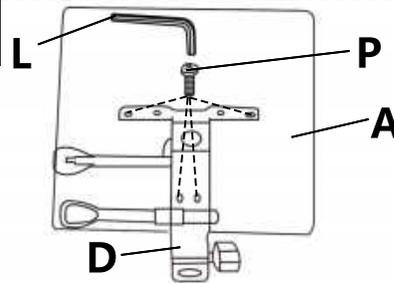

4.

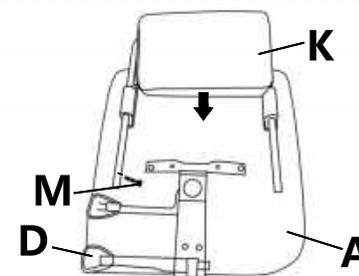


5.

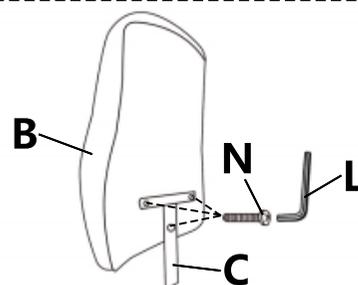


6.



7.

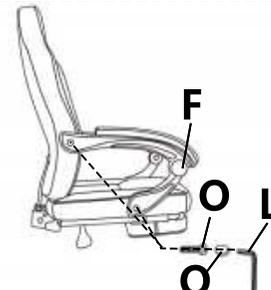

8.

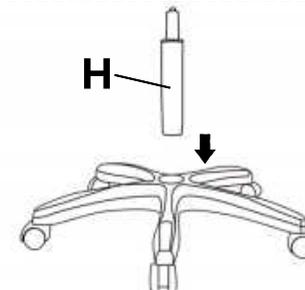

9.



10.

