



4 Tier Rotating Bookshelf Instruction Manual

 
 
 
 
 
 

Note: There is also a more detailed installation video on the product detail page on website.

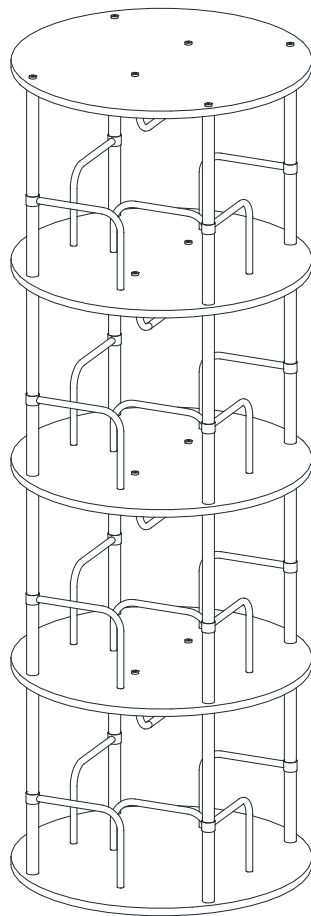

Parts List(EN)

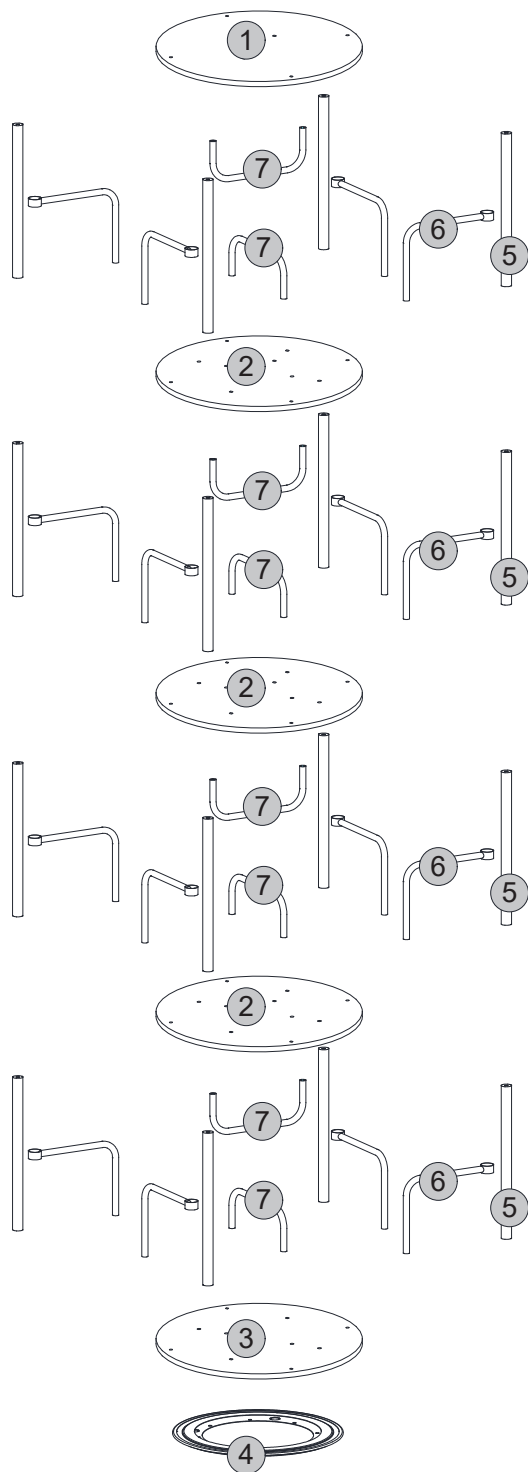

Parts List(EN)

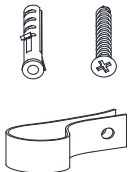
1 1 PC 	2 3 PCS 	3 1 PC 
4 1 PC 	5 16 PCS 	6 16 PCS 
7 8 PCS 	A  40+1 PCS	B  4+1 PCS
C  12+1 PCS	D  1 PC	E  1 PC

Please read the following instructions carefully:

We offer customers a free lifetime warranty.If you need help regarding product issues,after-sales service or other relevant problems, please contact us via the email on the cover.


Assembly Steps(EN)

STEP 1

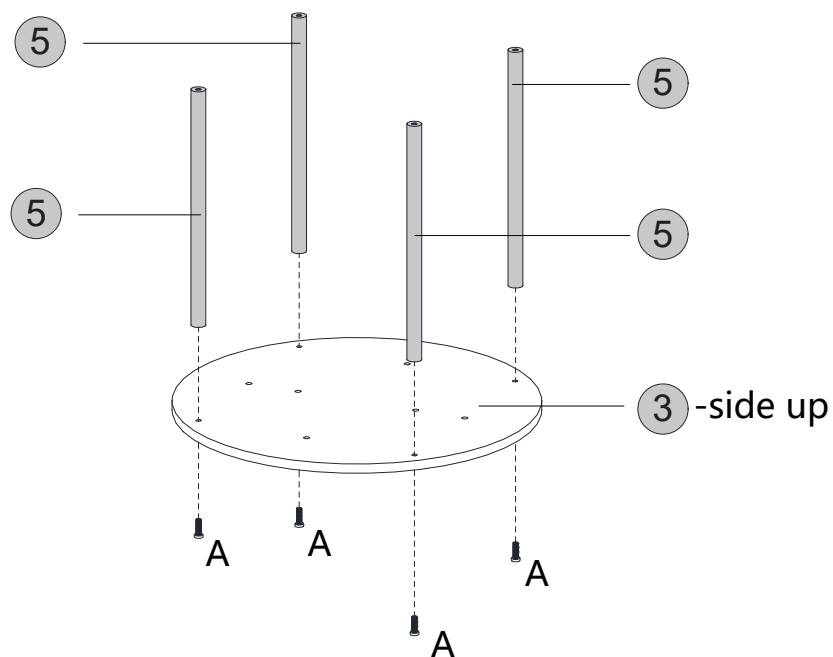

A x 4PCS


STEP 2

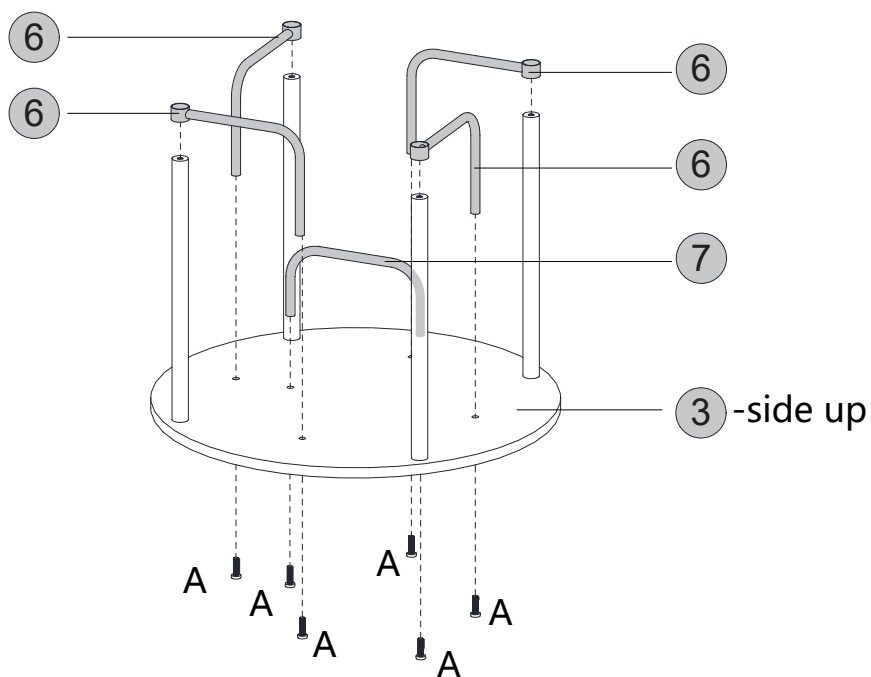

A x 6PCS


Assembly Steps(EN)

STEP 3

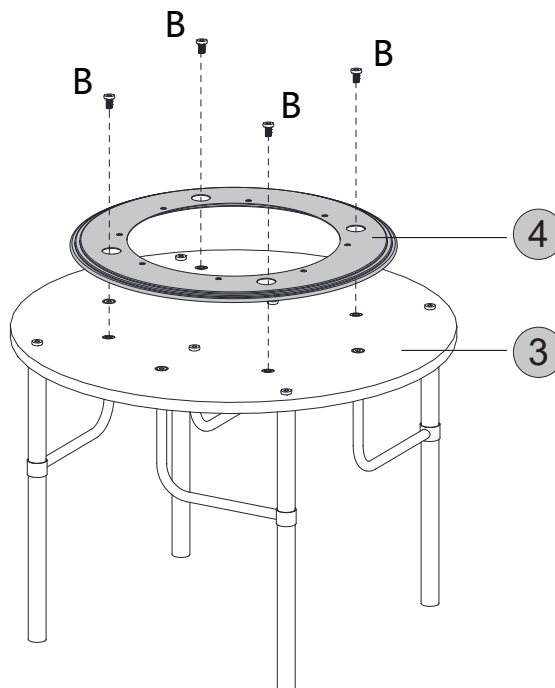

B x 4PCS


STEP 4

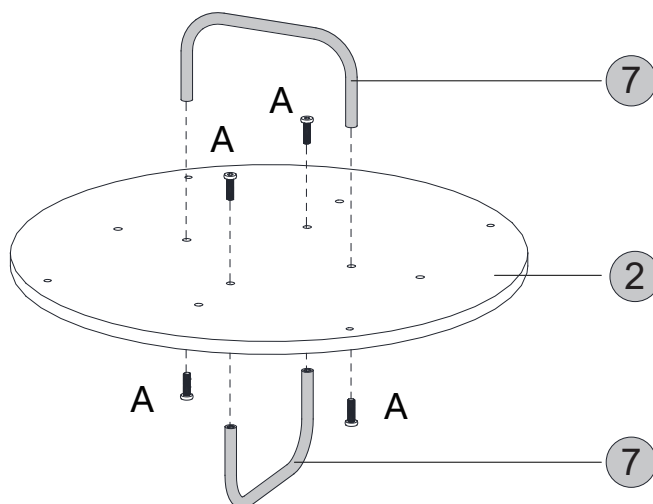

A x 4PCS


Assembly Steps(EN)

STEP 5

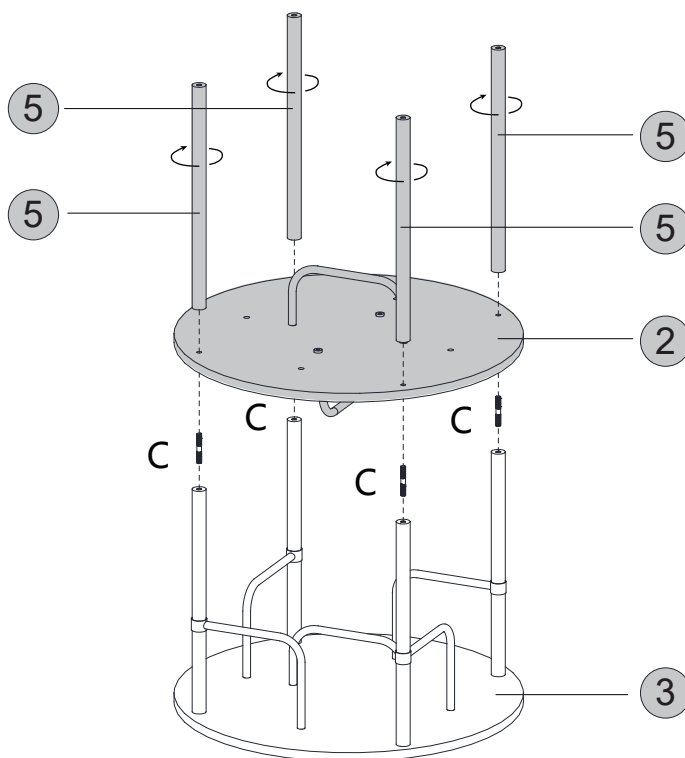

C x 4PCS


STEP 6

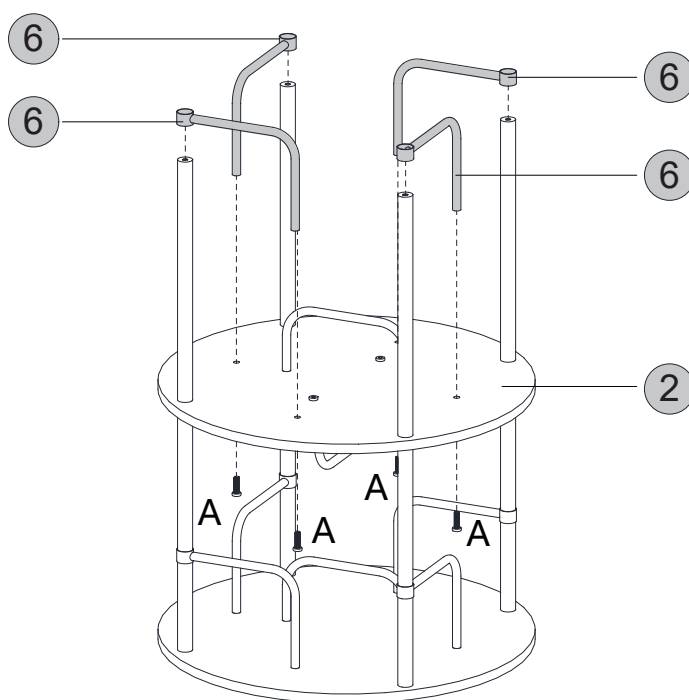

A x 4PCS

Assembly Steps(EN)

STEP 7

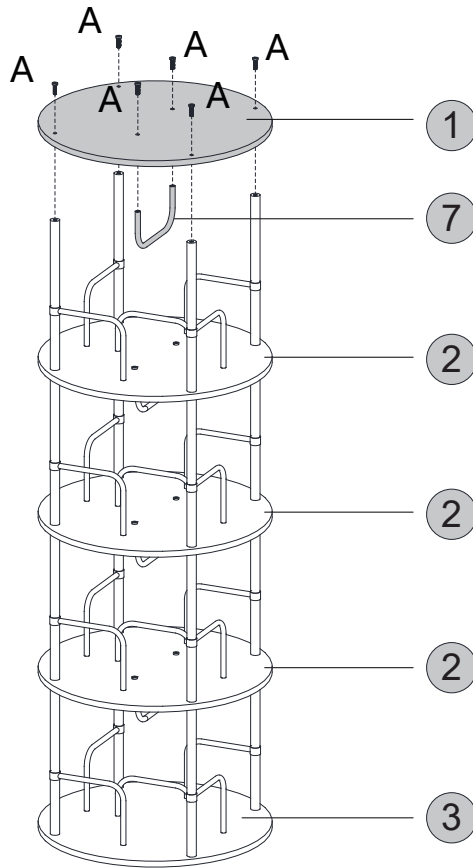


Repeat steps 4, 5 and 6 to install the remaining 2 panel (2), and finally install the top panel (1).



A x 6PCS

STEP 8

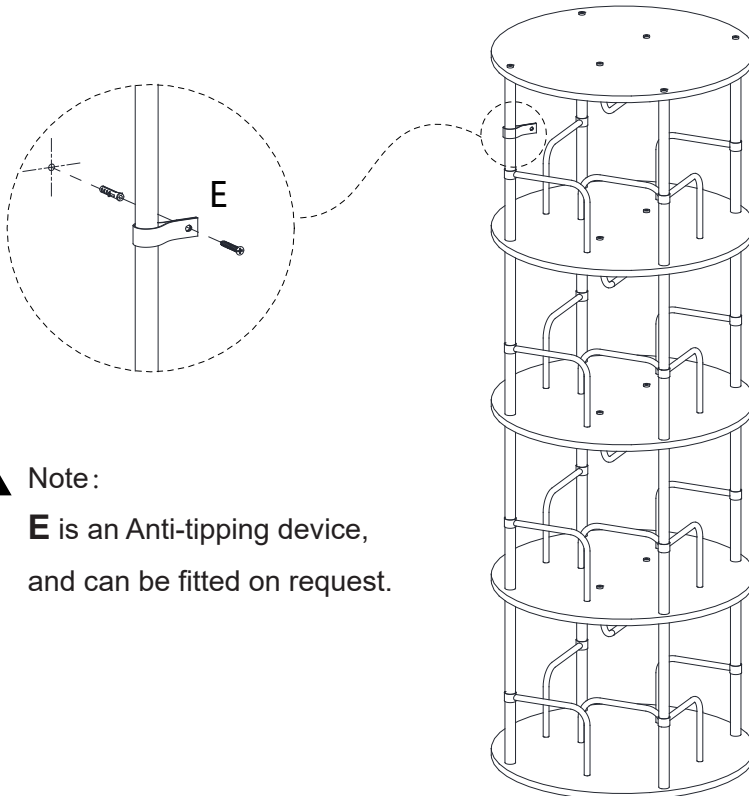

Note:

E is an Anti-tipping device, and can be fitted on request.

Finish



E x 1PC