

Professional Focus, High Ambitions

Multi-functional Slicer [Product Instruction Manuals]

Please read this instruction manual carefully before using the product, and after reading it, please keep it safe for inquiry

Before using the product for the first time, please read all the instructions contained in this user manual carefully, even if you are already familiar with using similar products. Please also follow the instructions in the user's manual to use the product. Please keep the user's manual in a safe place for future use. This equipment is intended for home use only.

Please keep the original packaging, materials, warranty card, and proof of purchase receipt, at least for the warranty period. If you need to ship this product, please pack it in its original carton to ensure maximum protection during shipping or transportation (e.g., when moving or if you need to send this product in for repair).

I. Safety Instructions

1. The manufacturer will not be held responsible if safety instructions are ignored.
2. Please place the appliance on a stable horizontal surface.
3. If the power cord is damaged, have it replaced by the manufacturer's service agent or a similarly qualified person to avoid danger. Do not repair this appliance yourself.
4. Please do not use this product with a damaged power cord or plug. or this product malfunctions or damages this product in any way. To avoid danger please ensure that the damaged power cord or plug will be replaced by a qualified repair service provider. Please do not move the appliance by pulling the cord, and make sure the cord is not tangled.
5. Please do not connect the appliance to the power supply when it is left unattended. Please do not let children use the equipment without supervision.
6. Please note that this product should not be used by children under 8 years of age, as well as by persons with poor physical sensory, or mental abilities or lack of experience and knowledge to avoid the dangers involved. Children are not allowed to play with the apparatus and are not allowed to clean and maintain it.
7. To prevent electric shock, do not immerse the power cord, plug, or appliance in water or other liquids.
8. Disconnect the appliance and disconnect the power supply before replacing accessories or approaching the parts being used.
9. Always disconnect the appliance from the power source if left unattended and before assembly, disassembly or cleaning.
10. The appliance must be used with the slide feed table and gripper unless due to the size or shape of the food.

II. Component Introduction



- ① Food Stopper ② Food Pusher ③ Food Putter ④ Food Pusher Guide Rods
 ⑤ Blade Holder ⑥ Blades ⑦ Blade Lock ⑧ Hatch Cover
 ⑨ Thickness Adjustment Knob ⑩ On/Off Switch

III. Product Parameters

Machine Model	Rated Power	Rated Input	Rest Time
SL-518	150W	220V-240V 50/60Hz	5min

IV. Pre-use Attention

1. Remove the appliance and accessories from the box. Remove the sticker, protective film, or plastic from the appliance.
2. Before use, read all instructions contained in this owner's manual carefully and follow the instructions in the owner's manual for using this product even if you are already familiar with using similar products.
3. Before using the product for the first time, wipe off all removable parts with a damp cloth. Do not use abrasive products.
4. Plug the power cord into an outlet.

Note: Make sure the voltage shown on the device matches the local voltage before connecting the device. (Voltage 220v-240V 50Hz)

V. Instructions

1. Use the set button to select the desired cutting width.
2. The cutting width is adjustable from 1-15mm/ 0.0394-0.591in.
3. Slide the cradle to the left and place the food on the cradle.
4. Place the cradle on the cradle and use this cradle to gently push the food onto the back cover.
5. Use the on/off button located on the left side of the device to activate the device.
6. Note: This product is equipped with a safety switch (A). Push the safety switch toward yourself first while pressing the switch and the apparatus will activate. By pushing the On/Off button again, the apparatus will stop.
7. Attention! Please do not touch the blade, the blade is very sharp and will hurt you seriously.
8. Slowly slide the shaker toward the shaking blade. Harvest the already sliced food at the back of the appliance.
9. Attention! Do not use the device without the fixer, otherwise, it may cause serious injury.
10. When the device is rotating, the blade will keep rotating for a period of time, please do not touch the knife.
11. After 5 minutes of continuous use, turn the unit off and allow it to cool to prevent the engine from overheating.

VI. Product Maintenance

Unplug the power cord and allow the unit to cool before cleaning. Use a soft, slightly damp cloth to wipe the surface of the unit. Do not allow water or any other liquid to enter the device.

1. Cleaning the Faucet and Cradle

Remove the guide bar and cradle. On the right side of the guide bar, you will find a hatch cover, slide this hatch cover to the right and you will be able to take out the guide bar, then you will be able to clean the parts.

2. Remove the Cutting Blade

2.1 Be sure to disconnect the power plug before removing the blade.

2.2 Do not touch the edge of the blade! Make sure the removed cutter blade does not roll off the table! And keep the children away.

2.3 Remove the cutting blade. Push the "button" in the middle of the cutting blade and the latch will appear. Turn the latch clockwise to unlock the blade.

2.4 You can now clean the blade with soapy water and the blade can also be washed in the dishwasher.

2.5 The cutter blade should be put back in place after cleaning. Make sure the tab on the blade matches the notch on the unit and is placed on the blade. Turn the latch counterclockwise to lock the blade.