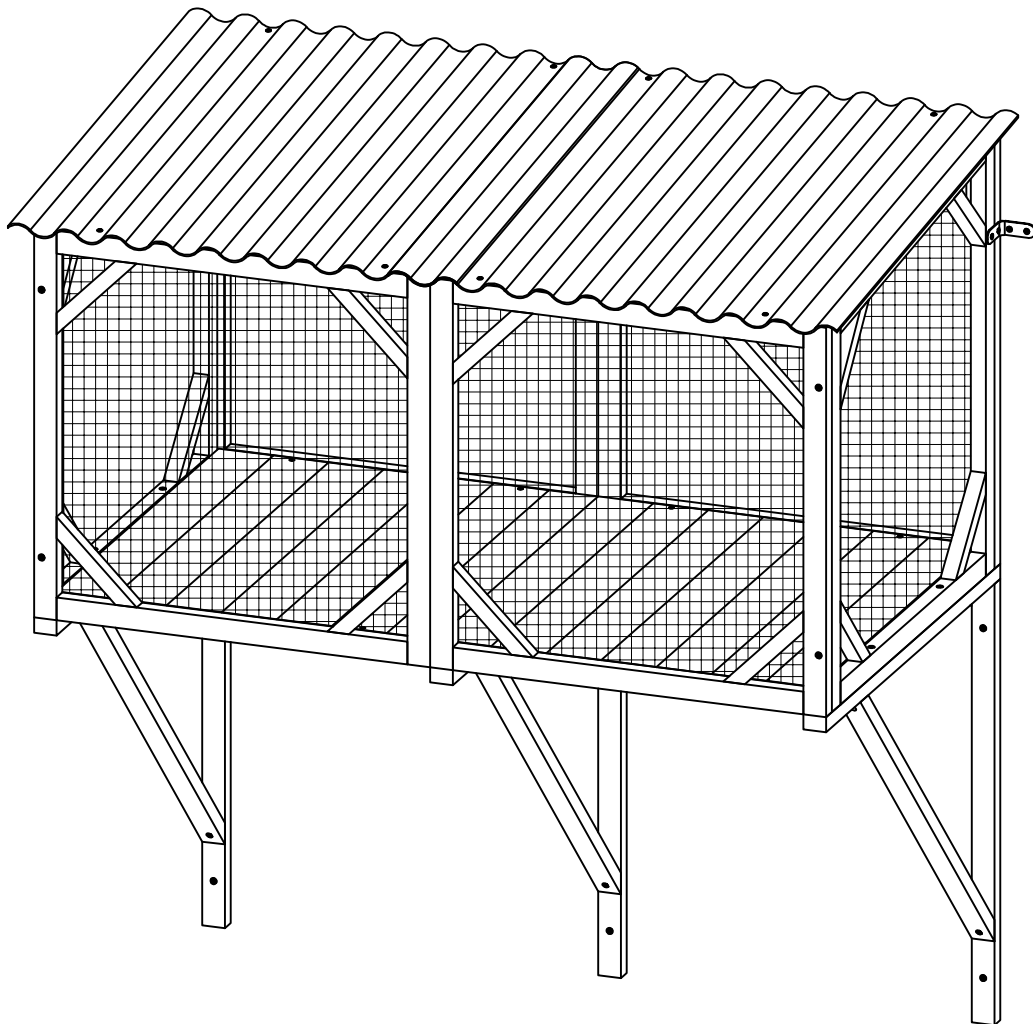 



















Assembly Guide

W2831P241976



READ AND SAVE THIS INSTRUCTIONS FOR FUTURE USE

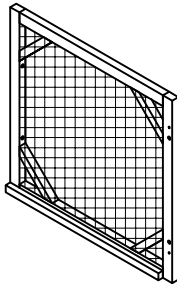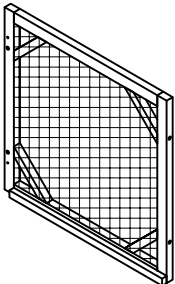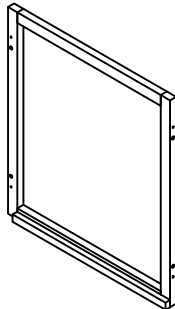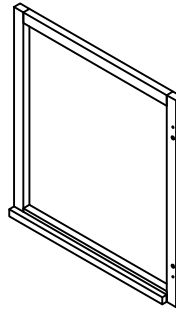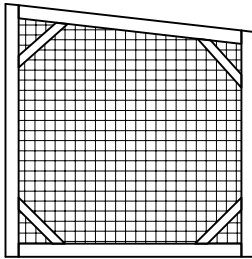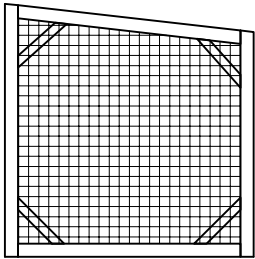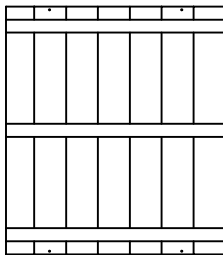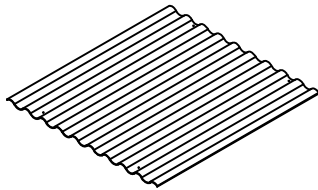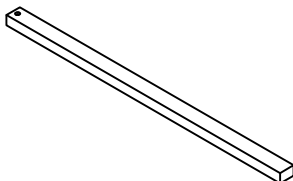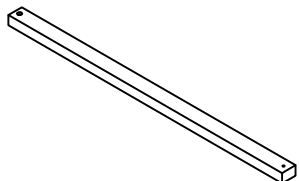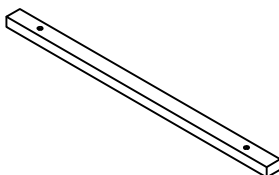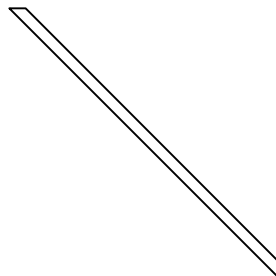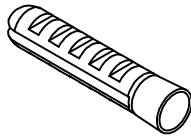                 ASSEMBLY & INSTRUCTION MANUAL


Ax1 	Bx1 	Cx1 	Dx1 
Ex1 	Fx1 	Gx2 	Hx2 
Ix2 	Jx1 	Kx3 	Lx3 
①x12+1  M3*16mm	②x8  M3*25mm	③x4  M3.5*25mm	
④x7+1  M3.5*30mm	⑤x11+1  M3.5*35mm	⑥x10+1  M3.5*45mm	
⑦x4  M3.5*50mm	⑧x12+1  wood stick ø8*20mm	⑨x10 	⑩x2 

Cx1

Dx1

⑦x2

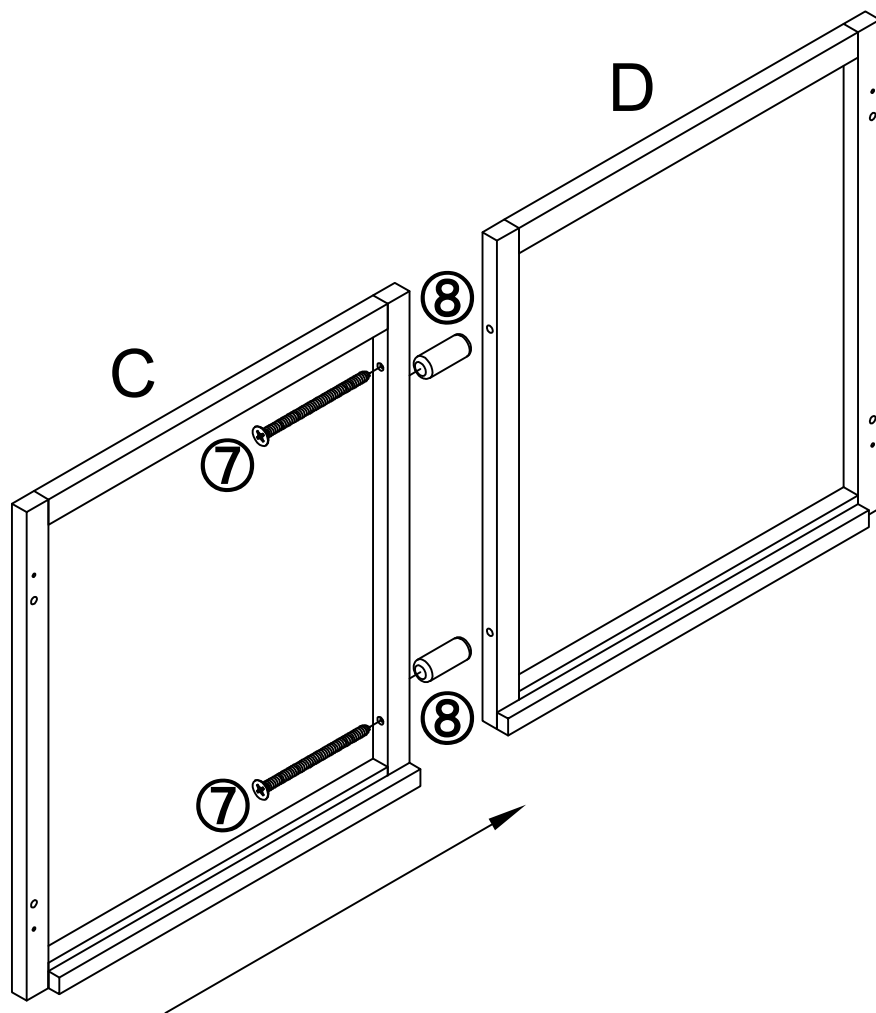 
⑧x2




Ex1

Fx1

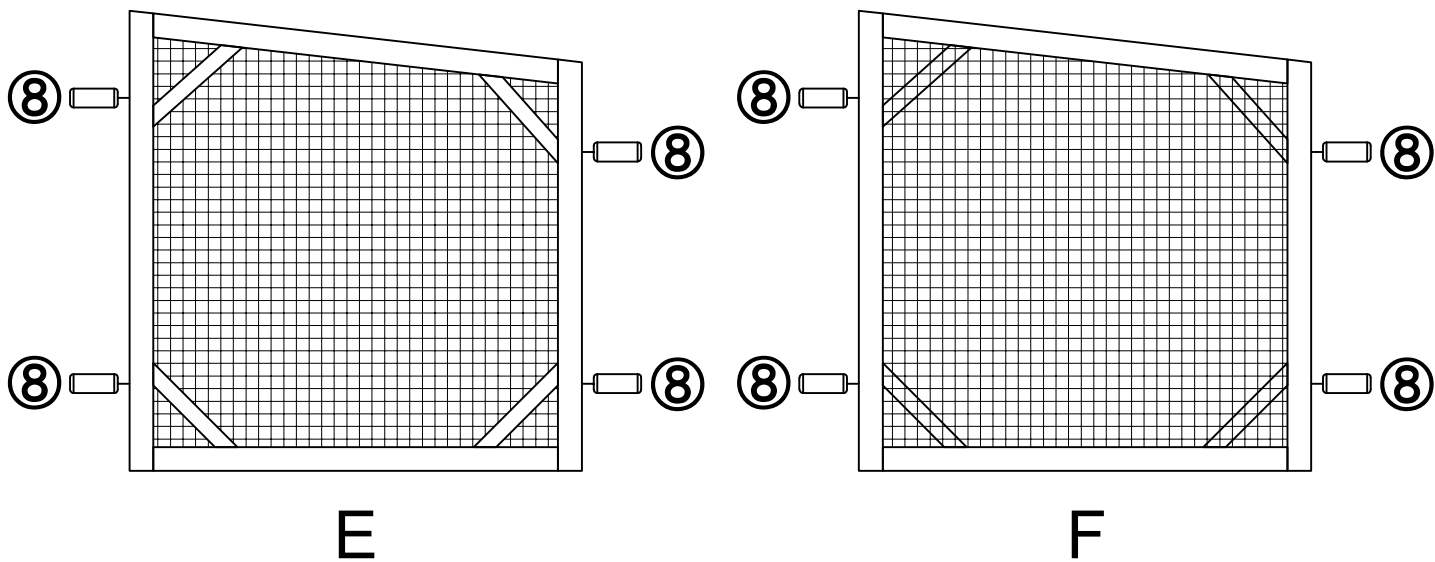 ⑧x8



⑤x4

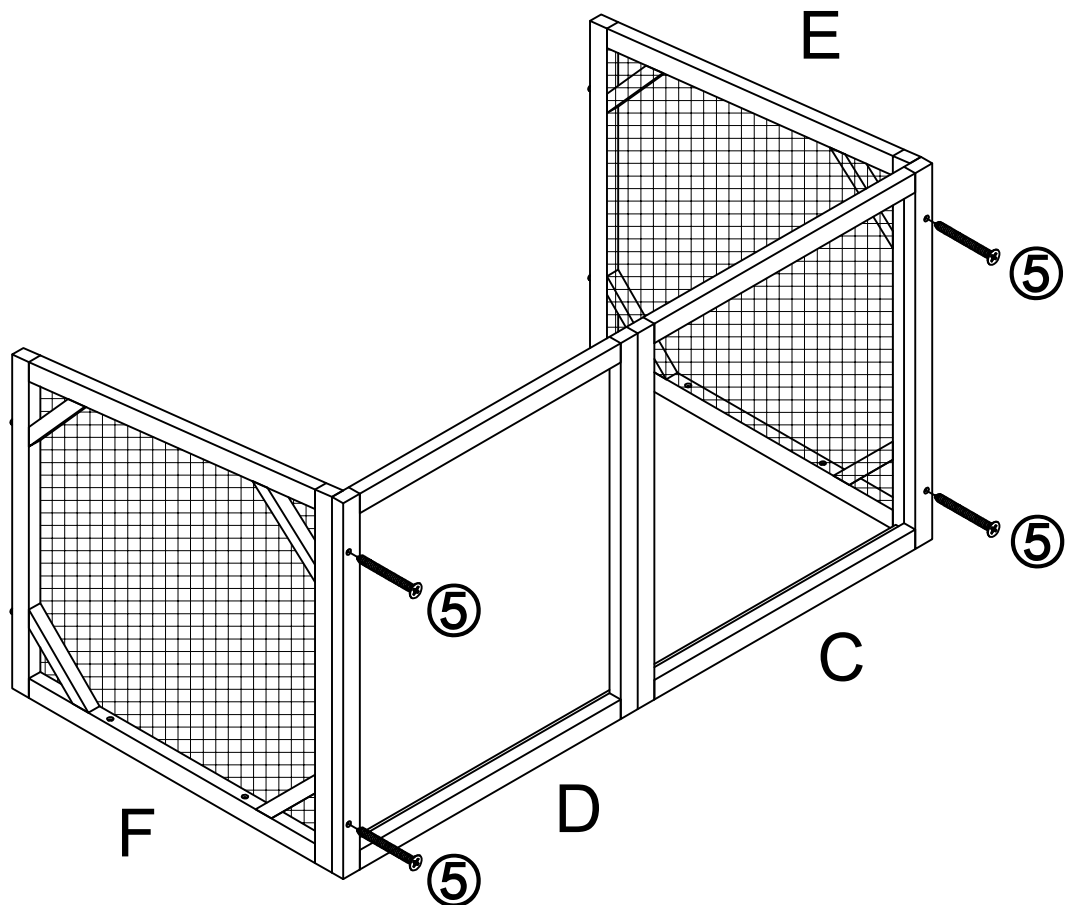 




Ax1

Bx1

⑦x2

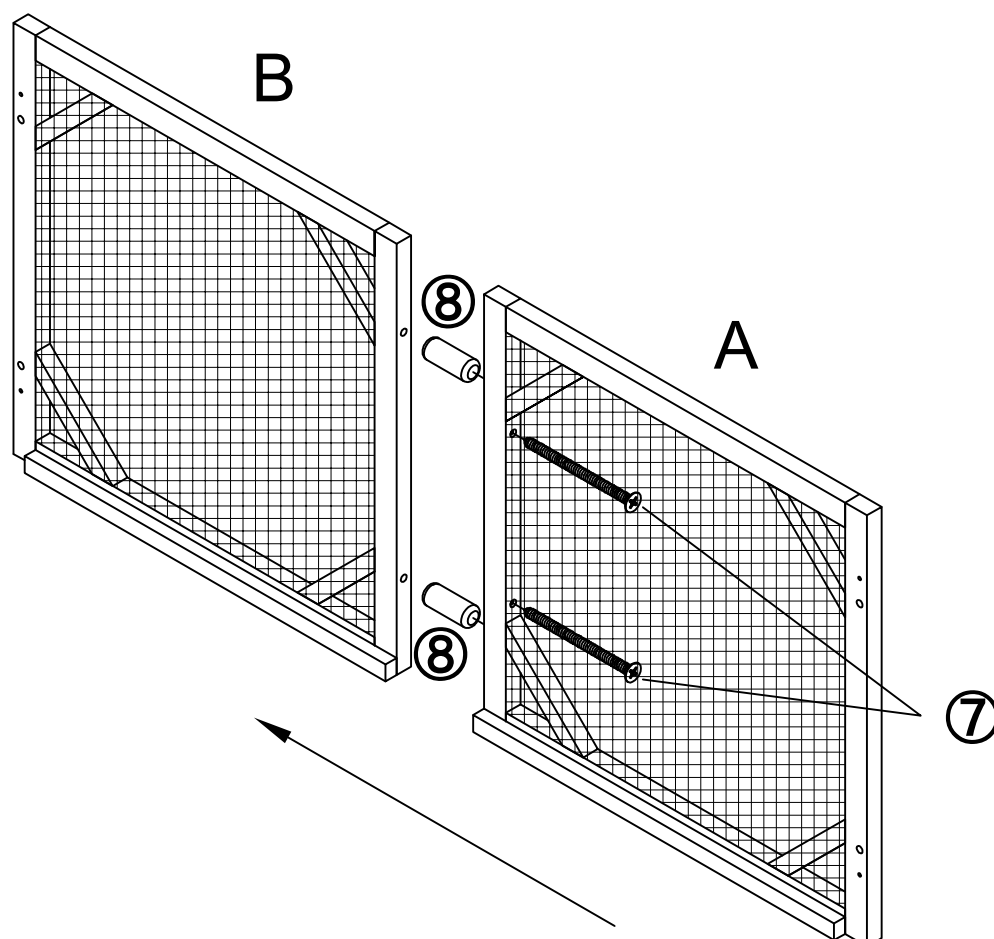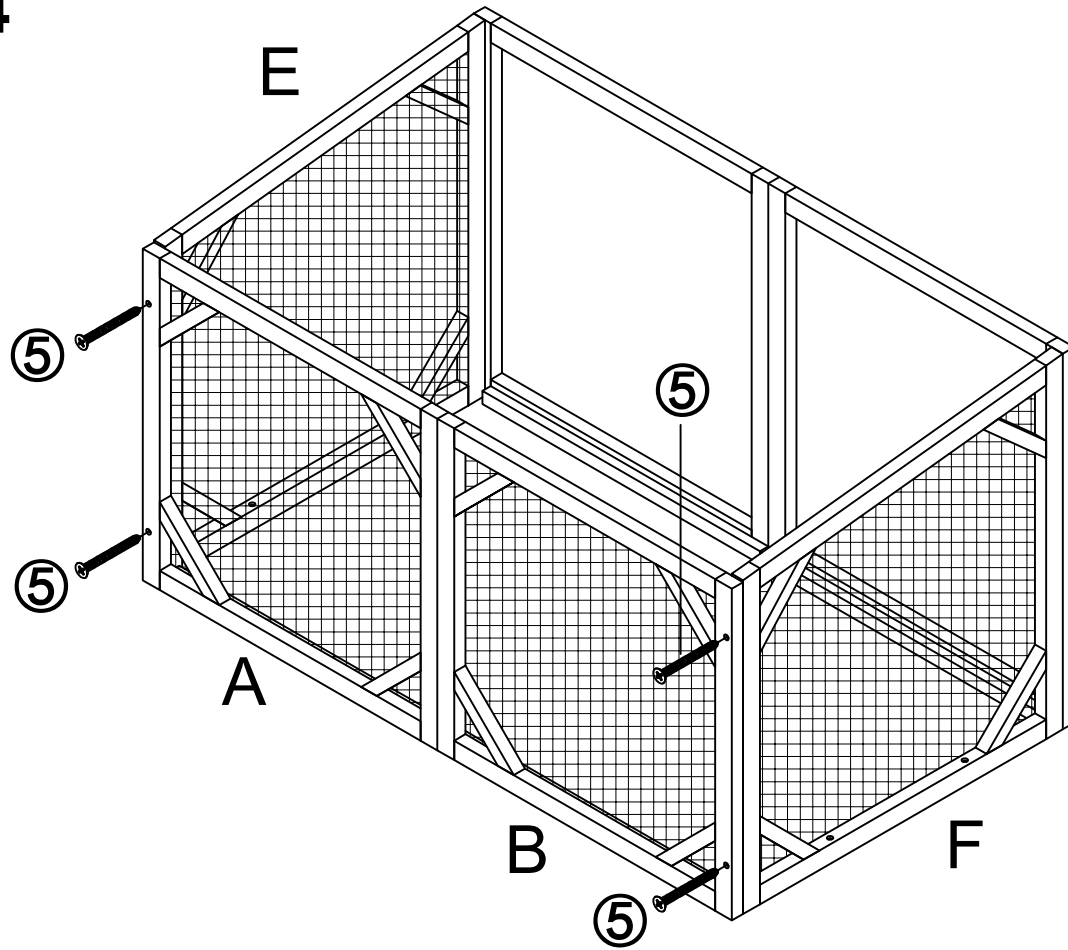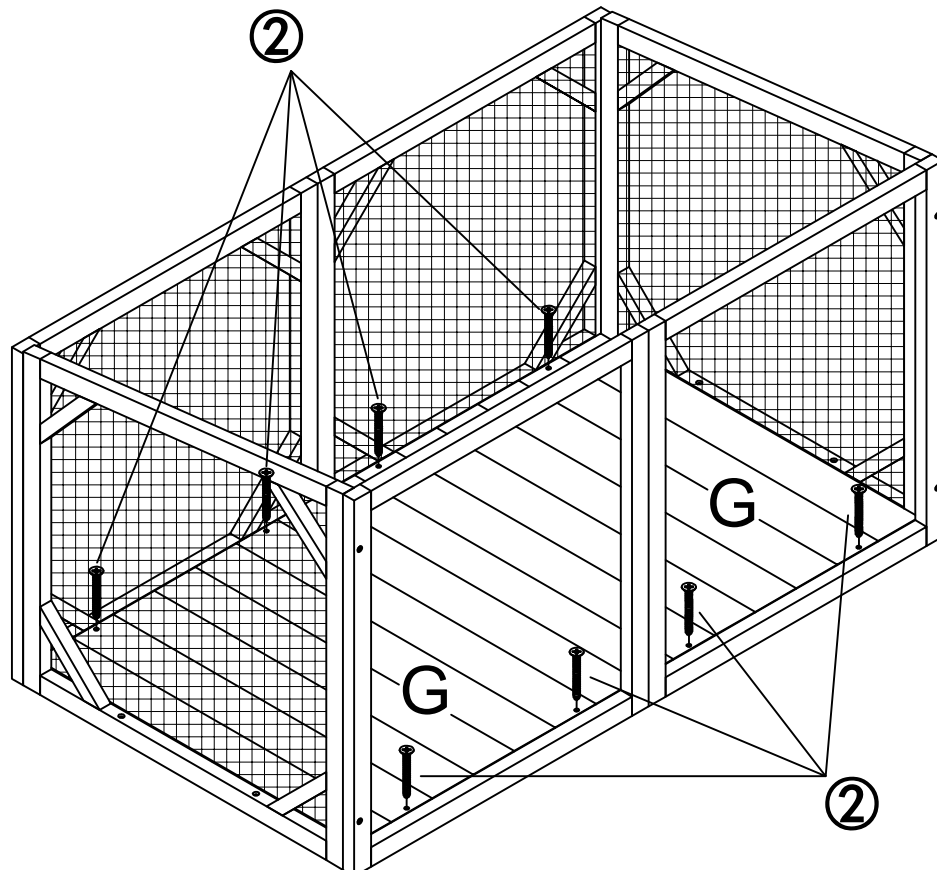   
⑧x2



⑤x4**Gx2****②x8**

Hx2

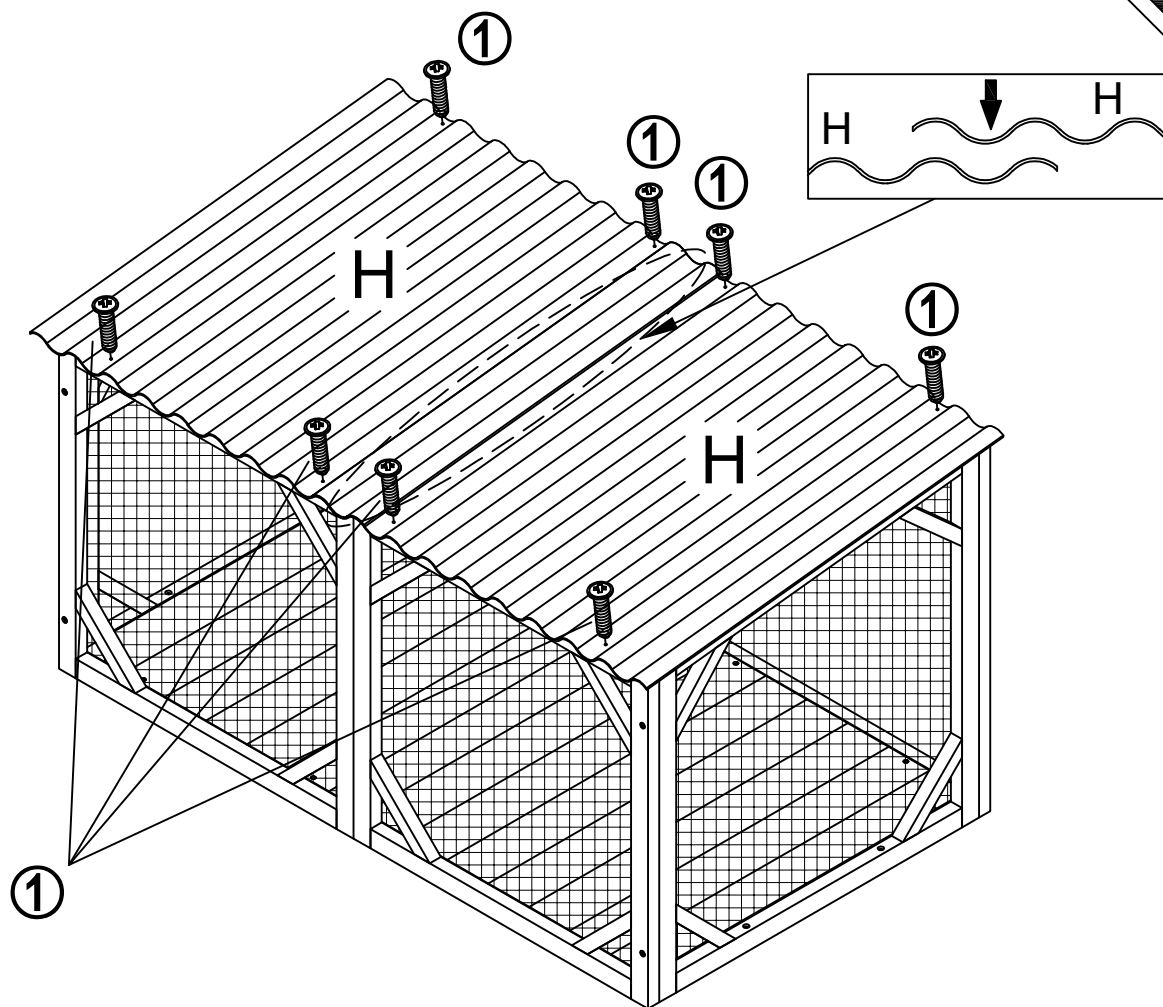 ①x8




Ix2 ④x6

Jx1 ⑤x3


Kx3

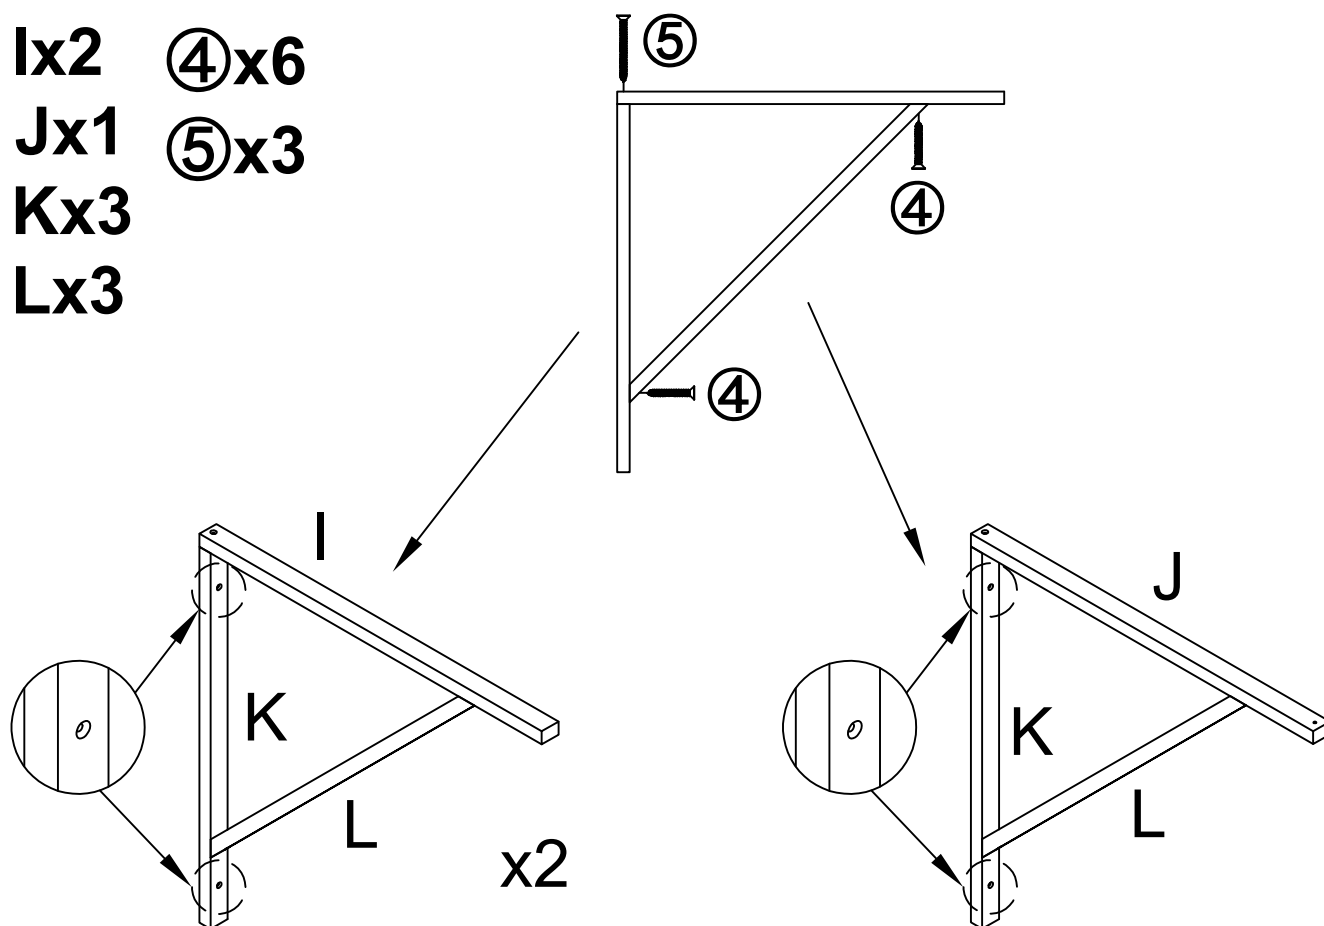 Lx3




⑥x6

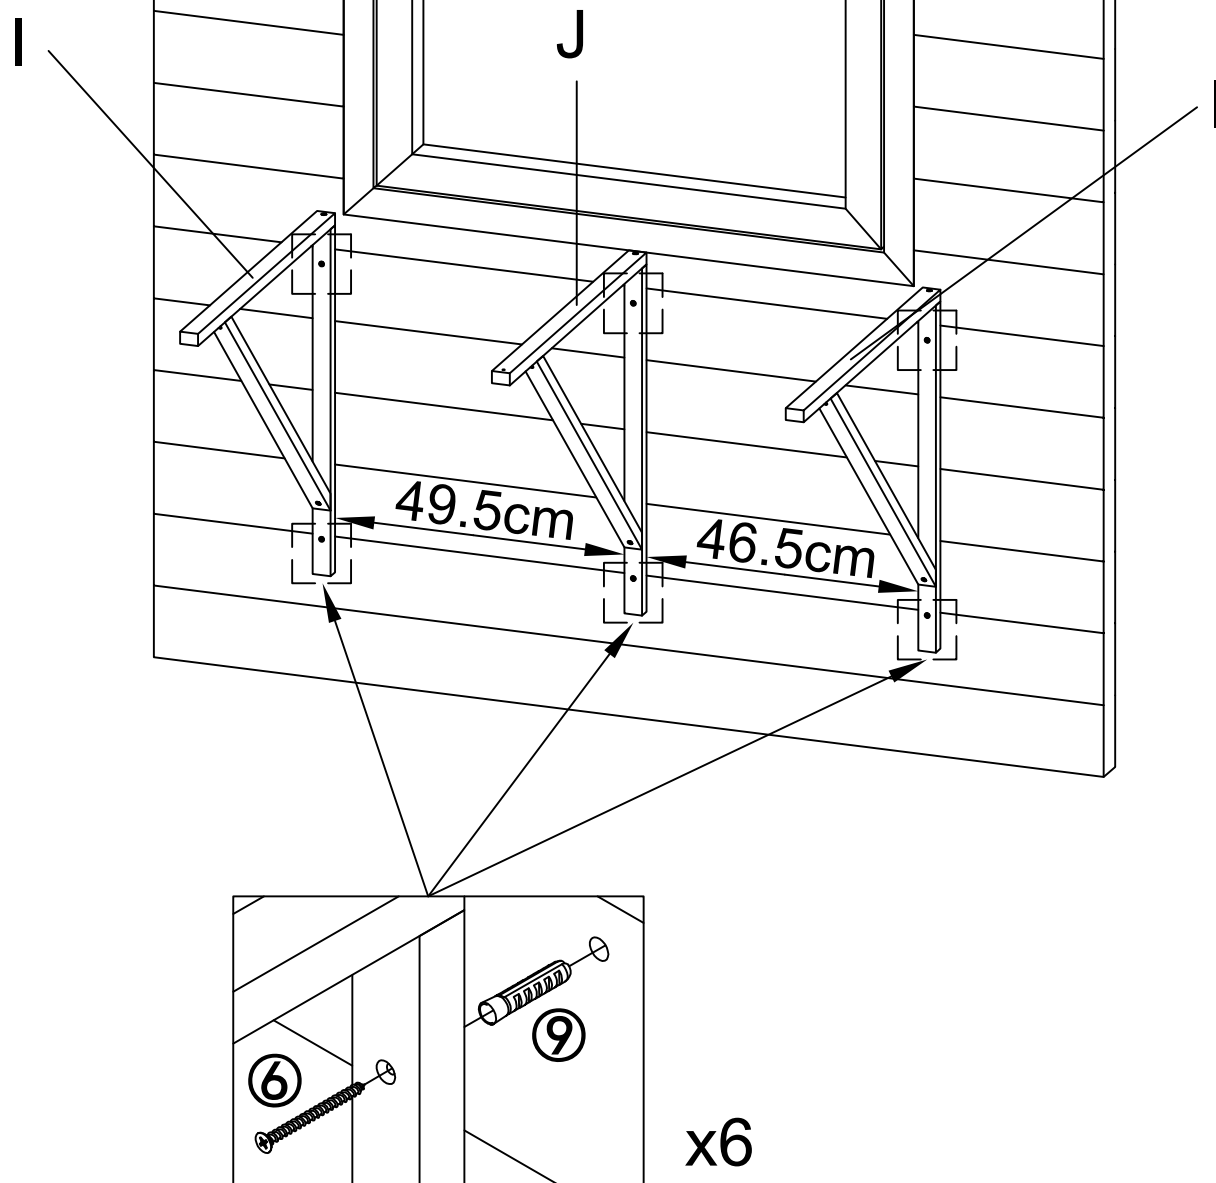 ⑨x6







④x1

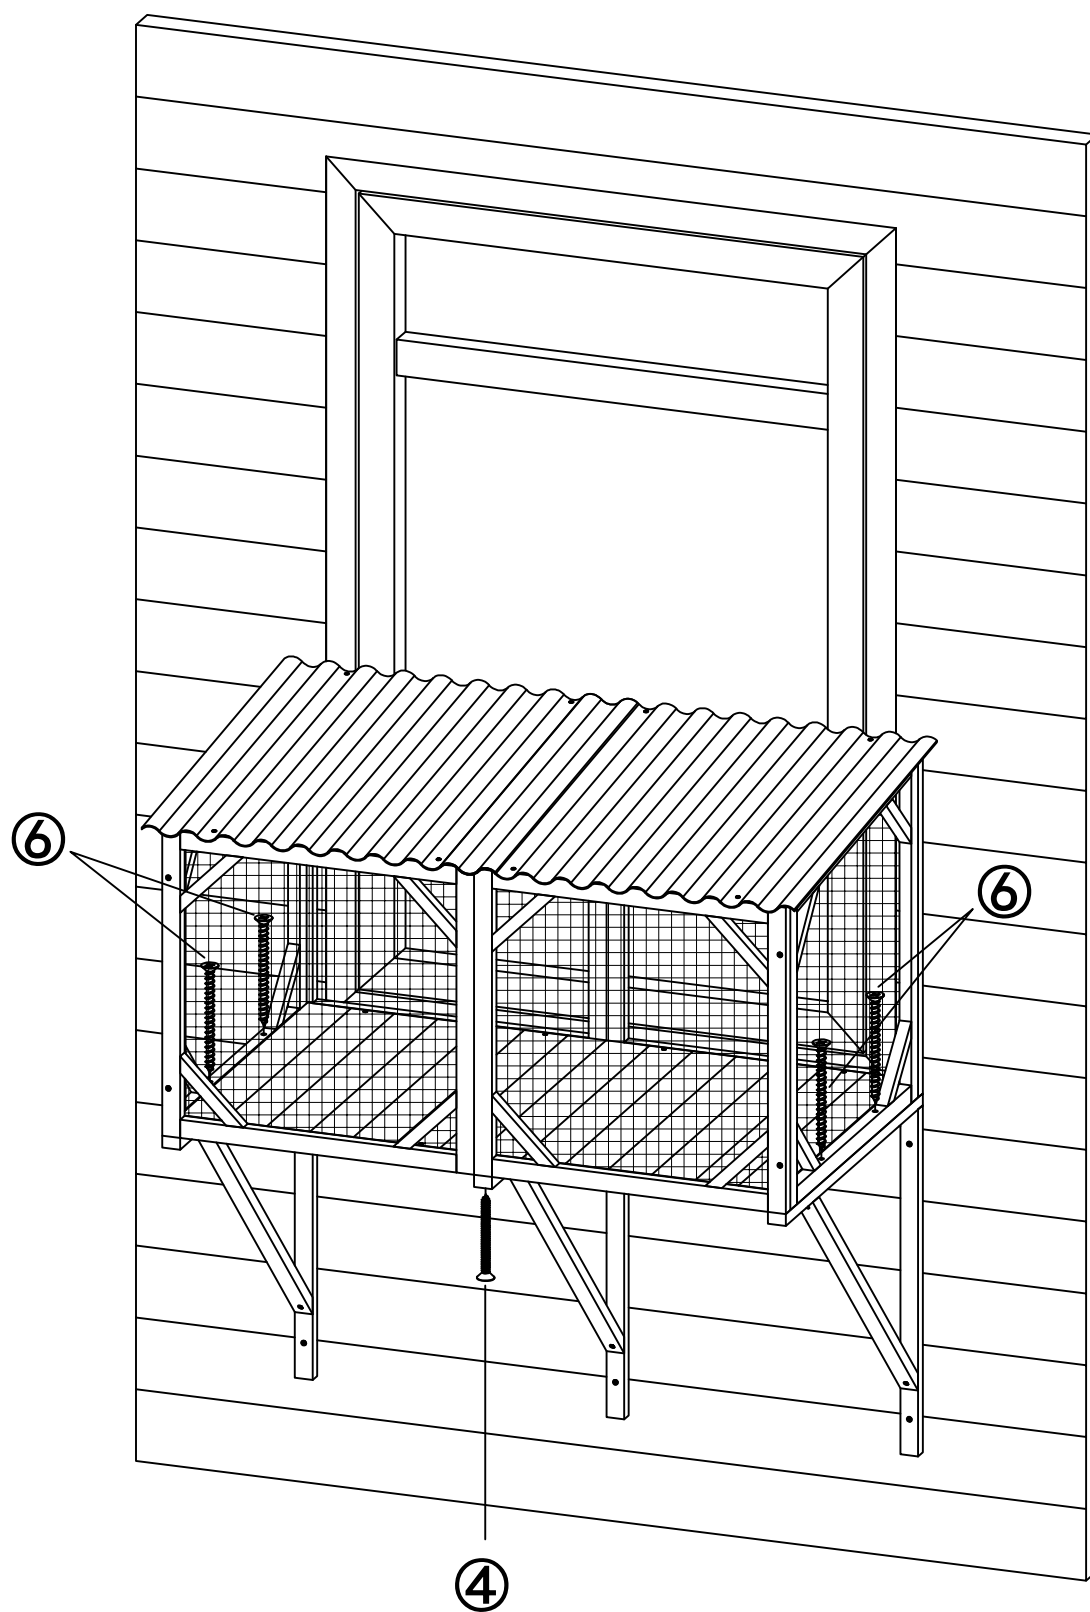 ⑥x4



- ①x4
- ③x4
- ⑨x4
- ⑩x2

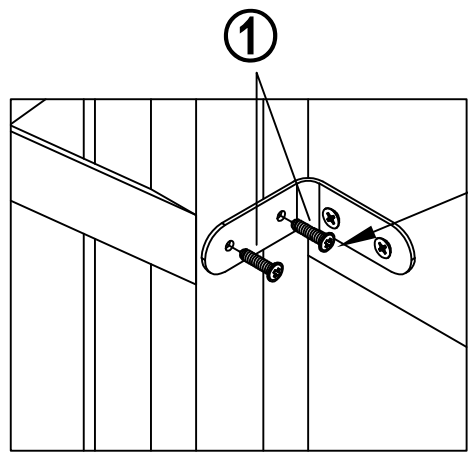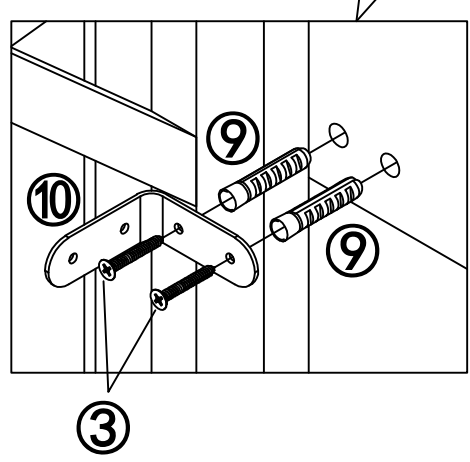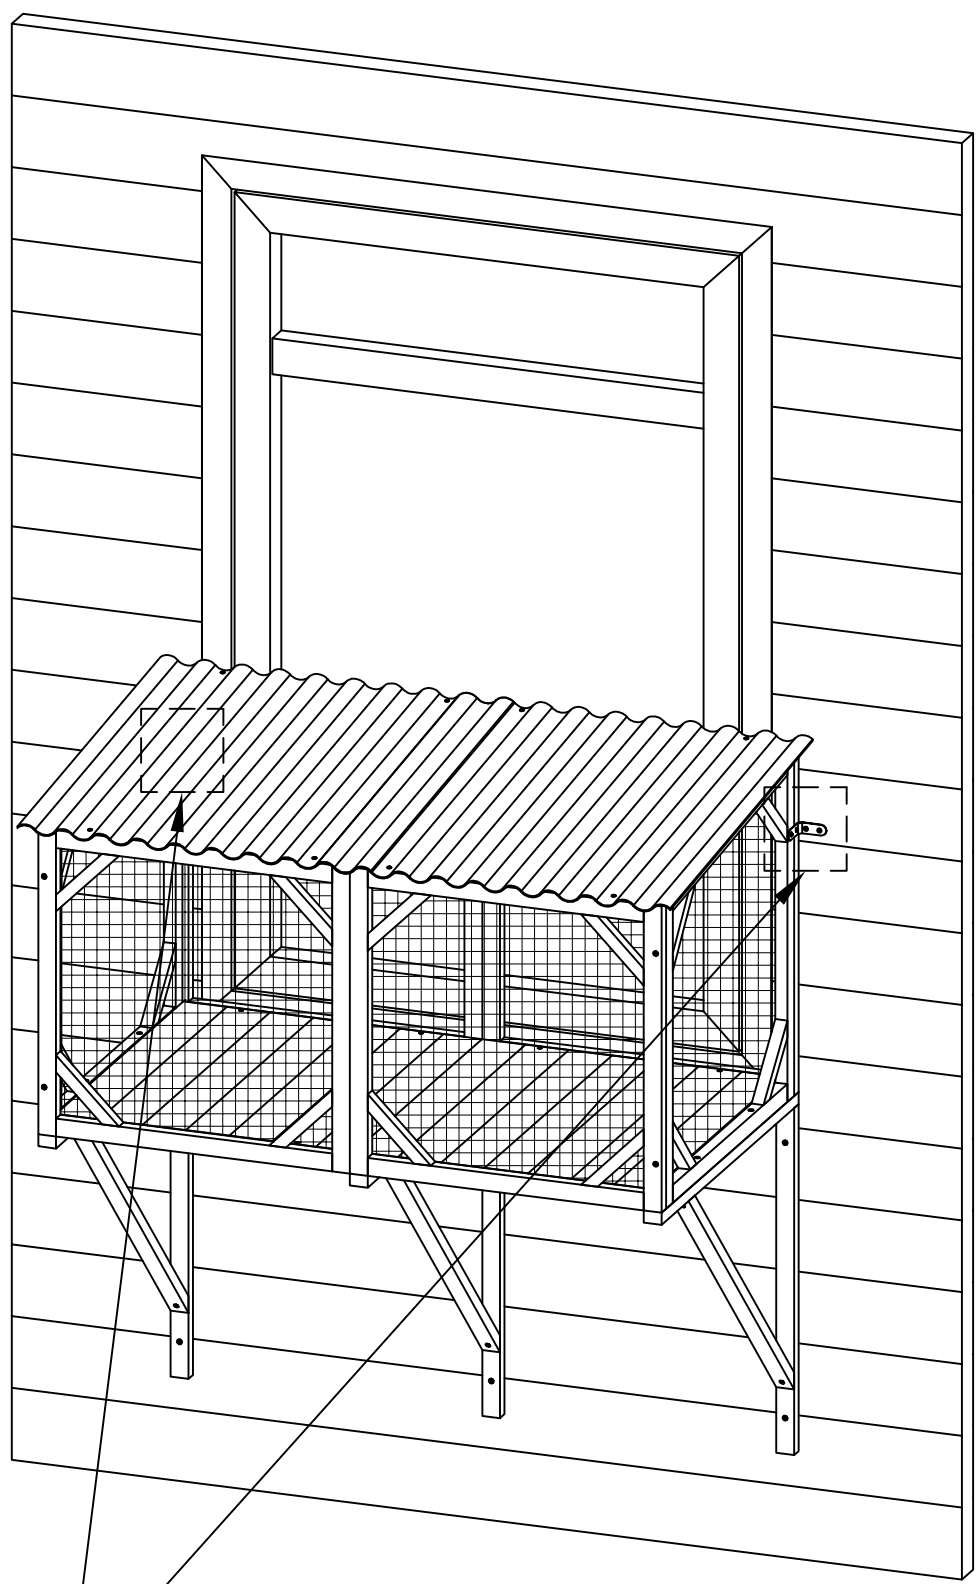    

Note:
Please select the
hole positions
based on the
actual window
conditions.