 


Assembling Instruction

Generating Drawings

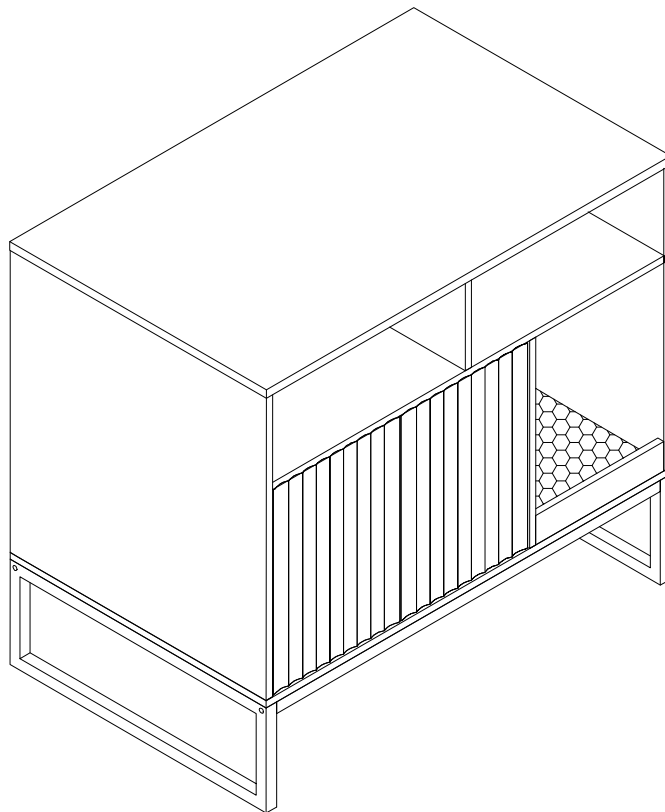

ATTENTION

If there is any missing, please kindly send us messages to let us know the name of missing part regarding to the first page of instructions.

 
We will send replacement to you asap. We are concerned about each customer's experience, if there is any loss or damage, please contact us at any time, we will provide effective solutions.

Please attach your Oder ID so that we can assist you better.




General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- VI . A Phillips head screwdriver is required for the assembly of this product .

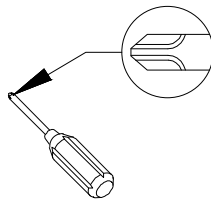

 
- VII . Power tools should not be used to assemble this product .

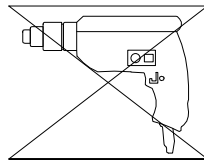

 CAM LOCK/BOLT FASTENING INTRODUCTION (You will use it during assembly)

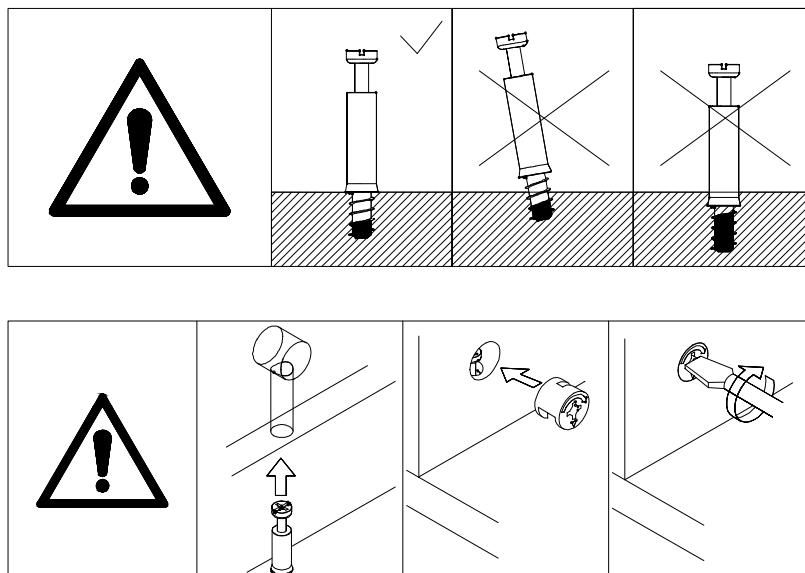


Parts List

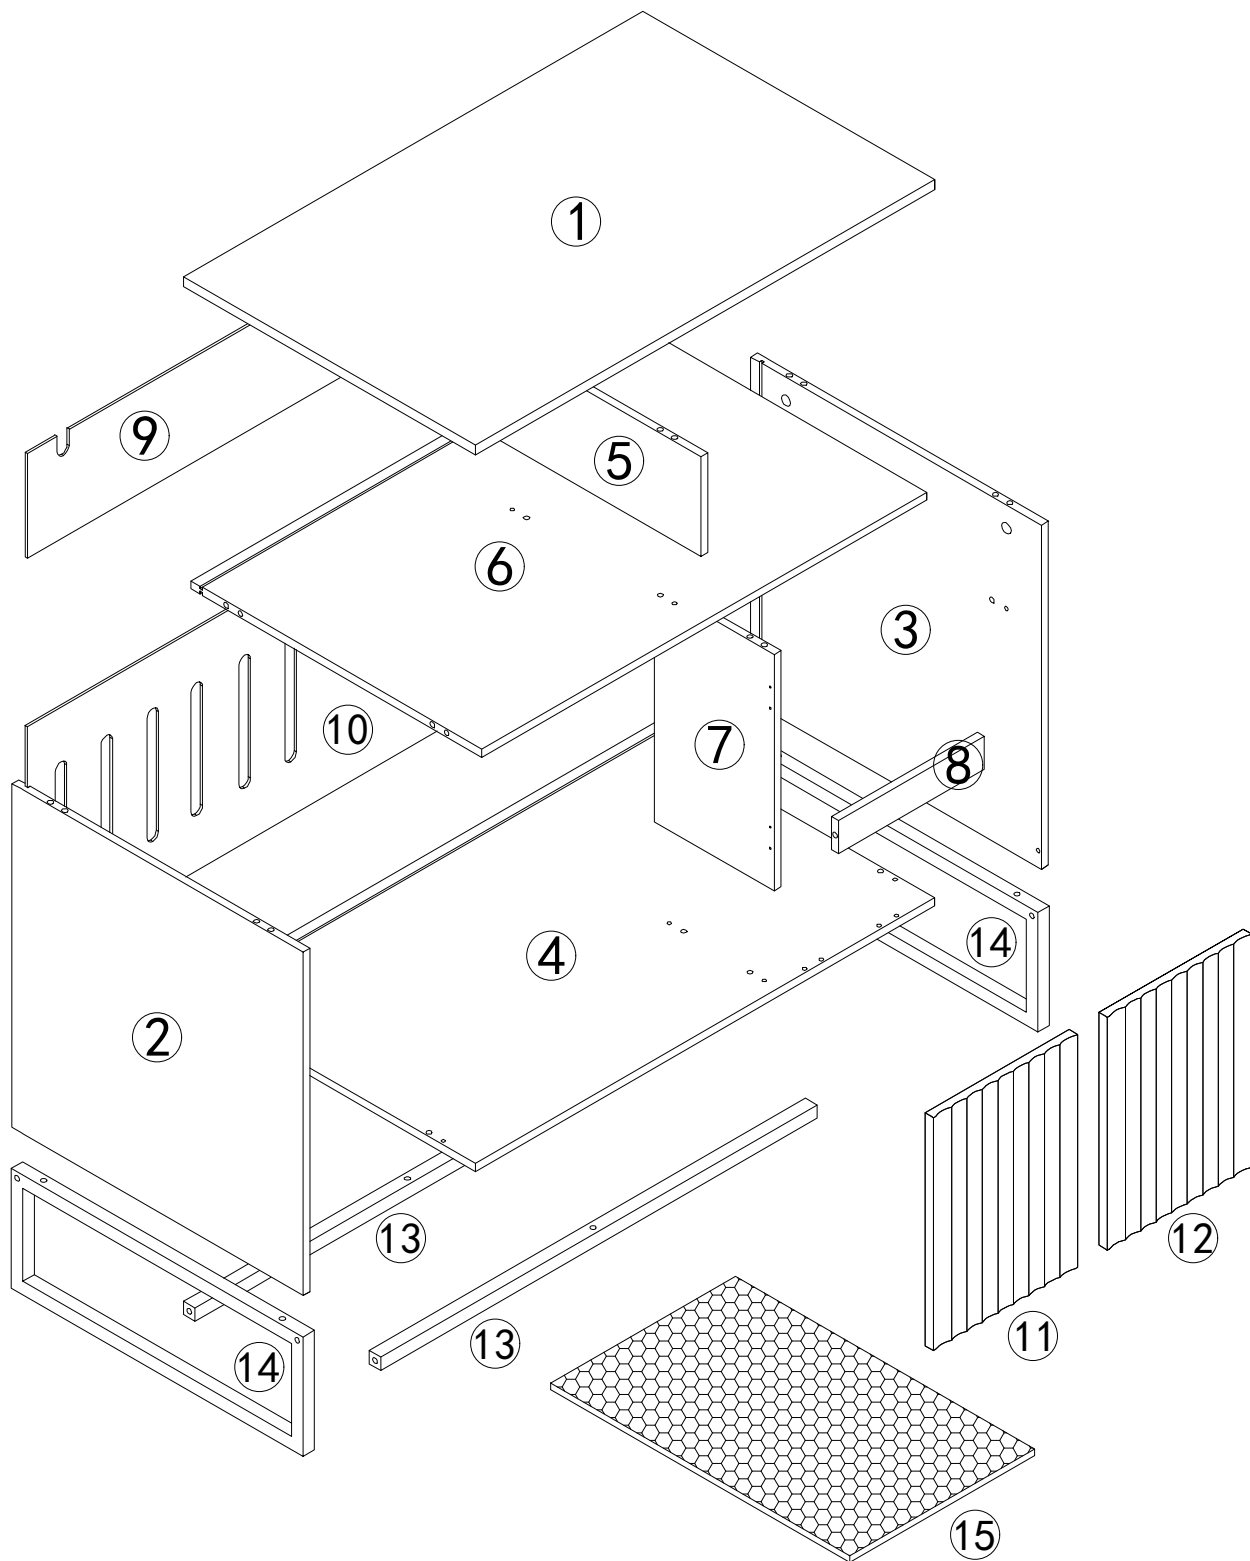 

HARDWARE PACK CONTENT

 A

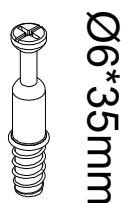

Ø6*35mm

14X+2

B



Ø15*9mm

14X+2

C



Ø6*30mm

22X+3

D



Ø4*35mm

10X+1

 
E



Ø3.5*12mm

28X+5

F



Ø6*18mm

 
4X+1

G




1X

H

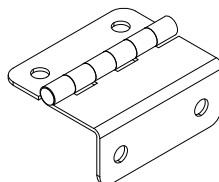

4X

 
I



Ø6*35mm

4X+1

 
J



Ø3*14mm


10X+2

 K



10X+2

 
L



Ø6*30mm

2X

 M



2X

 
P



Ø4*12mm

2X


Q



Ø4*40mm


2X

 R

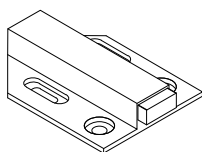


2X

 S



2X

 N



Ø6*28mm

6X+1


O



14X+2




Step 1

A	E	R
 Ø6*35mm	 Ø3.5*12mm	
X8	X8	X2

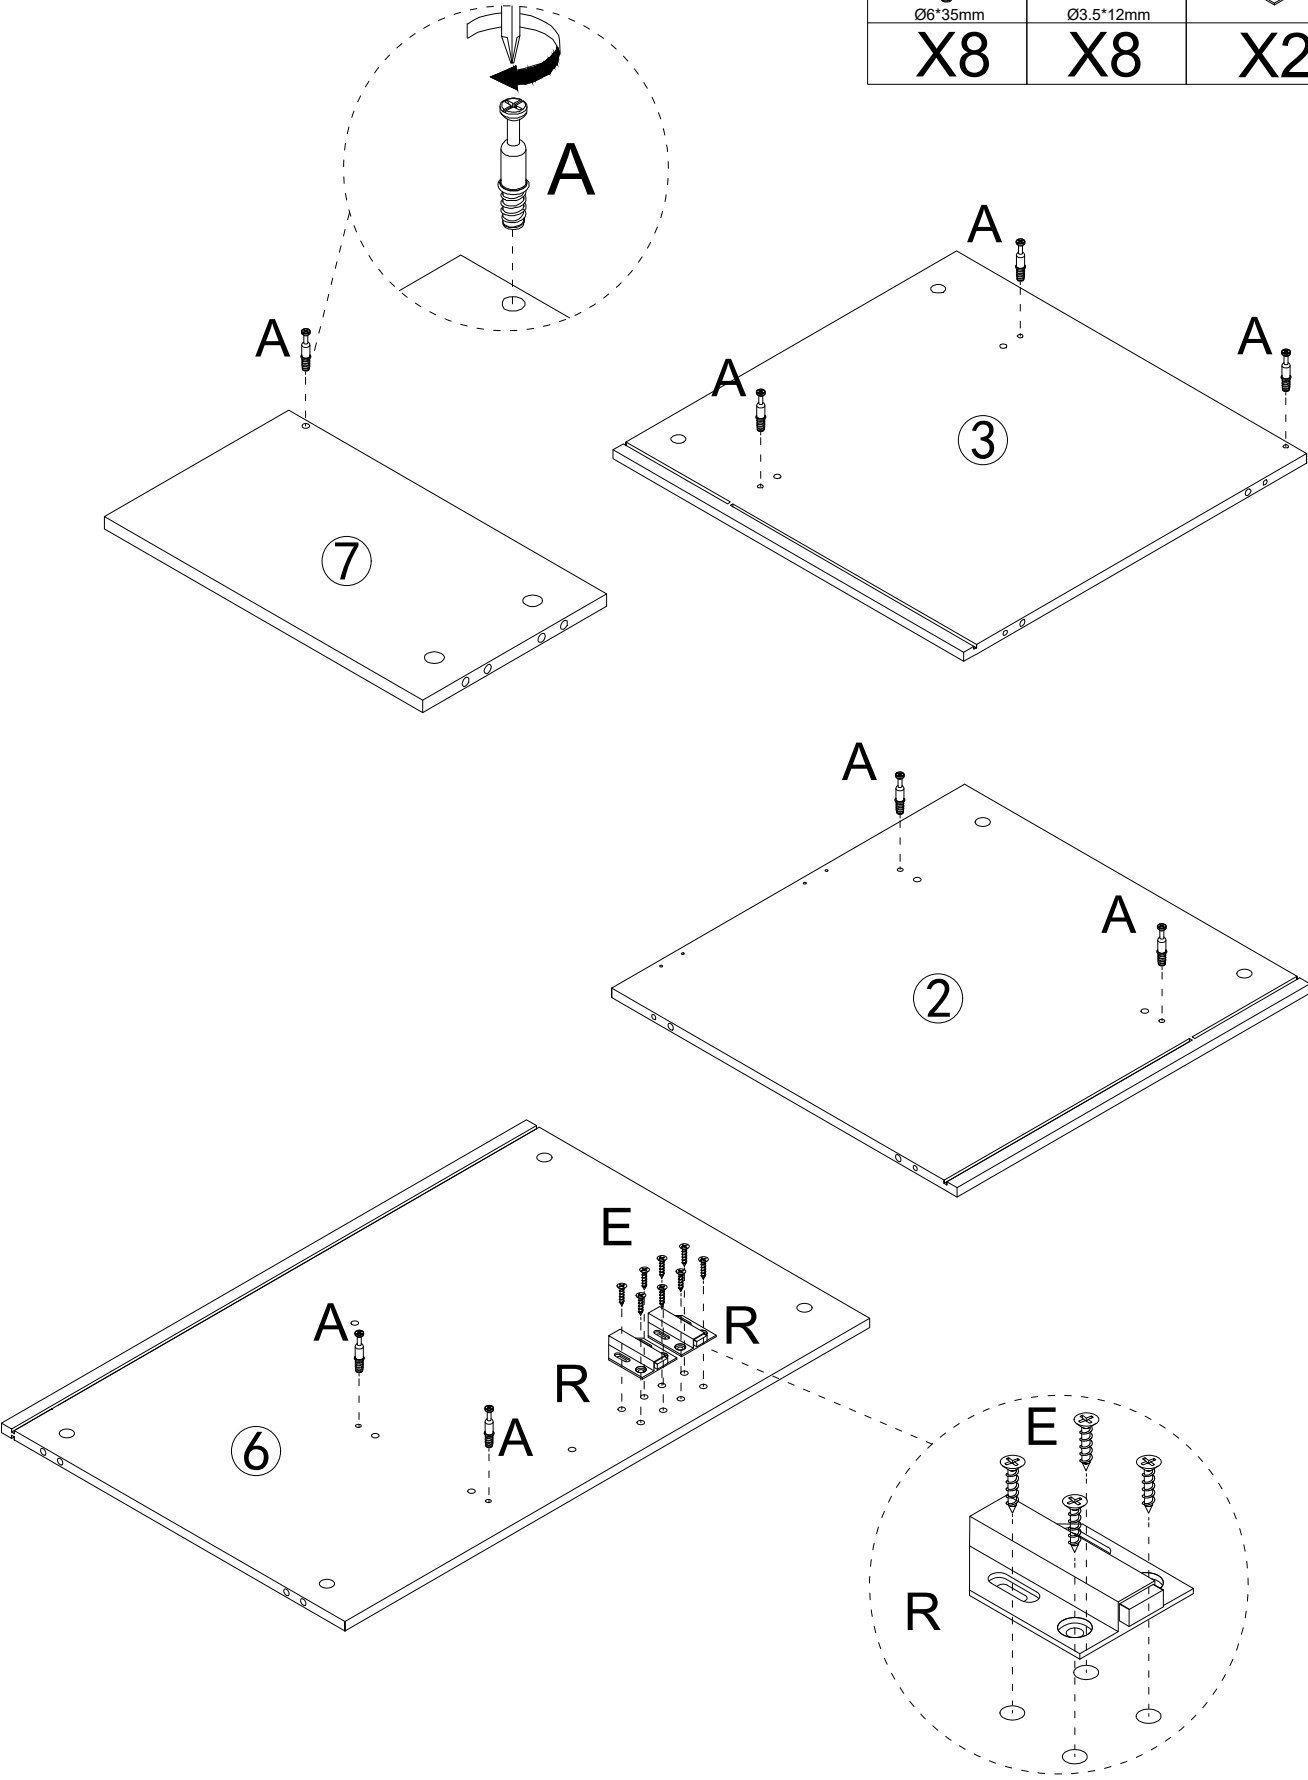 

Step 2



B	C
 Ø15*9mm	 Ø6*30mm
X5	X4

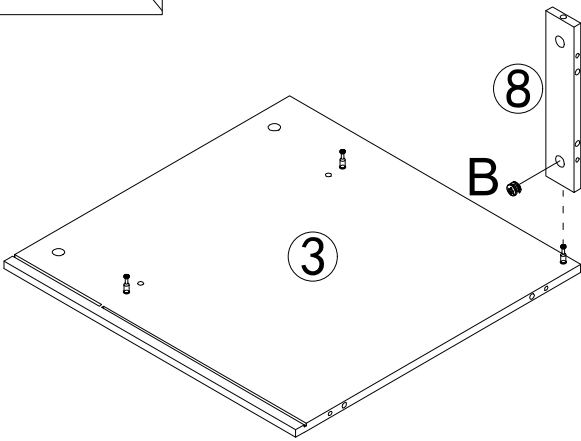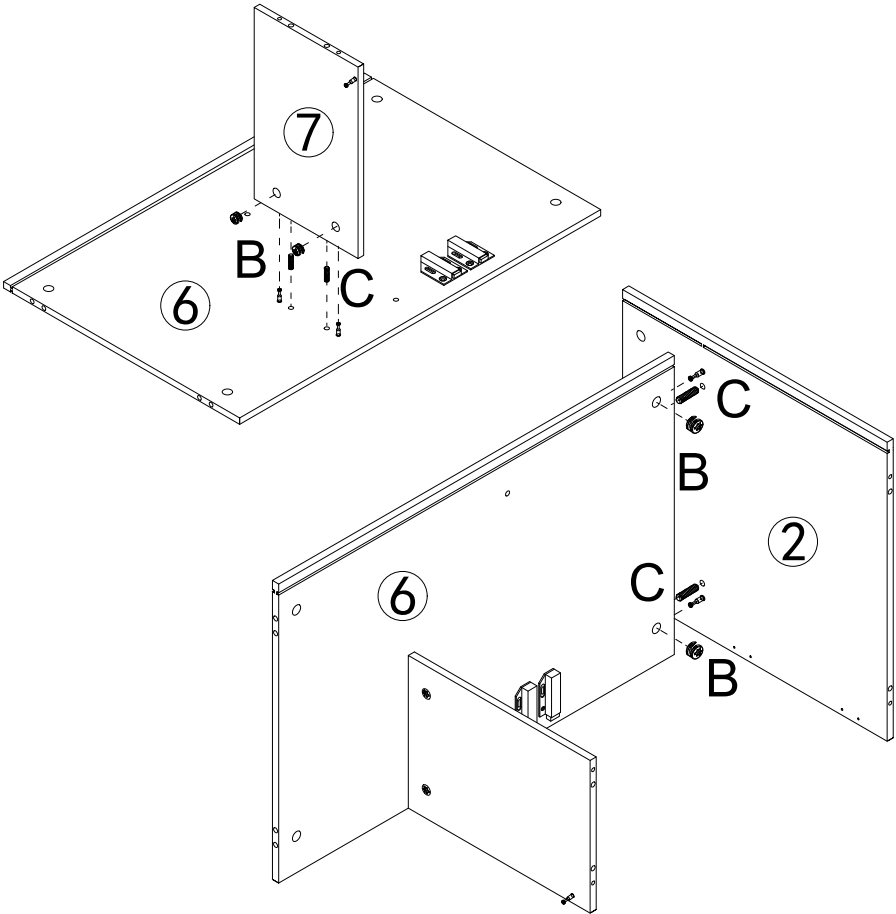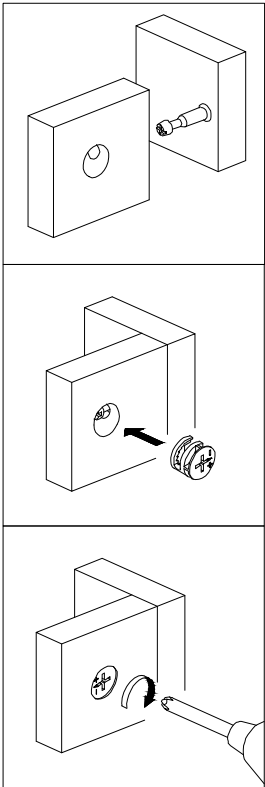   


NOTE: The cam lock hole on plate#8 is toward the slot on plate#3

Step 3


B	C
 Ø15*9mm	 Ø6*30mm
X3	X2

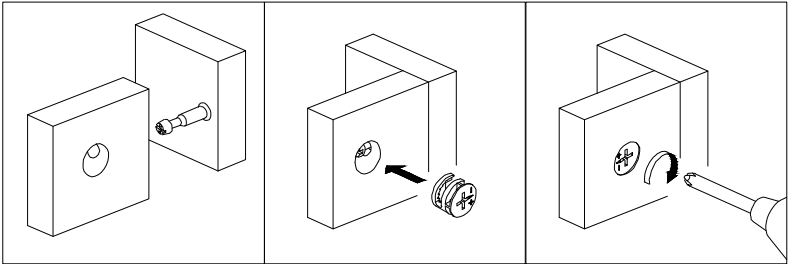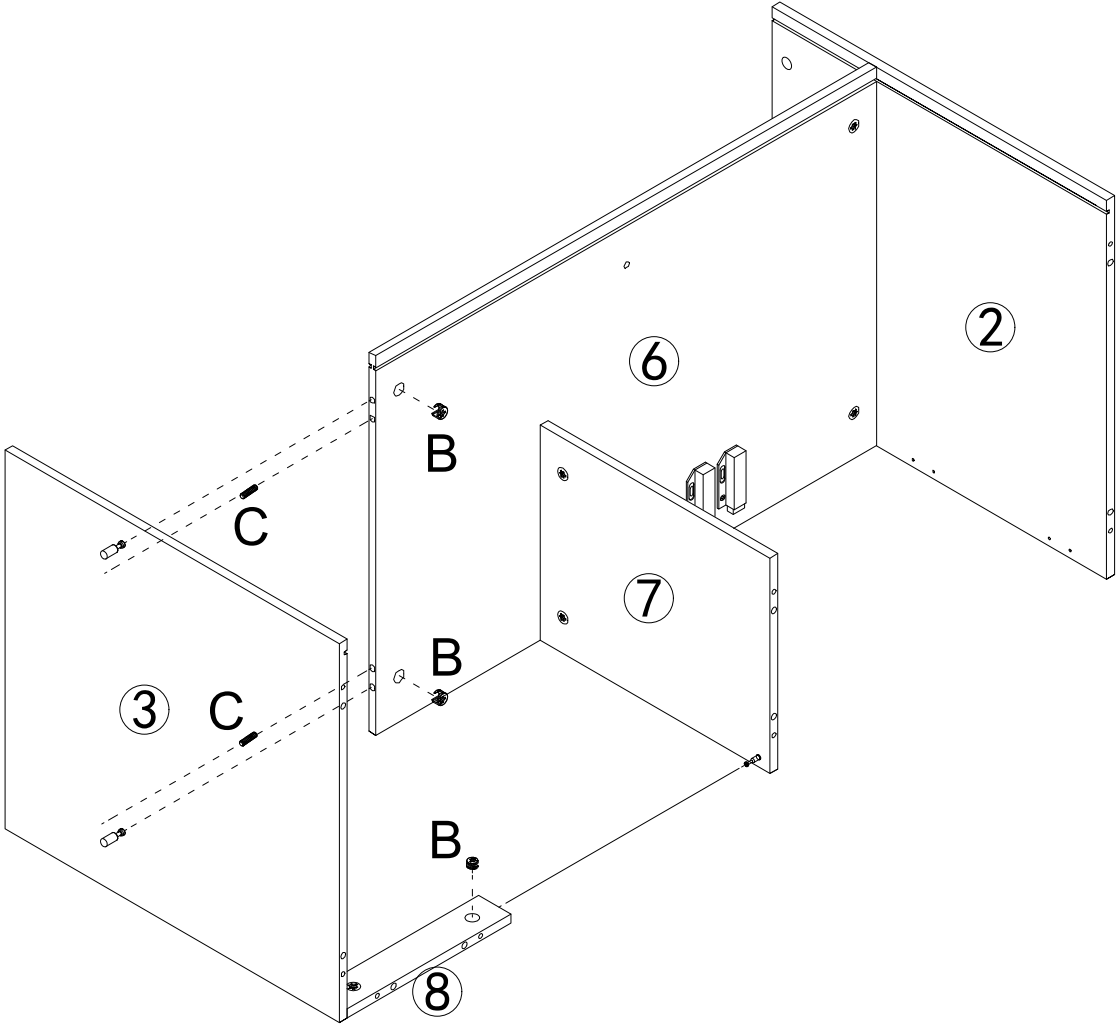  

 
Step 4

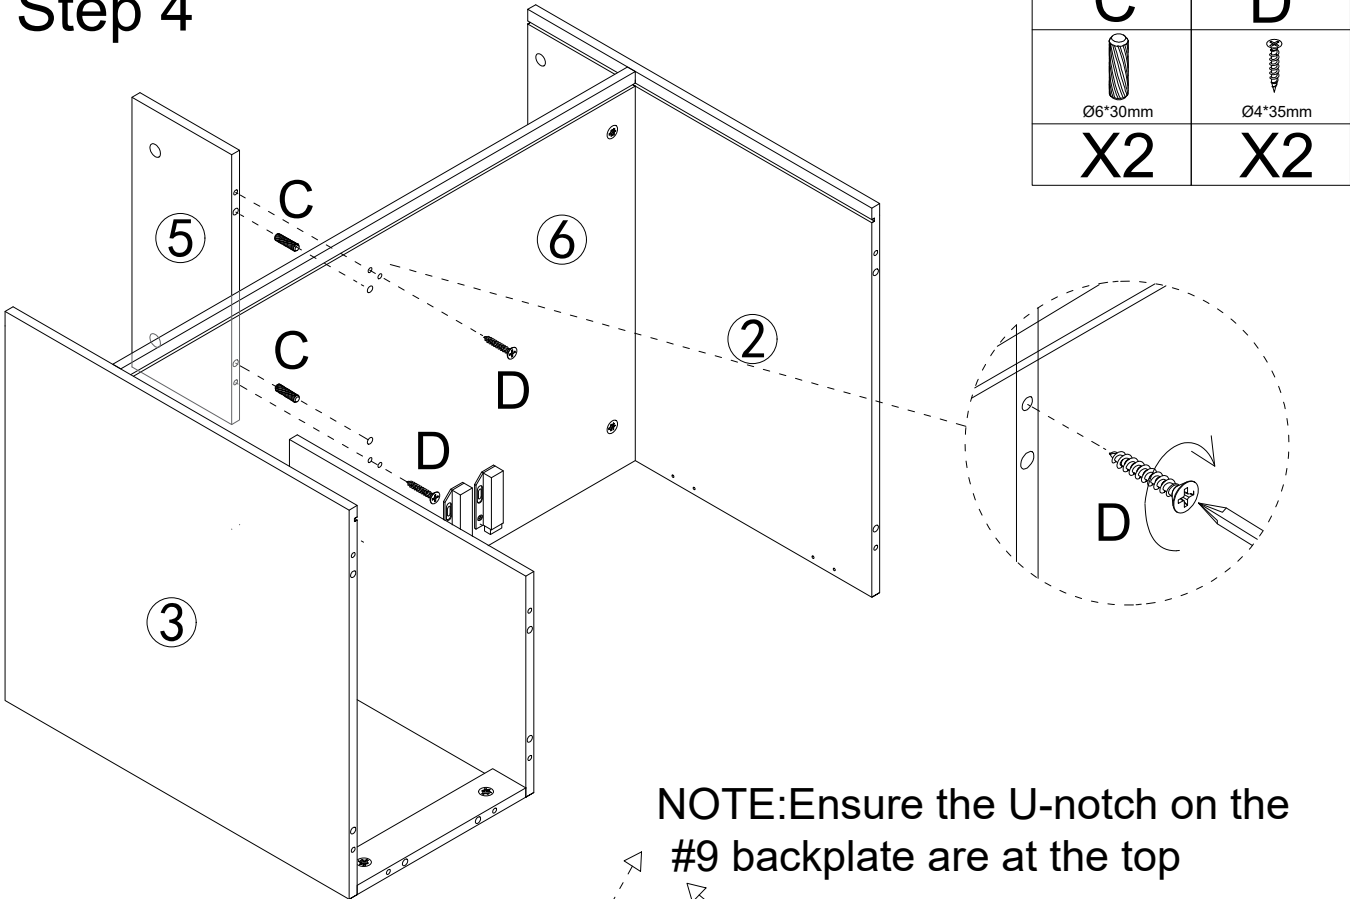





 
NOTE: Ensure the U-notch on the #9 backplate are at the top

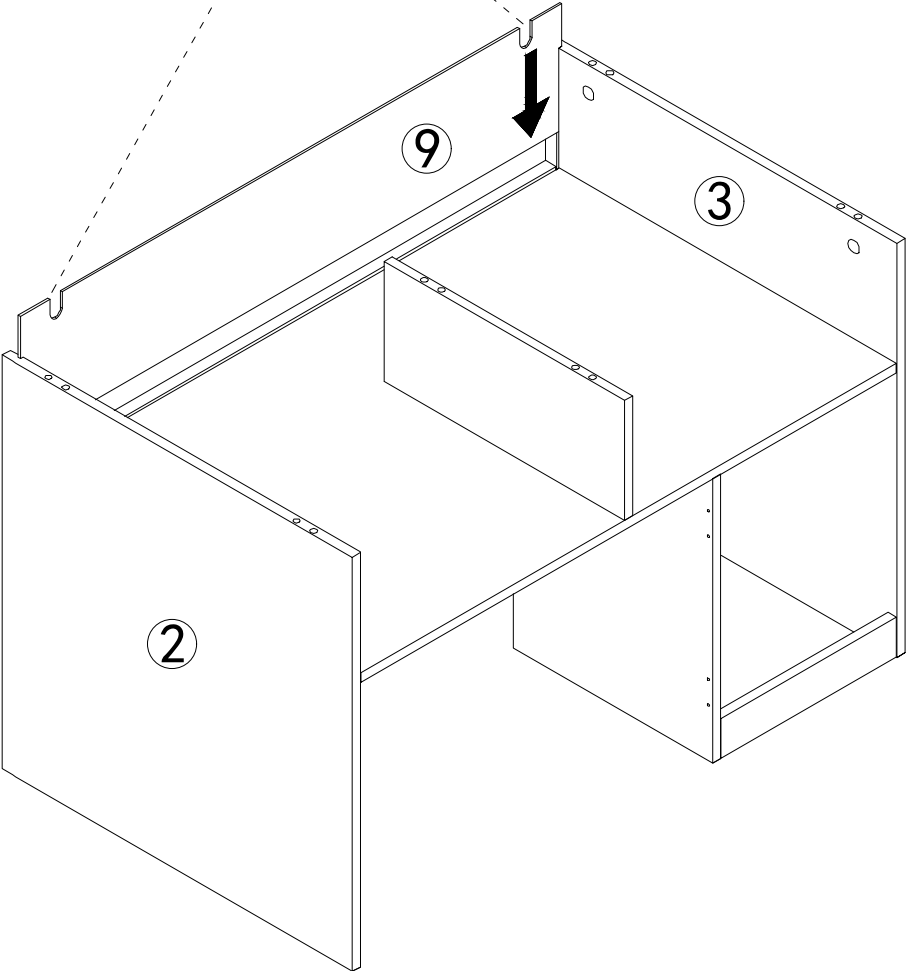

 Step 5

A	B	C	M	P
 Ø6*35mm	 Ø15*9mm	 Ø6*30mm		 Ø4*12mm
X6	X6	X6	X2	X2

     NOTE: Secure M with P to 95% tightness.

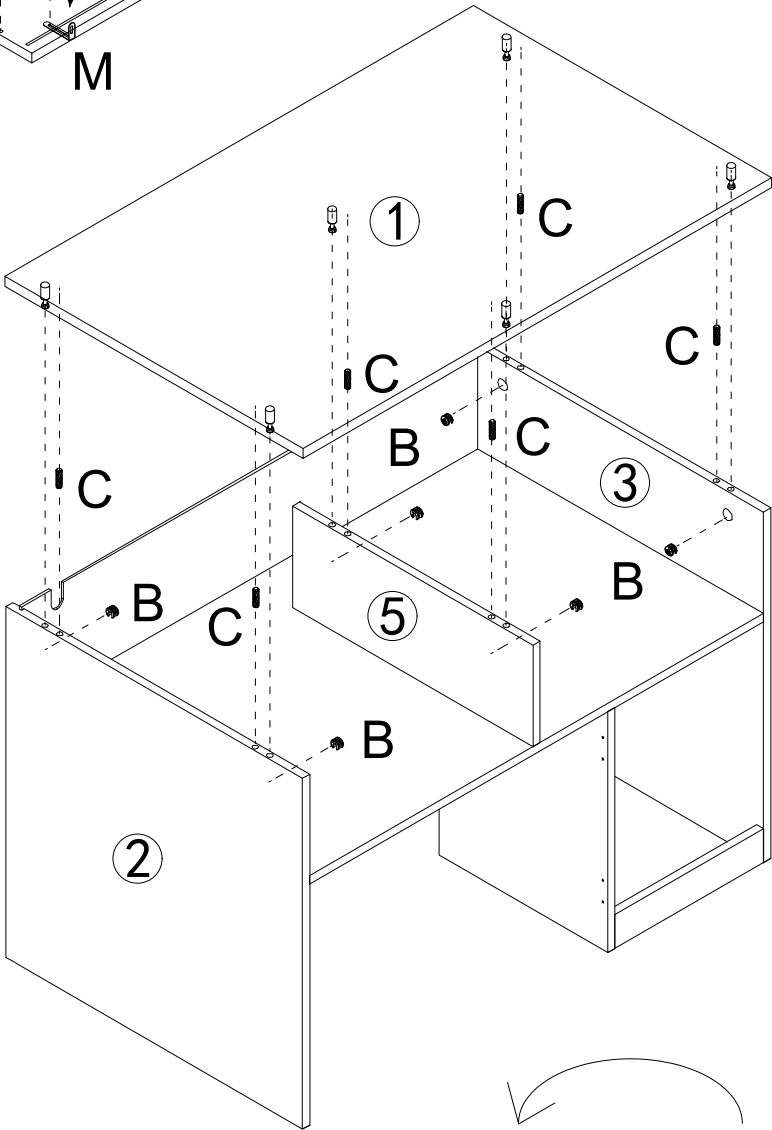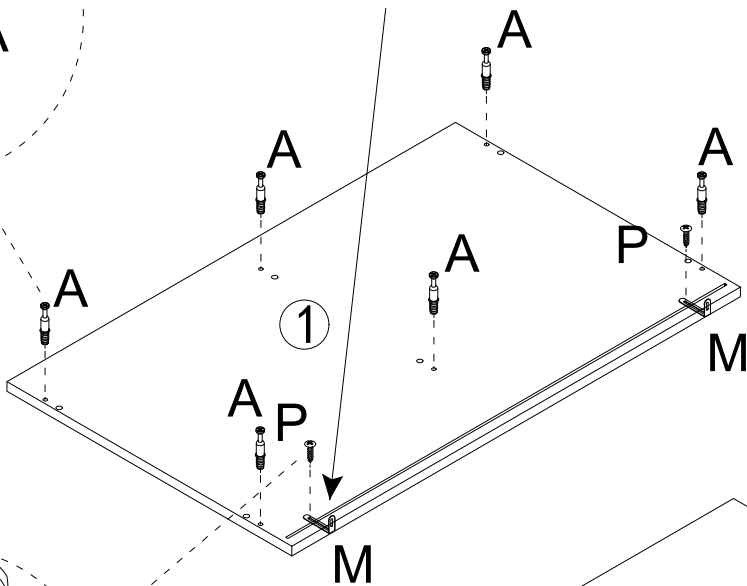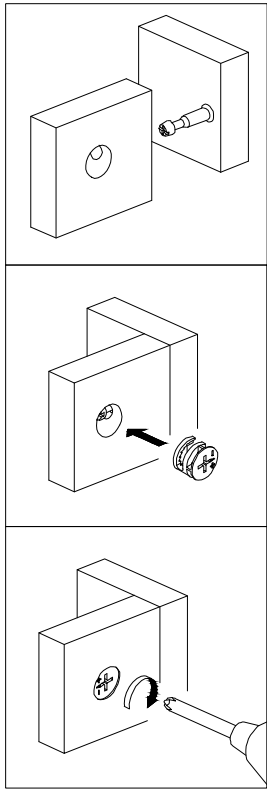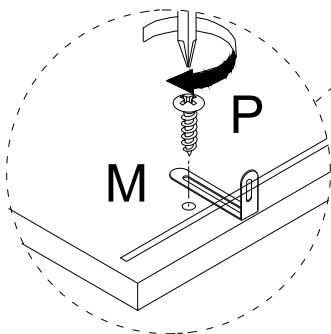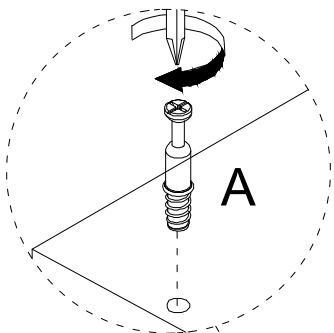


180°

Step 6

NOTE: The slot on board #10 should be toward board #2

C	D
 Ø6*30mm	 Ø4*35mm
X8	X8

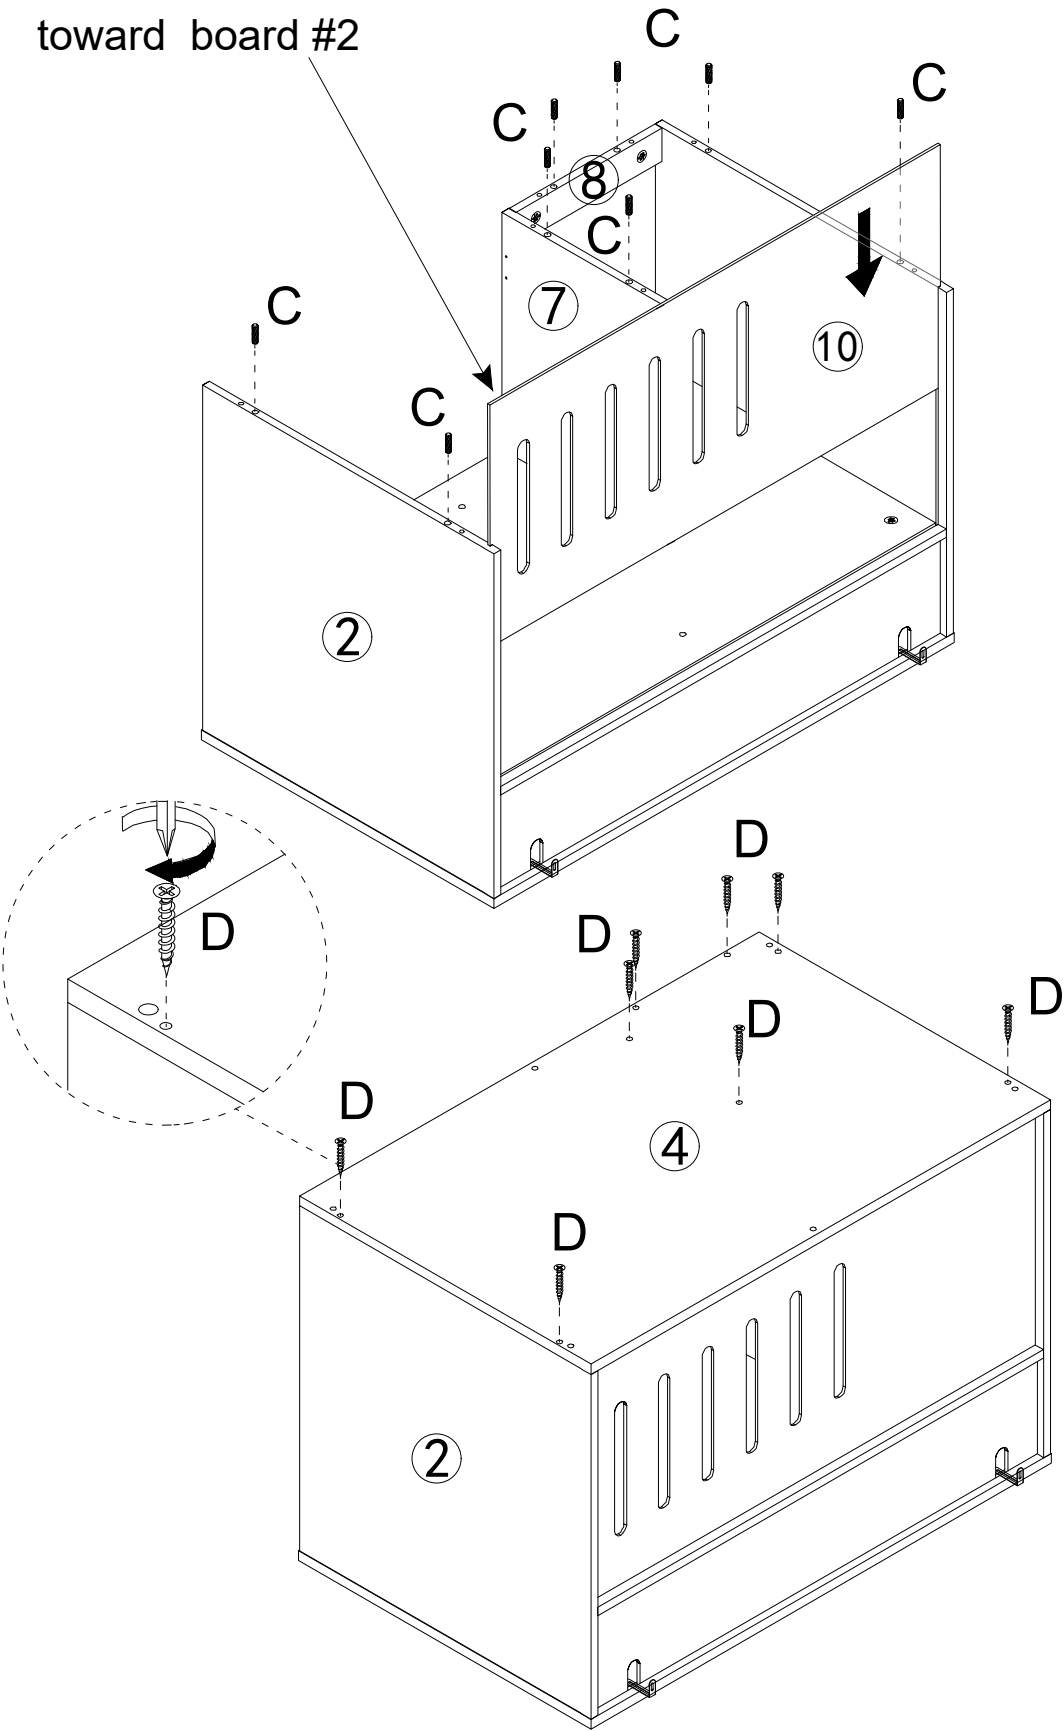 


Step 7

F	G	I	N
 Ø6*18mm		 Ø6*35mm	 Ø6*28mm
X4	X1	X4	X6


NOTE:I length 35MM

 Note:Screw I to 70% tightness first.

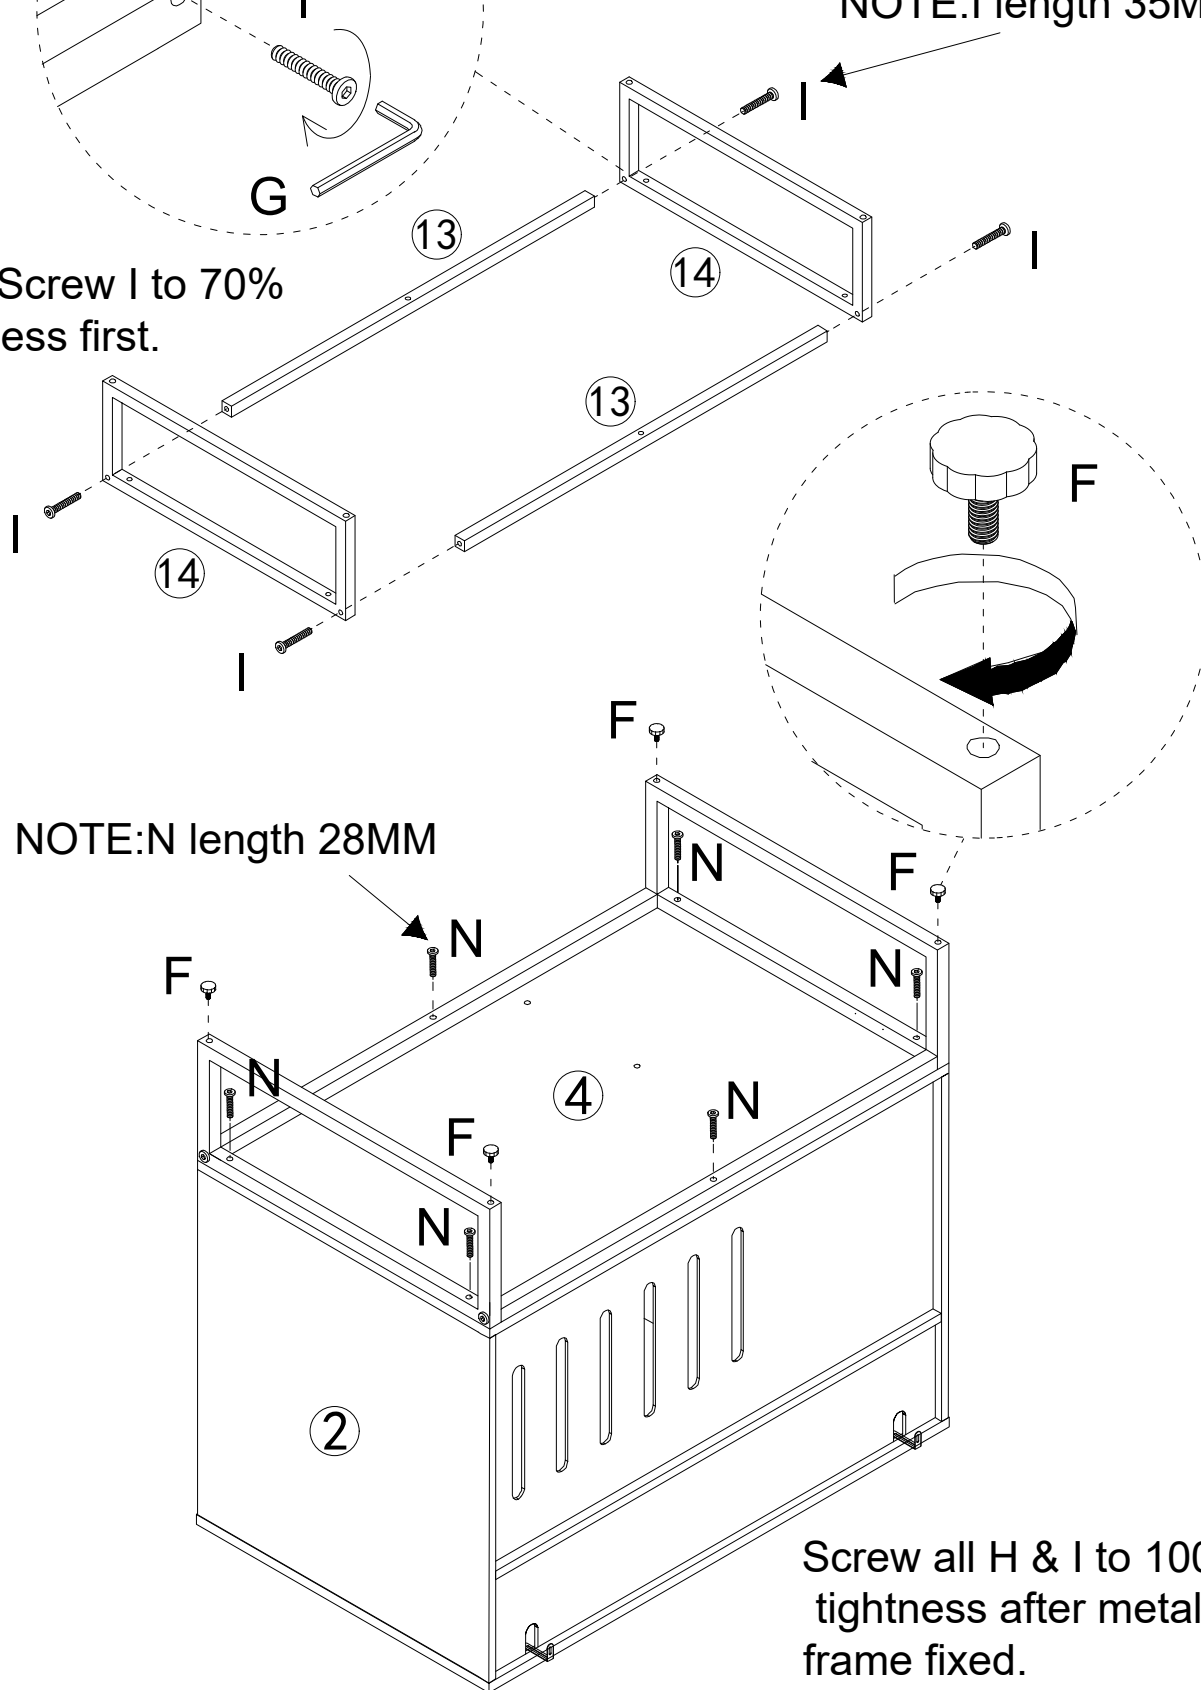


Step 8

E	H	S
 Ø3.5*12mm		
X12	X4	X2

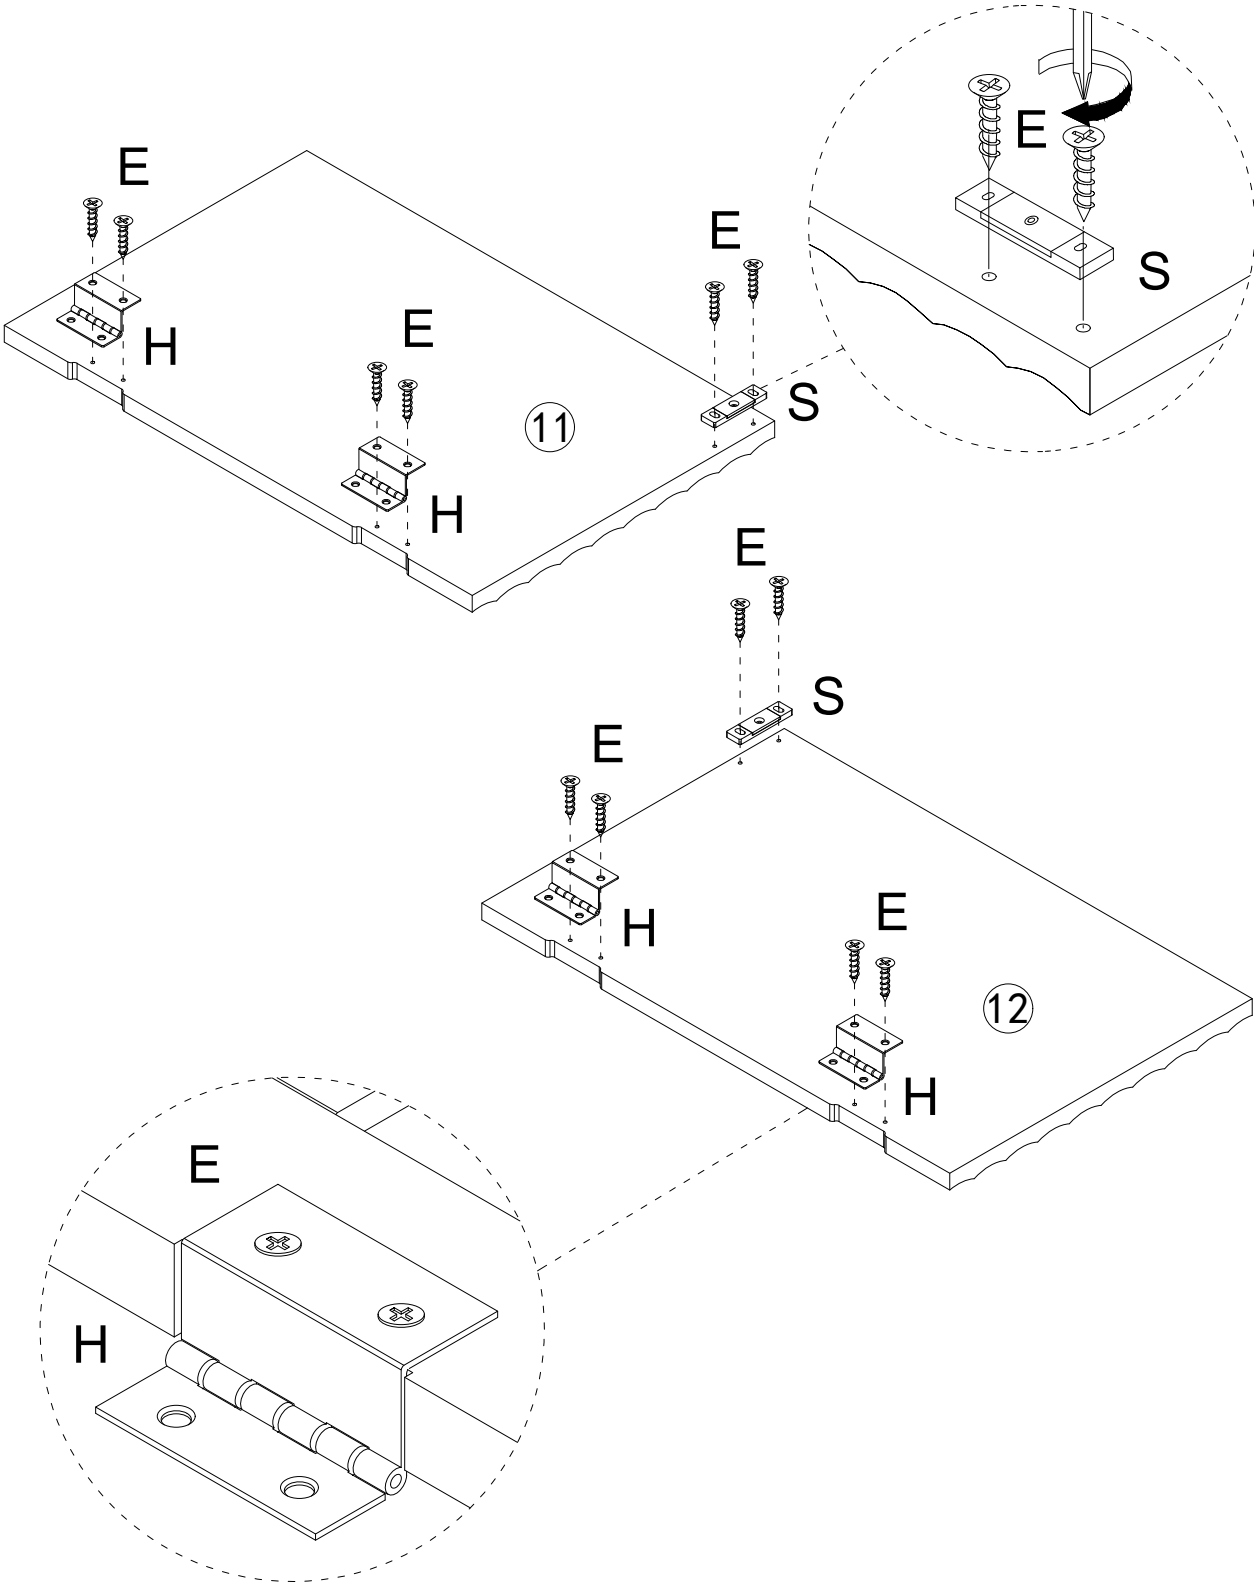 

Step 9



E	O
 Ø3.5*12mm	
X8	X14

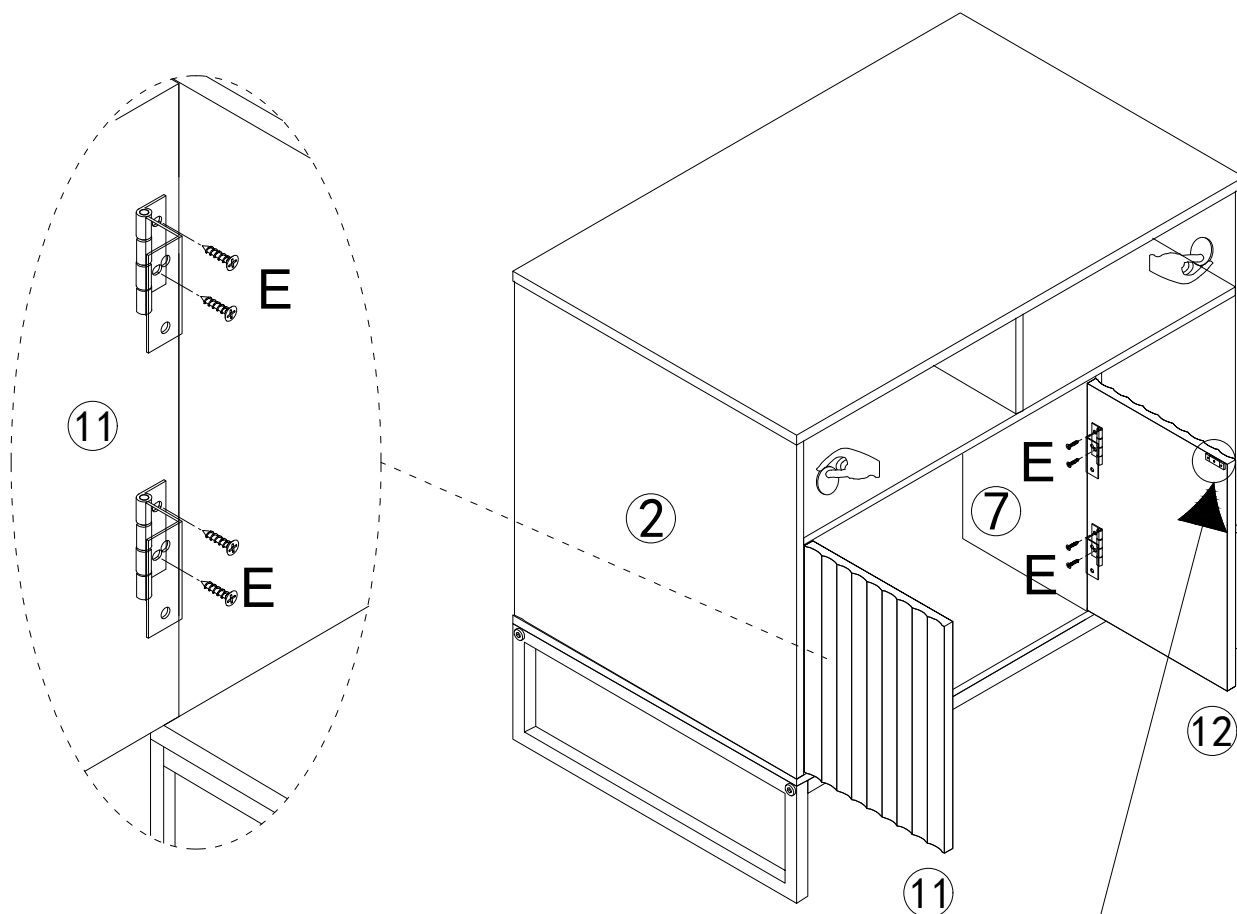 



NOTE: The left door is #11 and the right door is #12.
Make sure Suction Iron is on the top of the door.

Step 10

J	K
 Ø3*14mm	
X10	X10

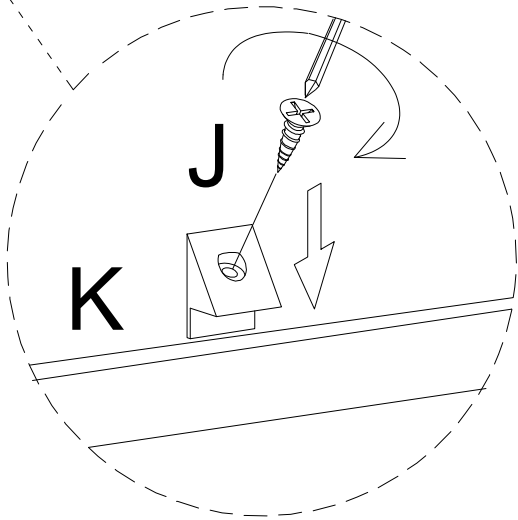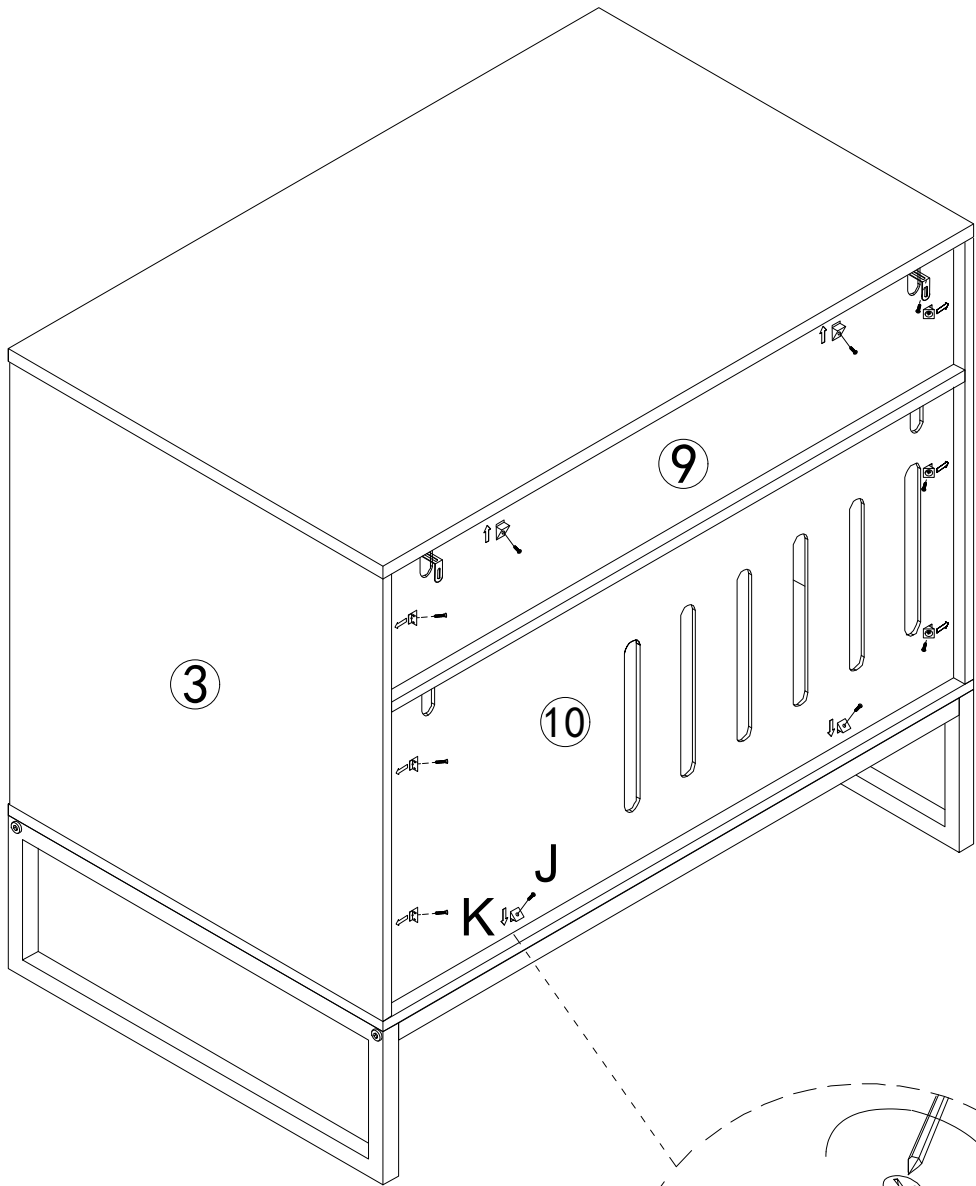  


  Step 11

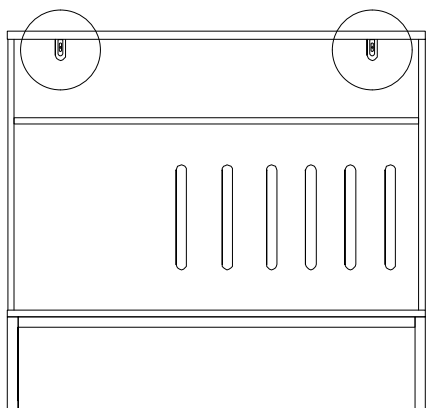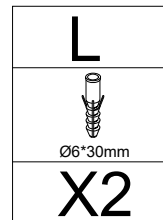


1. Place the cabinet in the desired position, then mark the center of pre-drilled holes on wall with pencil.

 Wall


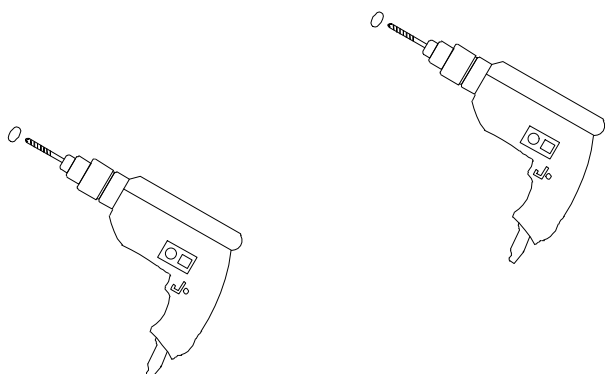


 2. Drill holes following the two marks.



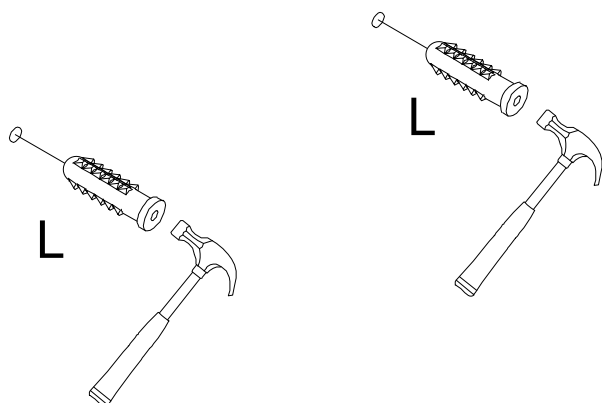


3. Tap the wall anchor(L) into the drilled holes with a hammer.

  Step 12

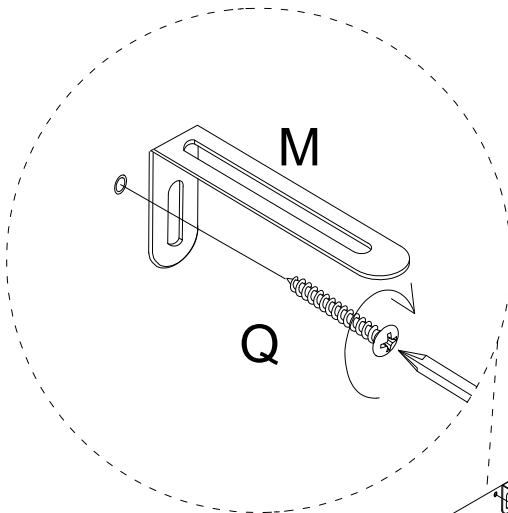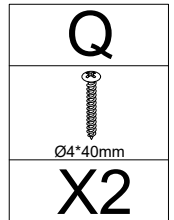

   Note: According to the distance between the cabinet and the wall, adjust the # M fitting to the appropriate position. and then tighten all the screw on the # M fitting.

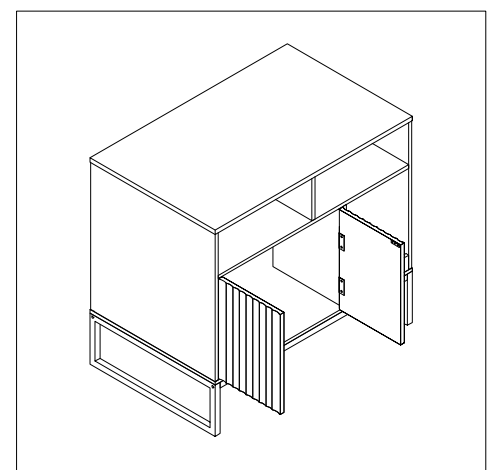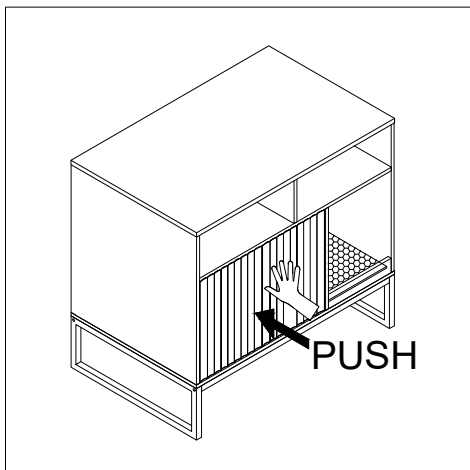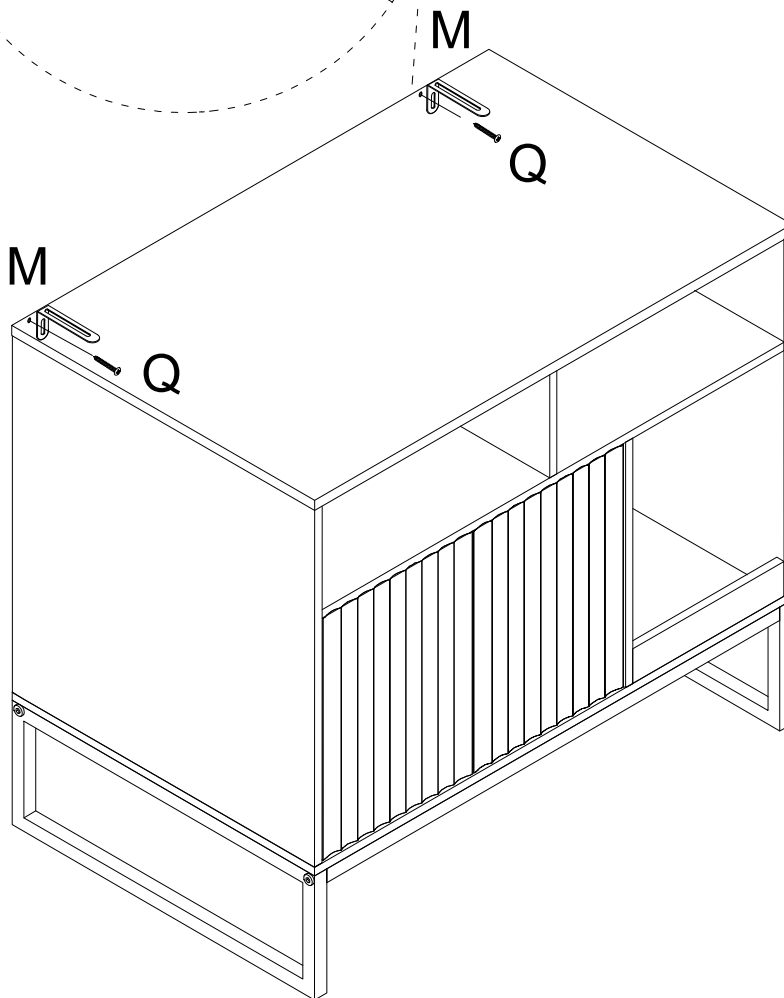



WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **ALWAYS** install Anti-tip device provided.
- **NEVER** put a TV on this product.
- **NEVER** allow children to stand, climb or hang on drawers, doors, or shelves.
- **NEVER** open more than one drawer at a time.
- Place heaviest items in the lowest drawers.