


I - PART AND HARDWARE:

PIECE	PICTURE	QTY
A		2
B		2
C		2
D		2
E		2
F		2
G		1
H		1
I		1
J		9
K		20
L		21
M		4
R		1

JY
JONATHAN Y





MODEL #LVG1100-3SET
JONATHAN Y: OUTDOOR LIVING ROOM SET

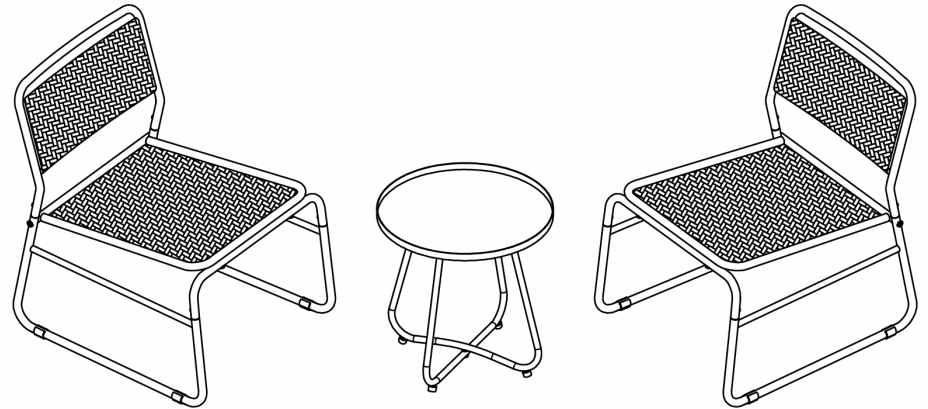





If there are any questions related to defects, missing parts, assembly issues or replacements, please send a detailed email to cs@jonathany.com

1. 50% Tighten before fixings all screws, Allen wrench is recommended instead of an electric drill. **2.** Place the item on a flat ground to adjust and make sure it remains stable. **3.** Tighten up all screws with tools gradually. **4.** If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process. **5.** If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again. **6.** Note: If one or more screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

II- PRODUCT ASSEMBLY: TABLE “DO NOT TIGHTEN THE SCREWS UNTIL ALL OF PARTS SET INTO CORRECT POSITION”

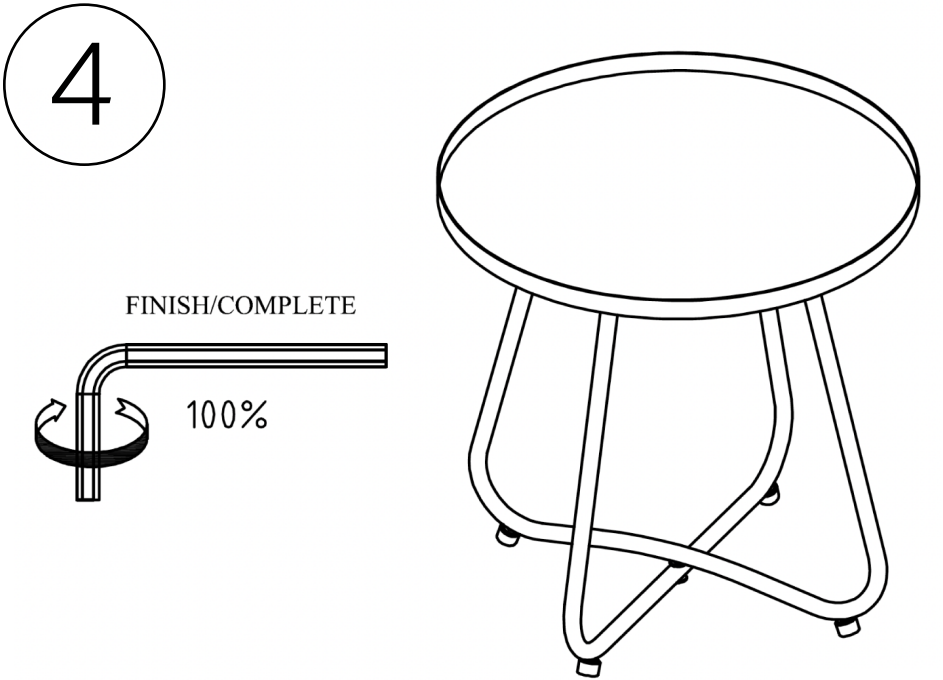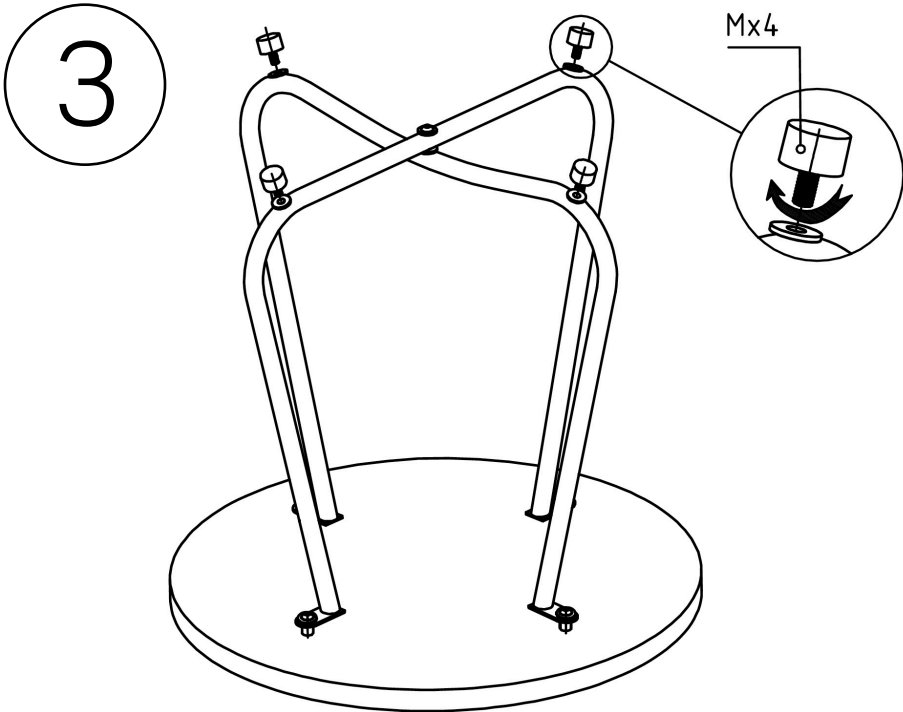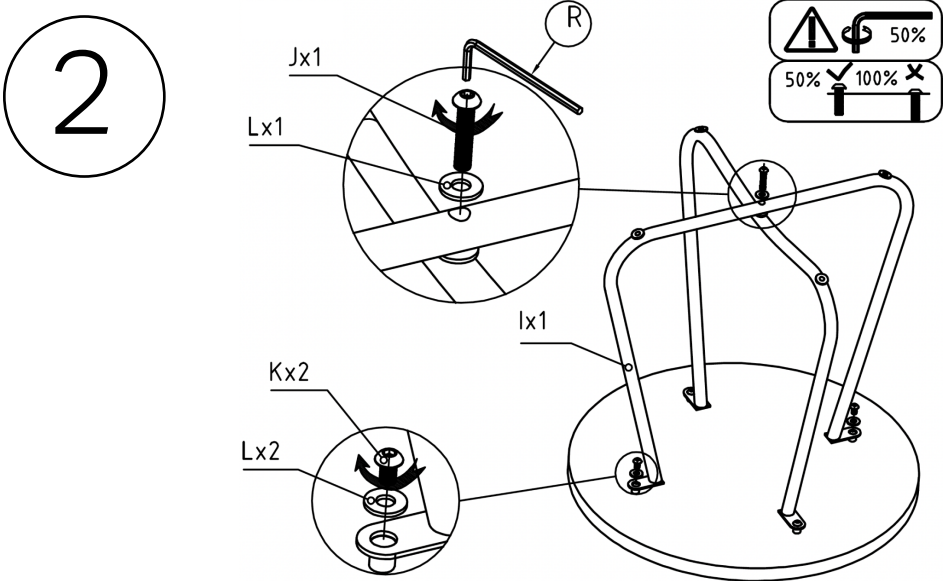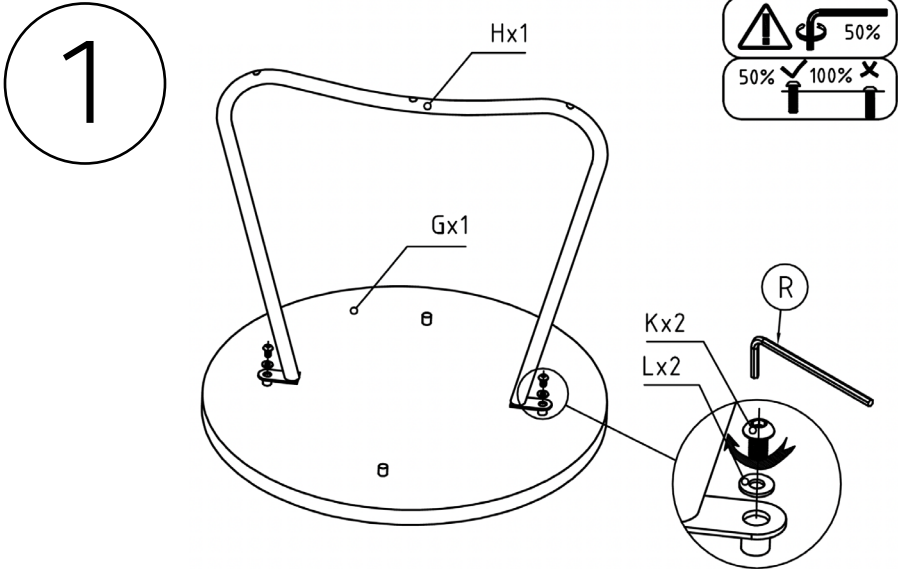

III- PRODUCT ASSEMBLY: ARMLESS CHAIR "DO NOT TIGHTEN THE SCREWS UNTIL ALL OF PARTS SET INTO CORRECT POSITION"

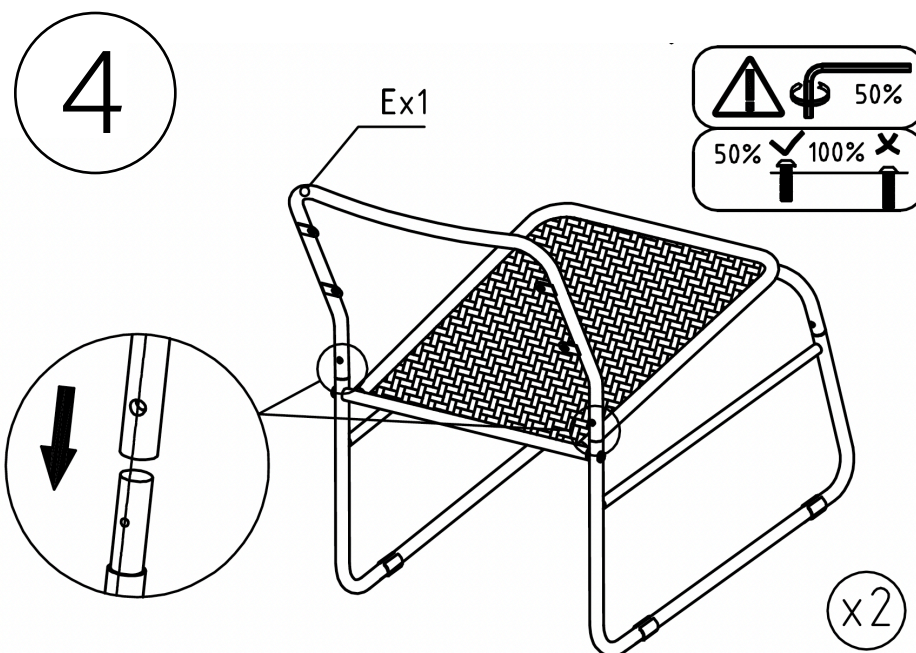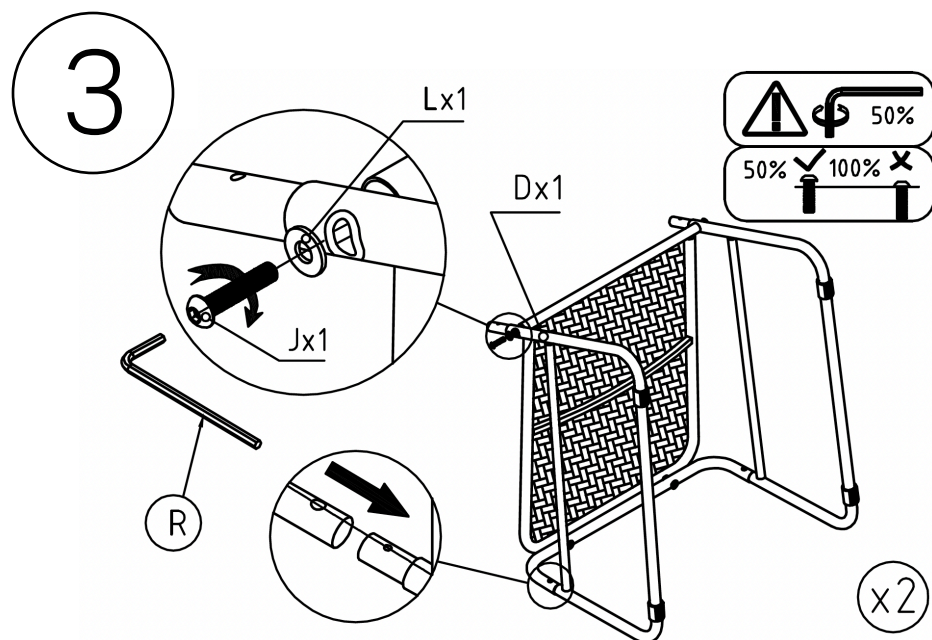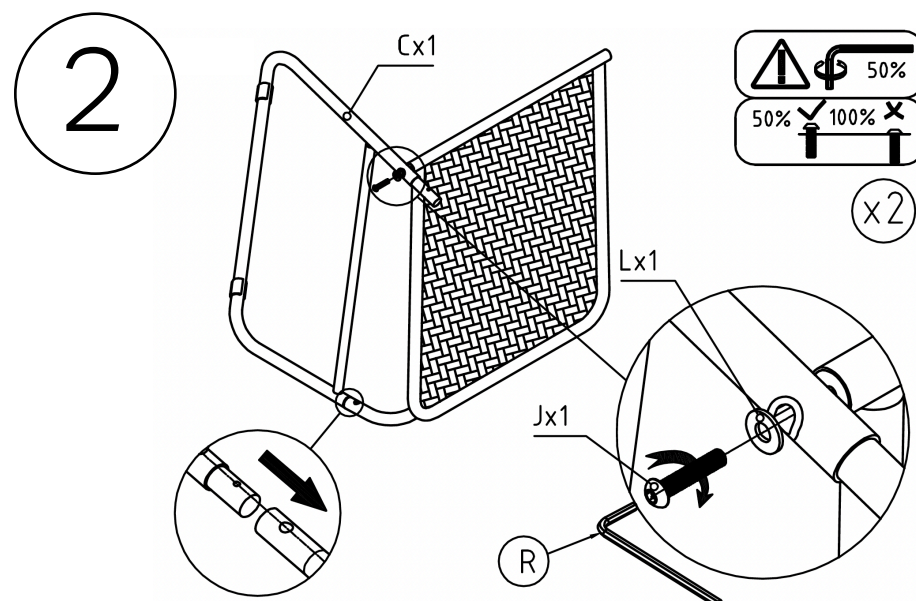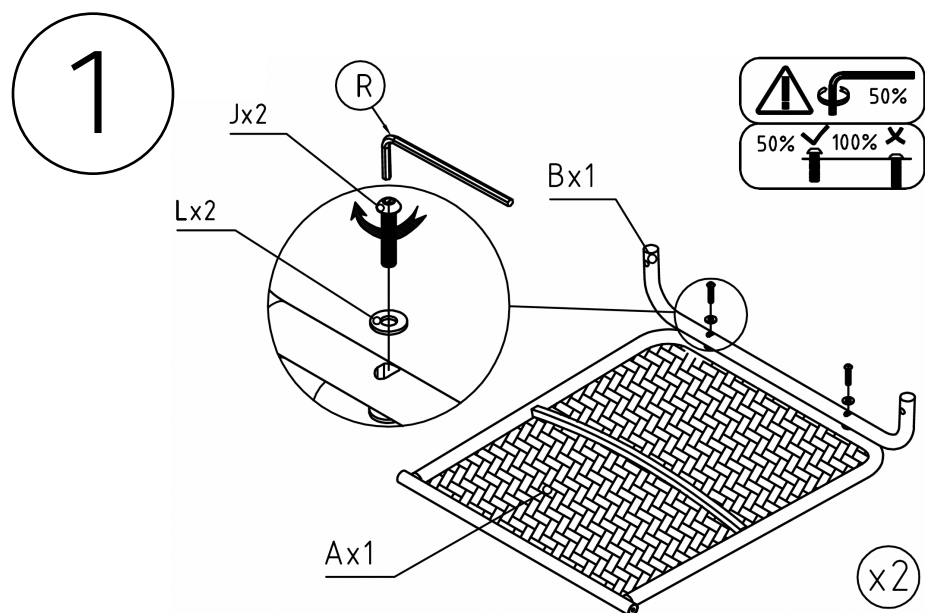

III- PRODUCT ASSEMBLY: ARMLESS CHAIR "DO NOT TIGHTEN THE SCREWS UNTIL ALL OF PARTS SET INTO CORRECT POSITION"

