


AromaSound

Ultrasonic Diffuser W/ Nature Sound Player

INSTRUCTIONS

PARTS

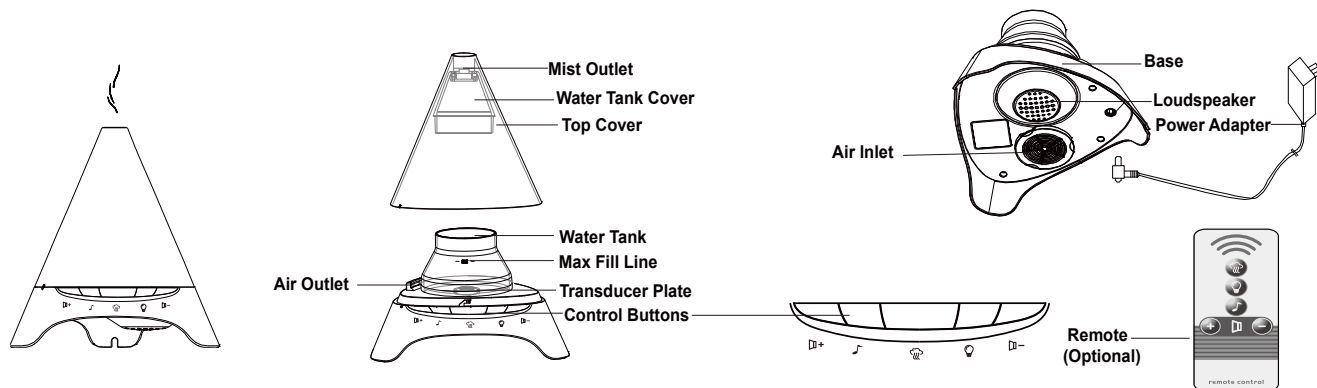

FEATURES

This Ultrasonic Diffuser uses ultrasonic technology to scent your room meanwhile bring you a sound-therapy.

1. Control buttons on both Base and Optional Remote:

☁ : Continuous ON/Intermittent ON/OFF

💡 : Rotating, solid color, OFF

🎵 : Nature sounds ON/Selection/OFF

🔊/🔇 : Volume Up/ Volume Down

2. Water Capacity: 120 mL (4.23 fl oz)

3. Suggested Area: 200-300 sq ft

4. Continuous Operation: Up to 5 hours
Intermittent Operation: Up to 10 hours

5. Natural sounds: Bicker, Wave, Drip, Zen, Wind, Rain

6. Automatic safety shut-off

CARE & MAINTENANCE

Always remove the power cord before cleaning. Only use the power cord that is supplied with the unit.

When not in use, empty the water from the side of the tank, avoiding Air Outlet. Dry with a soft cloth to avoid mineral buildup.

To remove possible buildup, gently use a cotton swab dipped in white vinegar to wipe out the inside.


Note: The Ultrasonic Vibration Plate should not come in contact with any hard or sharp objects.

Do not use strong cleaning agents.

Essential oil should not come in contact with the exterior surface of the unit.

INSTRUCTIONS FOR USE

- Place the diffuser on a flat, level surface.
- Connect the AC Adapter to the DC socket on the bottom of the diffuser.
- Remove Top Cover by slightly turning it anticlockwise.
- Fill Water Tank with cool tap water up to Max Fill Line.
- Add 5-10 drops of essential oil (not included) directly into the water in the tank. Use only 100% pure essential oil.
- Replace the Top Cover and fix it on Base by slightly turning it clockwise.
- Then plug the Adapter into the wall outlet.

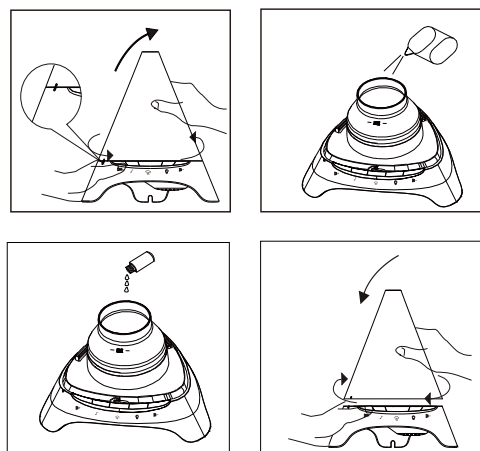

CONTROL BUTOTNS SETTINGS (Same settings on Optional Remote)

☁ : 1st Push = continuous mist; 2nd Push = intermittent mist; 3rd Push = turns mist and LED light off completely.

💡 : 1st Push = rotating color; 2nd Push = maintains solid color; 3rd Push = turns lights off.

🎵 : Press repeatedly to select the built-in nature sounds from Bicker, to Wave, Drip, Zen, Wind, Rain and OFF.

Press and hold to turn the sound off.

🔊/🔇 : Press 🔊 to turn up the sound. Press 🔇 to turn down the sound.