 


Assembly Instructions

Generating Drawings

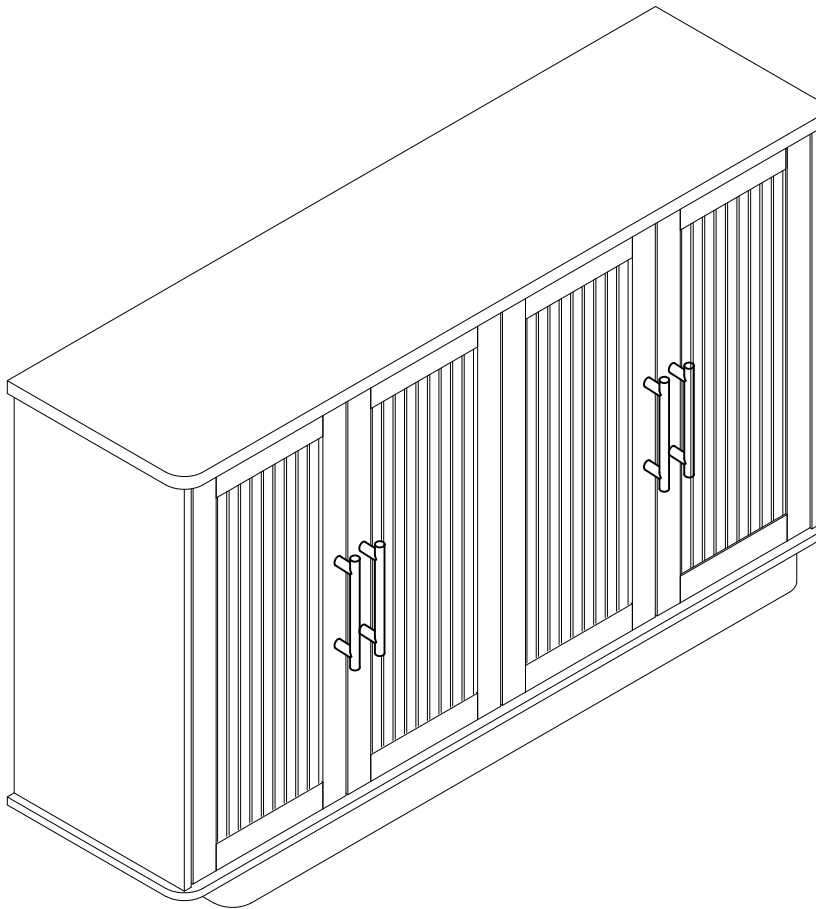

ATTENTION

If there is any missing, please kindly send us messages to let us know the name of missing part regarding to the first page of instructions.

We will send replacement to you asap. We are concerned about each customer's experience, if there is any loss or damage, please contact us at any time, we will provide effective solutions.

 
Please attach your Oder ID so that we can assist you better.




Revised 3/25/2026

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.



 
In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.





 
- VI. A Phillips head screwdriver is required for the assembly of this product .

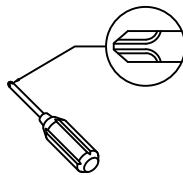


 - VII. Power tools should not be used to assemble this product .

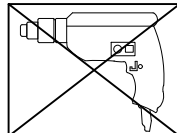

Hardware List

   
A		Ø8x30mm	Wooden dowel	12	pcs
B		Ø6x32mm	Cam bolt	6	pcs
C		Ø15x11mm	Cam lock	6	pcs
D		Ø6x50mm	Screw	6	pcs
E			Plastic wedge	24	pcs
F		Ø3x17mm	Screw	24	pcs
G		M4	Hex Key	1	pc
H		M6*12mm	Bolt	28	pcs
I		Ø4x19mm	Bolt	8	pcs
J		96mm	Handle	4	pcs
K		Ø3.5x14mm	Screw	48	pcs
L		Ø6X40mm	House lizard	2	pcs
M		Ø30mm	Sticker	6	pcs
N		40X14X7mm	Door stopper	2	pcs
O		Ø35mm	Full crank hinge	4	pcs
P		Ø35mm	Half crank hinge	4	pcs
Q		Ø3x15mm	Screw	4	pcs
R		Ø4X40mm	Screw	2	pcs
S		Ø4X14mm	Screw	2	pcs
T		73*24*15mm	Anti-inversion piece	2	pcs
U			Plastic wedge	14	pcs
W		Ø5x13x26mm	Shelf holder	16	pcs
X			Glue tube	2	pcs

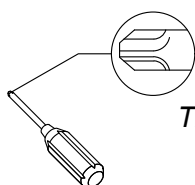 




Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

 Parts List

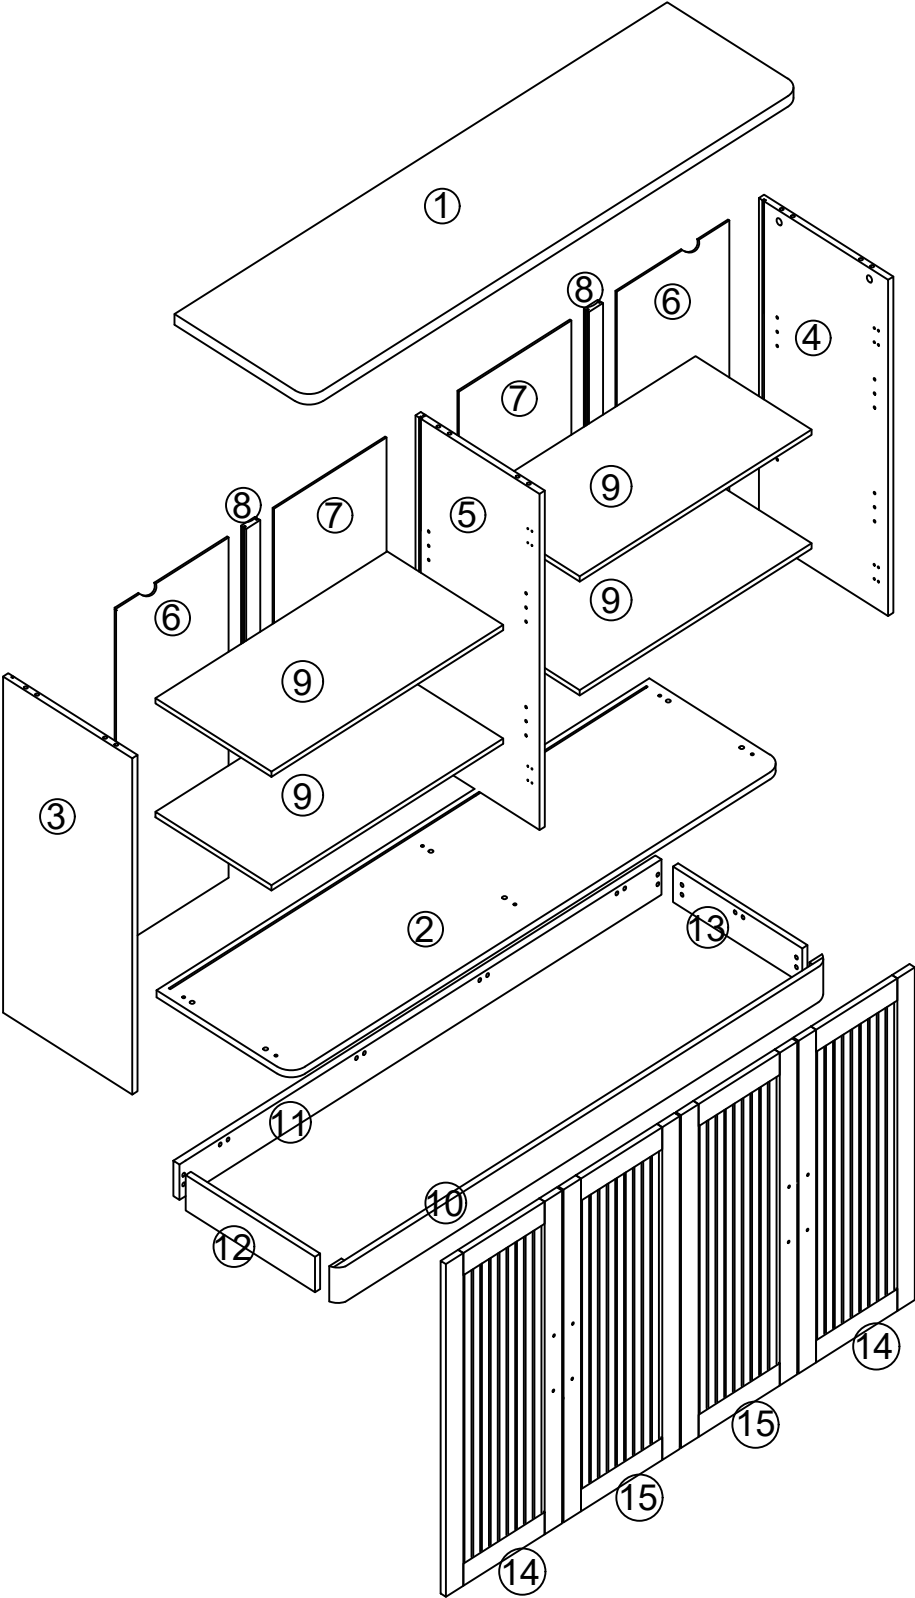

   
Step 1

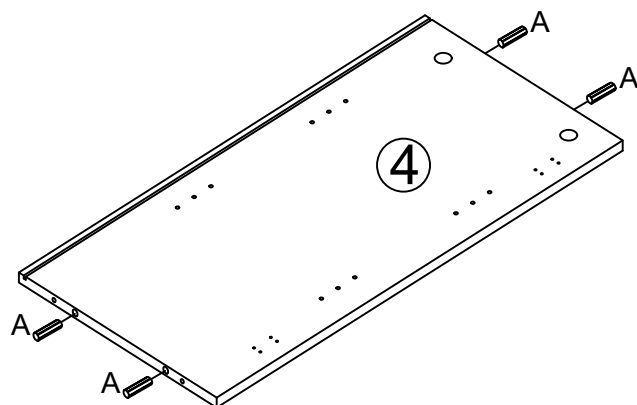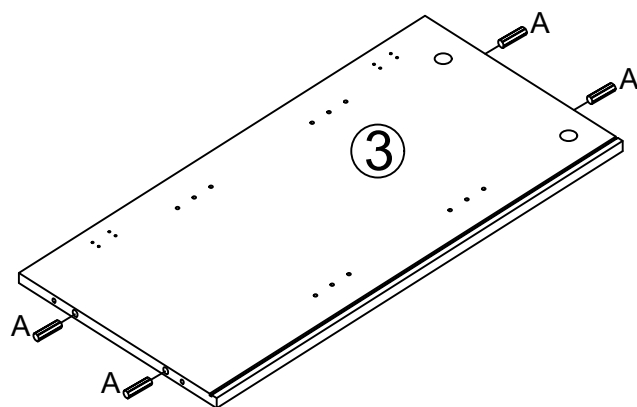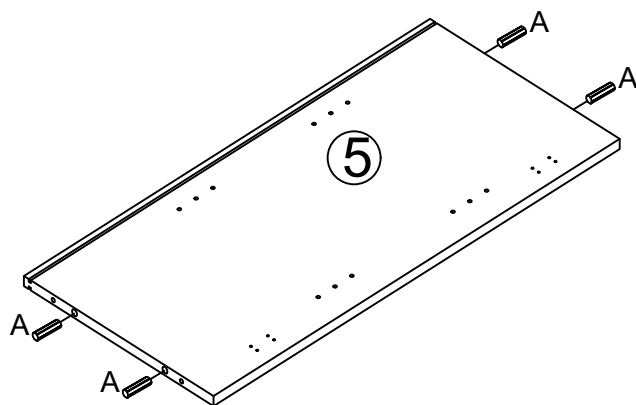

A

X12

 
Step 2

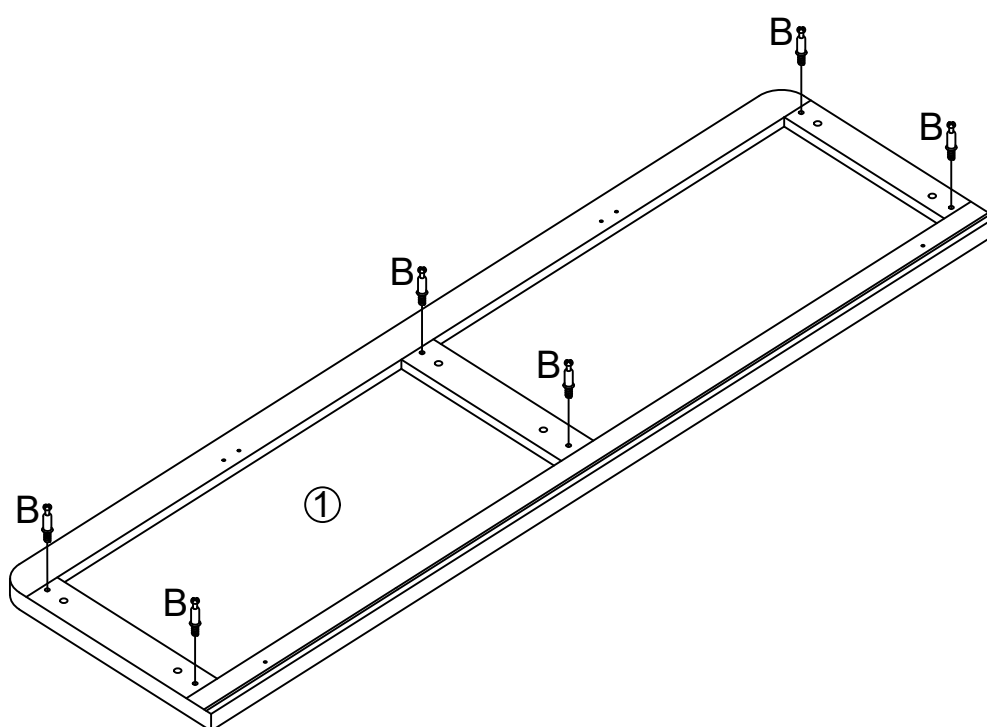

B

X6


 
Step 3

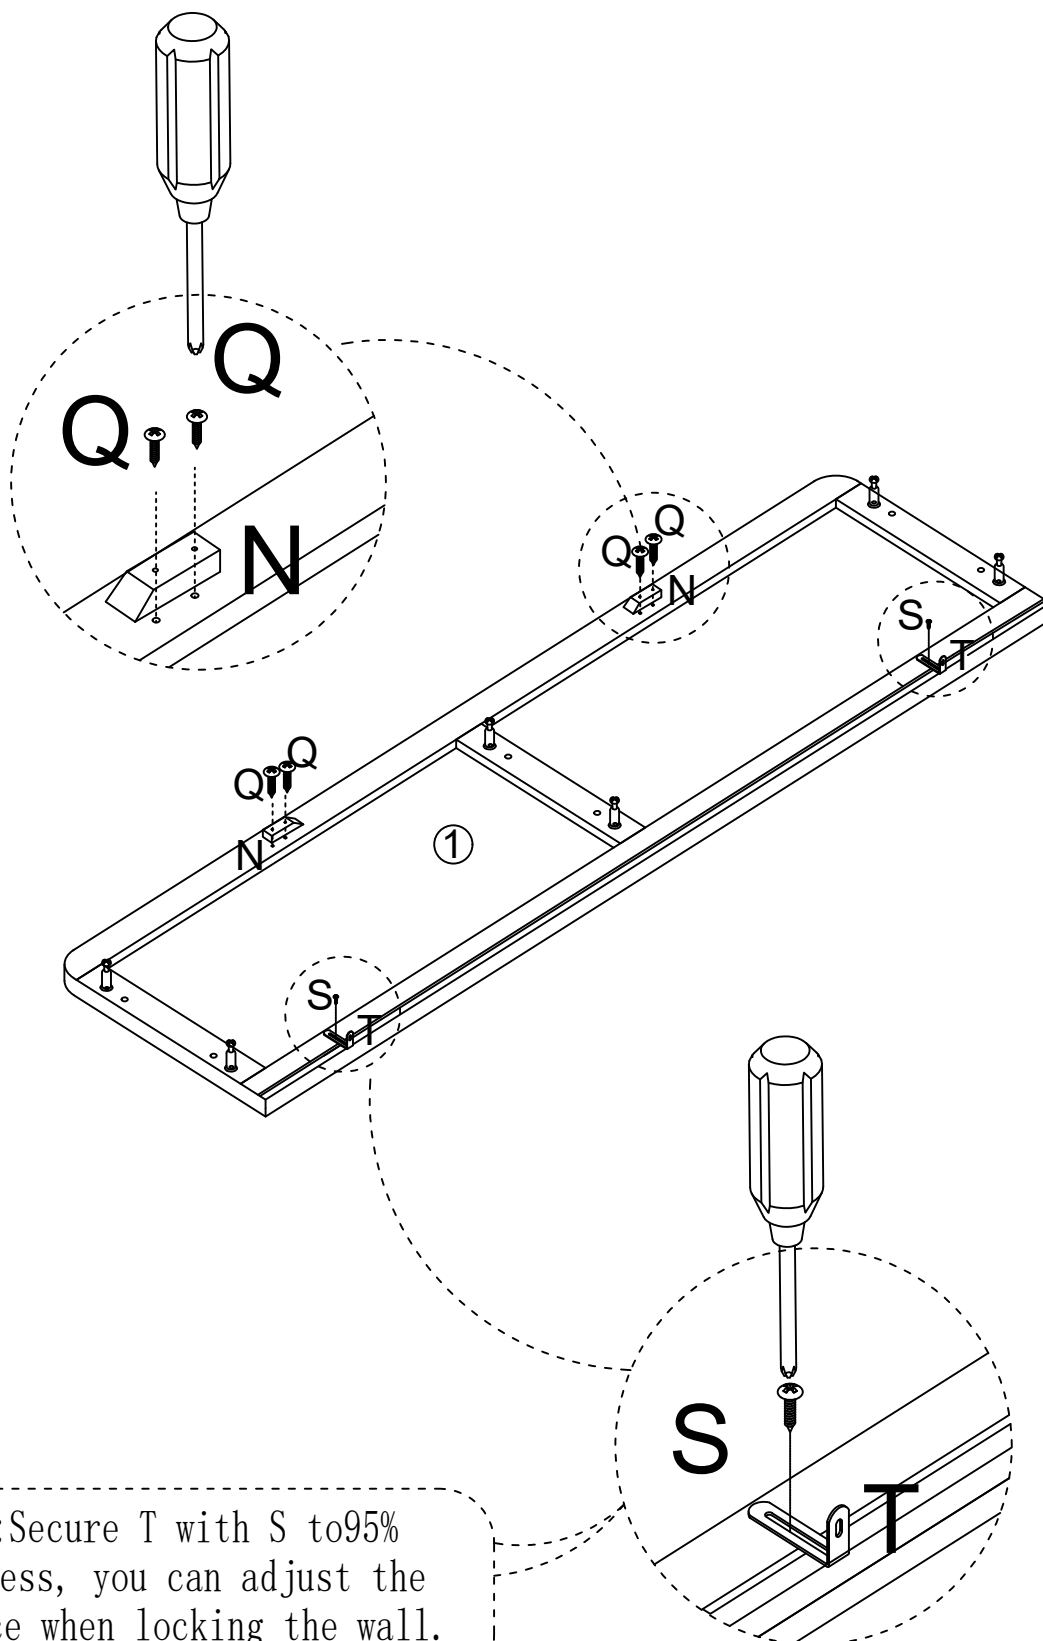

NOTE: Secure T with S to 95% tightness, you can adjust the distance when locking the wall.



Q	N	S	T
			
X4	X2	X2	X2

  Step 4

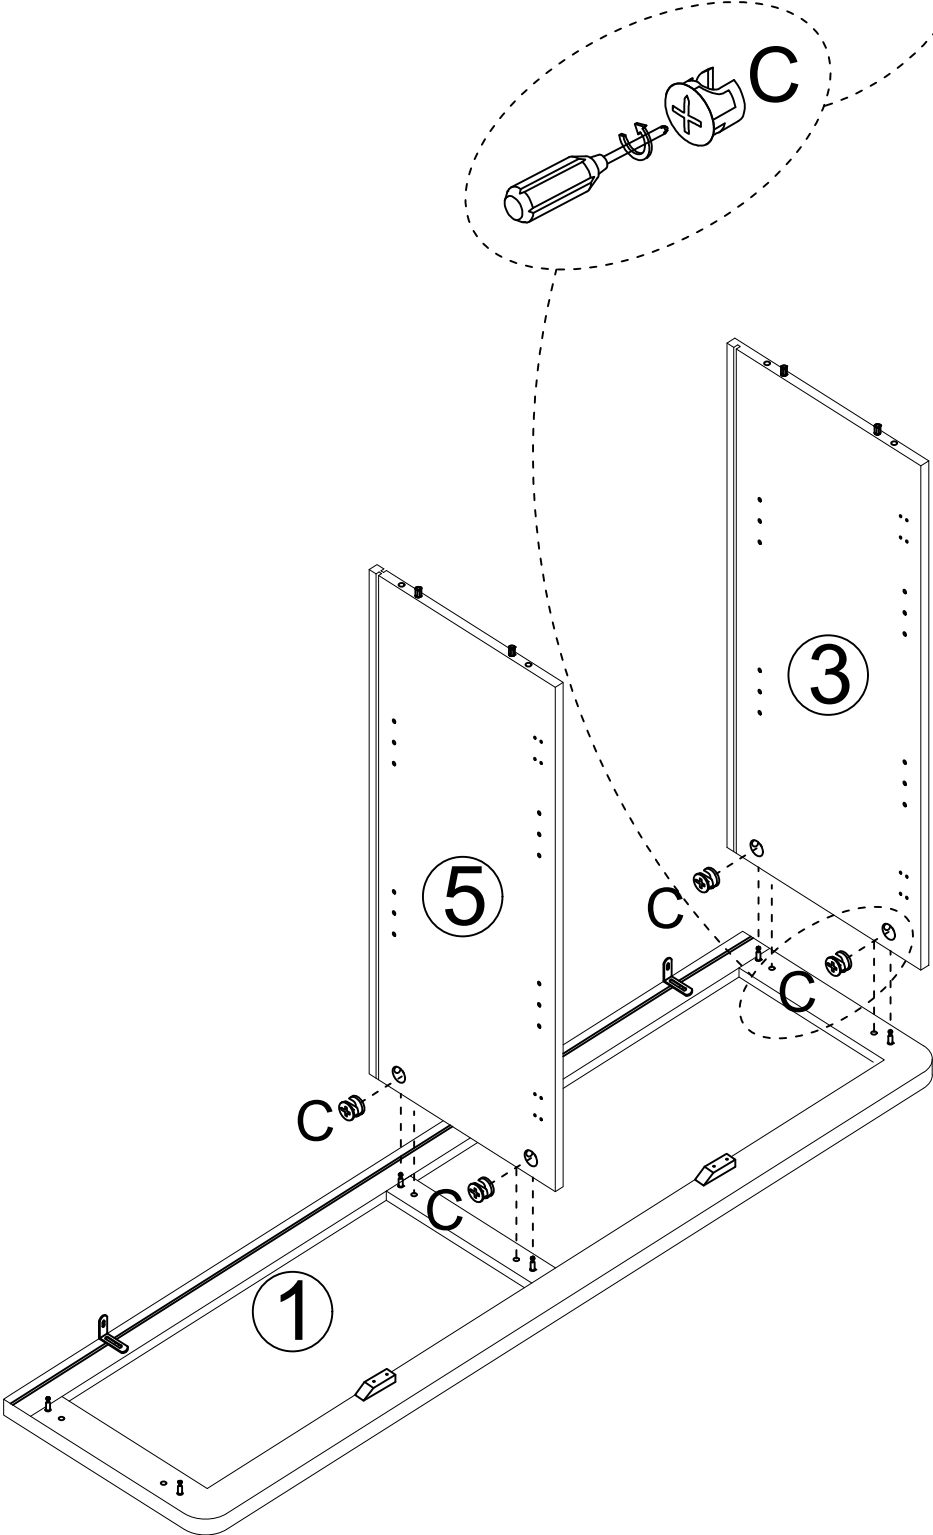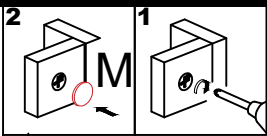


M	C
X4	X4

  Step 5

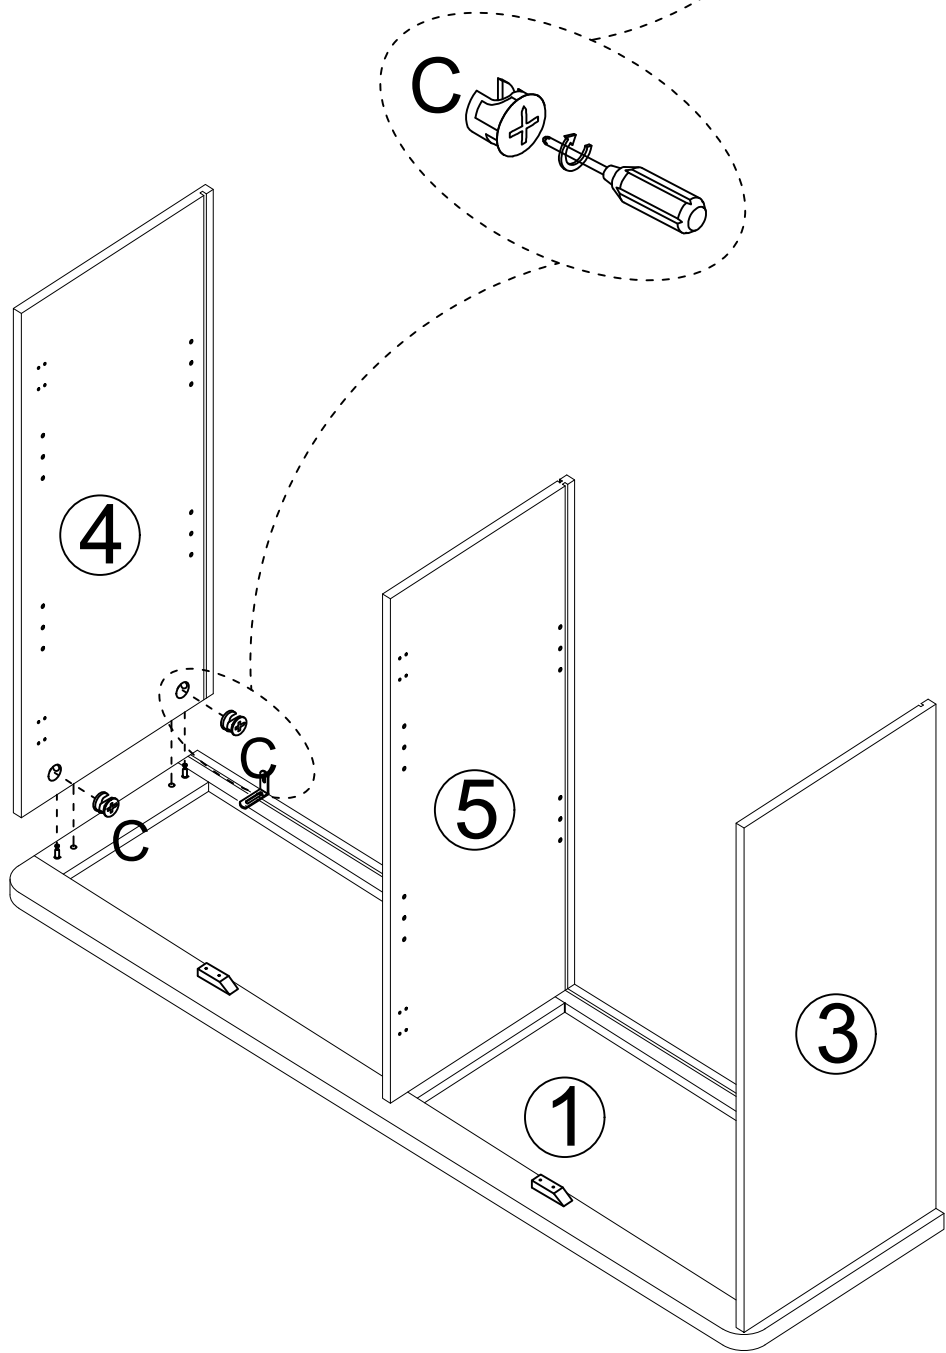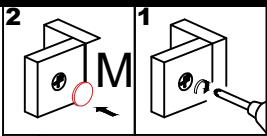


M	C
X2	X2

 
Step 6

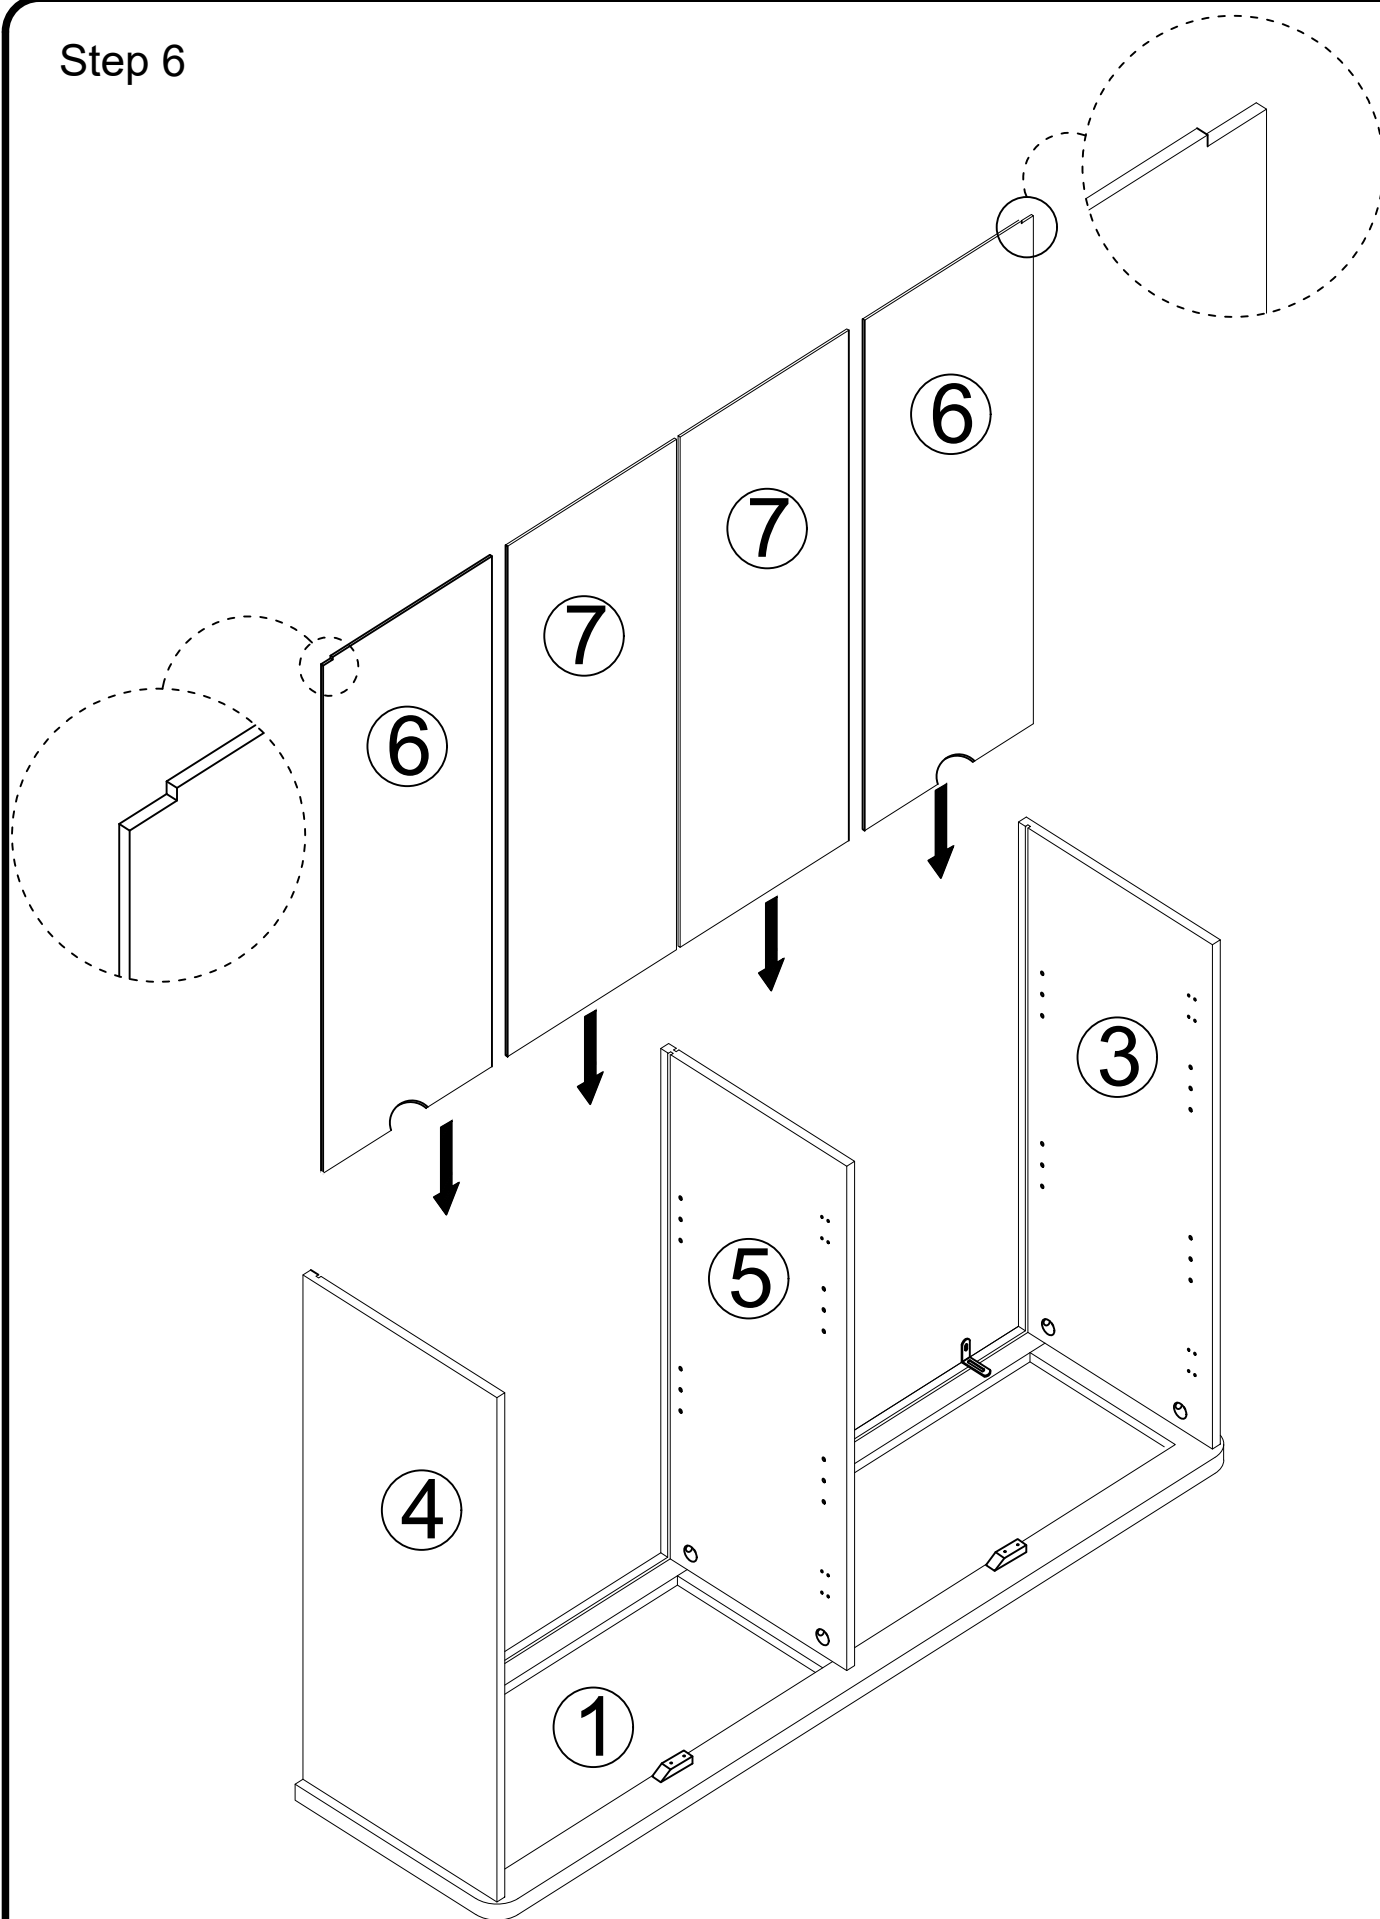

 Step 7

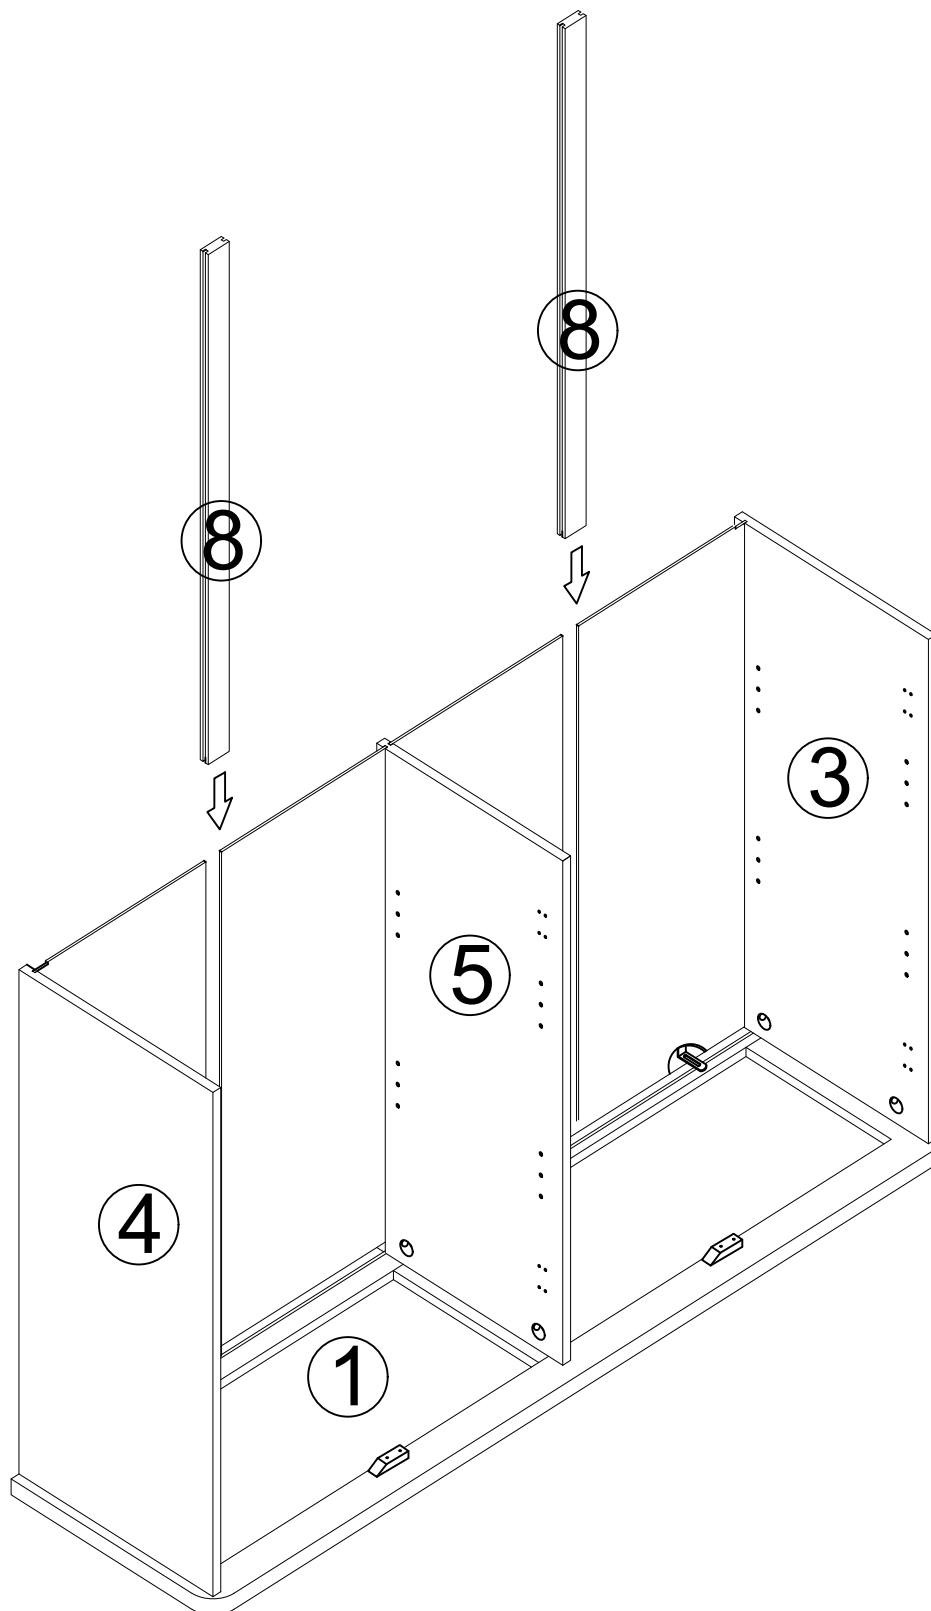


 Step 8

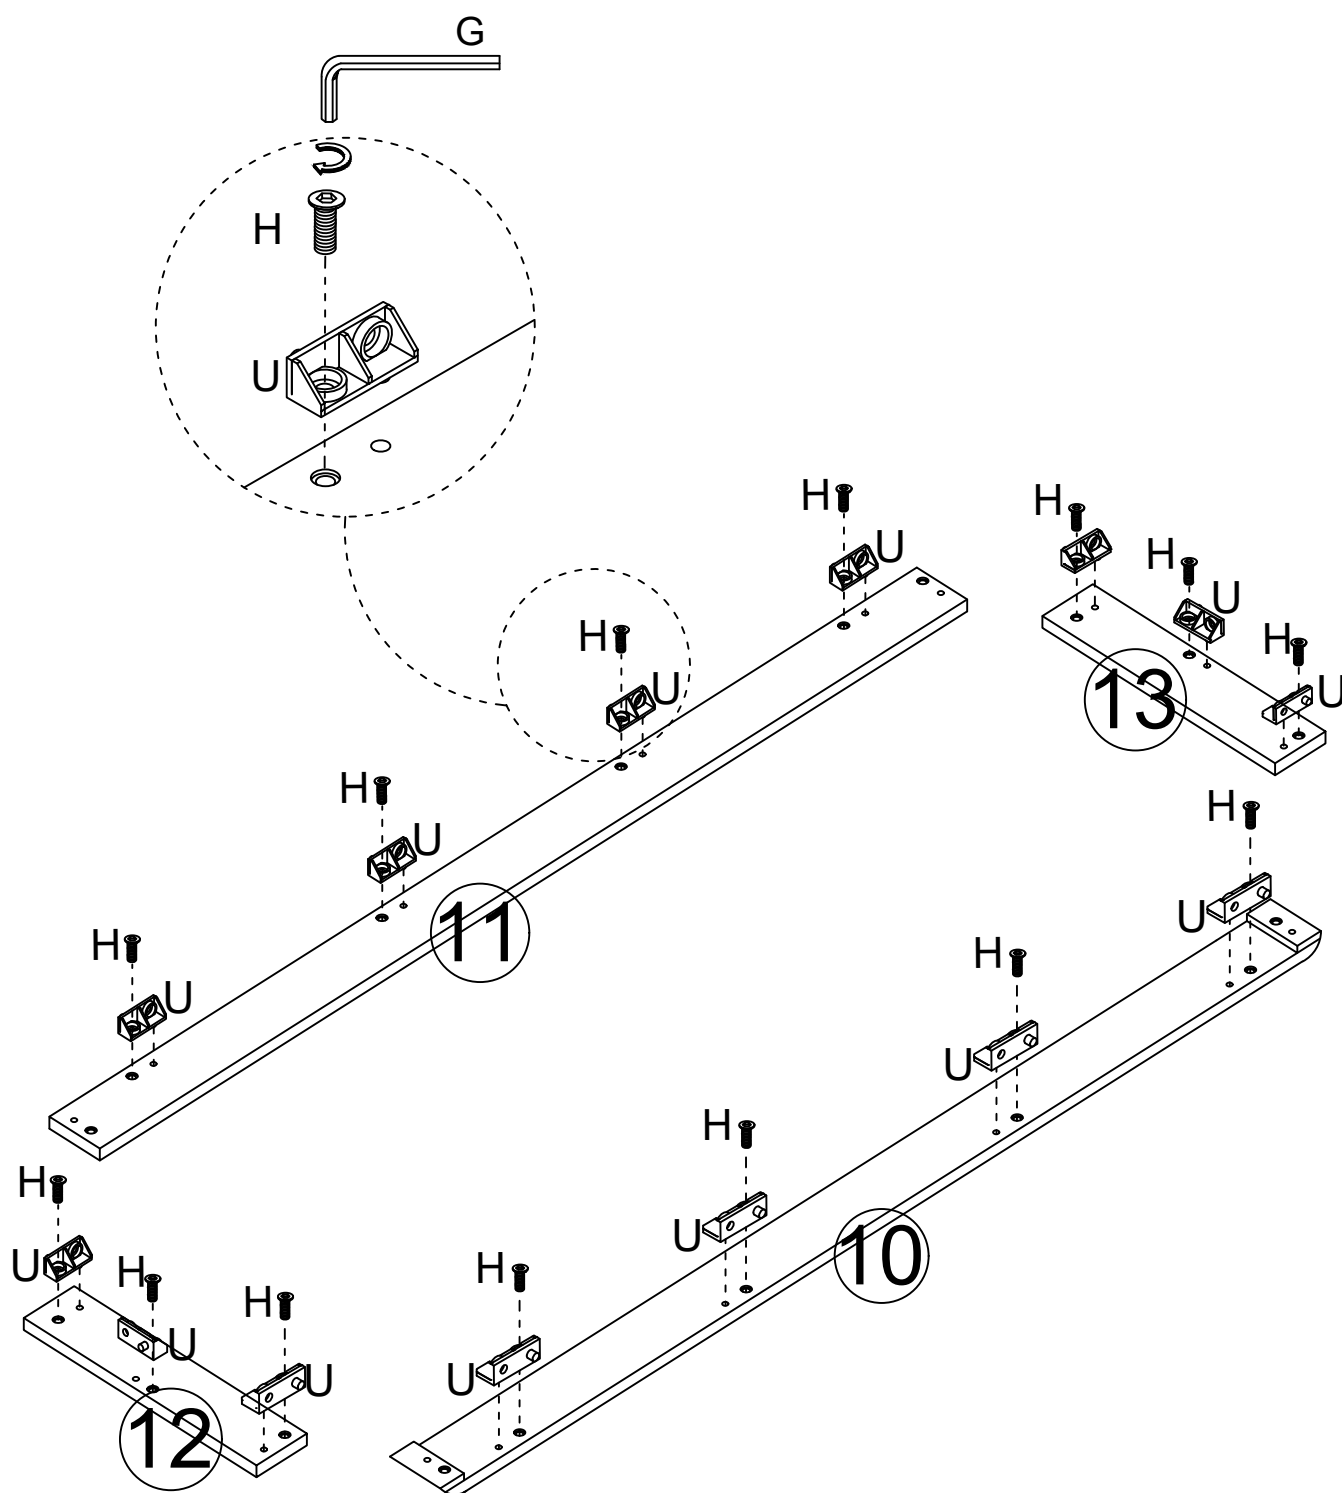


G	H	U
X1	X14	14

 
Step 9

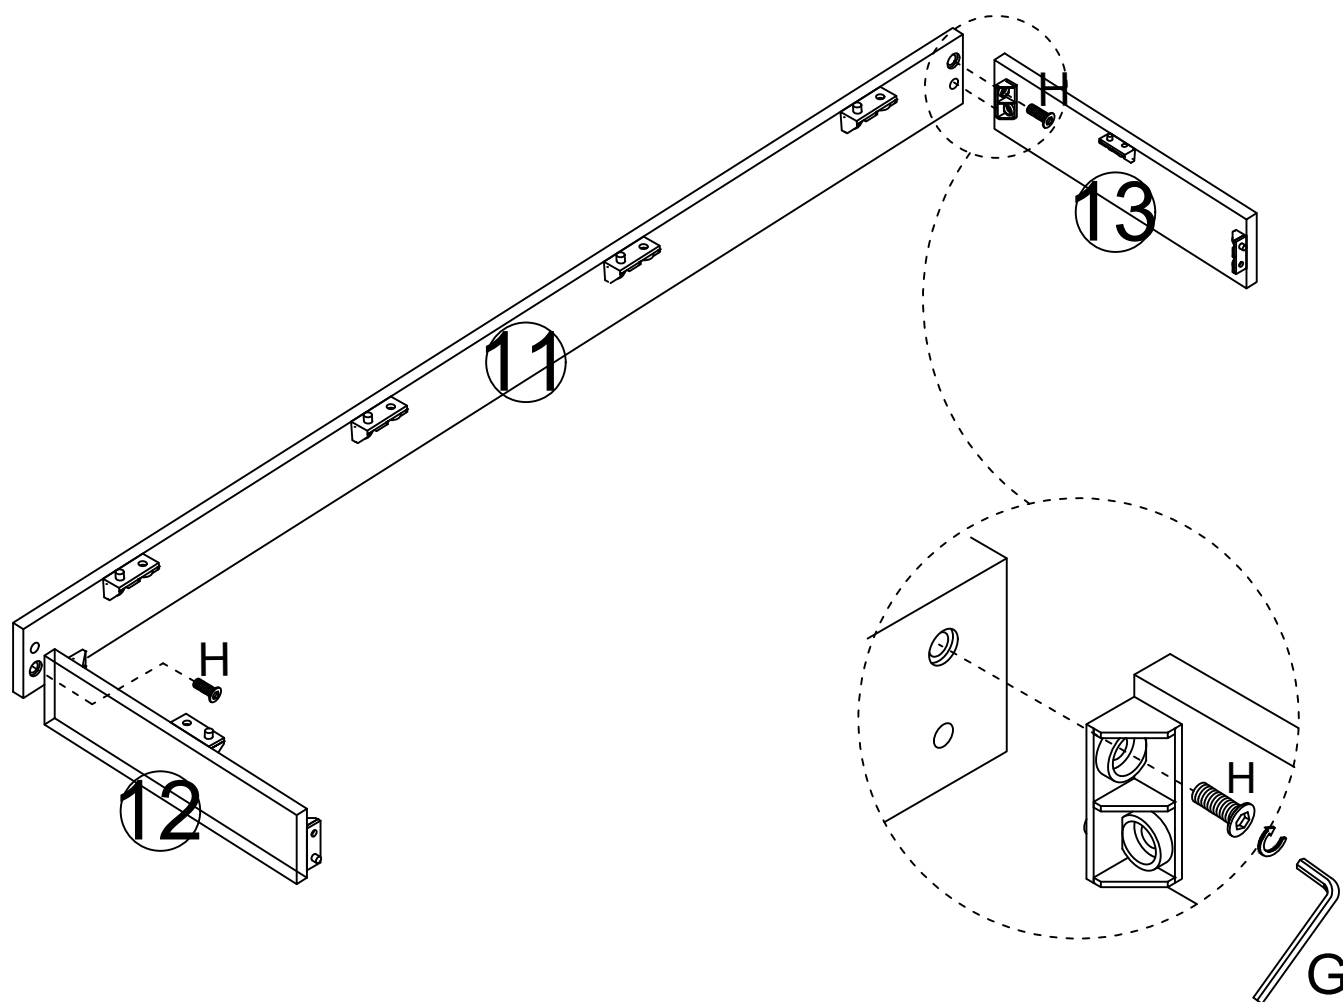


G	H
	
X1	X2

  Step 10

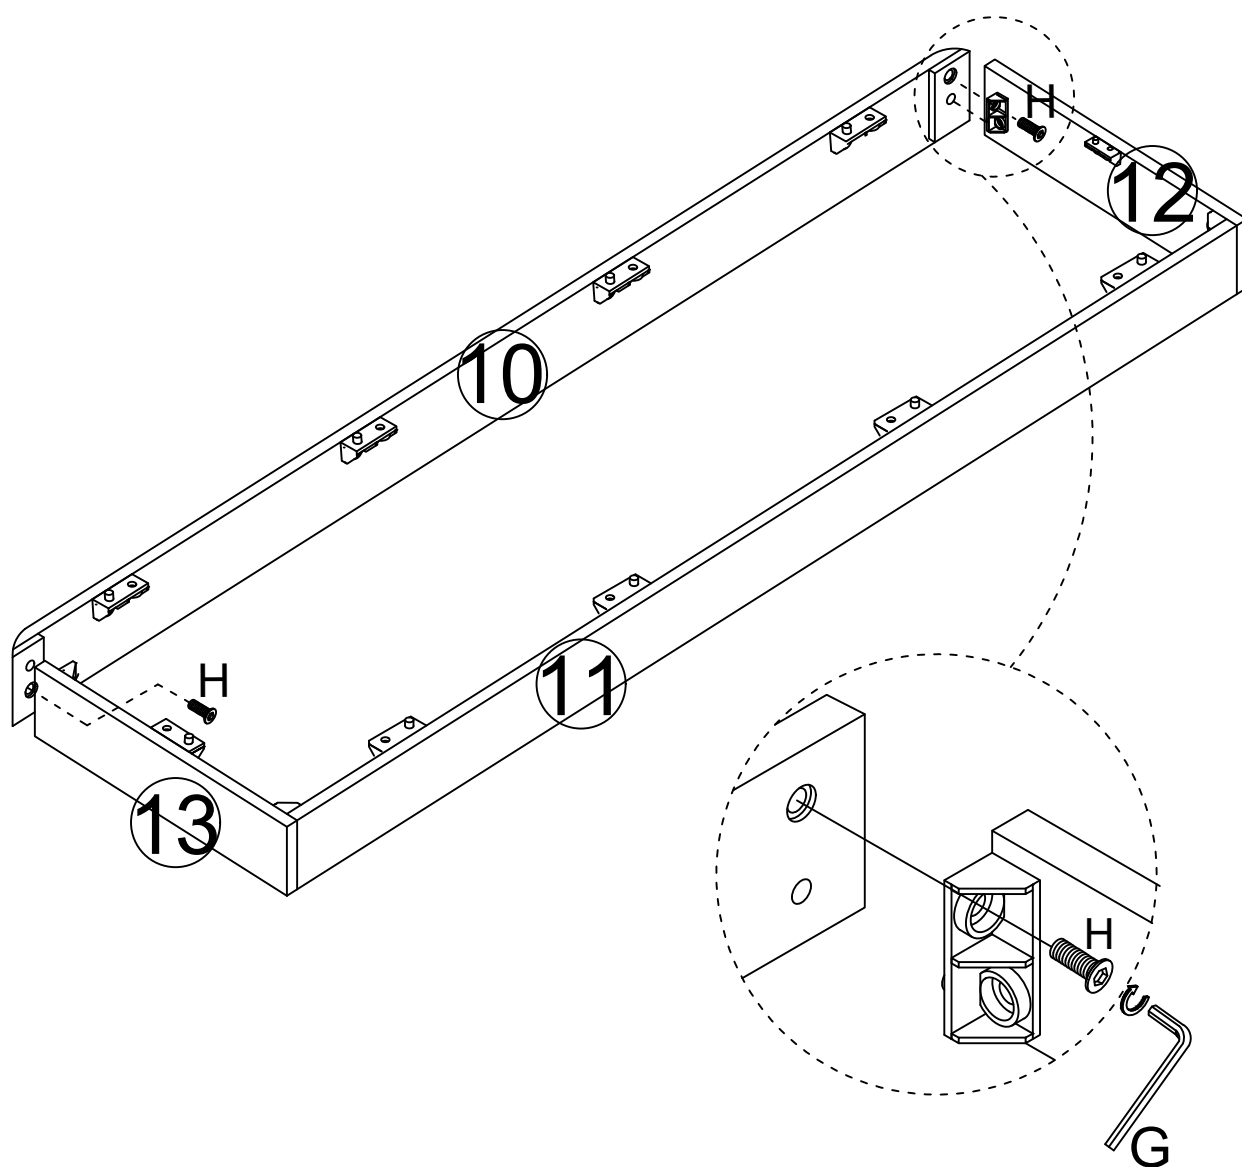


H	G
	
X2	X1

 Step 11

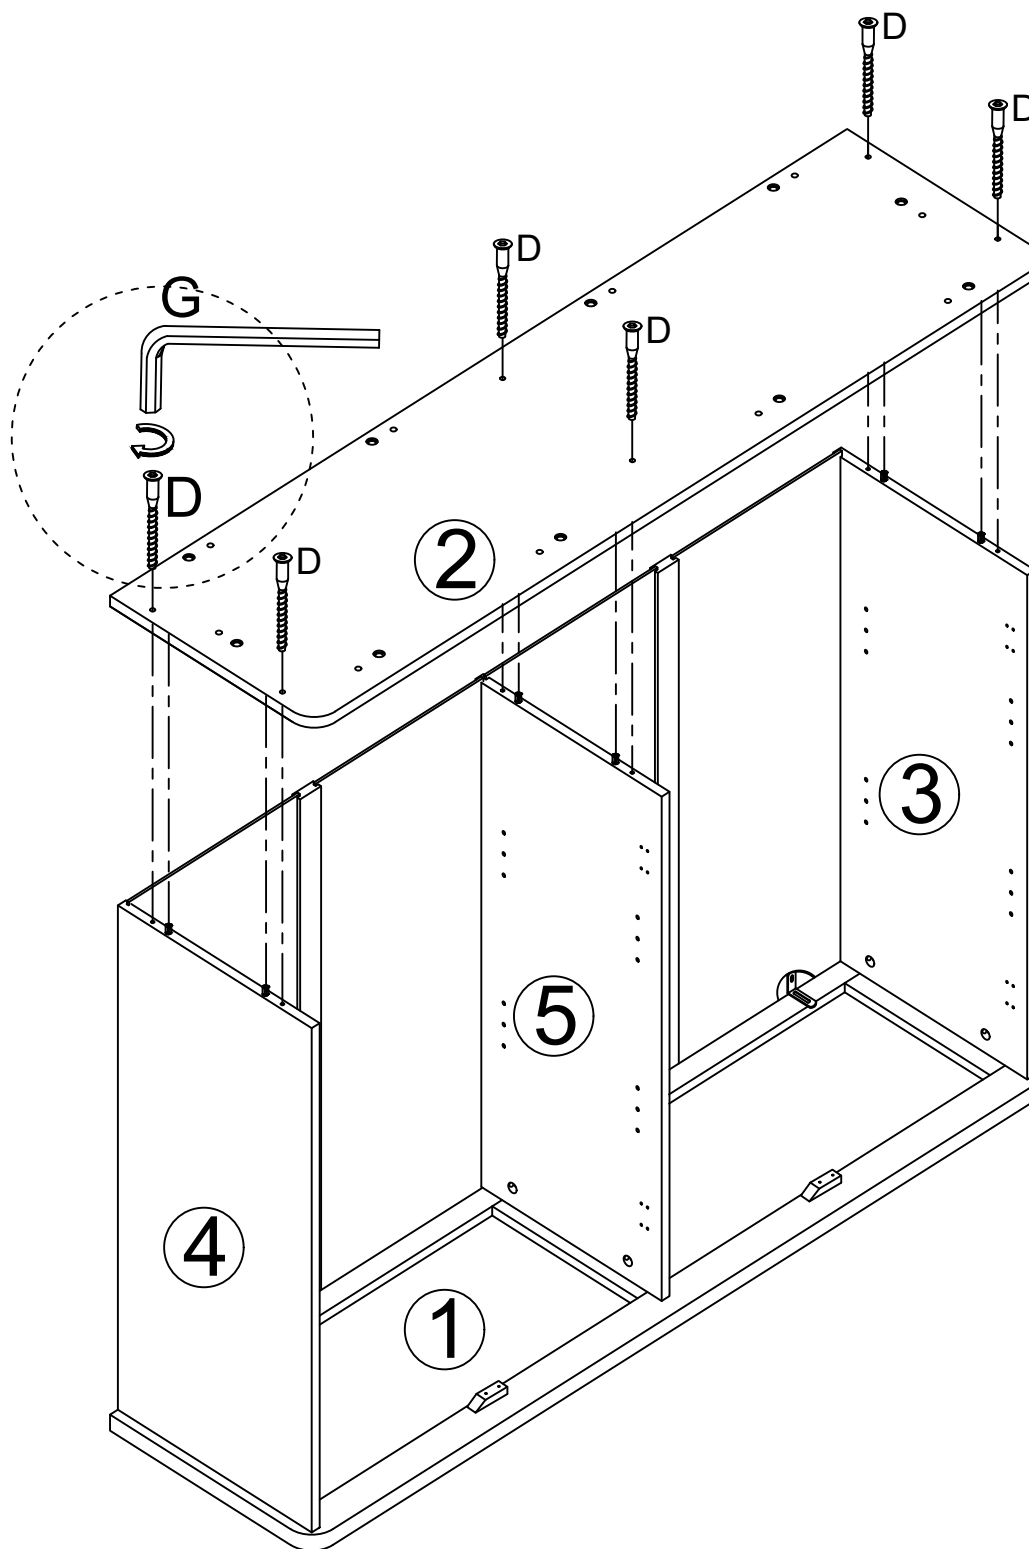



G	D
	
X1	X6

 
Step 12

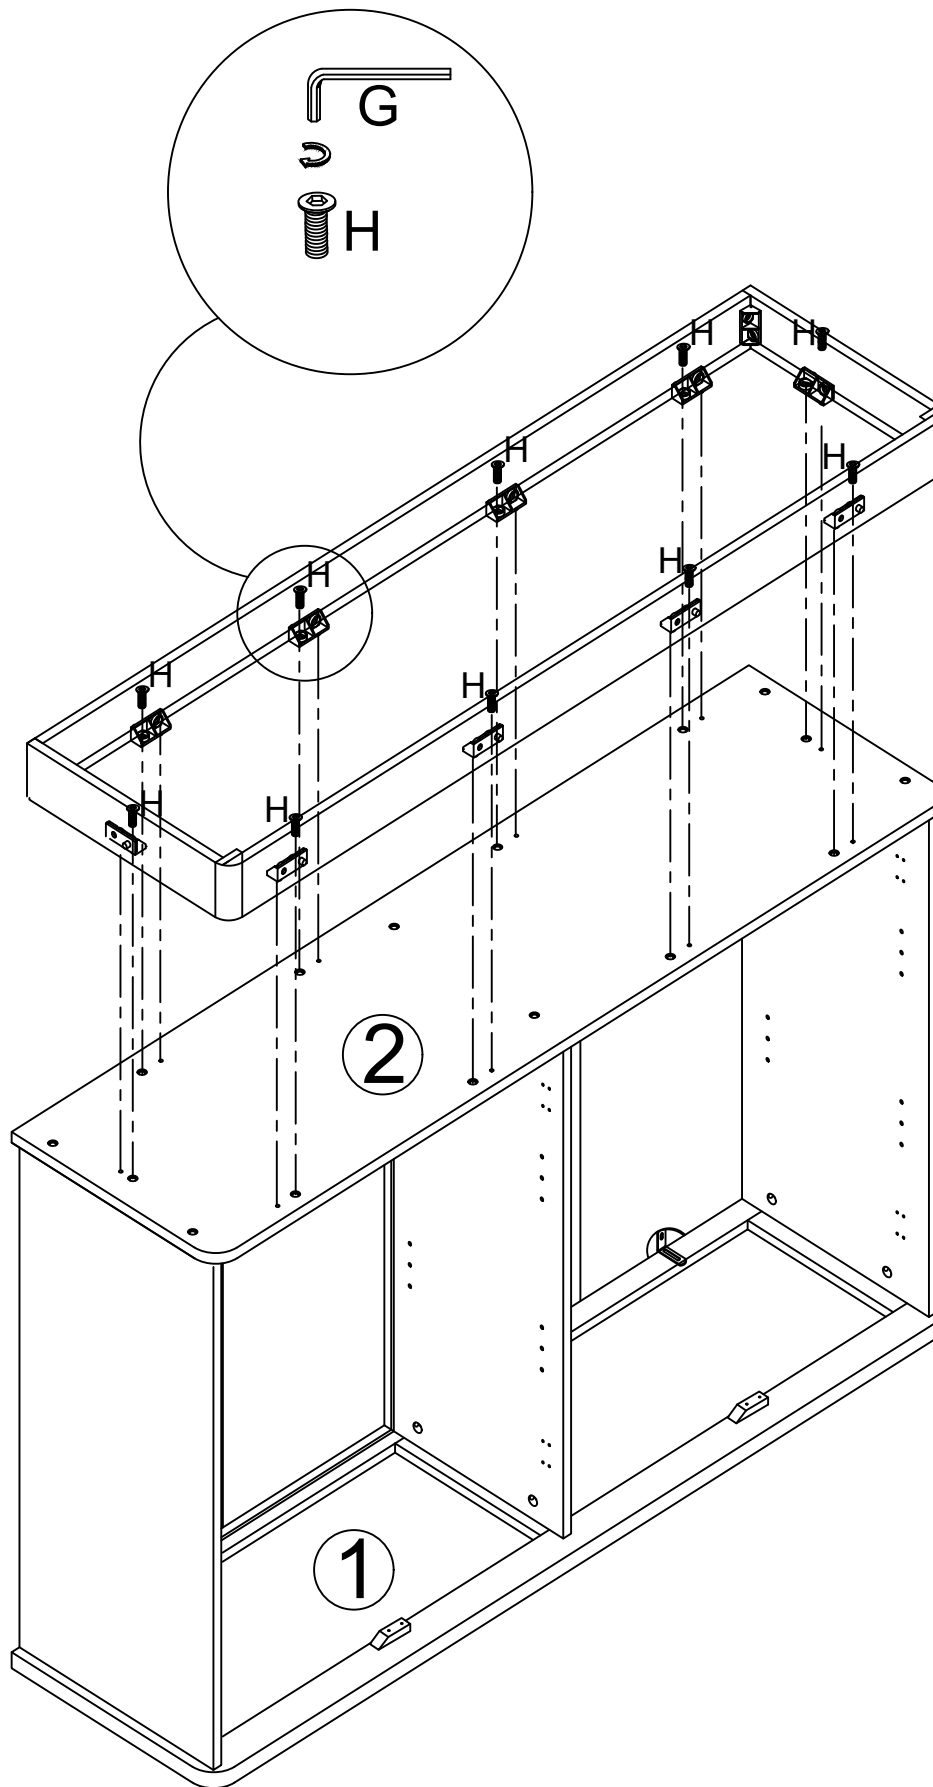

G	H
	
X1	X10

   
Step 13

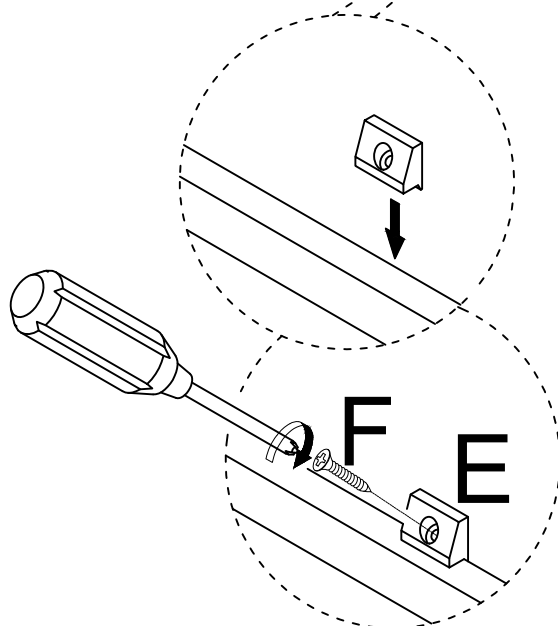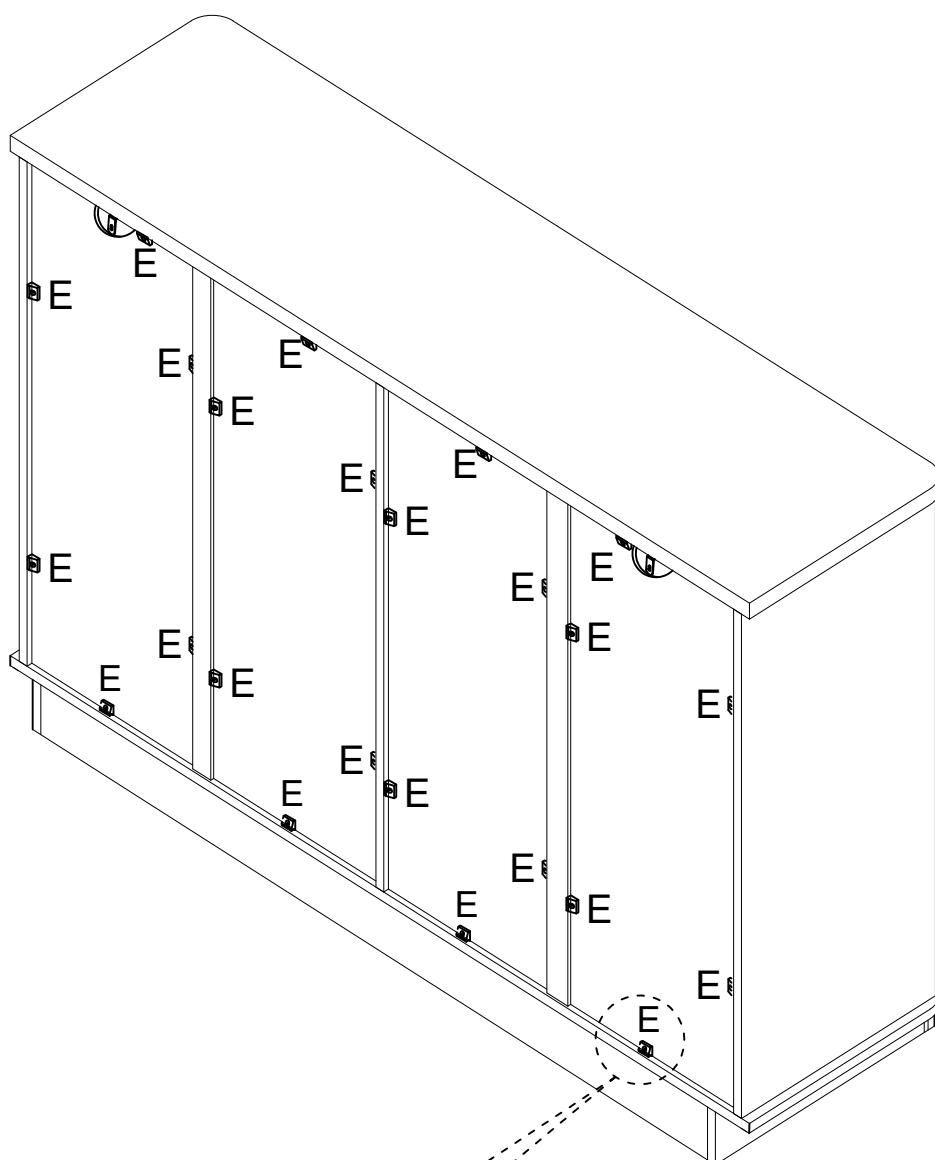

F	E
	
X24	X24


Step 14

 Make Four holes 45MM deep

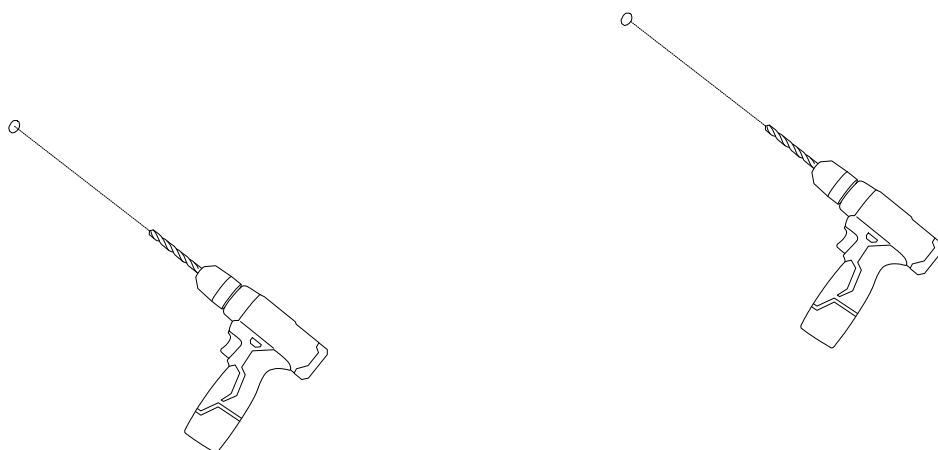

Wall

 
Step 15

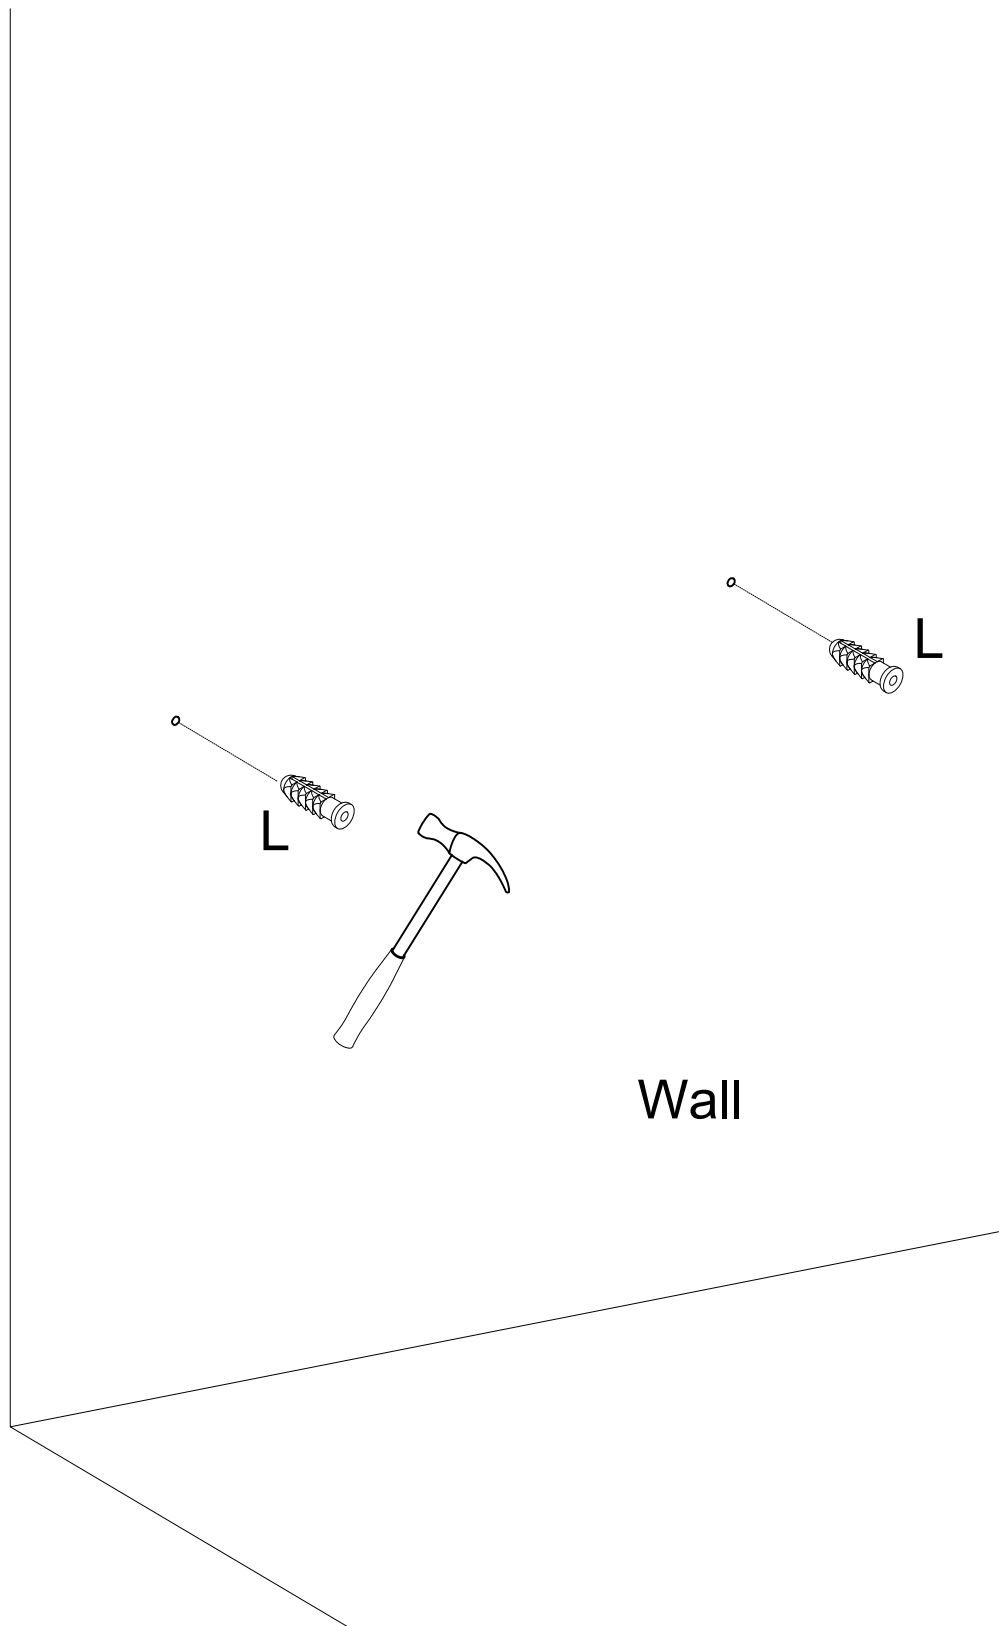

L

X2

 
Step 16

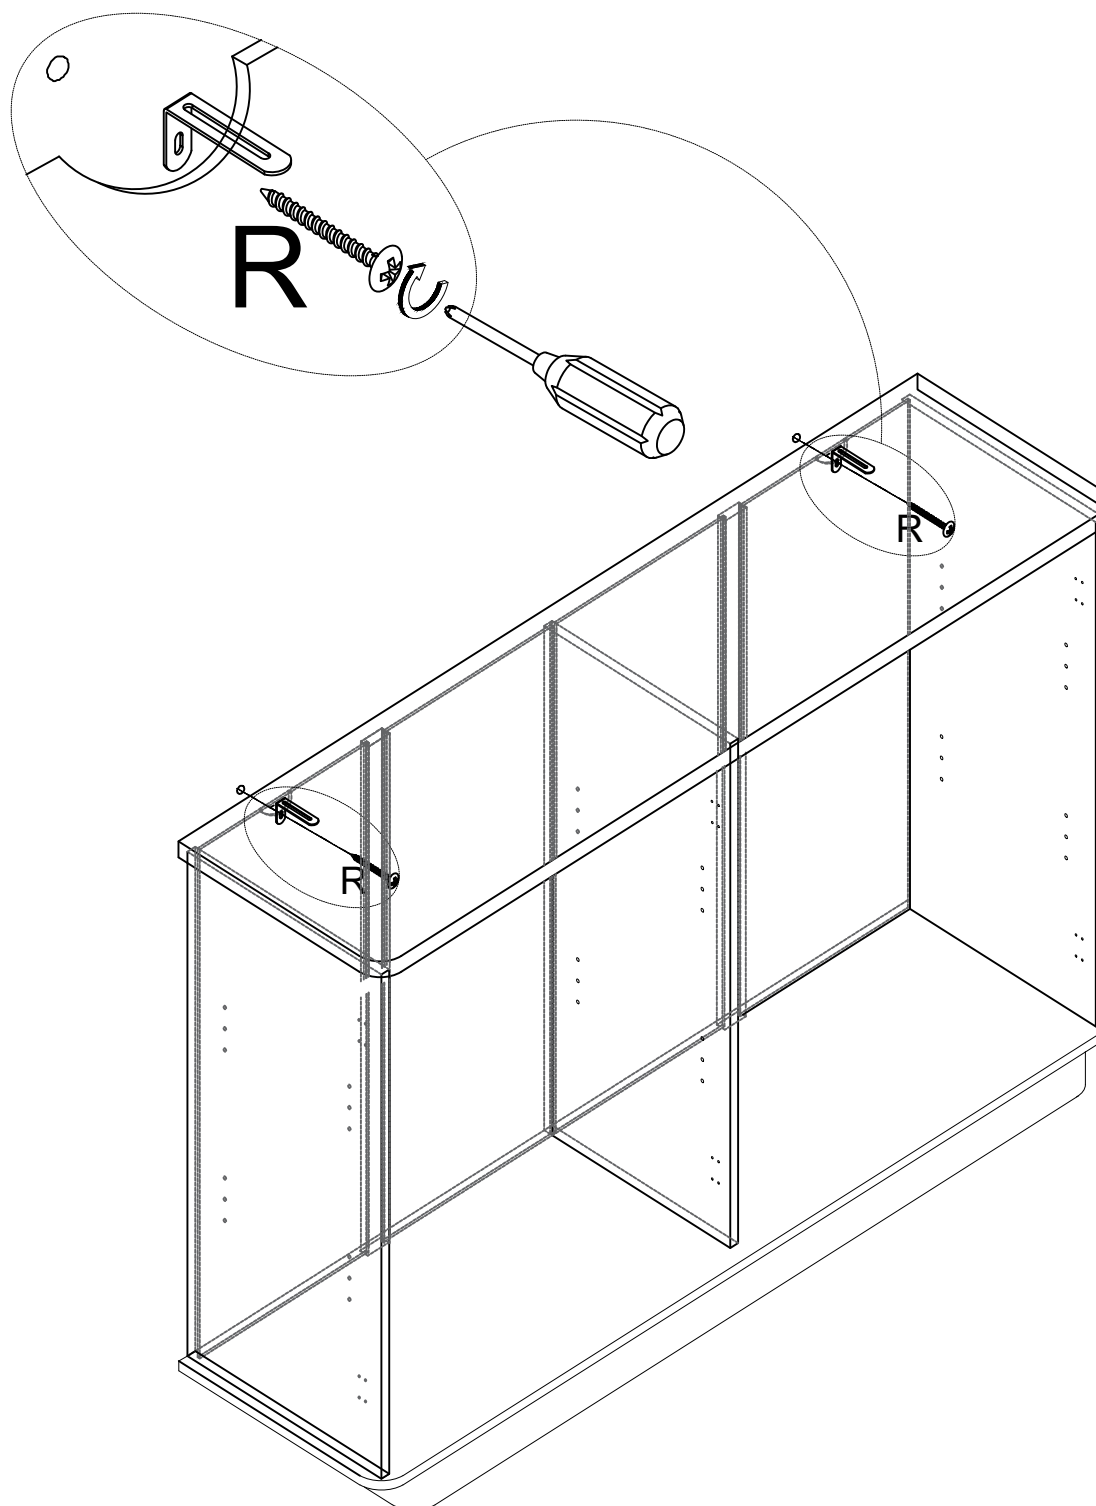

R

X2

 
Step 17

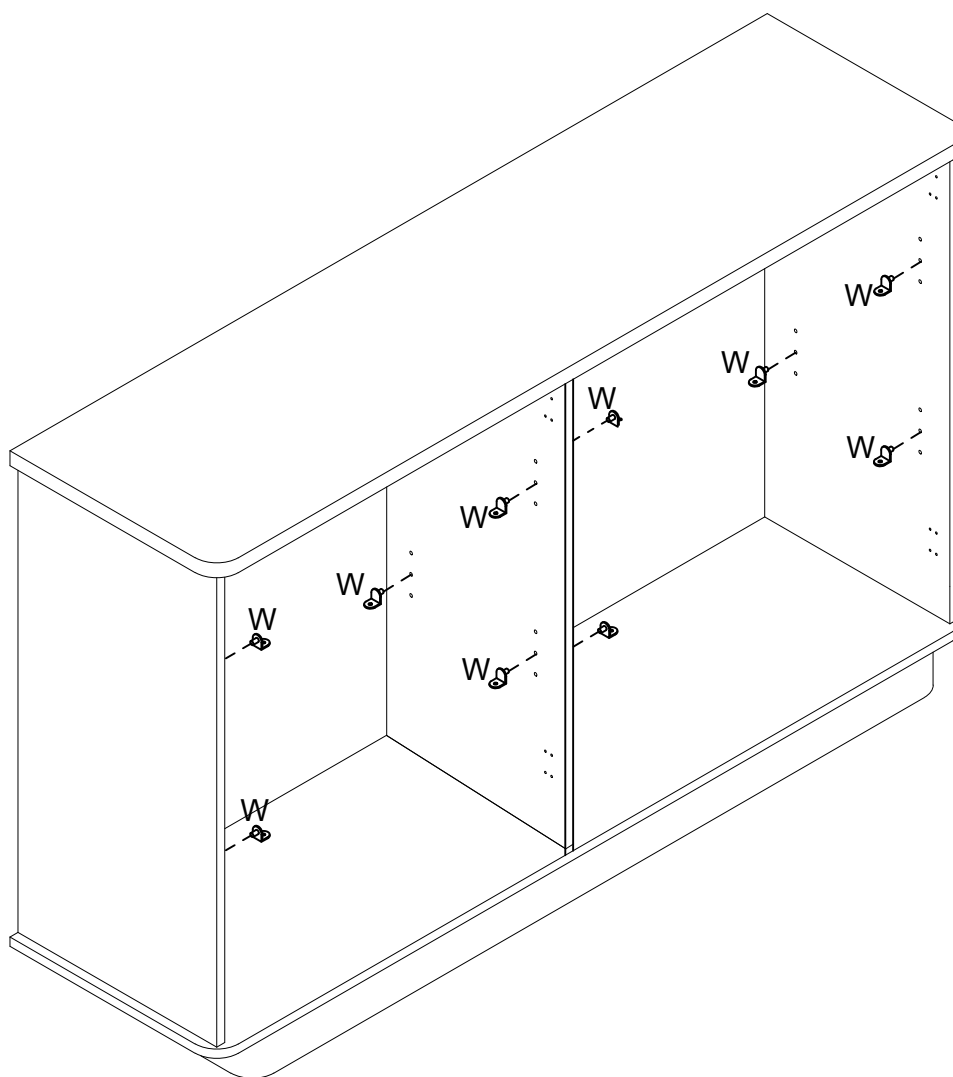

W

X16

 Step 18

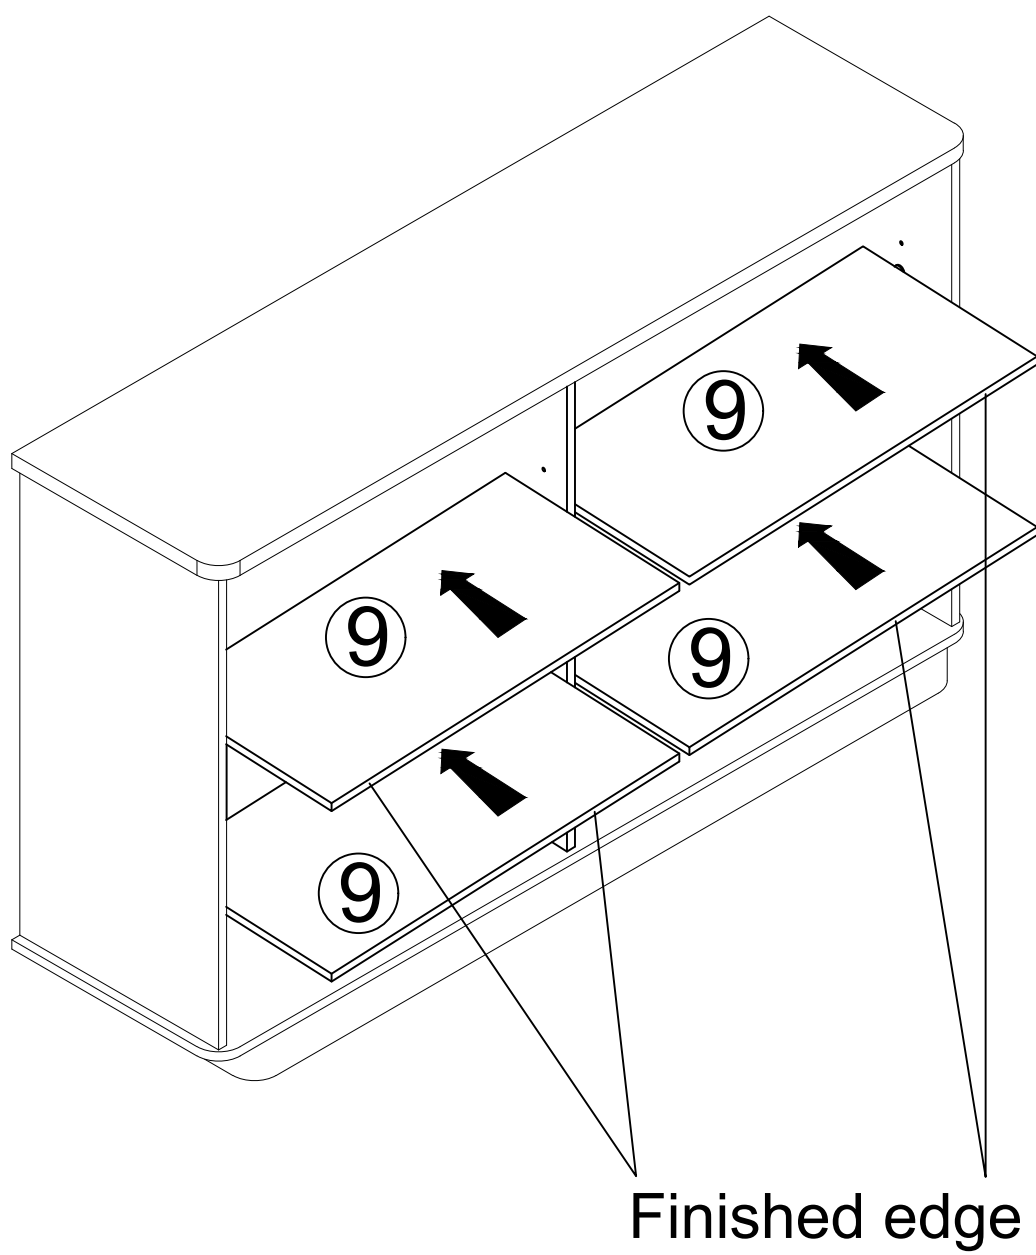


Step 19



Note:

 Ensure ONLY the FULL CRANK hinge(O) to install on door #14 in this step.

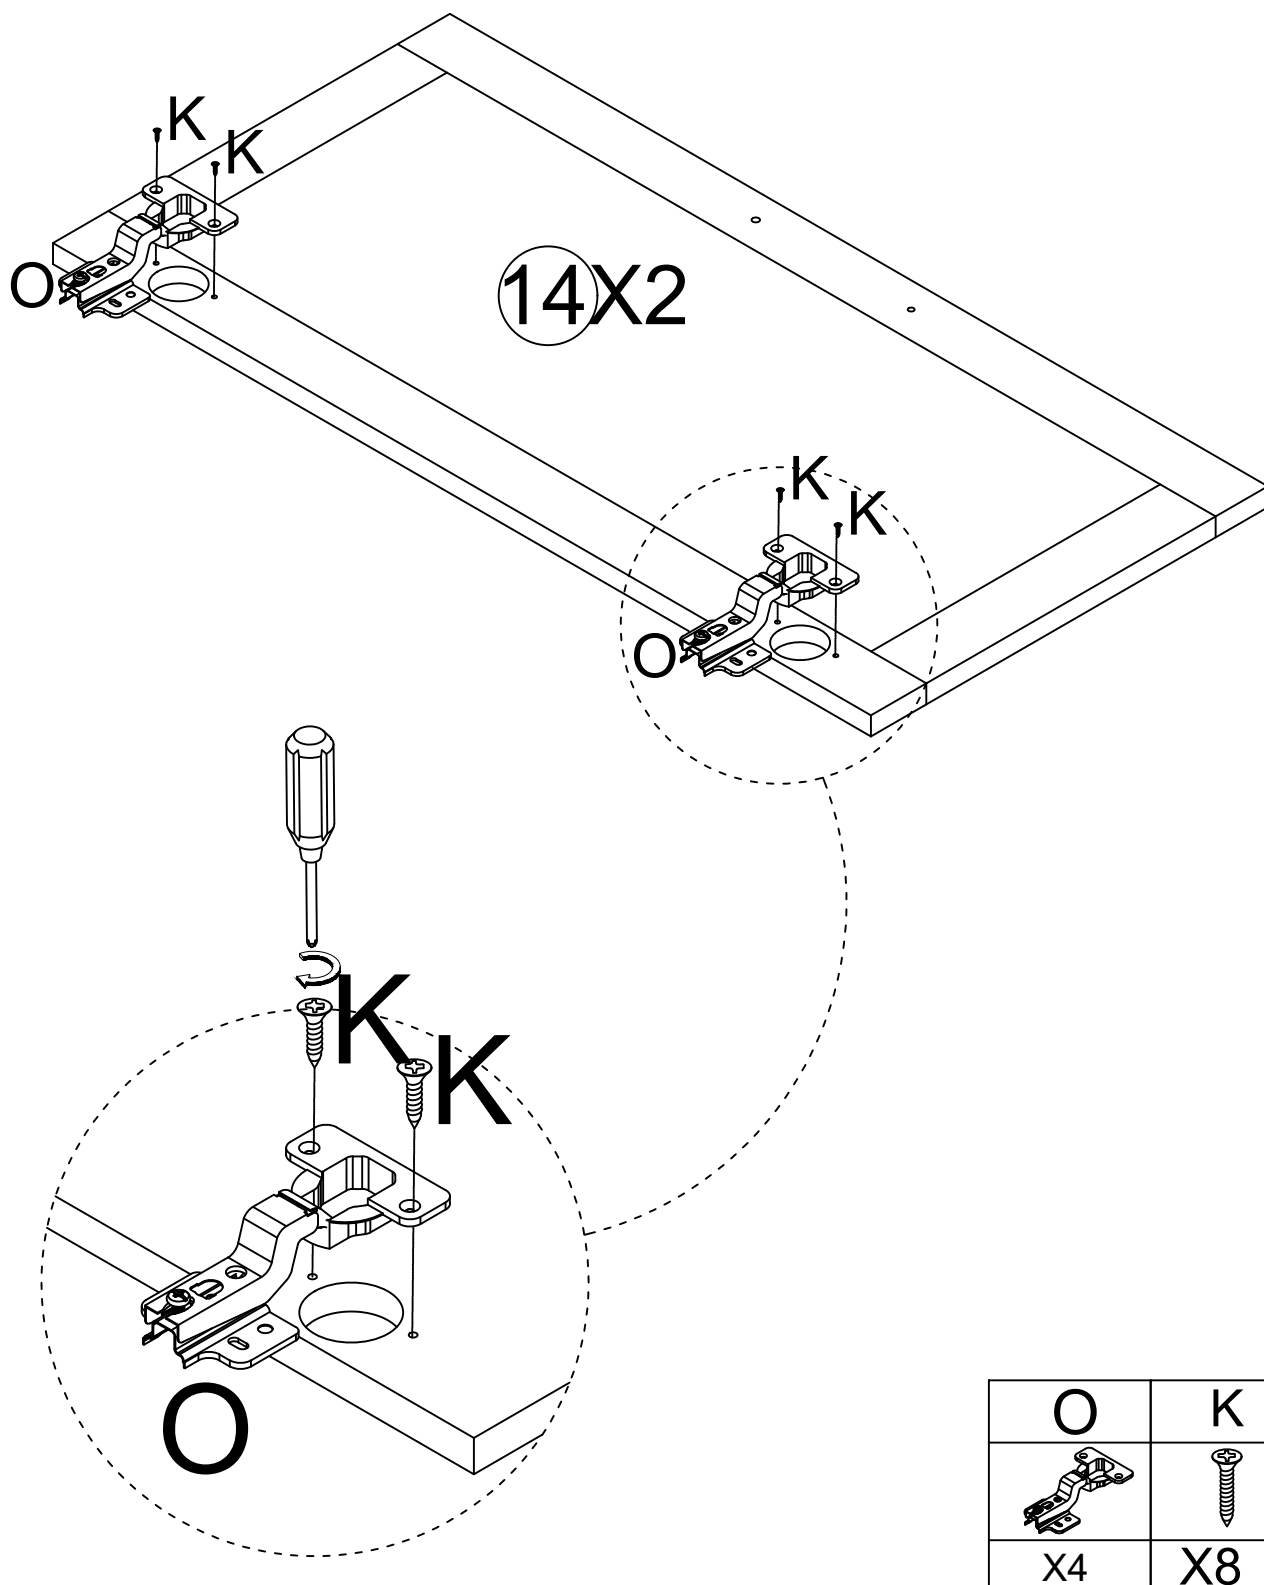


Step 20




Note:

 Ensure ONLY the HALF CRANK hinge (P) to install on door #15 in this step.

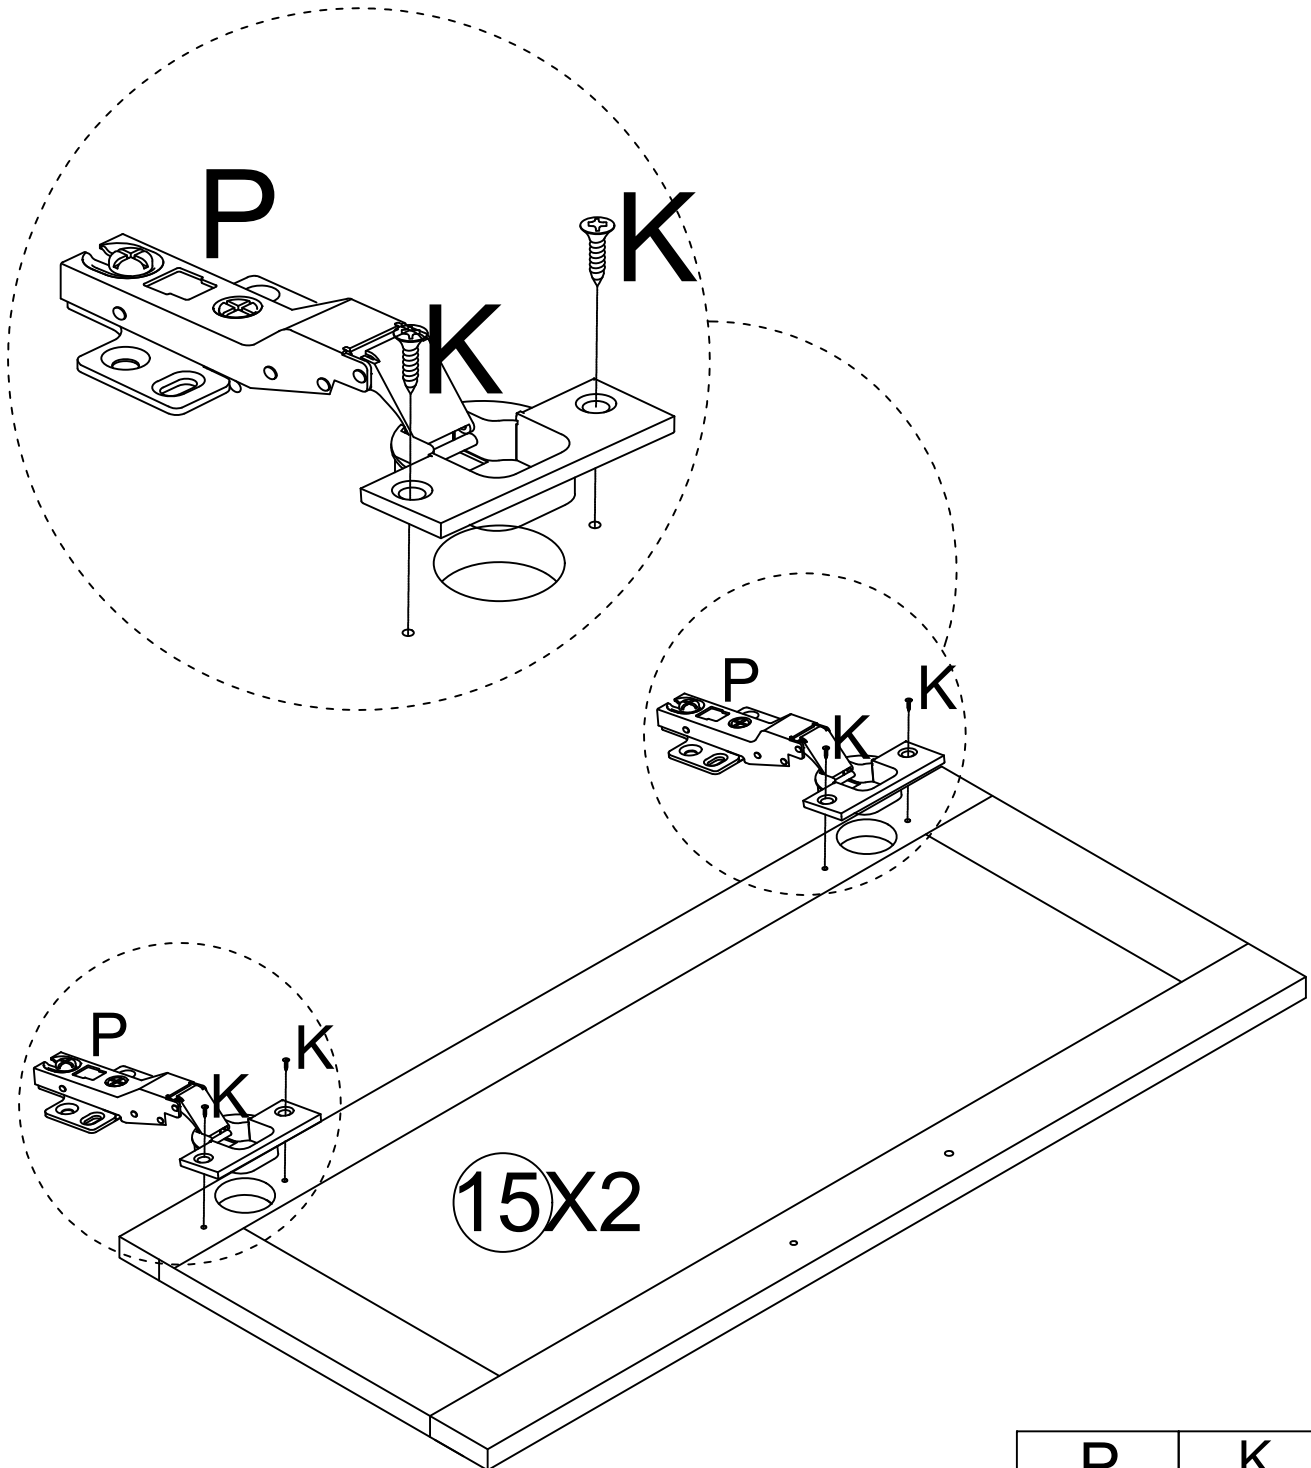


P	K
X4	X8

 Step 21

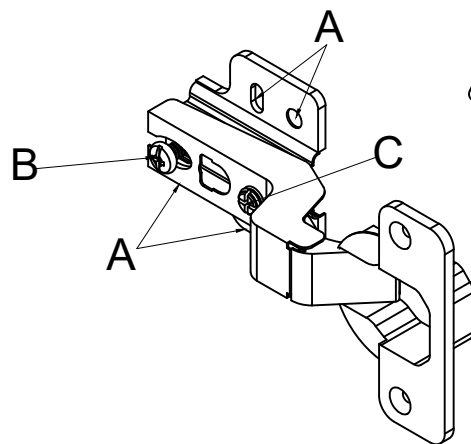

 
! YOU WILL USE HINGE ADJUSTMENT INSTRUCTION ON THIS PAGE FOR THE NEXT STEP.

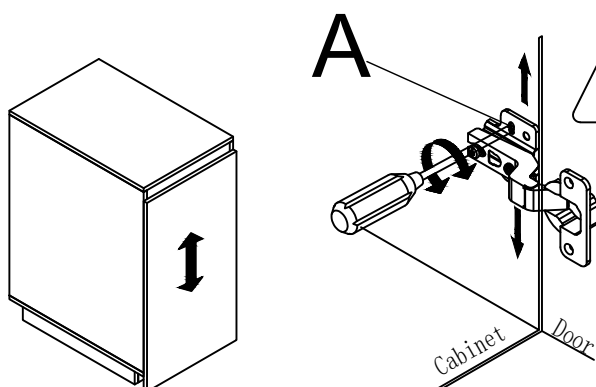

! If you find a large gap above or below the door.

To adjust the vertical height.


 
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

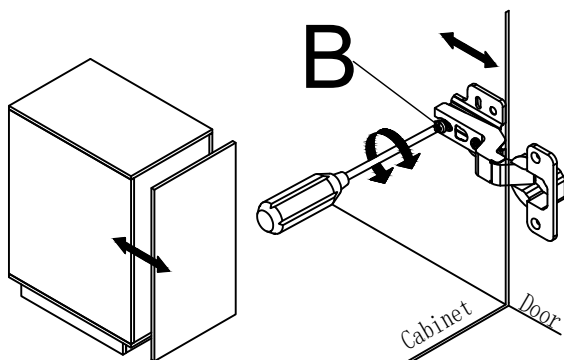

! If you find the door is too protruding or too inside.

To adjust depth.

  
Loosen screw "B" on both hinges and move the door to suit. If the door doesn't move, turn screw "C" on both hinges 1-2 turns and try again. Finally, tighten both screw "B" and reset both screw "C".

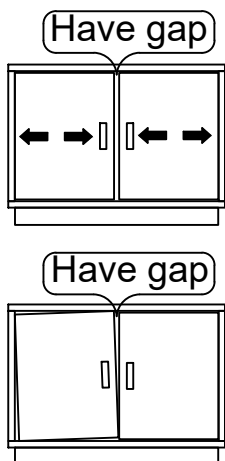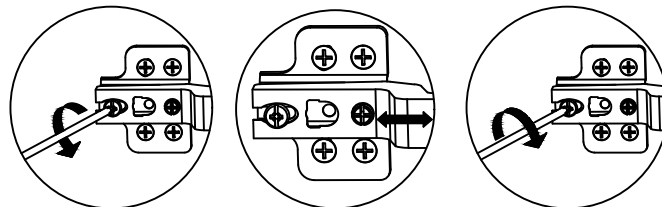

If you notice large gaps between or beside the doors, or if two doors in middle get stuck together, don't worry — this is not a product defect.



To adjust side ways.

 Turn screw "C" clockwise or counterclockwise on both hinges until the door is in the desired position.

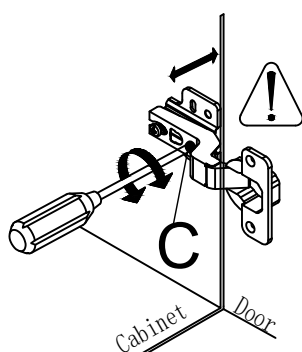

Step 22

J	I	K
		
X2	X4	X16

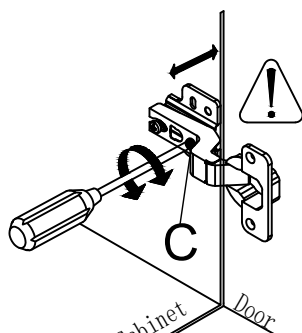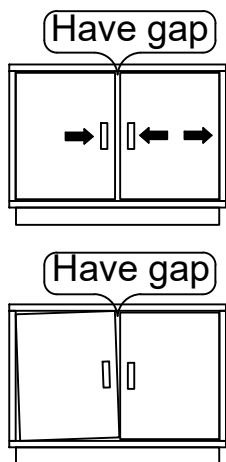  


If you notice large gaps between or beside the doors, or if two doors in middle get stuck together, don't worry — this is not a product defect.

To adjust side ways.



Turn screw "C" clockwise or counterclockwise on both hinges until the door is in the desired position.

 NOTE: Refer to the images to install #14/#15 doors at the indicated position

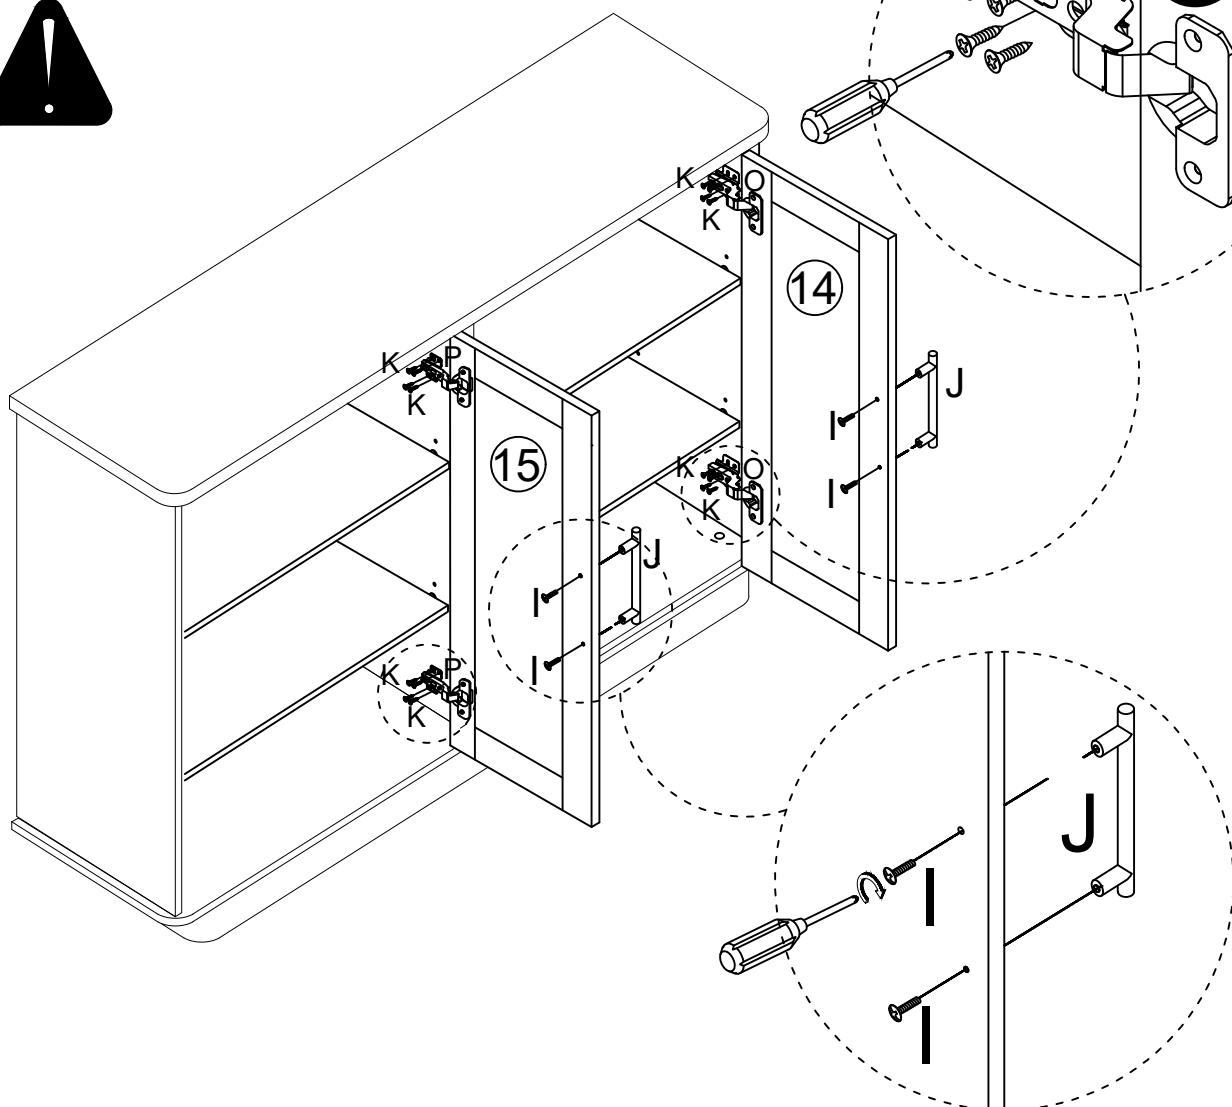

Step 23



J	I	K
		
X2	X4	X16

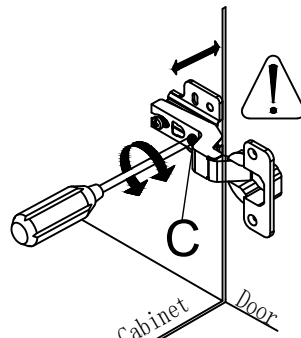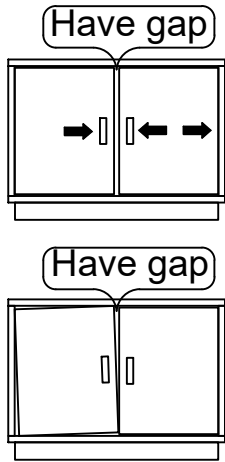  

If you notice large gaps between or beside the doors, or if two doors in middle get stuck together, don't worry — this is not a product defect.


To adjust side ways.
Turn screw "C" clockwise or counterclockwise on both hinges until the door is in the desired position.

  NOTE: Refer to the images to install #14/#15 doors at the indicated position

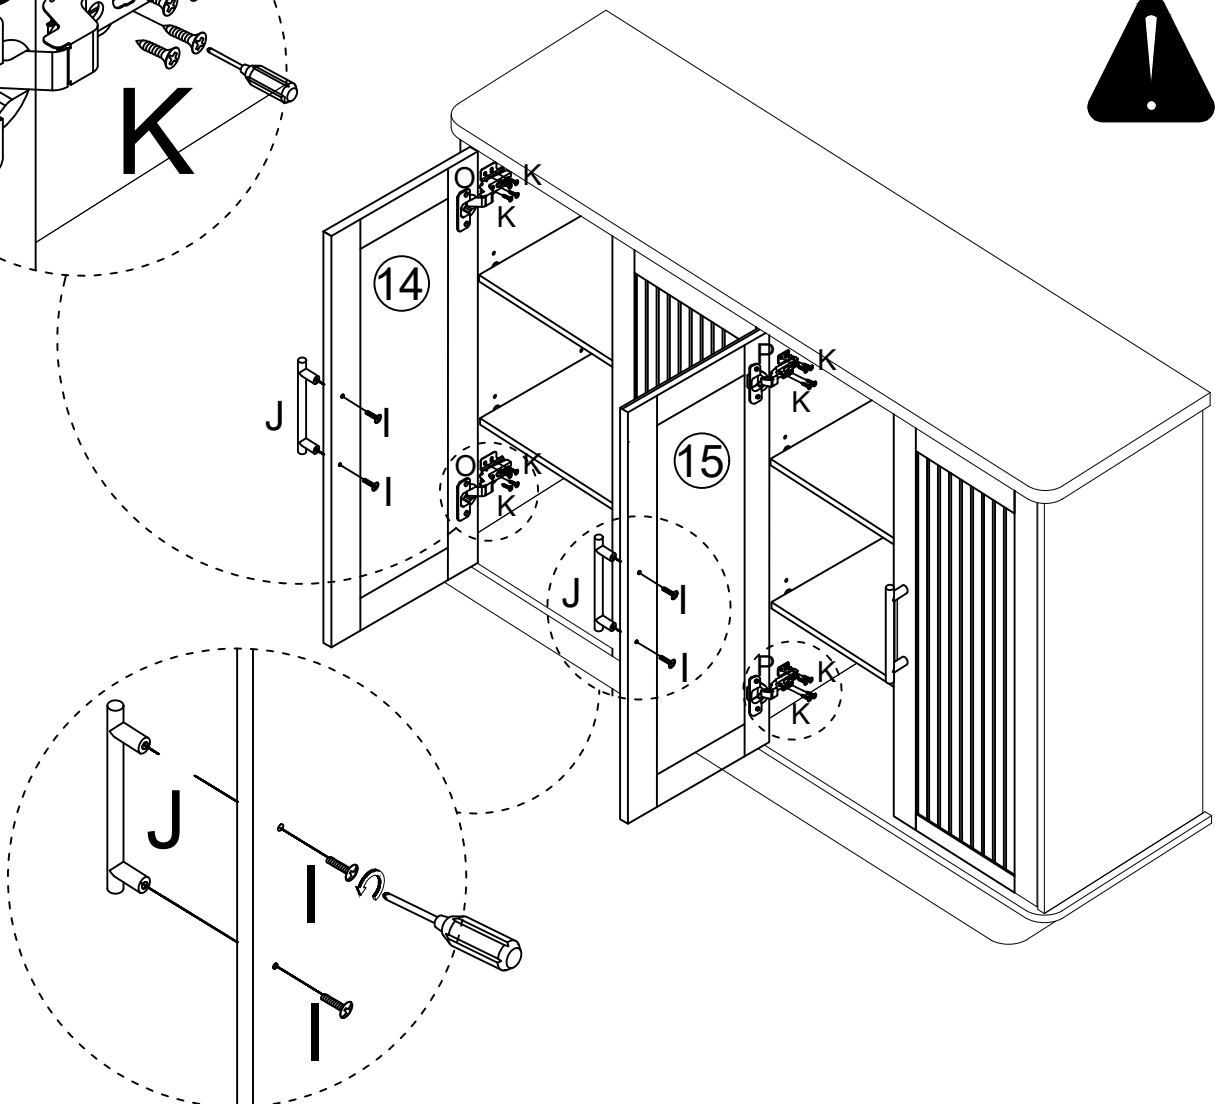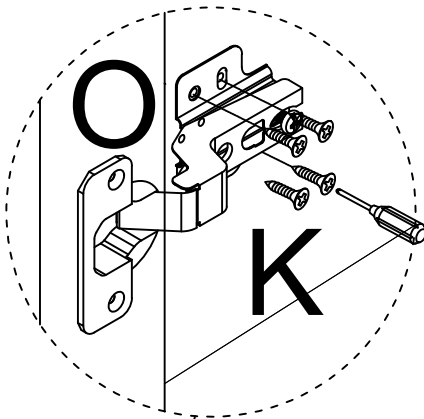

Step 24

 Final Assembly

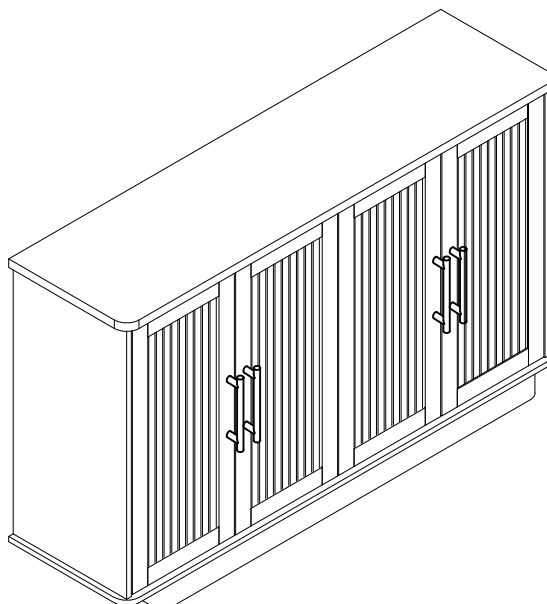

Step 25

 WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install Anti-tip device provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	