 



USER'S MANUAL

ELECTRIC HEATER

Model No.: TBCD-15SD

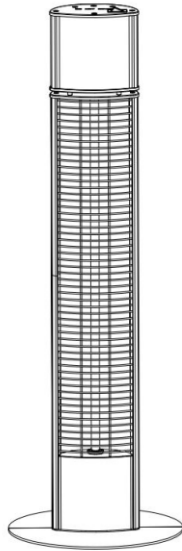

 Please keep this manual for future reference.

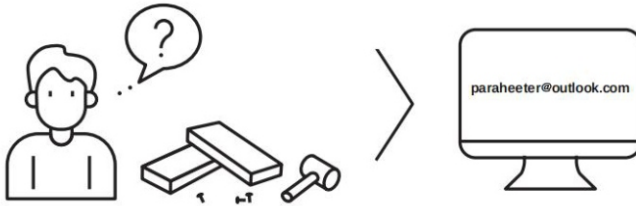

Questions? Comments?
Reach out to us for expert support!

✉ paraheeter@outlook.com

☎ 323-831-2020

🌐 Paraheeter/15791 Quality Way/Chino, CA 91708.

Feedback

Love it? Hate it?

Let us know with a customer review.

Paraheeter is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.

Please visit: amazon.com/review/review-your-purchases#

For further services:



Visit amazon.com/gp/help/customer/contact-us

— or —



Contact Customer Service at 1-323-831-2020

Specification

Model	TBCD-15SD
Voltage	120V AC 60Hz
Amps	5A
Adjustable Power	1500W/900W/600W
Product Size	12.6*12.6*38.66 in
Safety:	Tip-over auto shut off

Safety Warnings:

1. To prevent overheating, do not cover the heater. If the heater or its heating element becomes covered or obstructed, immediately turn off and unplug the unit. Allow it to cool down completely before checking for and removing any objects from the heater housing or heating element.
2. This heater is equipped with a tip-over safety switch that will automatically shut off the unit if it is accidentally knocked over.
3. Do not operate the heater or its power switch with wet hands.
4. This heater is not equipped with a room temperature thermostat.
5. Do not use this heater in small rooms occupied by individuals who cannot leave on their own, unless they are under constant supervision.
6. Do not insert or allow any objects to enter any openings on the heater.
7. Do not touch the heater during operation, as it becomes hot. To move the heater, always unplug it from the mains supply first and wait until it has completely cooled down.
8. Never use a heater that has been damaged or is malfunctioning.
9. Do not leave the heater operating unattended. Always turn off and unplug the appliance after use and ensure it has come to a complete stop before any disassembly or cleaning.

10. Keep children under 3 years away from the appliance unless they are continuously supervised. This appliance is not a toy and should not be played with.
11. Children aged from 3 years and up to 8 years may only turn the appliance on/off, provided it has been positioned correctly and they have been supervised and instructed on its safe use and understand the hazards involved. Children in this age group must not plug in, adjust, or clean the appliance.
12. This appliance shall not be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the safe use of the appliance.
13. Cleaning and user maintenance must not be performed by children, even under supervision.
14. Particular attention must be given when the appliance is used in the presence of children and vulnerable persons.

Supervision Requirement:

Keep the heater out of the reach of children.

Use in High-Salt, Dusty, and Dirty Environments:

1. High-Salt Environments: If the heater is used in areas with high salt concentrations (e.g., coastal regions), salt, alkali, crystalline deposits, or other contaminants may accumulate on the housing or heating element over time. Should this occur, immediately stop using the heater and disconnect it from the mains power. Allow the unit to cool down completely, then thoroughly clean all contaminants from the housing and heating element before subsequent use.
2. Dust and Dirt Prevention: Before and during use, regularly inspect the plug, power socket, and the heater itself to ensure they are free from dust and dirt.

Safe Distance from Combustible Materials:

1. Due to the intense heat generated, a minimum safe distance of 59.1 inches must be maintained between the front of the heater and all combustible materials. This includes furniture, pillows, bedding, paper, clothing, curtains, etc. Sufficient clearance must also be ensured around all other sides of the heater. Do not place the heater on or near a surface that is susceptible to heat.
2. This heater must not be used in areas where gasoline, paint, or other flammable liquids or materials are used or stored.

Fire Protection Grille:

1. To prevent risk of electric shock or burns, the front fire protection grille must always be securely in place while the heater is plugged in or operating. This grille is a critical safety feature designed to prevent direct contact with the high-temperature heating element.

Electrical Safety Precautions:

1. Inspect Cord & Plug: Check regularly for damage. Do not use if damaged. No user-serviceable parts inside, refer servicing to qualified personnel.
2. No Extension Cords: Plug directly into wall outlet only.
3. Position Cord Safely: Route cord behind the heater, away from hot surfaces. Keep cord clear of the front and top.
4. Grounding Required: Must be plugged into a properly grounded outlet.
5. Disconnect Safely: Turn off heater and wall socket before unplugging by the plug, not the cord.

Bathroom Installation:


1. If installing the heater in a bathroom, it must be positioned as far away as possible from all water sources, including bathtubs, showers, sinks, and toilets. It is strictly prohibited to install the unit in any position where it could possibly fall into a bathtub, shower basin, or any other container filled with water.

Installation Notes

- Qualified Installer: Installation by a qualified electrician is required.
- Power Off: Ensure heater is cool and power is disconnected before installation.
- Clearance: Maintain safe distance from combustibles. (See relevant section).
- Outdoor Use: Mandatory use of a weatherproof outdoor socket.
- Cord Management: Route power cord safely away from hot surfaces

INSTRUCTIONS

Accessories

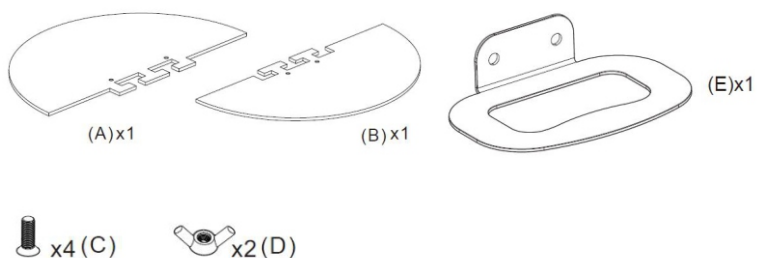


Contents:

- (A) Semi-base
- (B) Semi-base
- (C) M4x3.9" screw x4
- (D) Wing M5 nut x2
- (E) Handle

Before installation, you must check all contents against the parts list. Proceed only if all parts are present and in good condition. Do not attempt installation if any parts are missing or damaged.


Step1

Secure the two semi-bases to the bottom of the heater using four M4x3.9" screws.

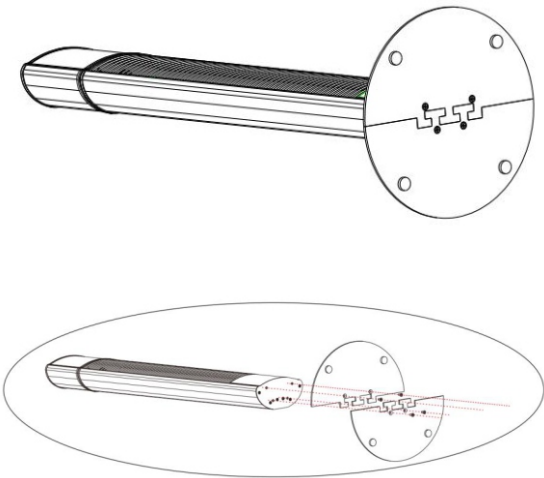


Step2

Secure the handle to the top rear of the heater using two M5 wing nuts.

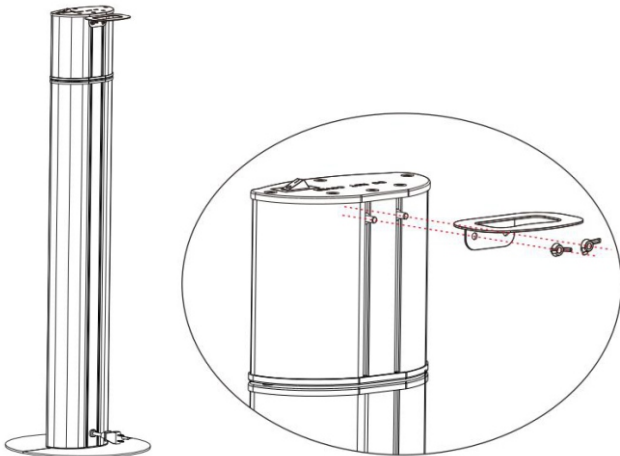

Remote Control

1. Power On/Off button
2. High/Med/Low switch button
3. Child lock button
4. Timer button
5. Down button
6. Set button
7. Up button

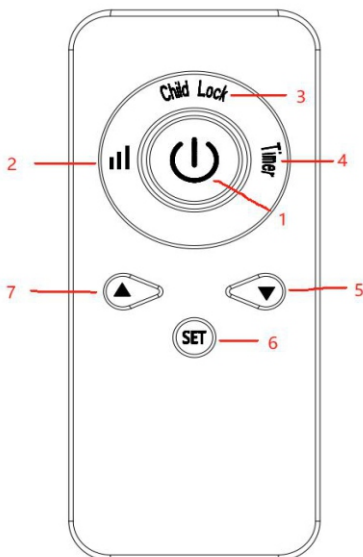

Remote Operations:

1. Plug the heater into a mains power outlet, ensuring the socket matches the voltage and current indicated on the rating label located on the back of the panel.
2. Power On/Off:
Press the "Power On/Off button" to switch the heater on or off.
3. Power Level Setting:
Press the "High/Med/Low switch button" to switch between H1 (600W), H2(900W), and H3 (1500W) heat settings.

4. Timer Setting:

- Press the Timer Button to enter setup mode
- Select duration (1-24 hours in 1-hour increments)
- Press SET to confirm

5. Child Lock:

- Activate: Press "Set button" ? "Child lock button" (icon appears, buttons lock)
- Deactivate: Repeat same steps CHILD LOCK.

6. Display Sleep:

- On: 2x "Set button"
- Off. Any button press

Cleaning & Maintenance:

1. Always disconnect the heater from the mains supply and allow it to cool down completely before cleaning.
2. If the interior of the heater becomes clogged with dust or debris, do not operate the heater in this condition, Have it inspected and cleaned by a qualified service engineer.
3. Clean only the exterior of the heater. Do not attempt to open or clean internal components yourself.
4. Do not use solvent or abrasive materials to clean the heater, as these can damage the exterior surface. Instead, use a soft, damp towel for cleaning.
5. Never touch the heating element directly with your fingers. This may cause injury and could damage the element.
6. Do not attempt to repair or adjust any mechanical components of the heater. There are no user-serviceable parts inside, Unauthorized repairs or modifications will void the warranty, If the heater is damaged or defective, please contact the manufacturer.

✉ paraheeter@outlook.com

☎ 323-831-2020

Paraheeter/15791 Quality Way/Chino, CA 91708.

MADE IN CHINA