 
 




INSTALLATION MANUAL

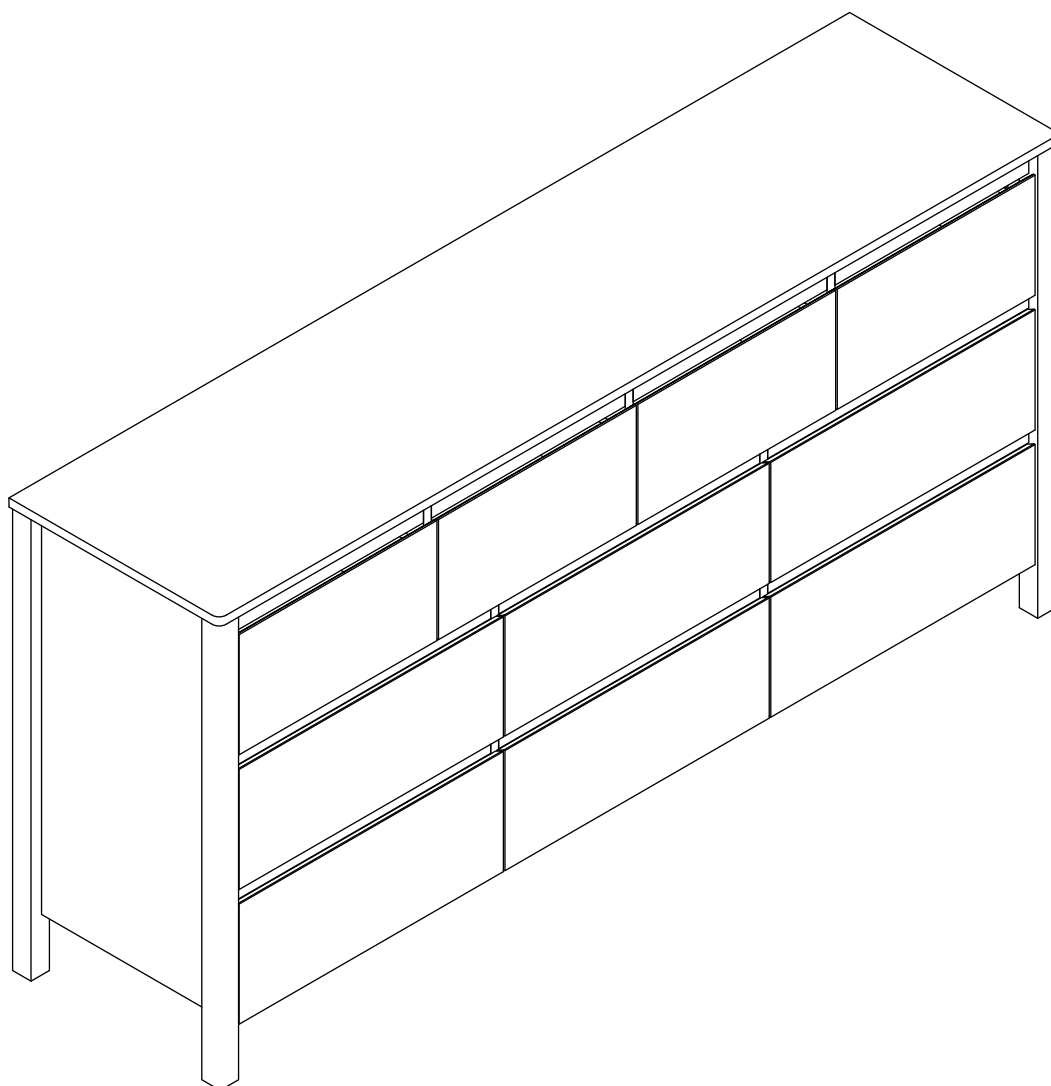

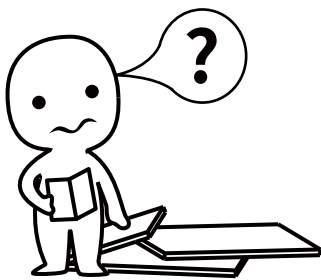


IMPORTANT INFORMATION!

  Please read the entire manual before starting to assemble and/or using this product. Follow the manual thoroughly and keep it for further reference.

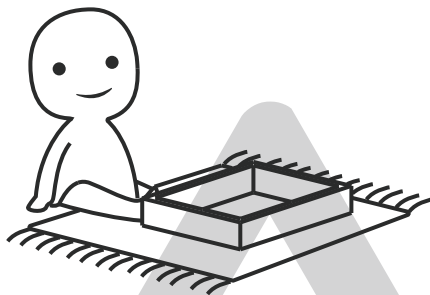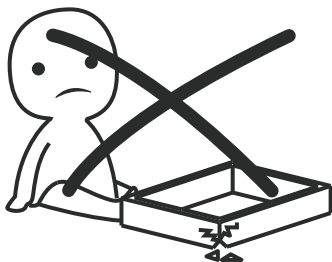



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

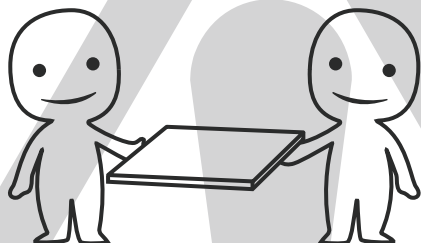

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

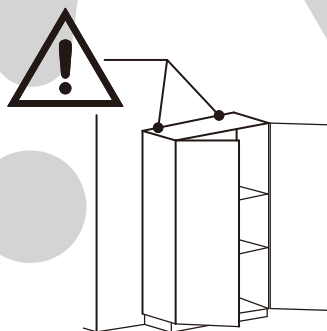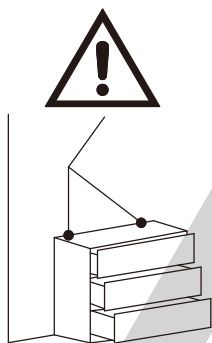

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.





Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

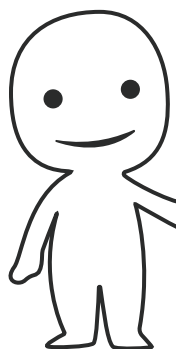


Please prepare the following tools

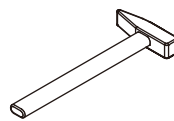   

    When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 102	B x 102	C x 28	D x 60	E x 100	F x 4
 Ø6 x 35 mm	 Ø15 x 9 mm	 Ø8 x 30 mm	 Ø4 x 35 mm	 Ø3 x 12 mm	 Ø25 x 3 mm
G x 12	H x 12	I x 8	J x 2	P x 2	Q x 2
 Ø3 x 14 mm	 	 Ø4 x 14 mm	 	 	
R x 4	T x 7	CR x 10	CL x 10	DR x 10	DL x 10
 	 Ø8 x 50 mm	 300mm	 300mm	 300mm	 300mm

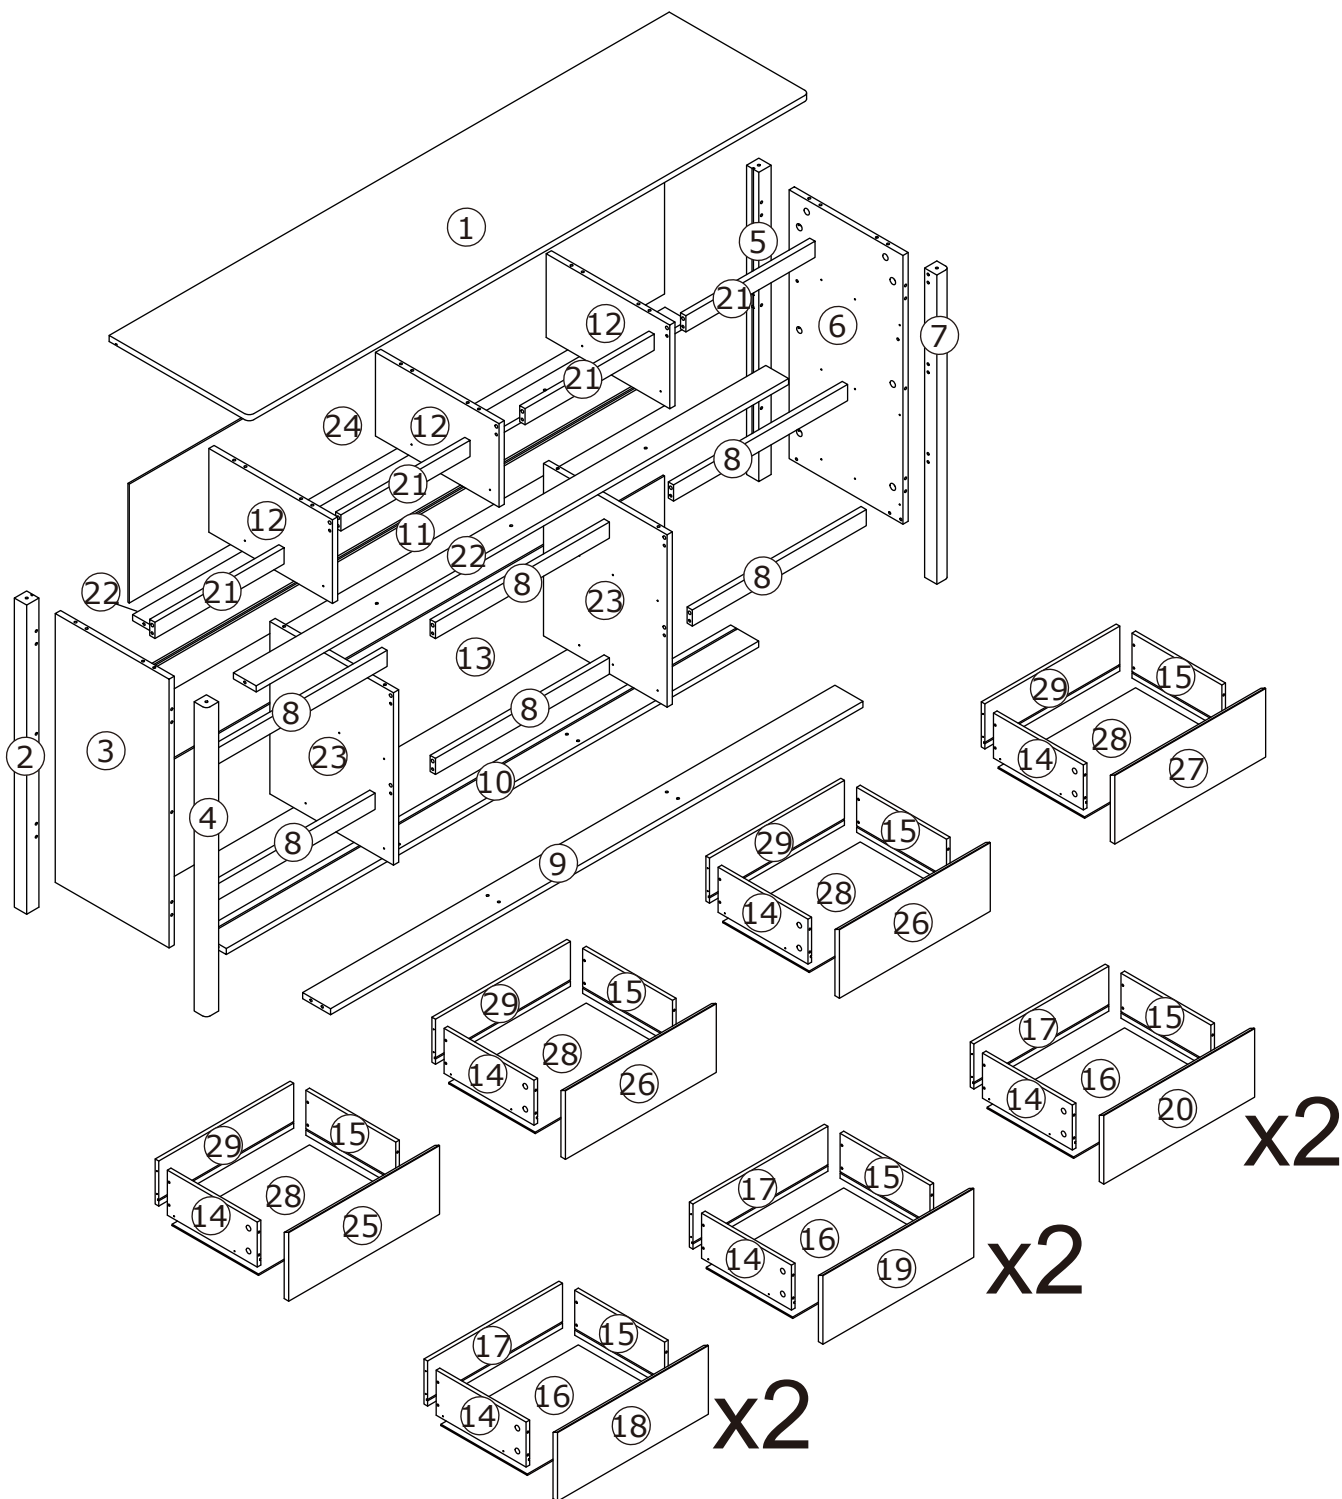 


⚠ WARNING








Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


 
*This is a permanent label.
Do not remove!*

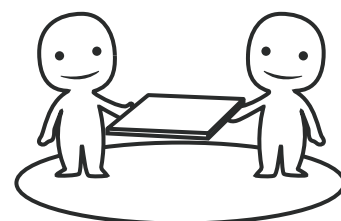

ASSEMBLED BY 2 ADULTS

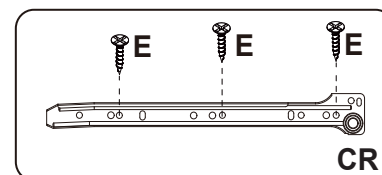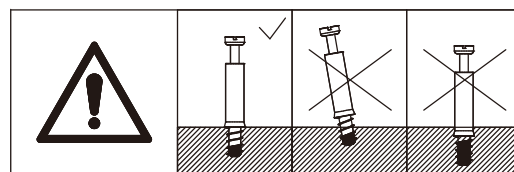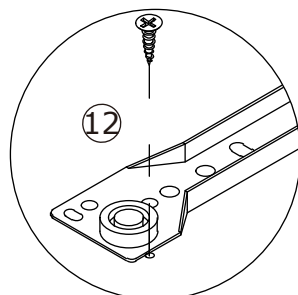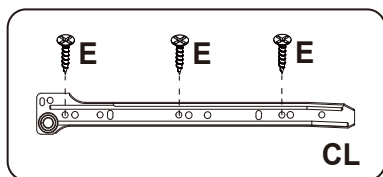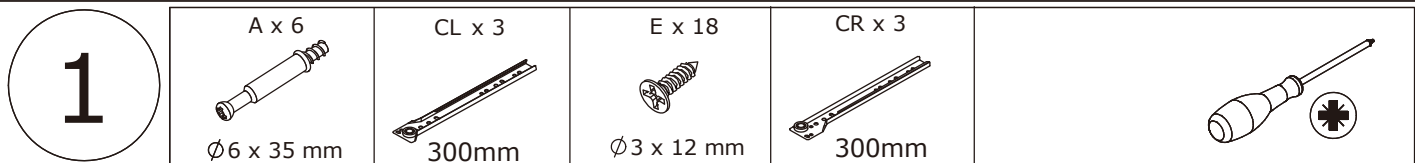     

  Insert quickfit screws (A) in both sides of part 12, as shown.


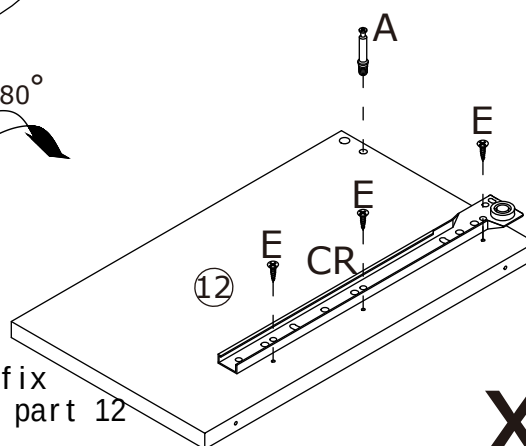
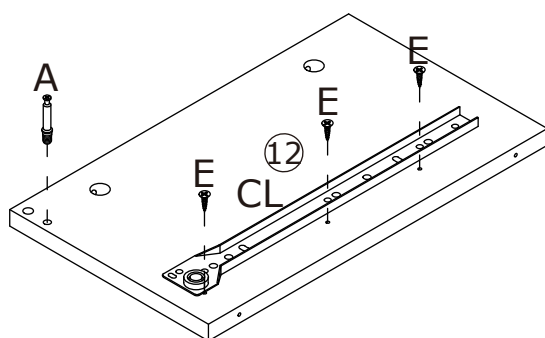


Fix left outer drawer runner (CL) to part 12 and fix right outer drawer runner (CR) to another side of part 12 using screws (E), as shown.



x3



 
 
 
Attach part 21 to part 12 using wooden dowels (T), add camlocks (B) and turn camlocks clockwise to tighten, as shown.

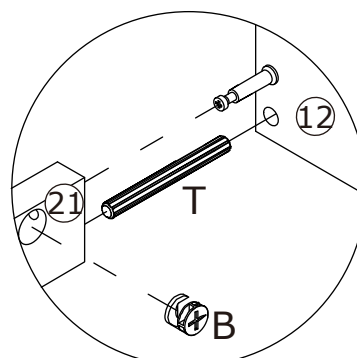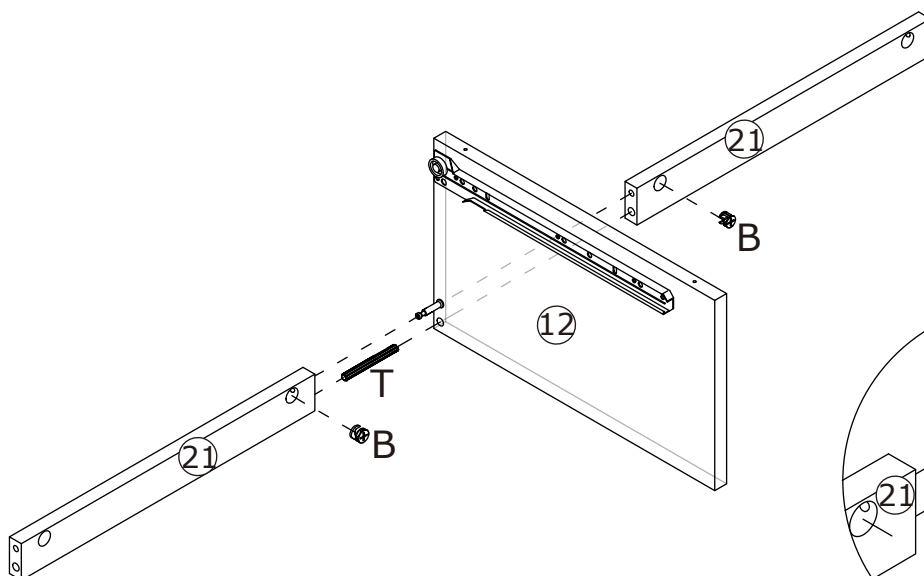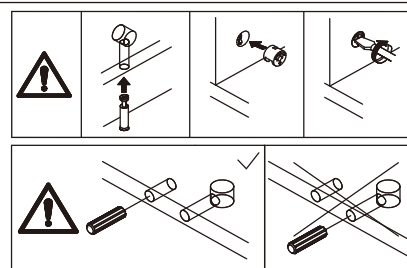


3

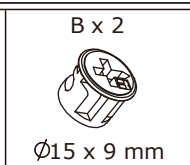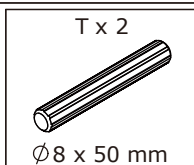  

 
 
 
Attach part 12 to part 21 using wooden dowels (T), add camlocks (B) and turn camlocks clockwise to tighten, as shown.

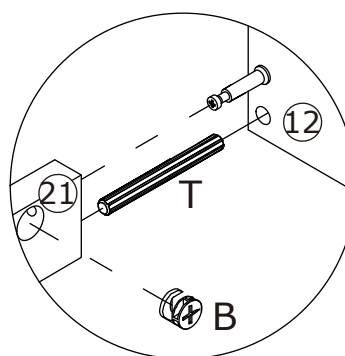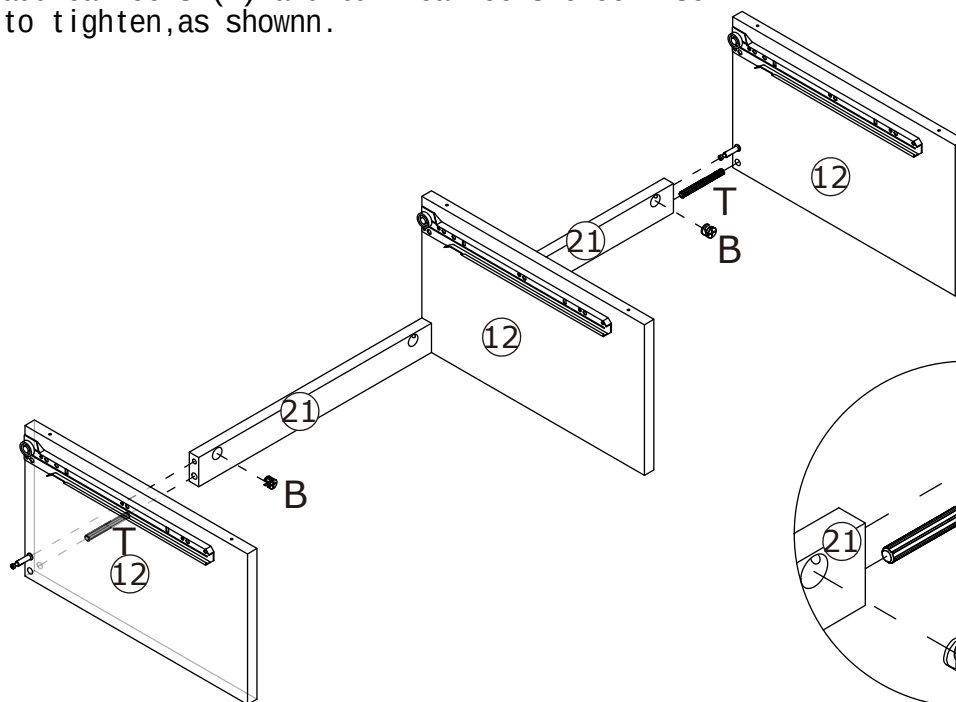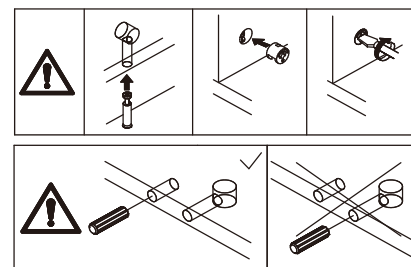




4

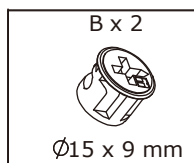 

   
Attach part 21 to part 12 using wooden dowels (T), add camlocks (B) and turn camlocks clockwise to tighten, as shown.

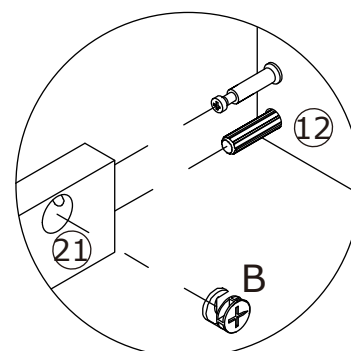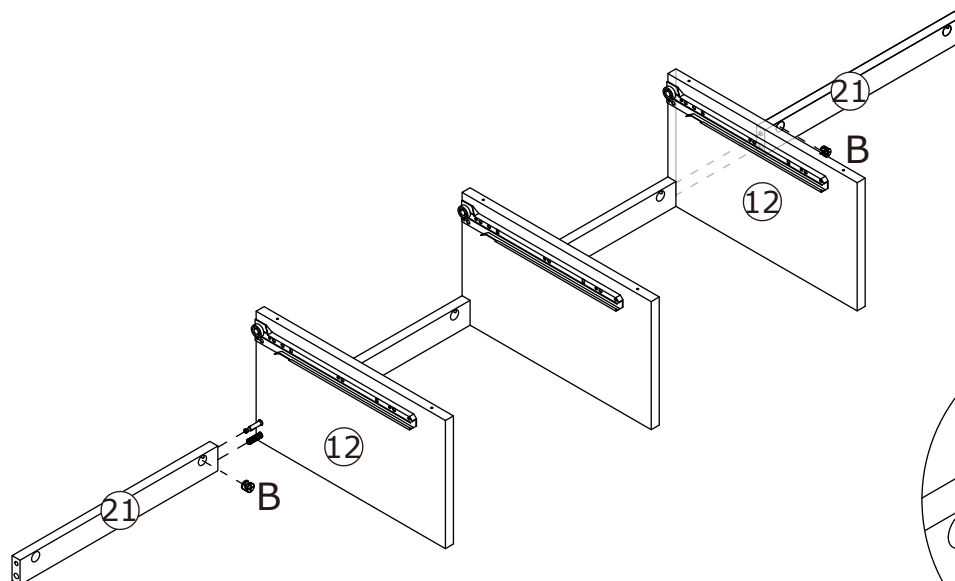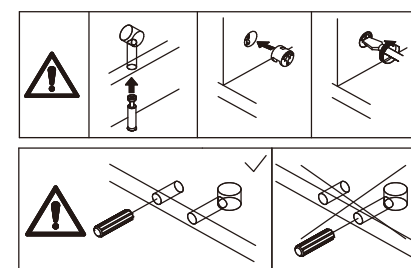

5

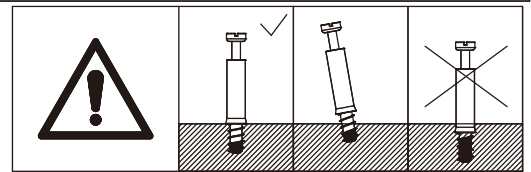  
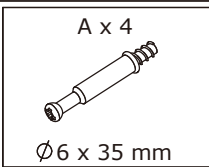 


 Insert quickfit screws (A) in part 22, as shown.

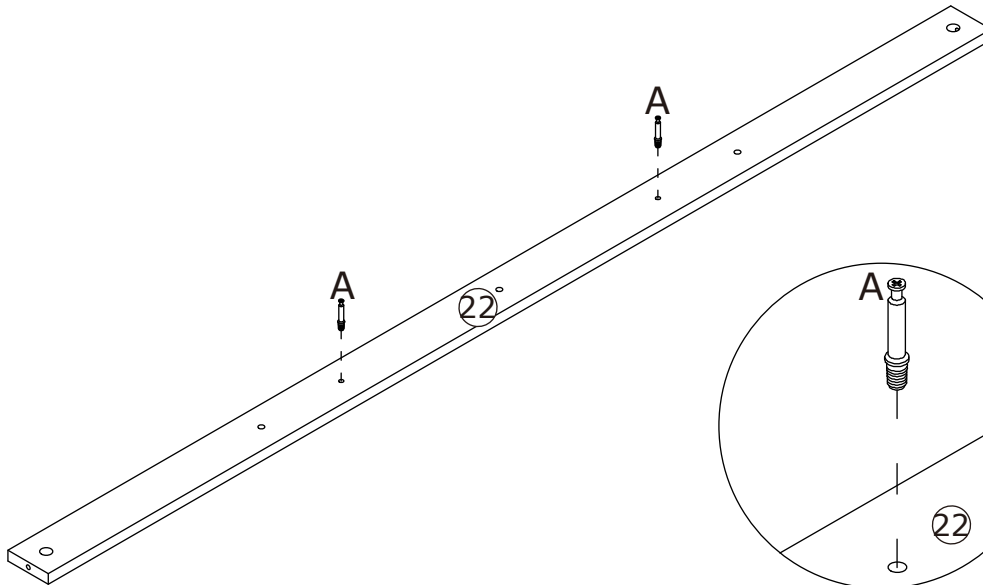


x2

  
6

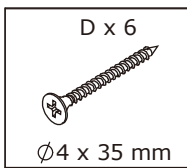




 
Fix part 22 to part 12 using crews (D), as shown.

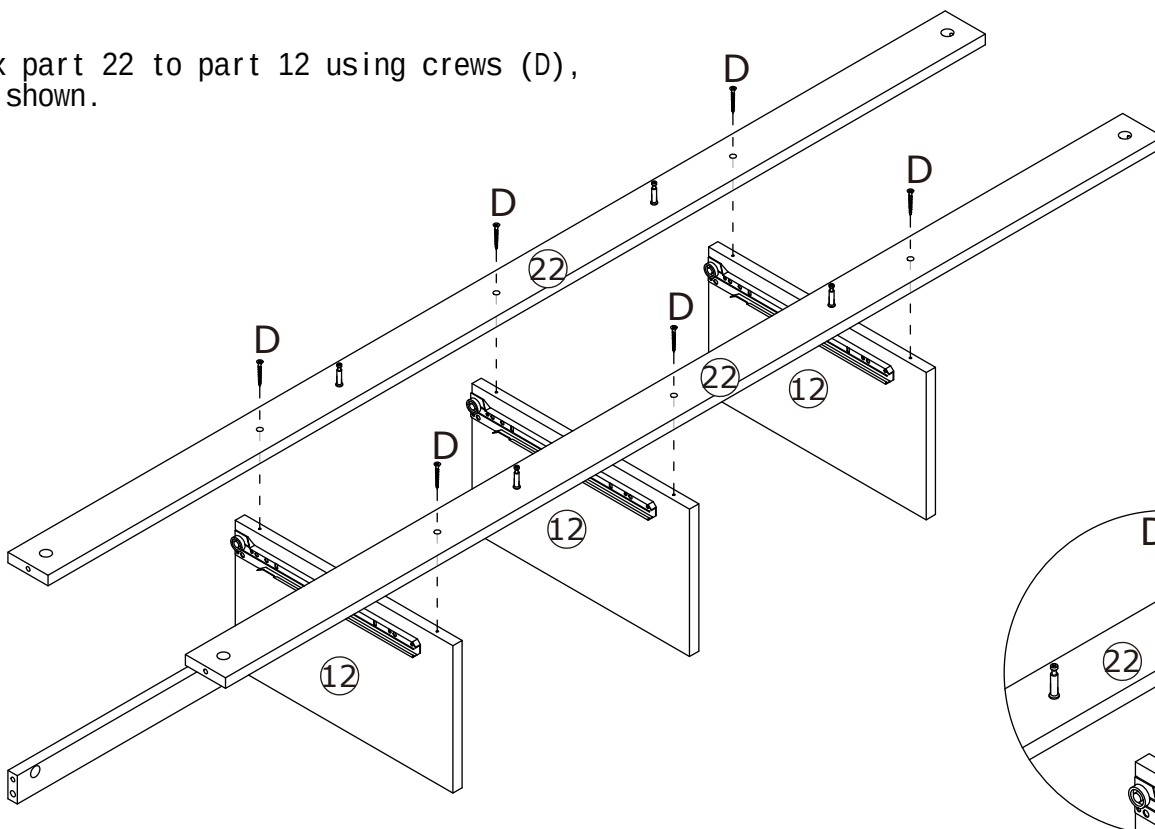

7

 E x 12  Ø3 x 12 mm	CL x 4  300mm	A x 4  Ø6 x 35 mm	I x 4  Ø4 x 14 mm	Q x 2 	
---	--	--	--	--	---

    Insert quickfit screws (A) in part 23.
Fix left outer drawer runner (CL) to part 23 using screws (E), as shown.

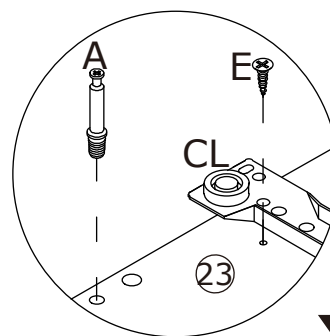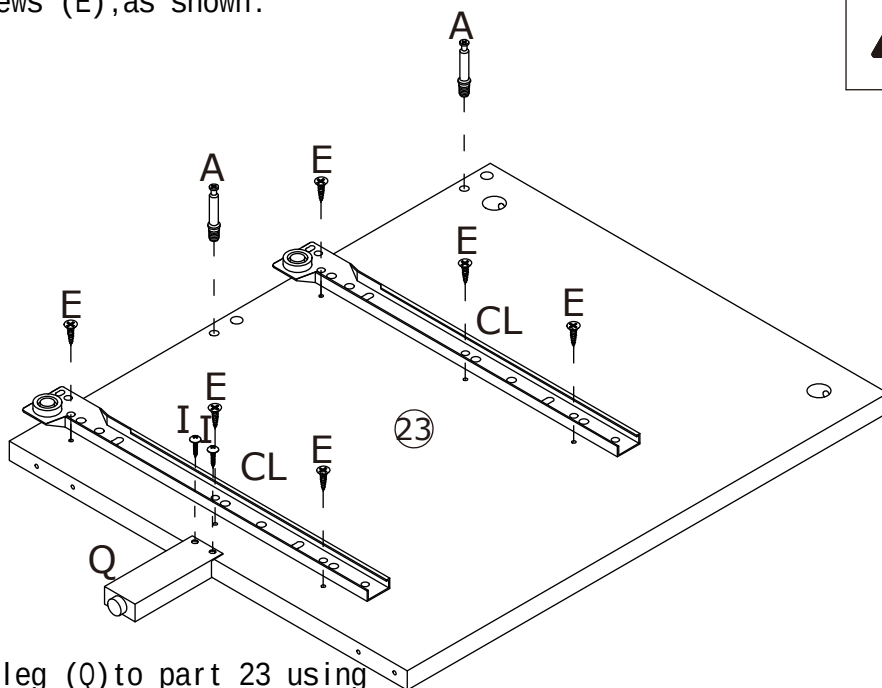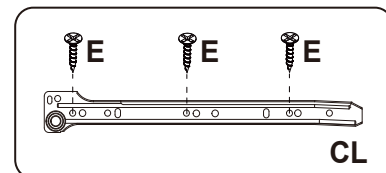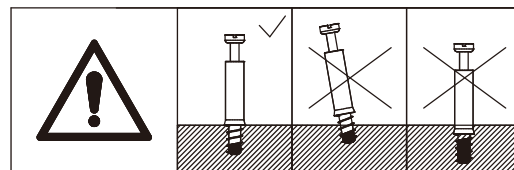





x2

Fix leg (Q) to part 23 using screws (I), as shown.

8



CR x 4  300mm	A x 4  Ø6 x 35 mm	E x 12  Ø3 x 12 mm	I x 2  Ø4 x 14 mm	
--	--	---	---	---

    Turn to another side of part 23.
Insert quickfit screws (A) in part 23.
Fix right outer drawer runner (CR) to part 23 using screws (E), as shown.

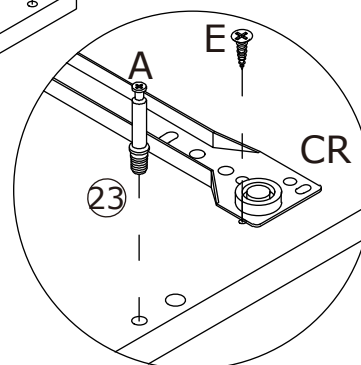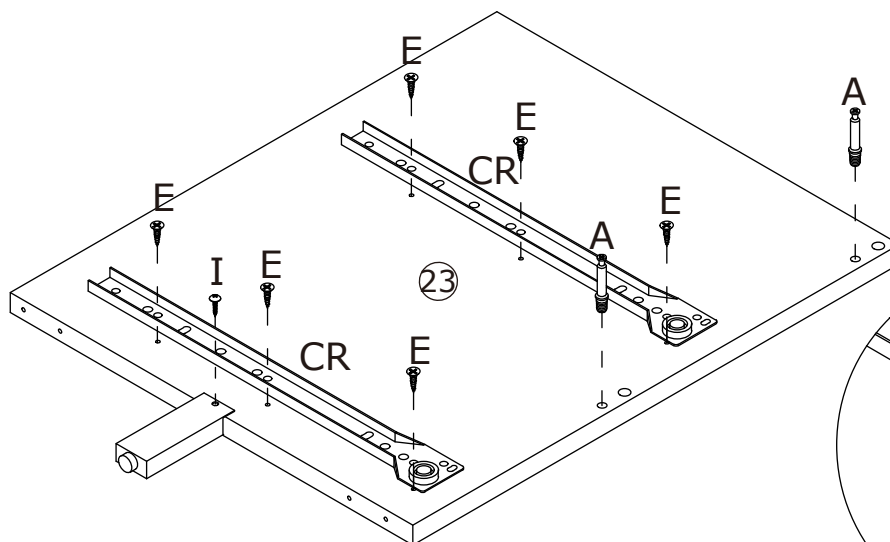
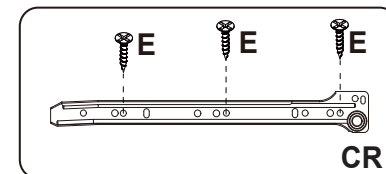
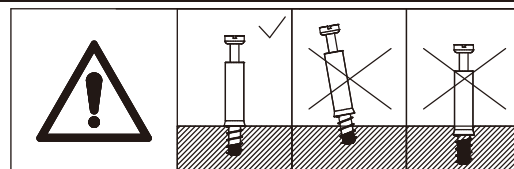


x2

 
 
9

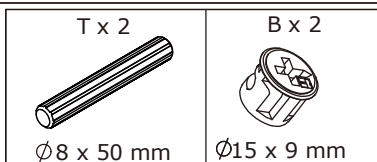

 
 
 
Attach part 8 to part 23 using wooden dowels (T), add camlocks (B) and turn camlocks clockwise to tighten, as shown.

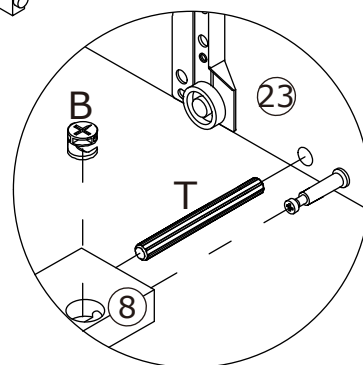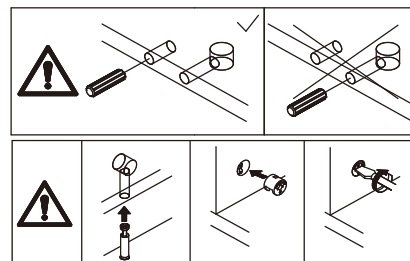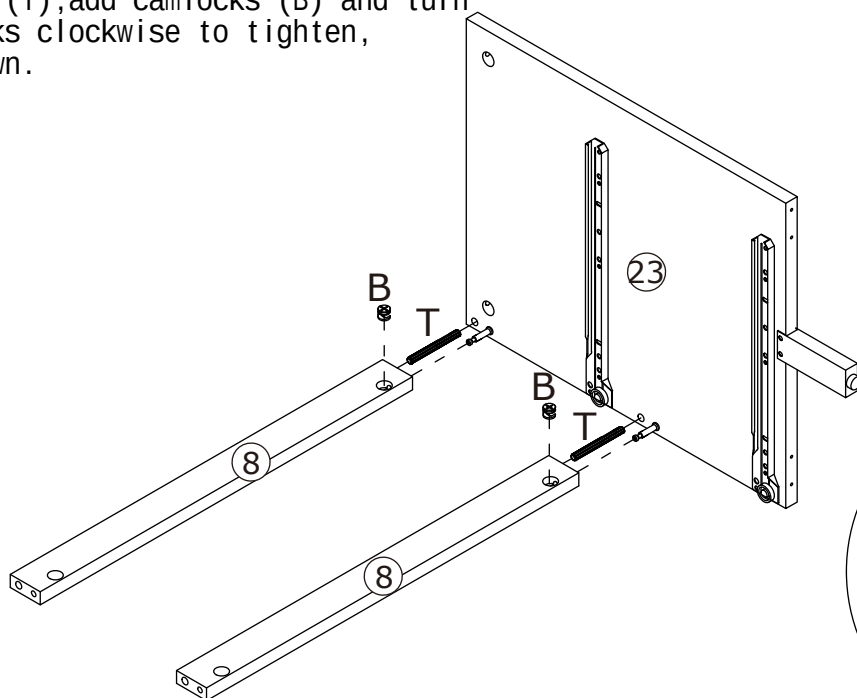

10

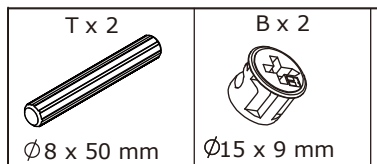  

   
Attach another part 23 to part 8 using wooden dowels (T), add camlocks (B) and turn camlocks clockwise to tighten, as shown.

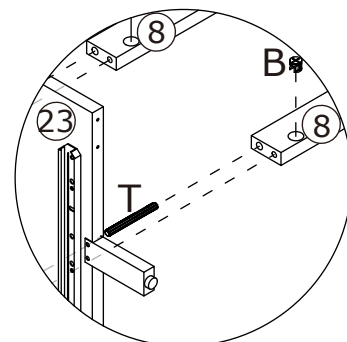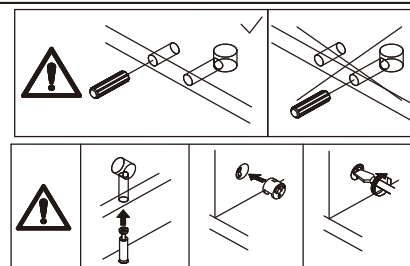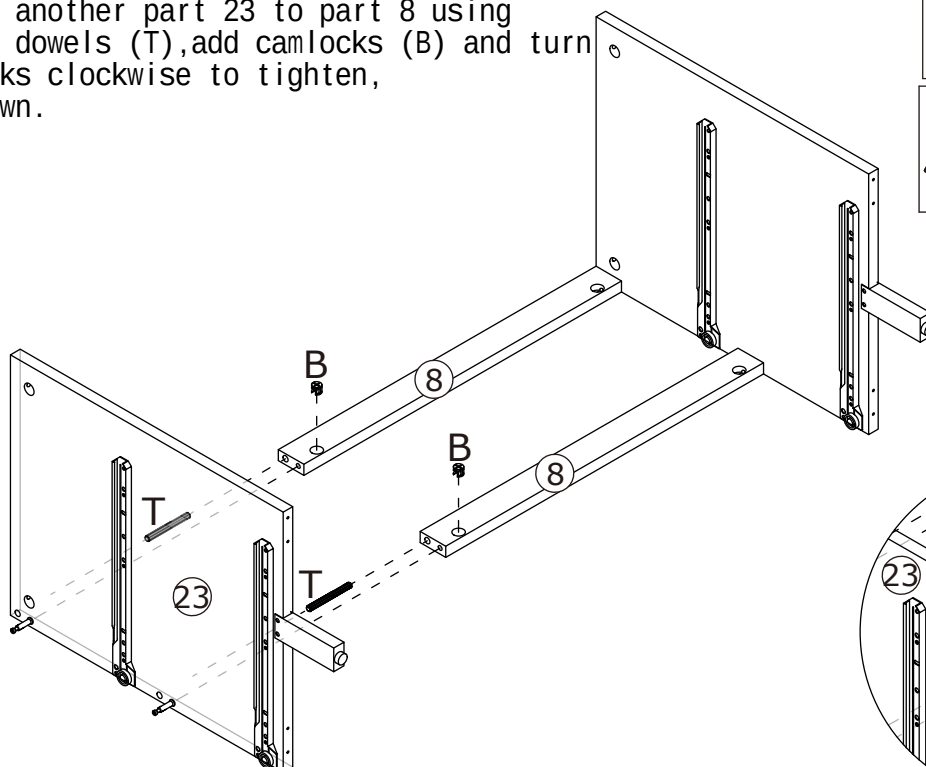


11

D x 12

  Ø4 x 35 mm



 Fix part 9 & 10 & 11 to part 23 using screws (D), as shown.

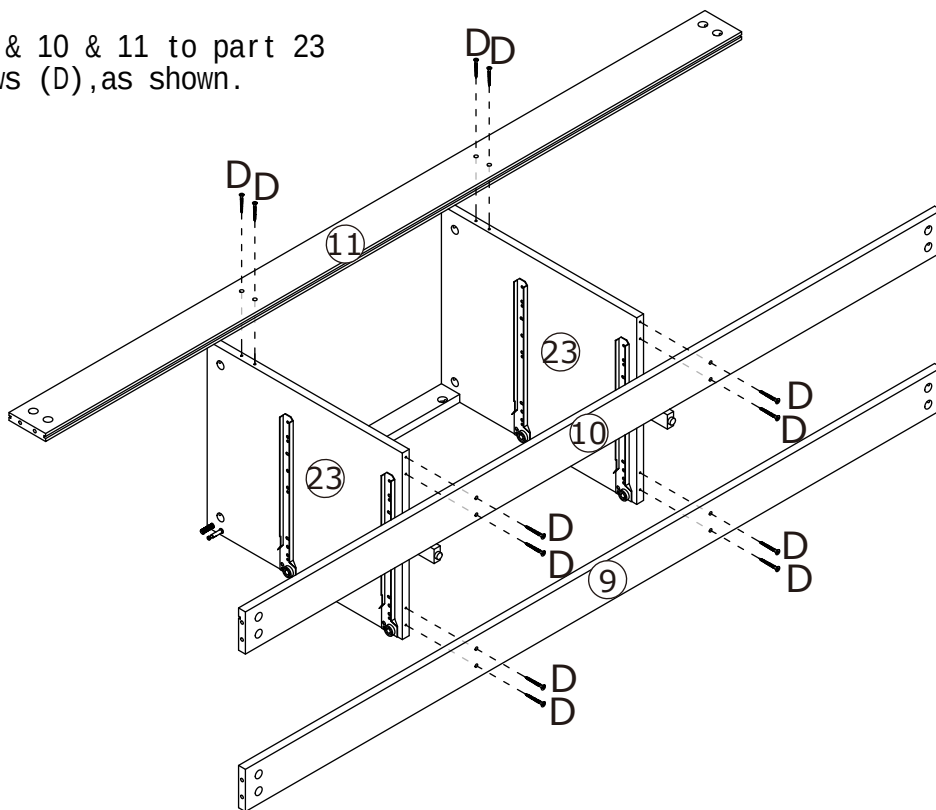




12

B x 4

 Ø15 x 9 mm



   Attach part 8 to part 23 using wooden dowels (T), add camlocks (B) and turn camlocks clockwise to tighten, as shown.

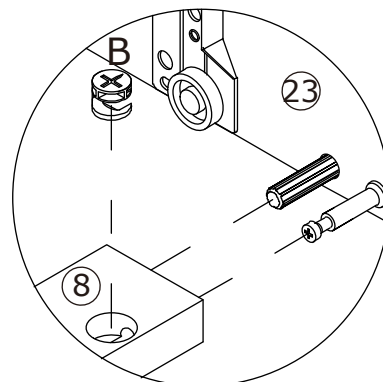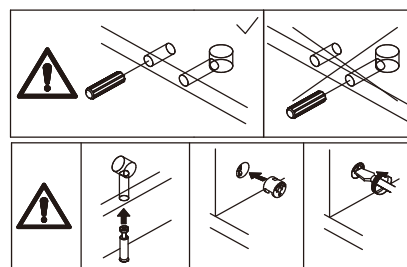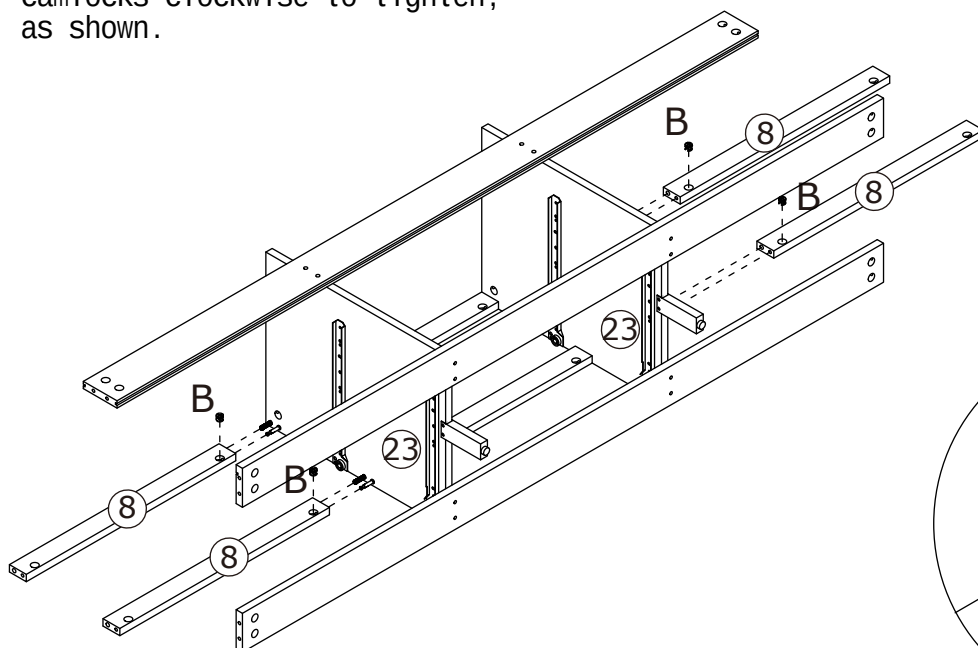


13



B x 4



 Ø15 x 9 mm



  Attach part 22 to part 23, add camlocks (B) and turn camlocks clockwise to tighten, as shown.

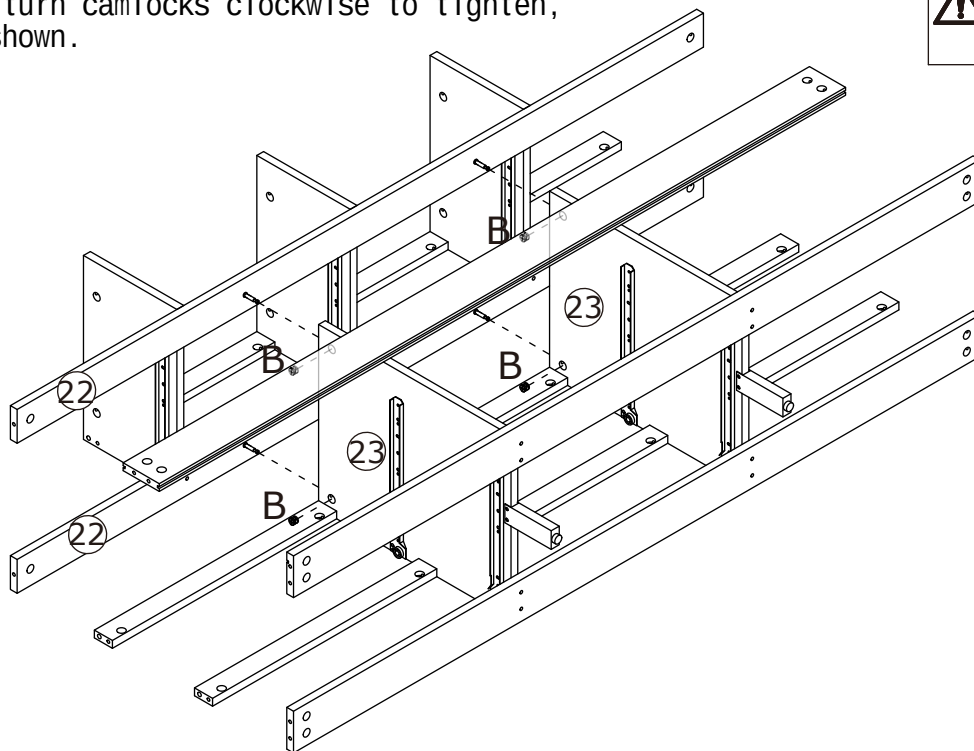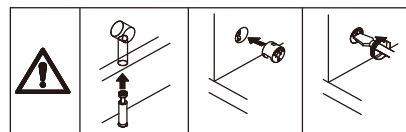

14

A x 6



Ø6 x 35 mm

 
 
F x 2



Ø25 x 3 mm



Insert quickfit screws (A) in part 2 & 4. Attach part (F) to the bottom of part 2 & 4, as shown.

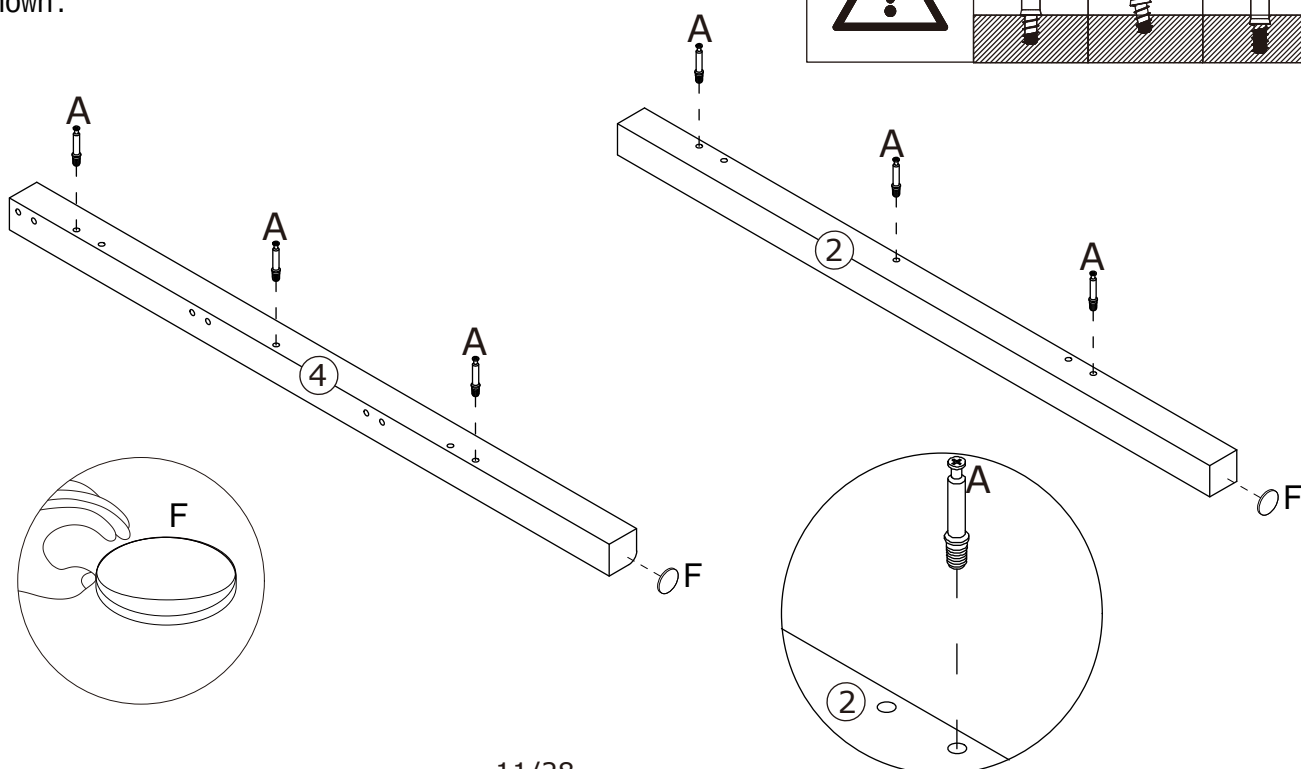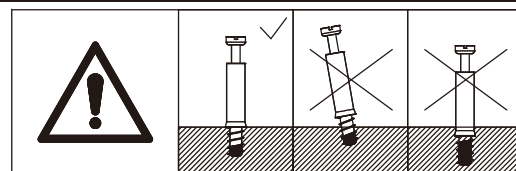

15

C x 4

 


Ø8 x 30 mm



B x 6



Ø15 x 9 mm




  Attach part 2 & 4 to part 3 using wooden dowels (C), add camlocks (B) and turn camlocks clockwise to tighten, as shown.

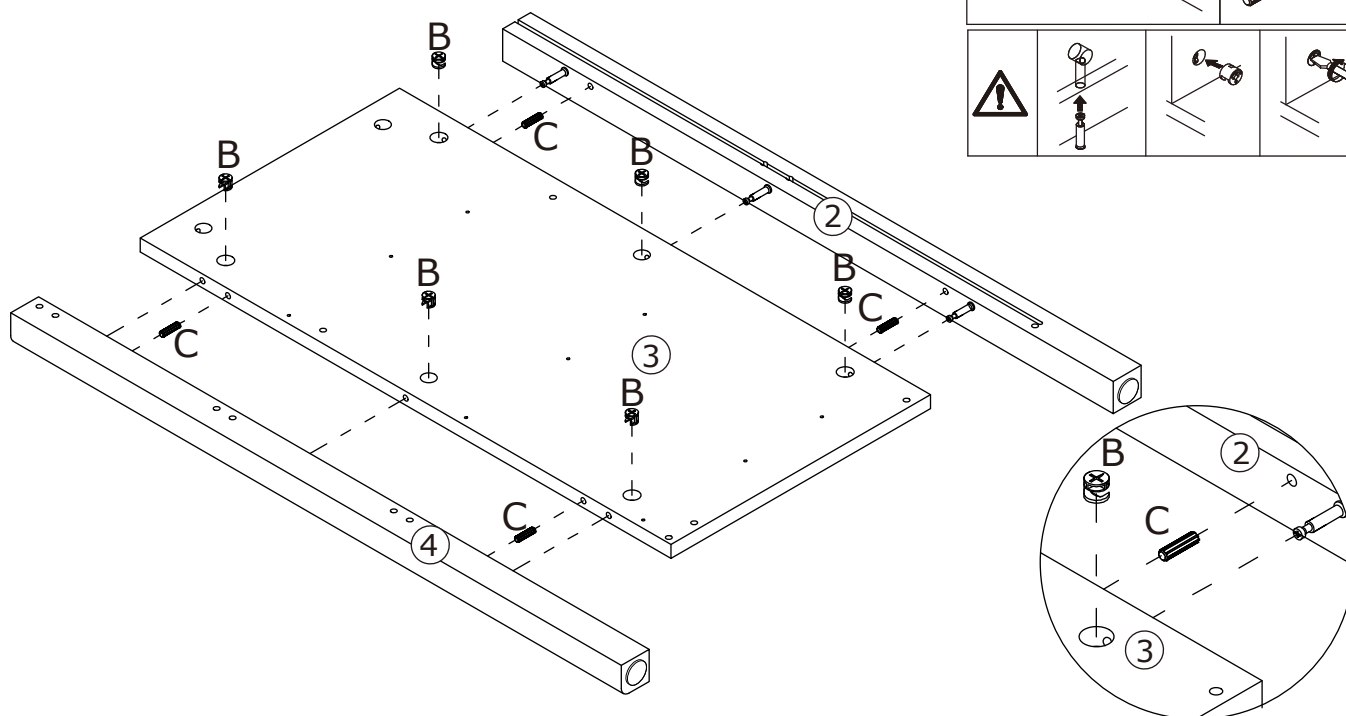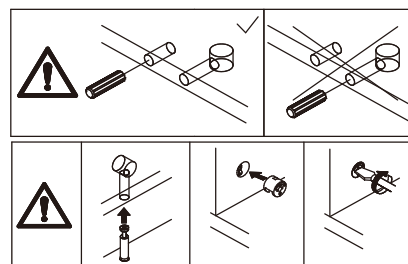

16

 A x 6



Ø6 x 35 mm

 
 
F x 2



Ø25 x 3 mm



Insert quickfit screws (A) in part 5 & 7. Attach part (F) to the bottom of part 5 & 7, as shown.

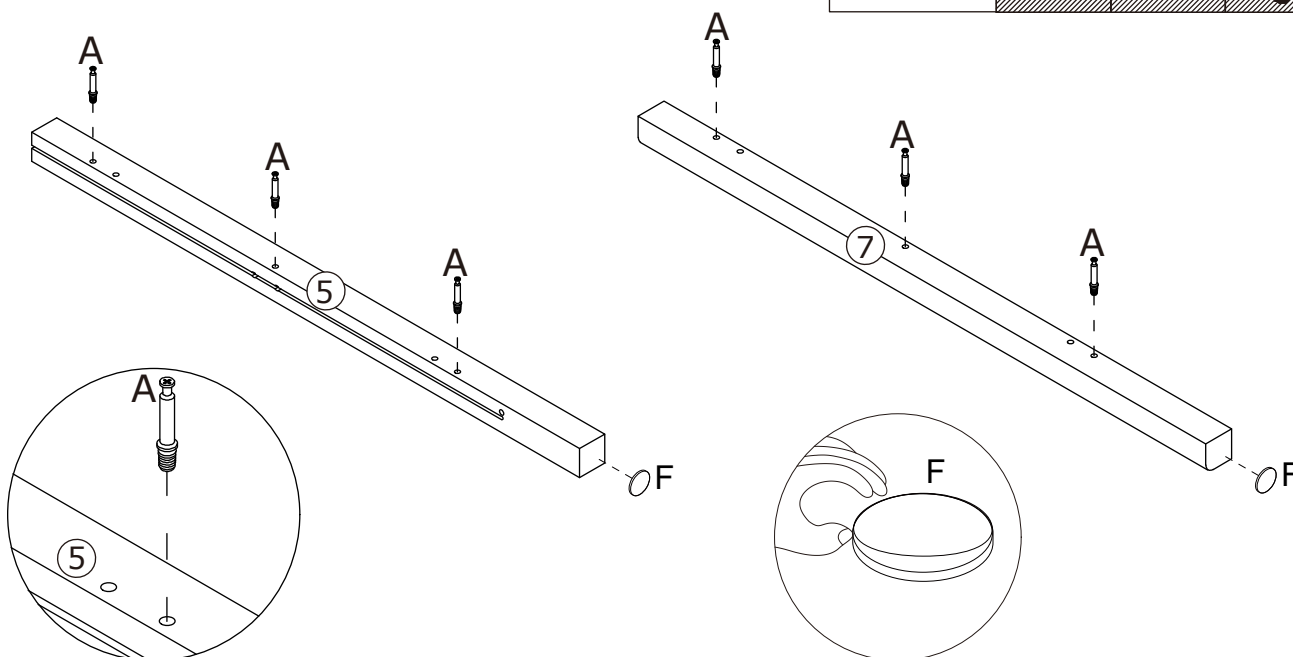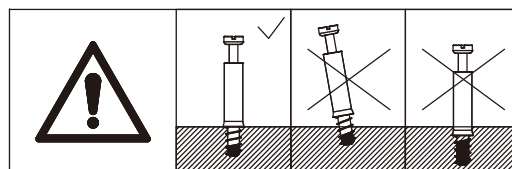

17

C x 4



 
 
Ø8 x 30 mm

B x 6



Ø15 x 9 mm

Attach part 5 & 6 to part 6 using wooden dowels (C), add camlocks (B) and turn camlocks clockwise to tighten, as shown.

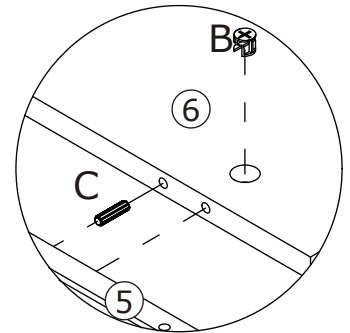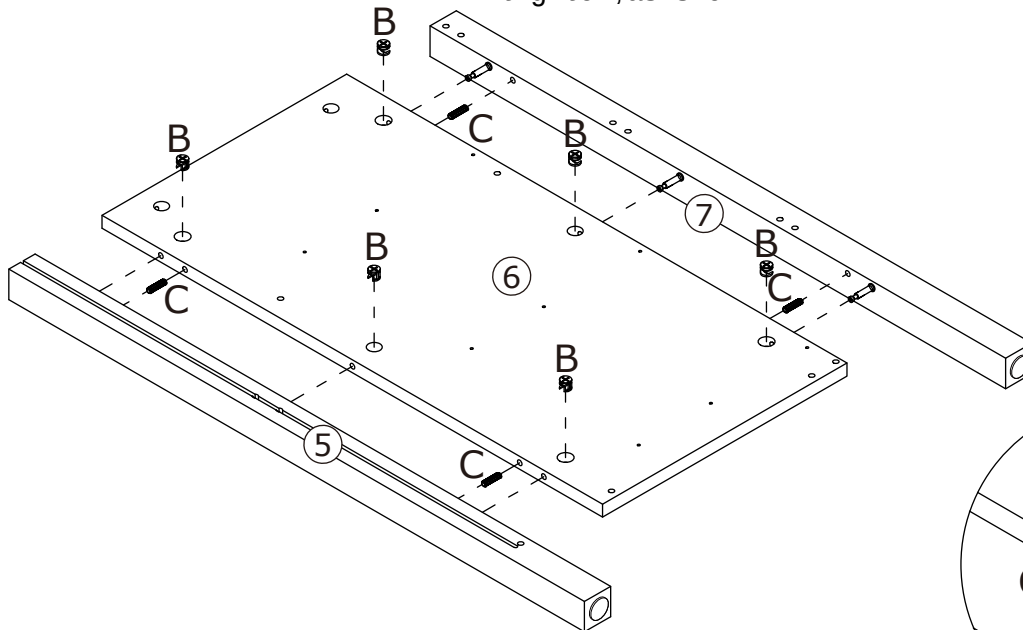

18

E x 9



Ø3 x 12 mm

CL x 3

 


300mm





A x 11




Ø6 x 35 mm







    Insert quickfit screws (A) in part 3.
Fix left outer drawer runner (CL) to part 3 using screws (E), as shown.

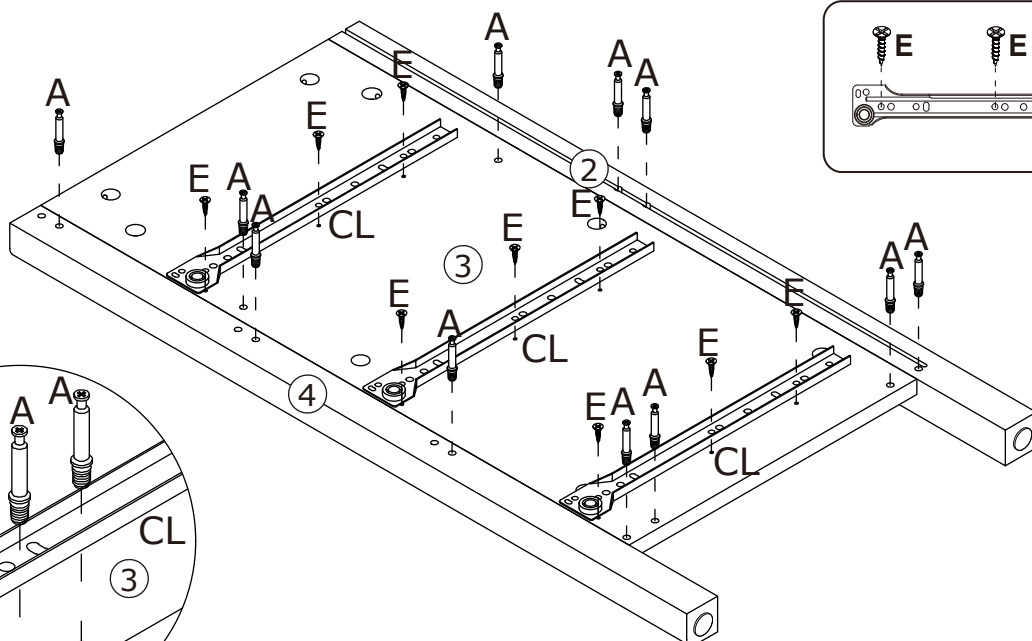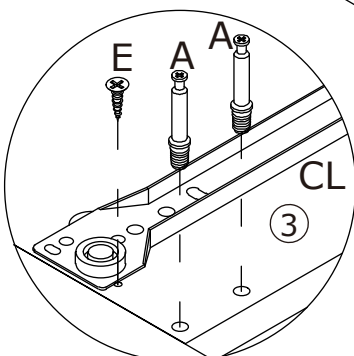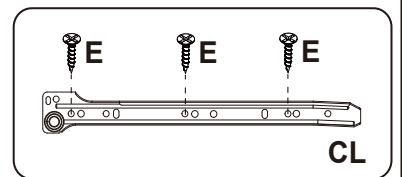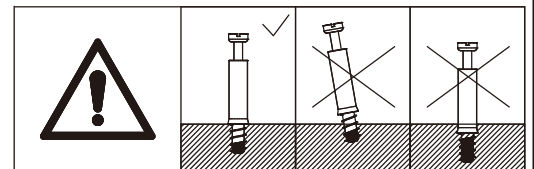


19

 CR x 3  300mm	A x 11  Ø6 x 35 mm	E x 9  Ø3 x 12 mm	
--	---	--	---

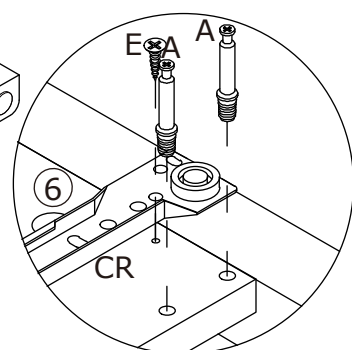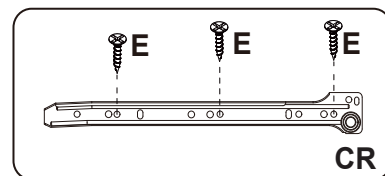  
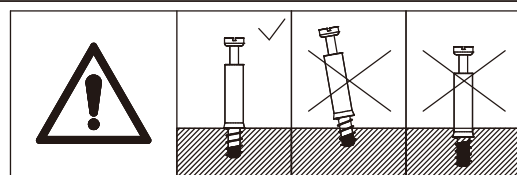 
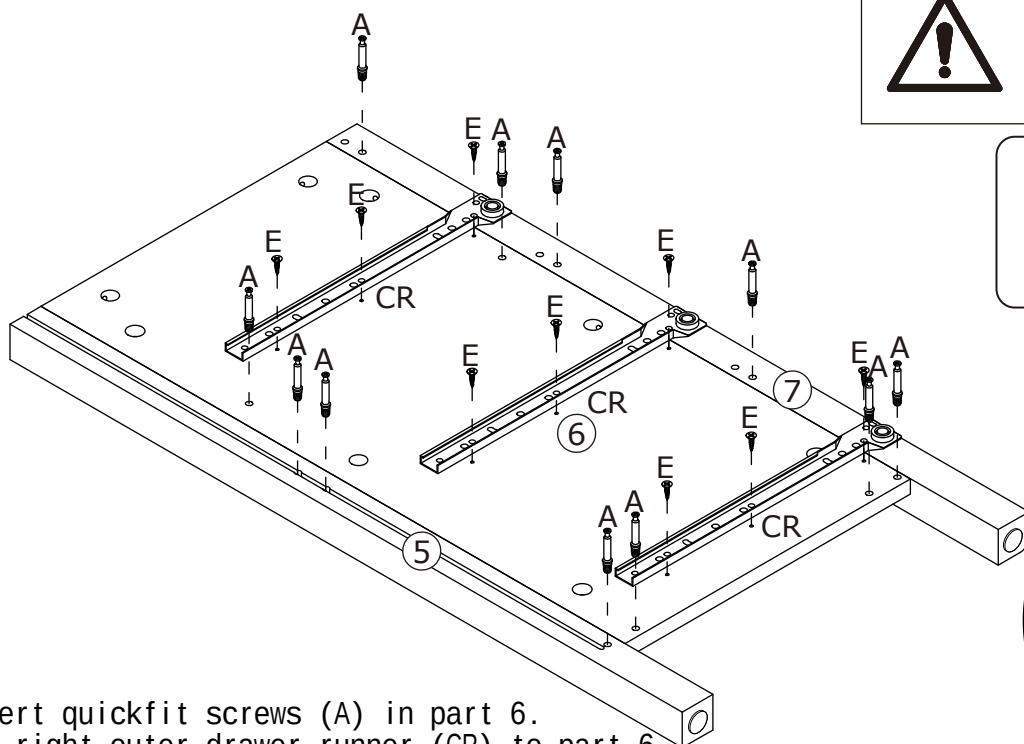 


Insert quickfit screws (A) in part 6.
Fix right outer drawer runner (CR) to part 6
using screws (E), as shown.

 20


C x 3  Ø8 x 30 mm	B x 11  Ø15 x 9 mm	
--	---	---

   Attach part 5 & 6 & 7 to assembled units using wooden
dowels (C) ,add camlocks (B) and turn camlocks clockwise
to tighten, as shown.

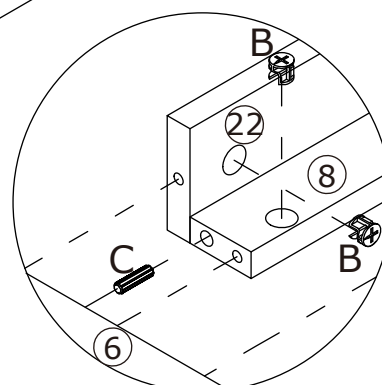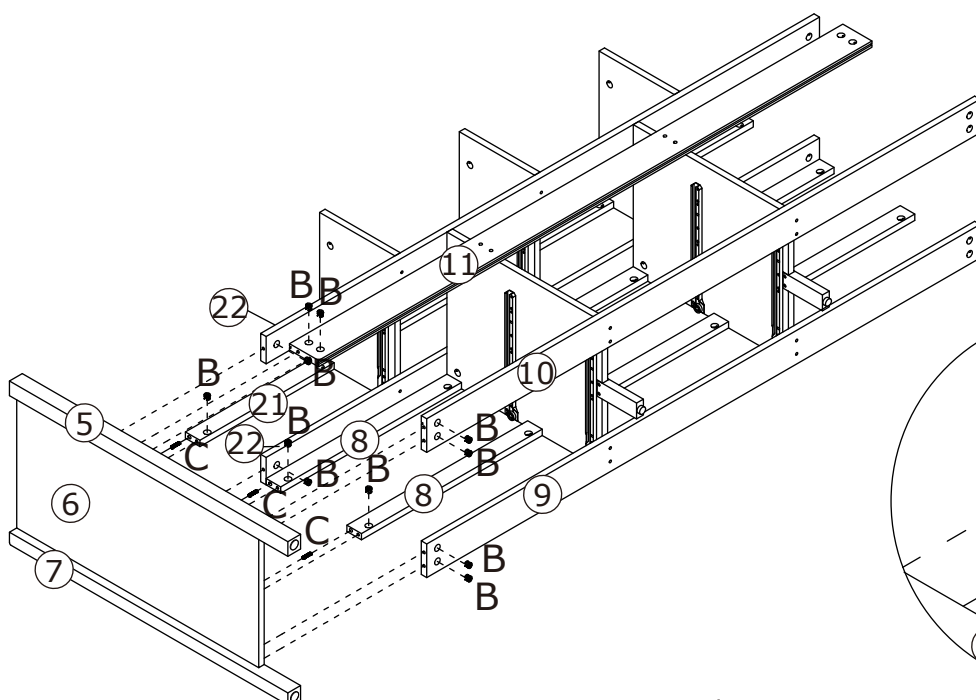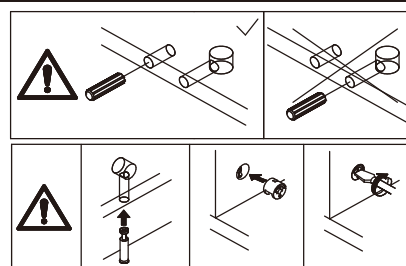

21

 Slide part 13 into available slots, as shown.

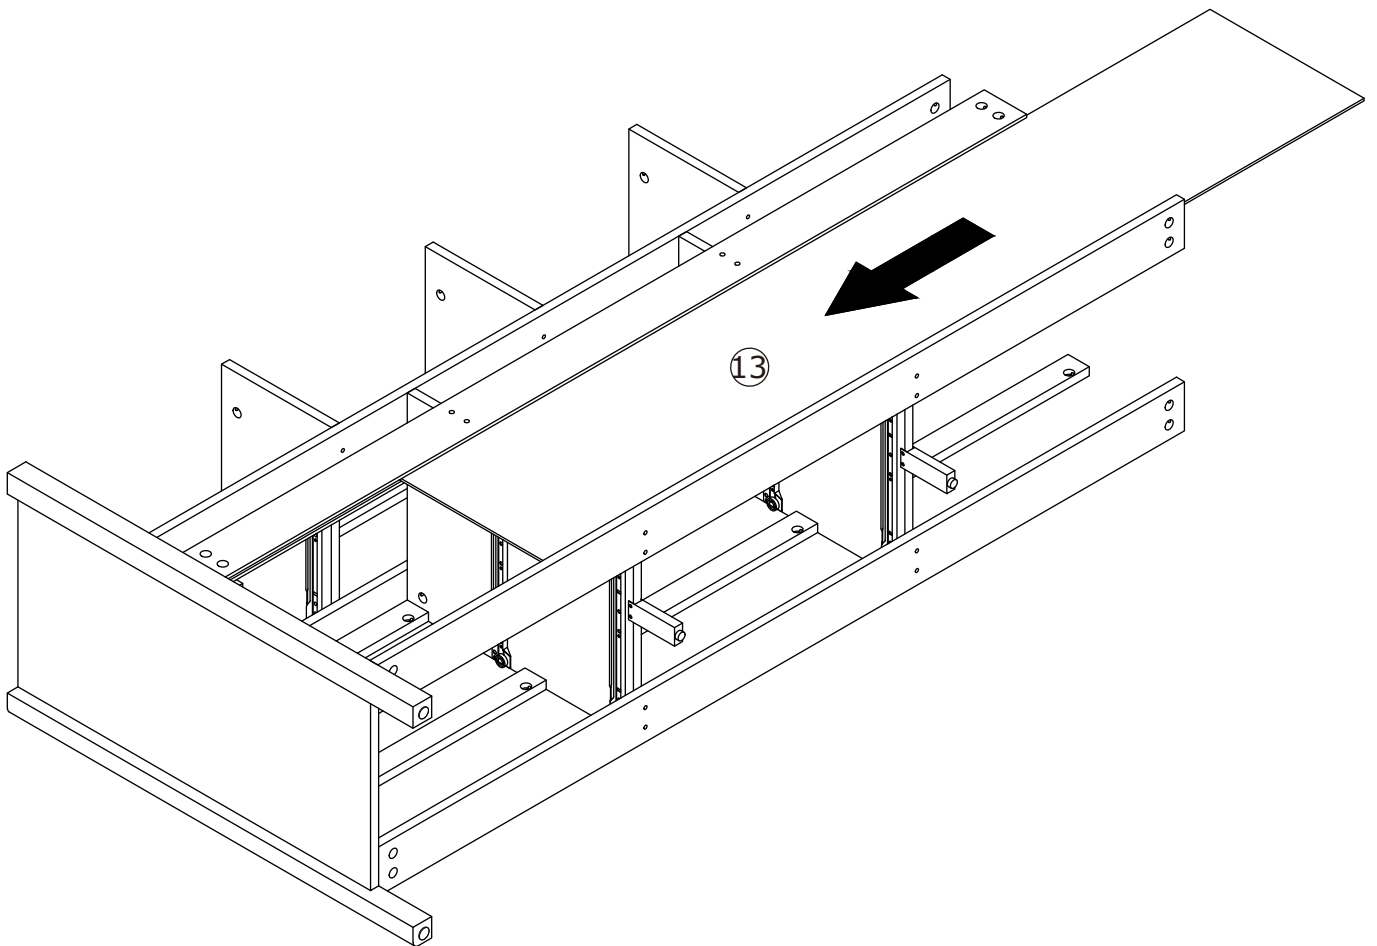

22

C x 3

 


Ø8 x 30 mm


B x 11



Ø15 x 9 mm

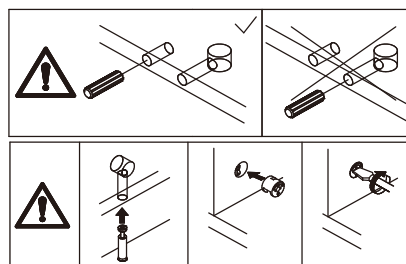


 Attach part 2 & 3 & 4 to assembled units using wooden dowels (C), add camlocks (B) and turn camlocks clockwise to tighten, as shown.

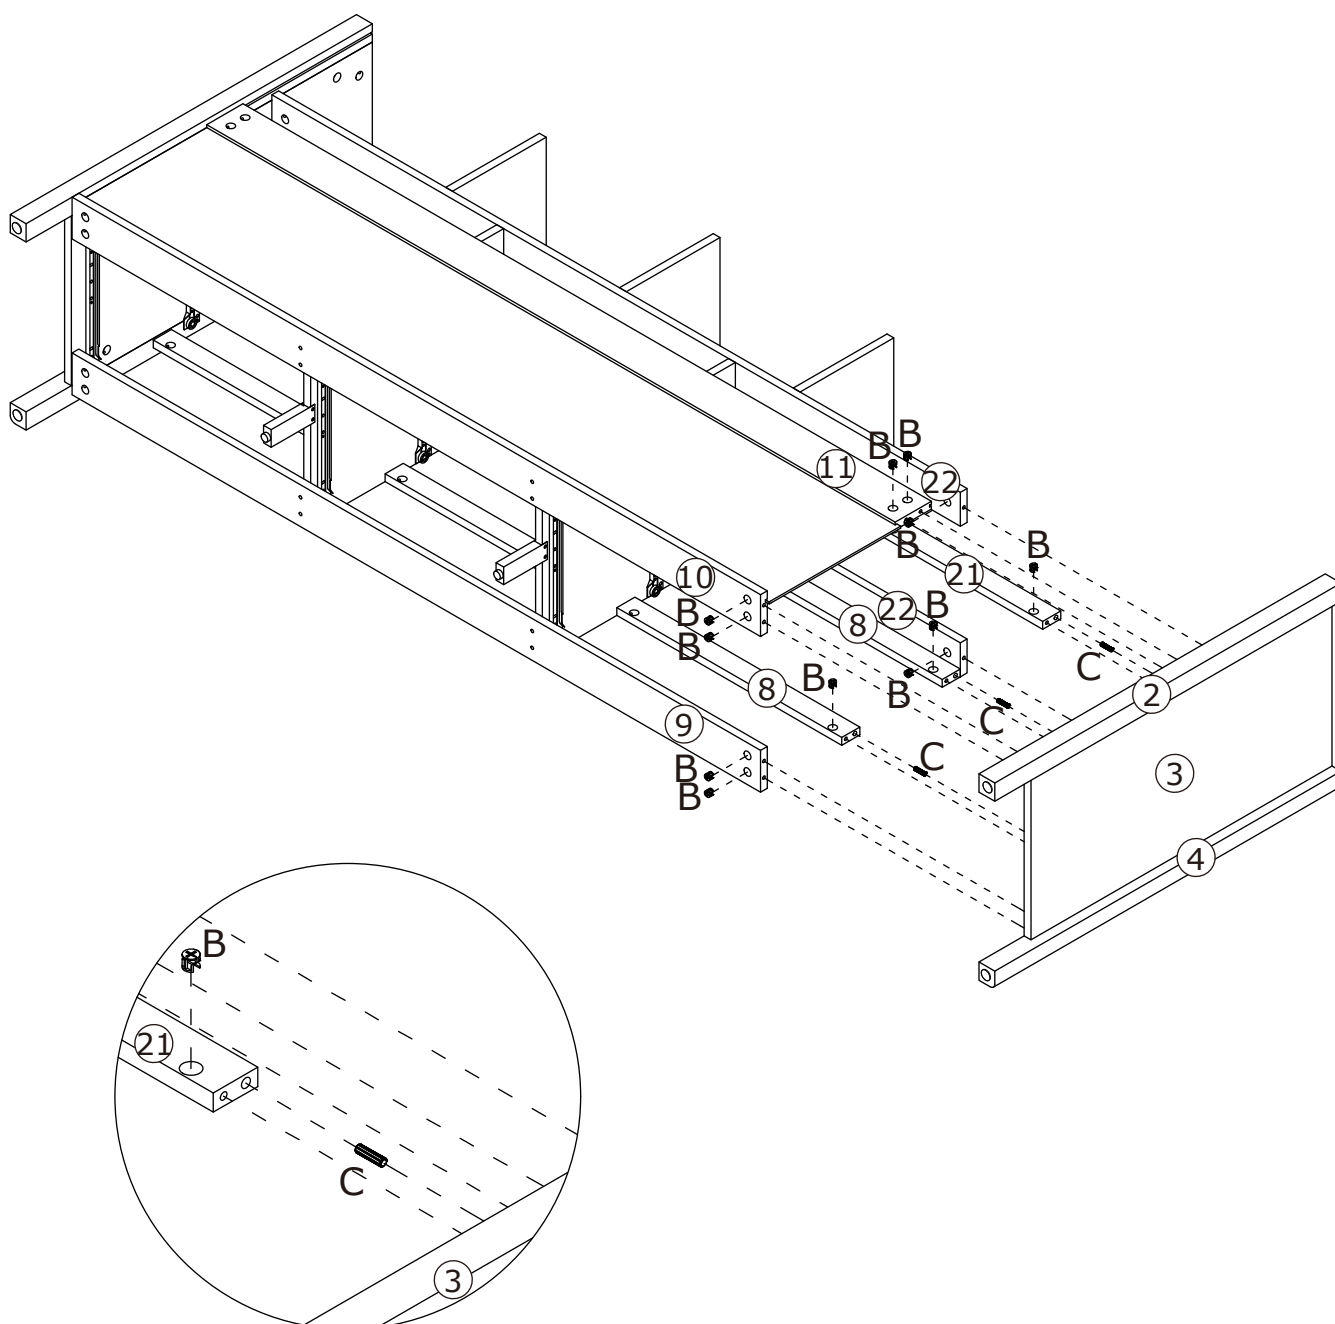

23

 Slide part 24 into available slots,as shown.

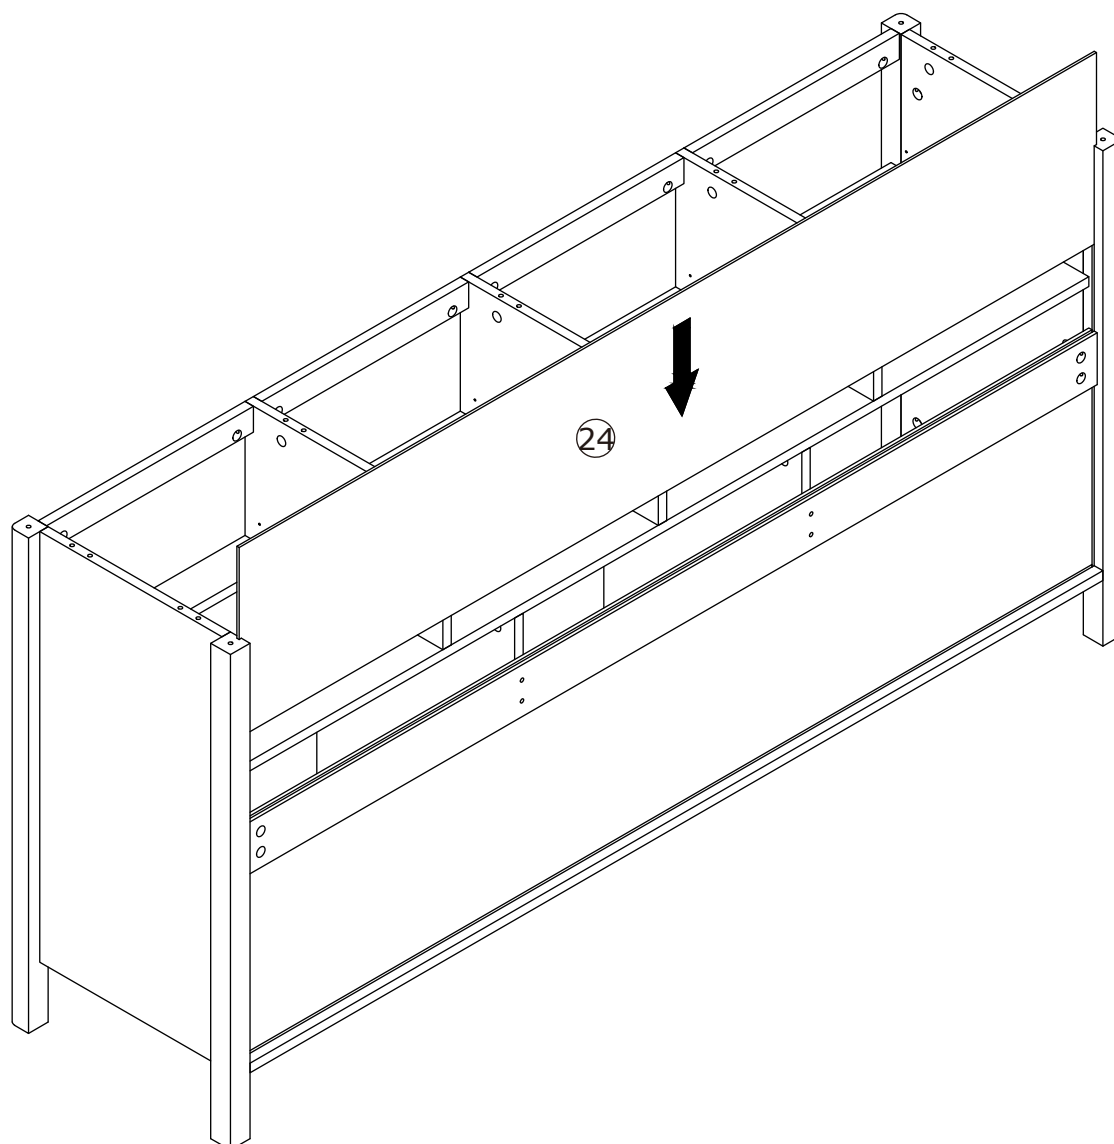

24

A x 10

 
 
 
 
 
 
 Ø6 x 35 mm

C x 14



 Ø8 x 30 mm

B x 10

 Ø15 x 9 mm

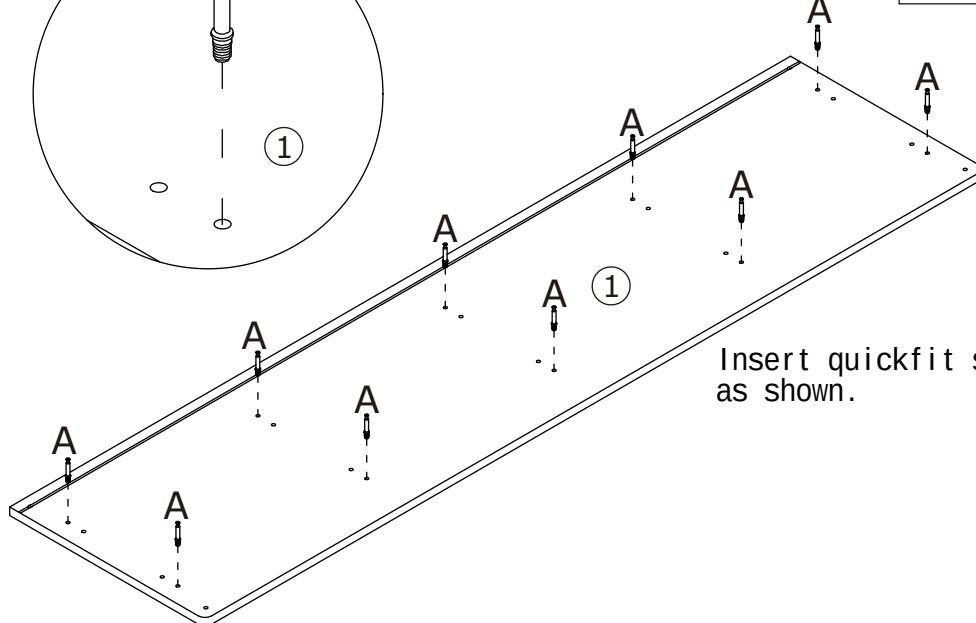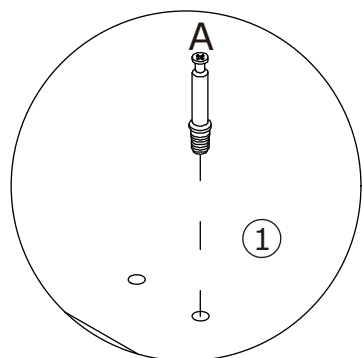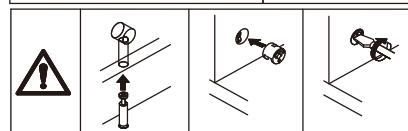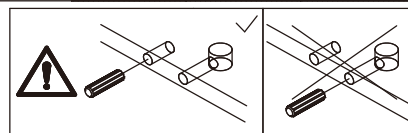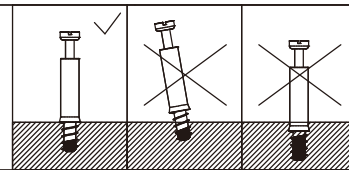

  Insert quickfit screws (A) in part 1, as shown.

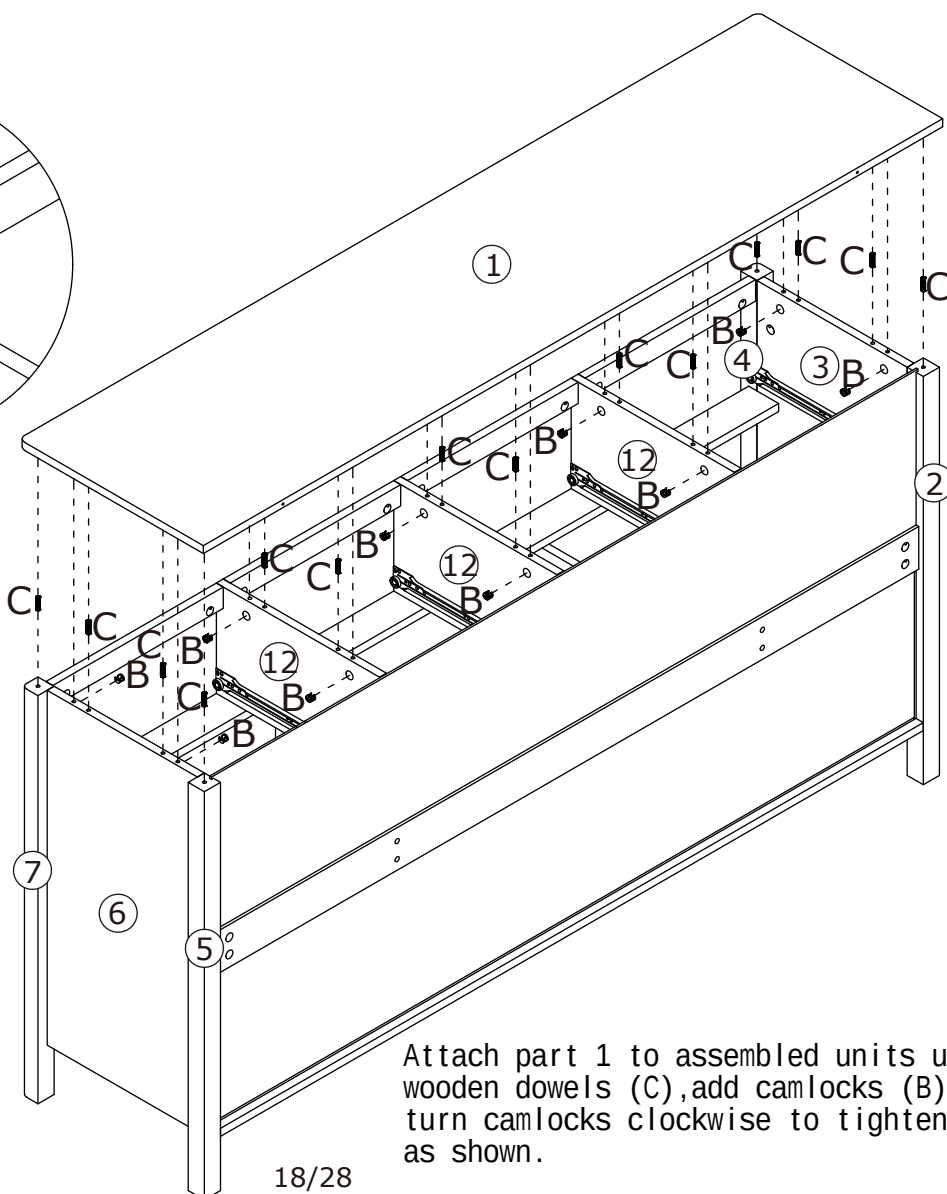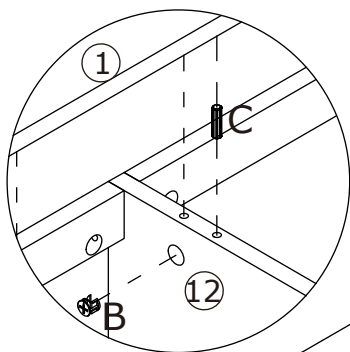



Attach part 1 to assembled units using wooden dowels (C), add camlocks (B) and turn camlocks clockwise to tighten, as shown.

25




G x 12

  Ø3 x 14 mm



H x 12

 

     
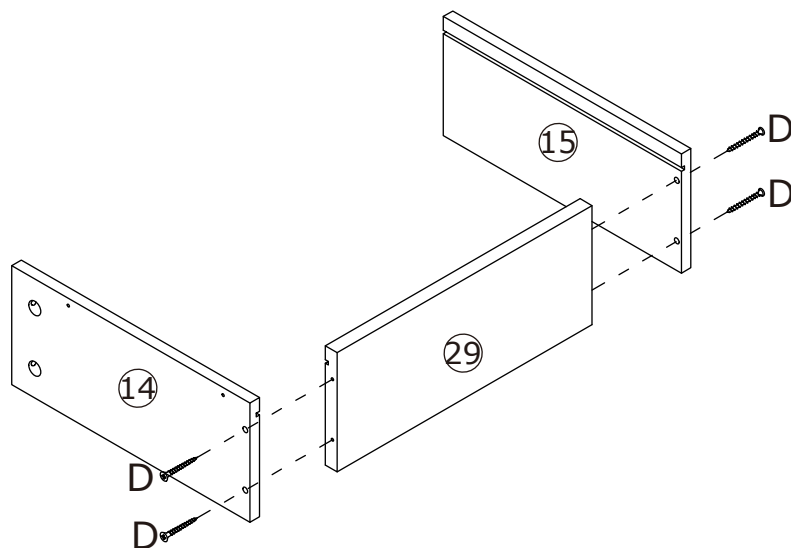 
Fix back conors (H) to back panel using screws (G),as shown.

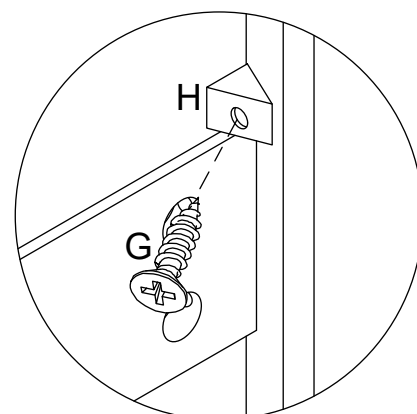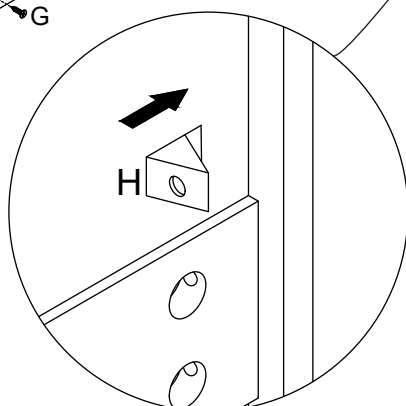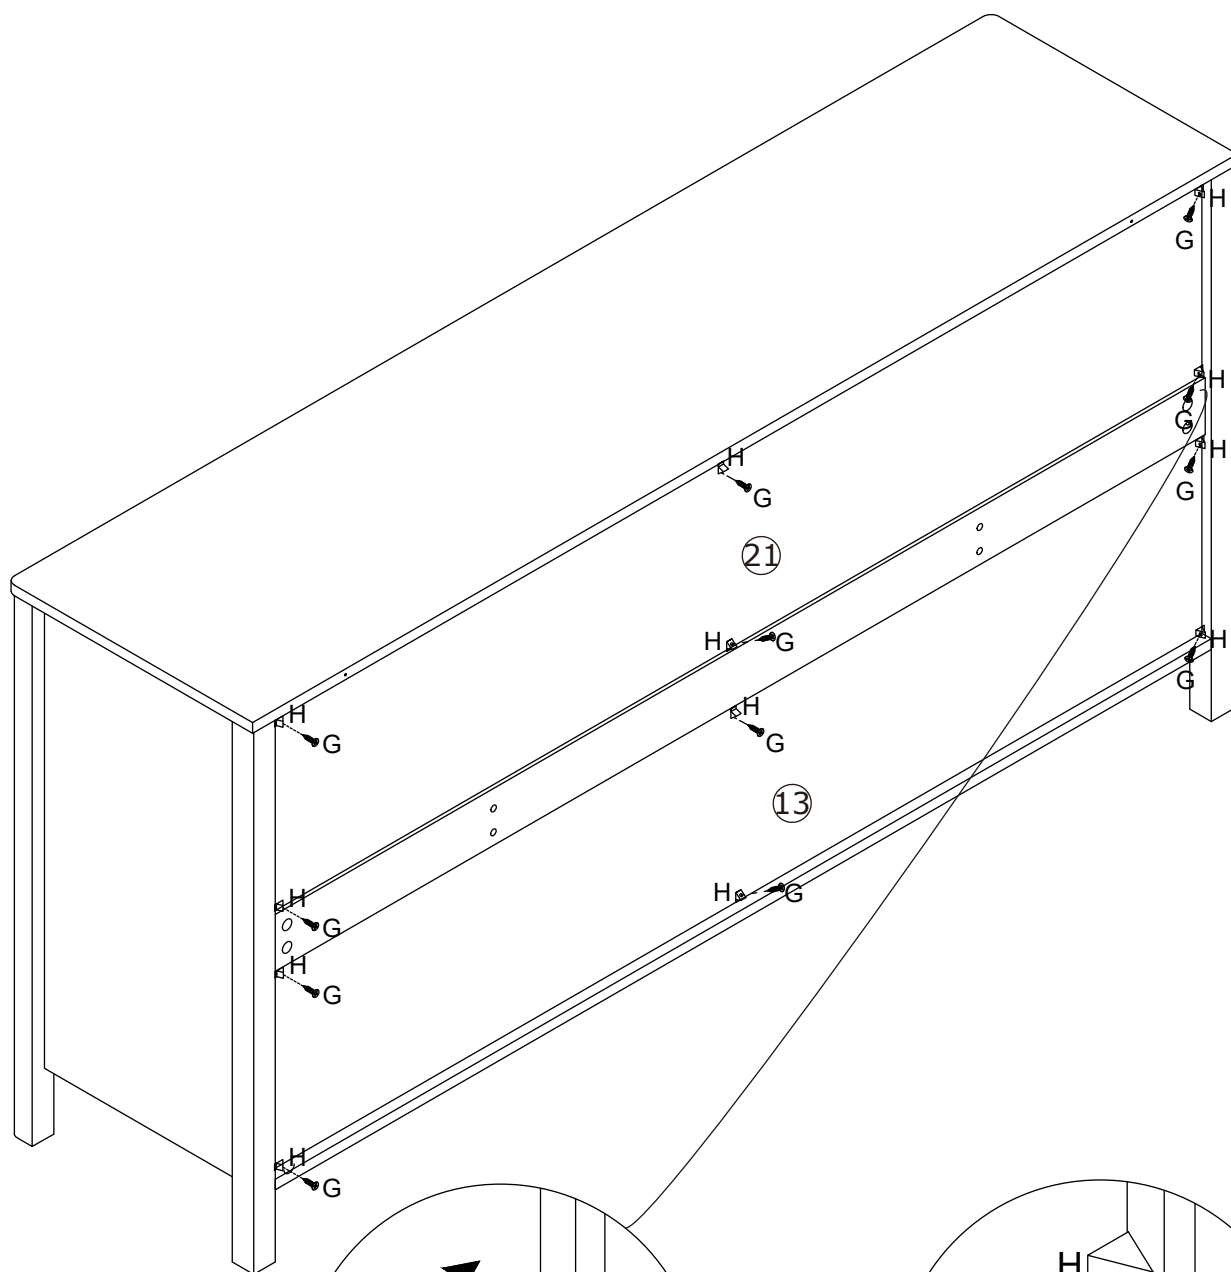

26

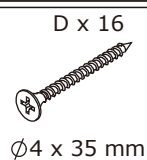

 
Fix part 14 & 15 to part 29 using screws (D),
as shown.



x4

27




Slide part 28 into available slots
of part 14 & 15, as shown.

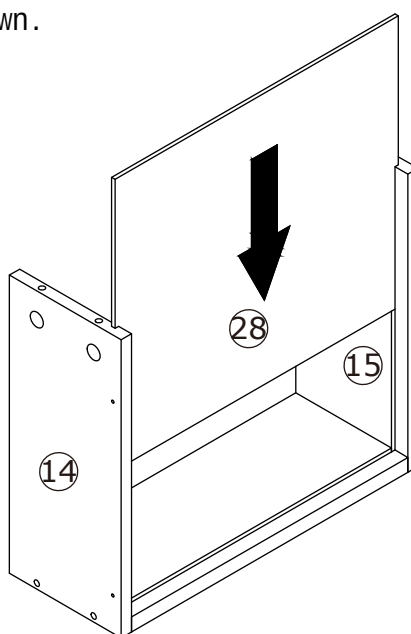

28

A x 8

    Ø6 x 35 mm

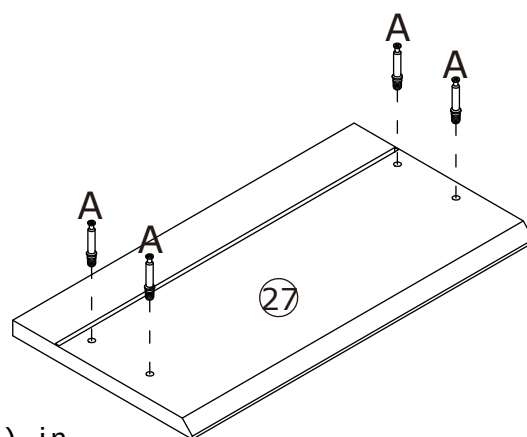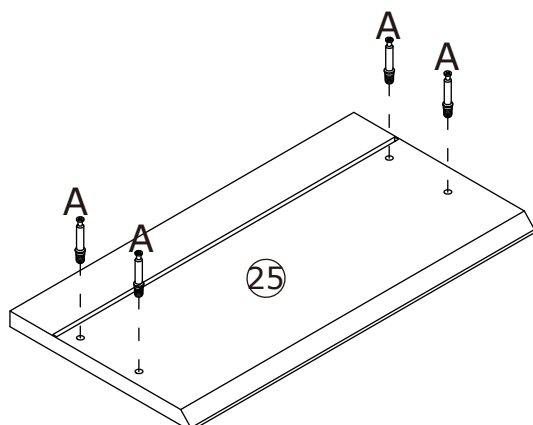
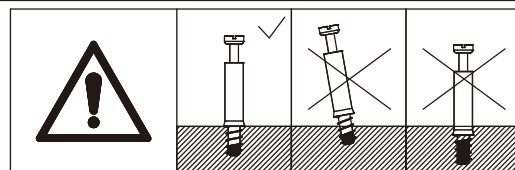


Insert quickfit screws (A) in
 part 25 & 26 & 27, as shown.

29

A x 8

   Ø6 x 35 mm

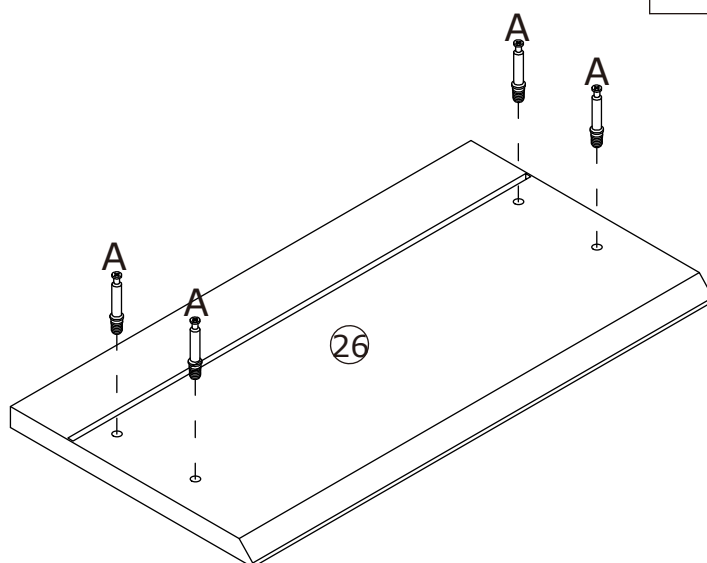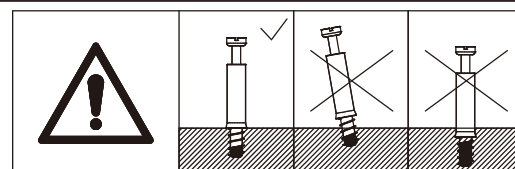





x2

30

B x 8



    Ø15 x 9 mm

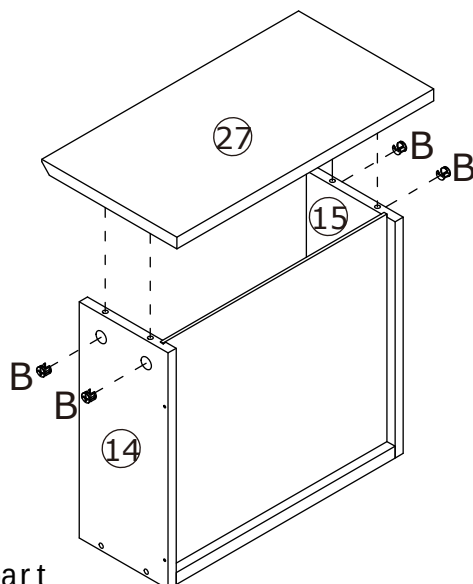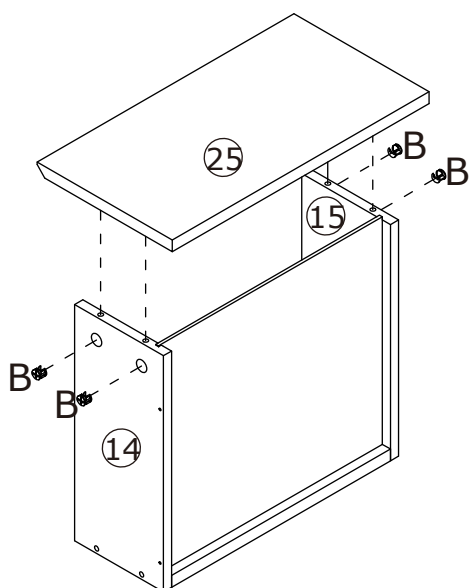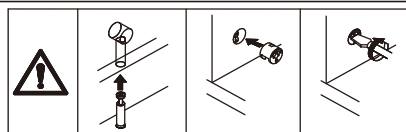



Attach part 25 & 26 & 27 to part 14 & 15, add camlocks (B) and turn camlocks clockwise to tighten, as shown.

31

B x 8



  Ø15 x 9 mm

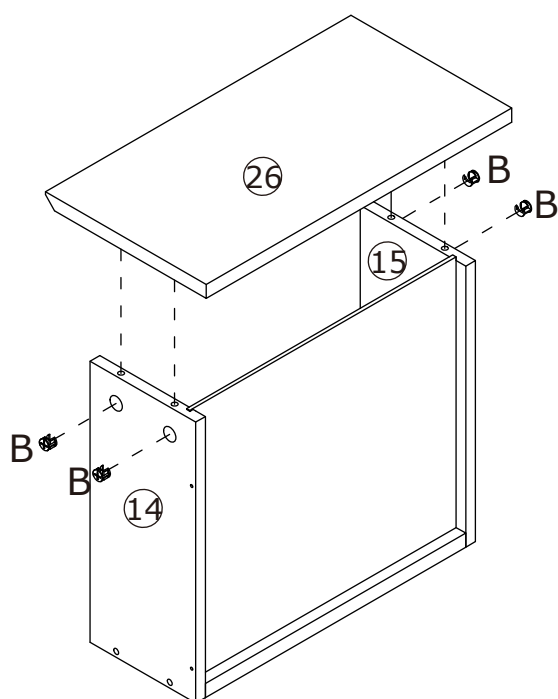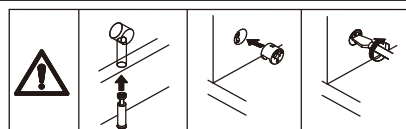

x2

 
32

E x 8



3 x 12 mm

DR x 2







300mm

DL x 2



    300mm

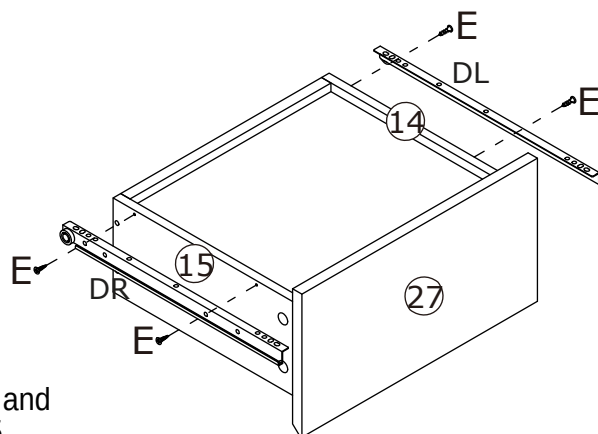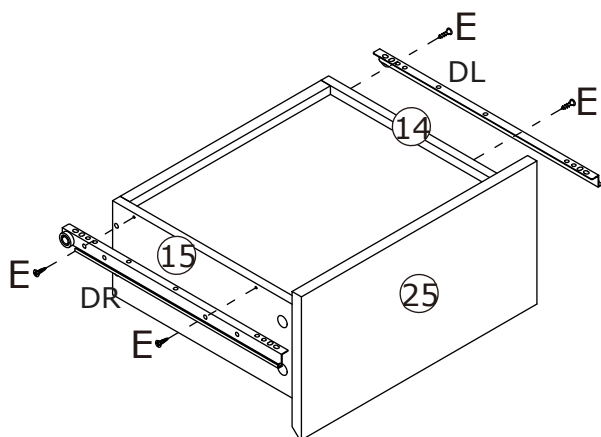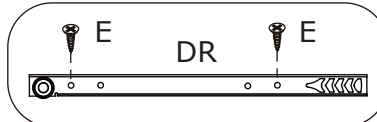

Fix left inner drawer runner (DL) to part 14 and fix right inner drawer runner (DR) to part 15 using screws (E), as shown.

 
33

E x 8



3 x 12 mm

DR x 2





300mm



DL x 2



  
300mm

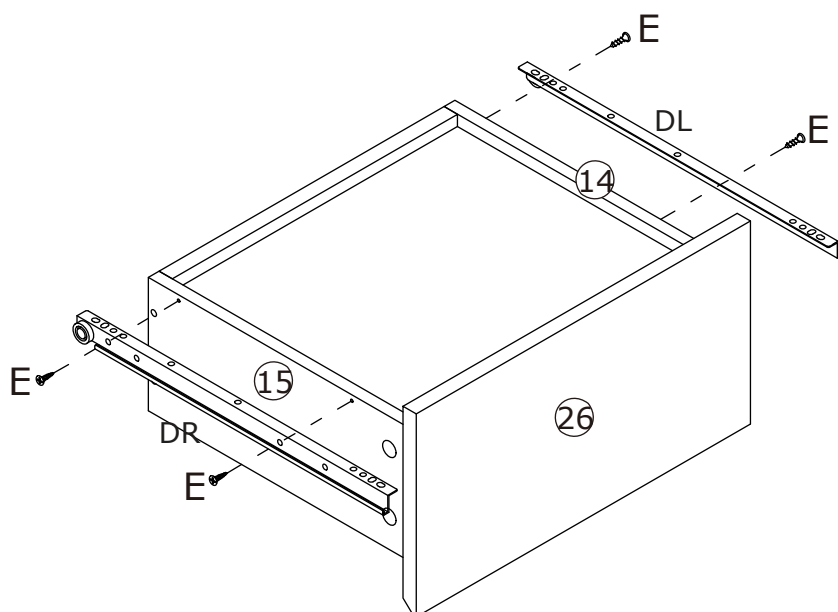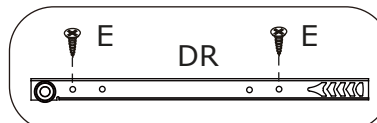

34

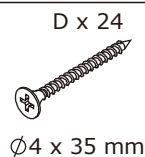  

 
Fix part 14 & 15 to part 17 using screws (D), as shown.

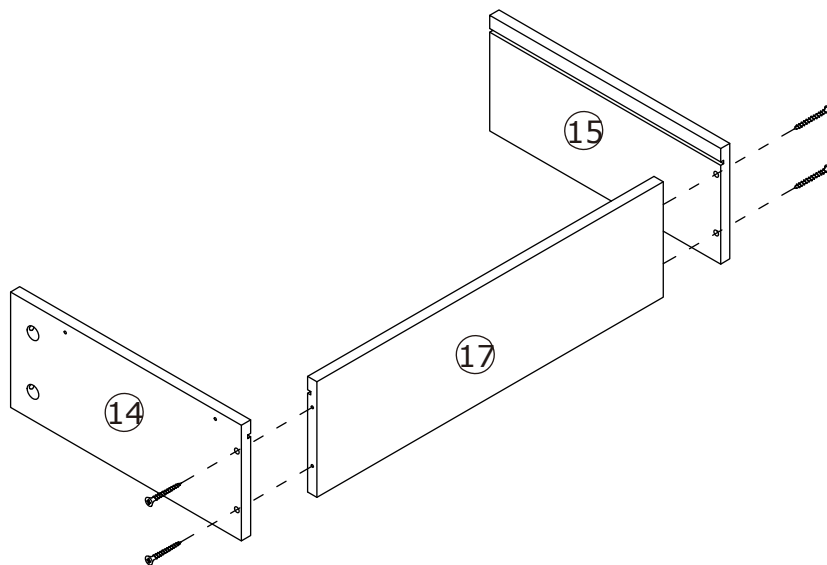

x6


35

 Slide part 16 into available slots of part 14 & 15, as shown.




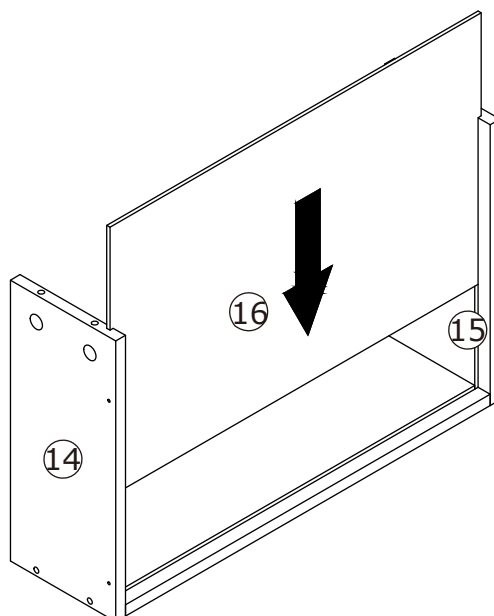


x6

 36






    Insert quickfit screws (A) in part 18 & 19 & 20, as shown.

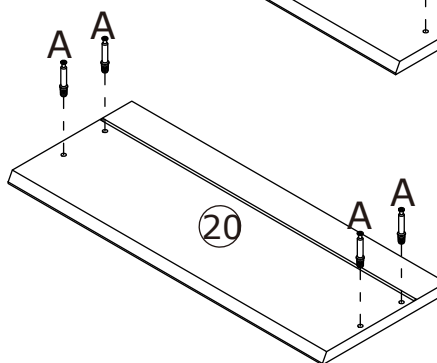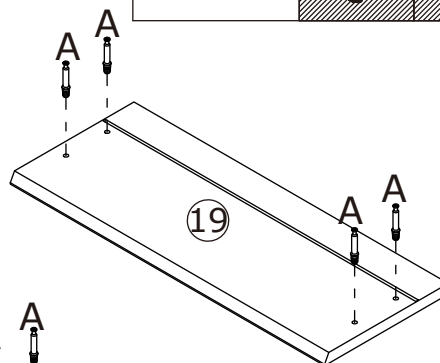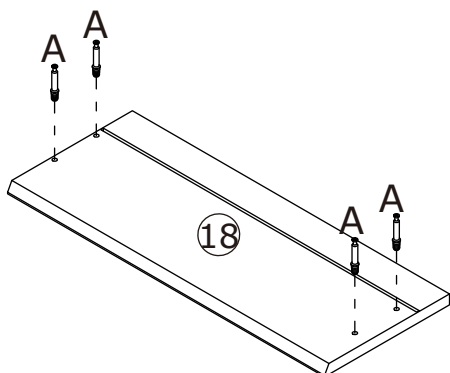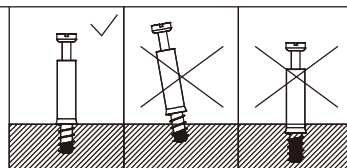

x2

   37

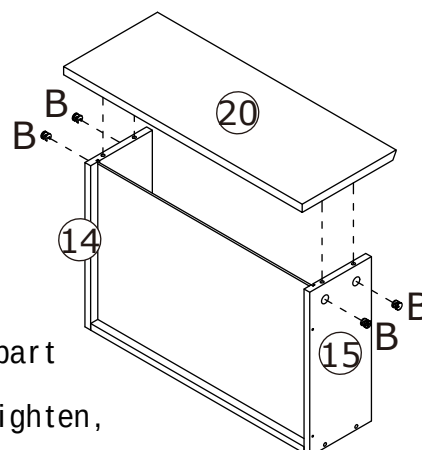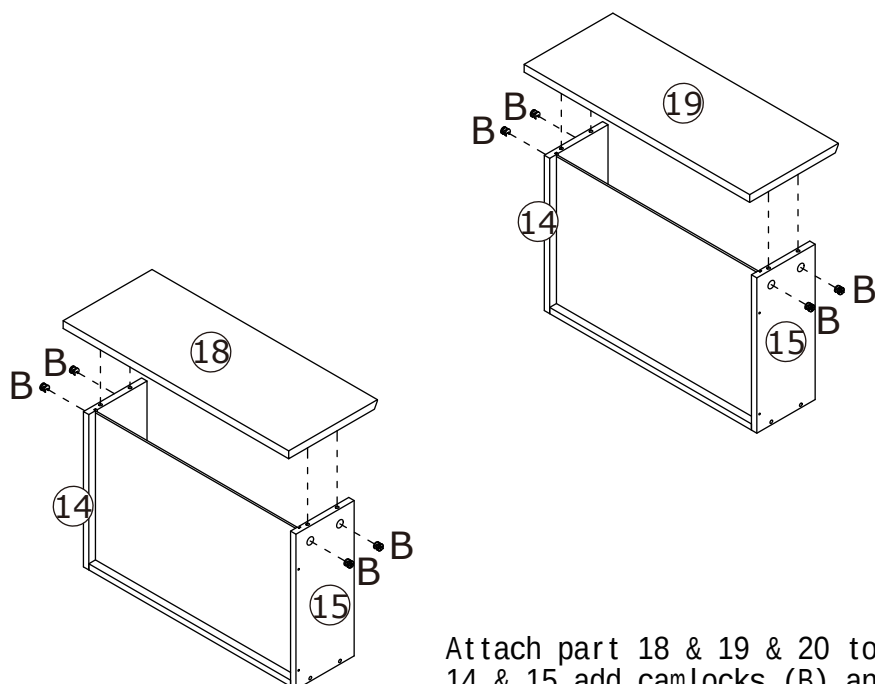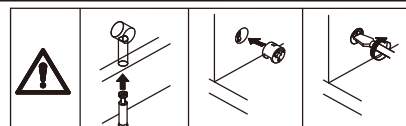

Attach part 18 & 19 & 20 to part 14 & 15, add camlocks (B) and turn camlocks clockwise to tighten, as shown.

x2

 
38

E x 24



3 x 12 mm

DR x 6







300mm


DL x 6



    300mm

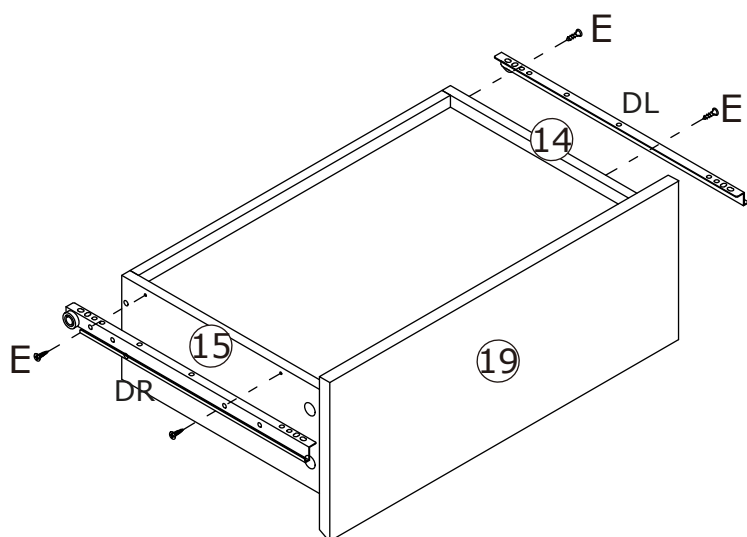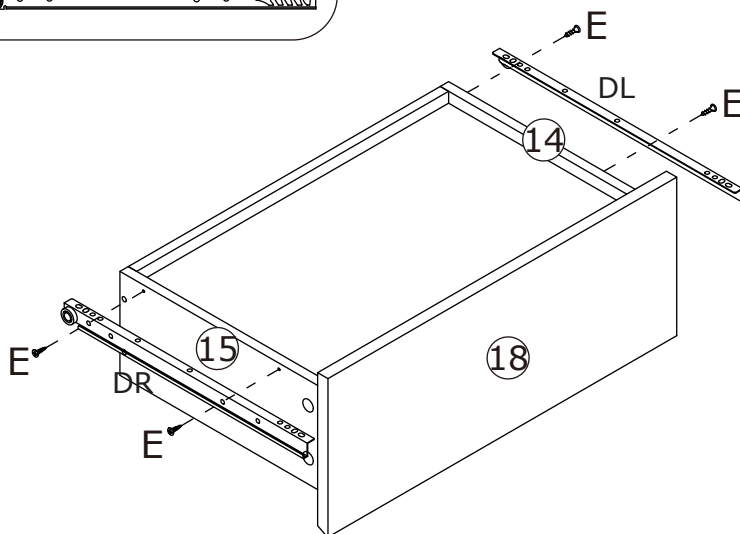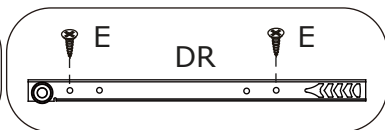


 Fix left inner drawer runner (DL) to part 14 and fix right inner drawer runner (DR) to part 15 using screws (E), as shown.


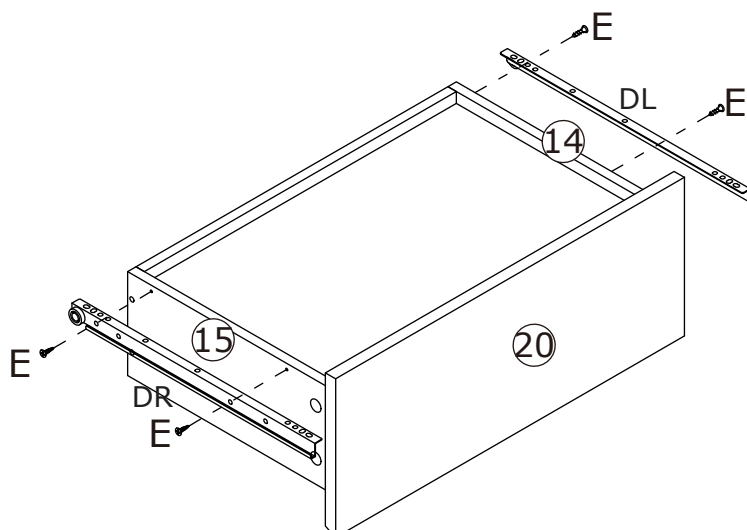


x2

 
39

P x 2 	D x 2  Ø4 x 35 mm	R x 4 	J x 2 	I x 2  Ø4 x 14 mm	
--	--	--	---	--	--

  Connect the anti-tilt device (J) to part 1 , with a washer (R) in between , and connect it with a screw (I). After the expansion screw (P) locks the wall, the fixing device (J) is fixed with a screw (D), with a washer (R) placed in the middle, as shown in the figure.

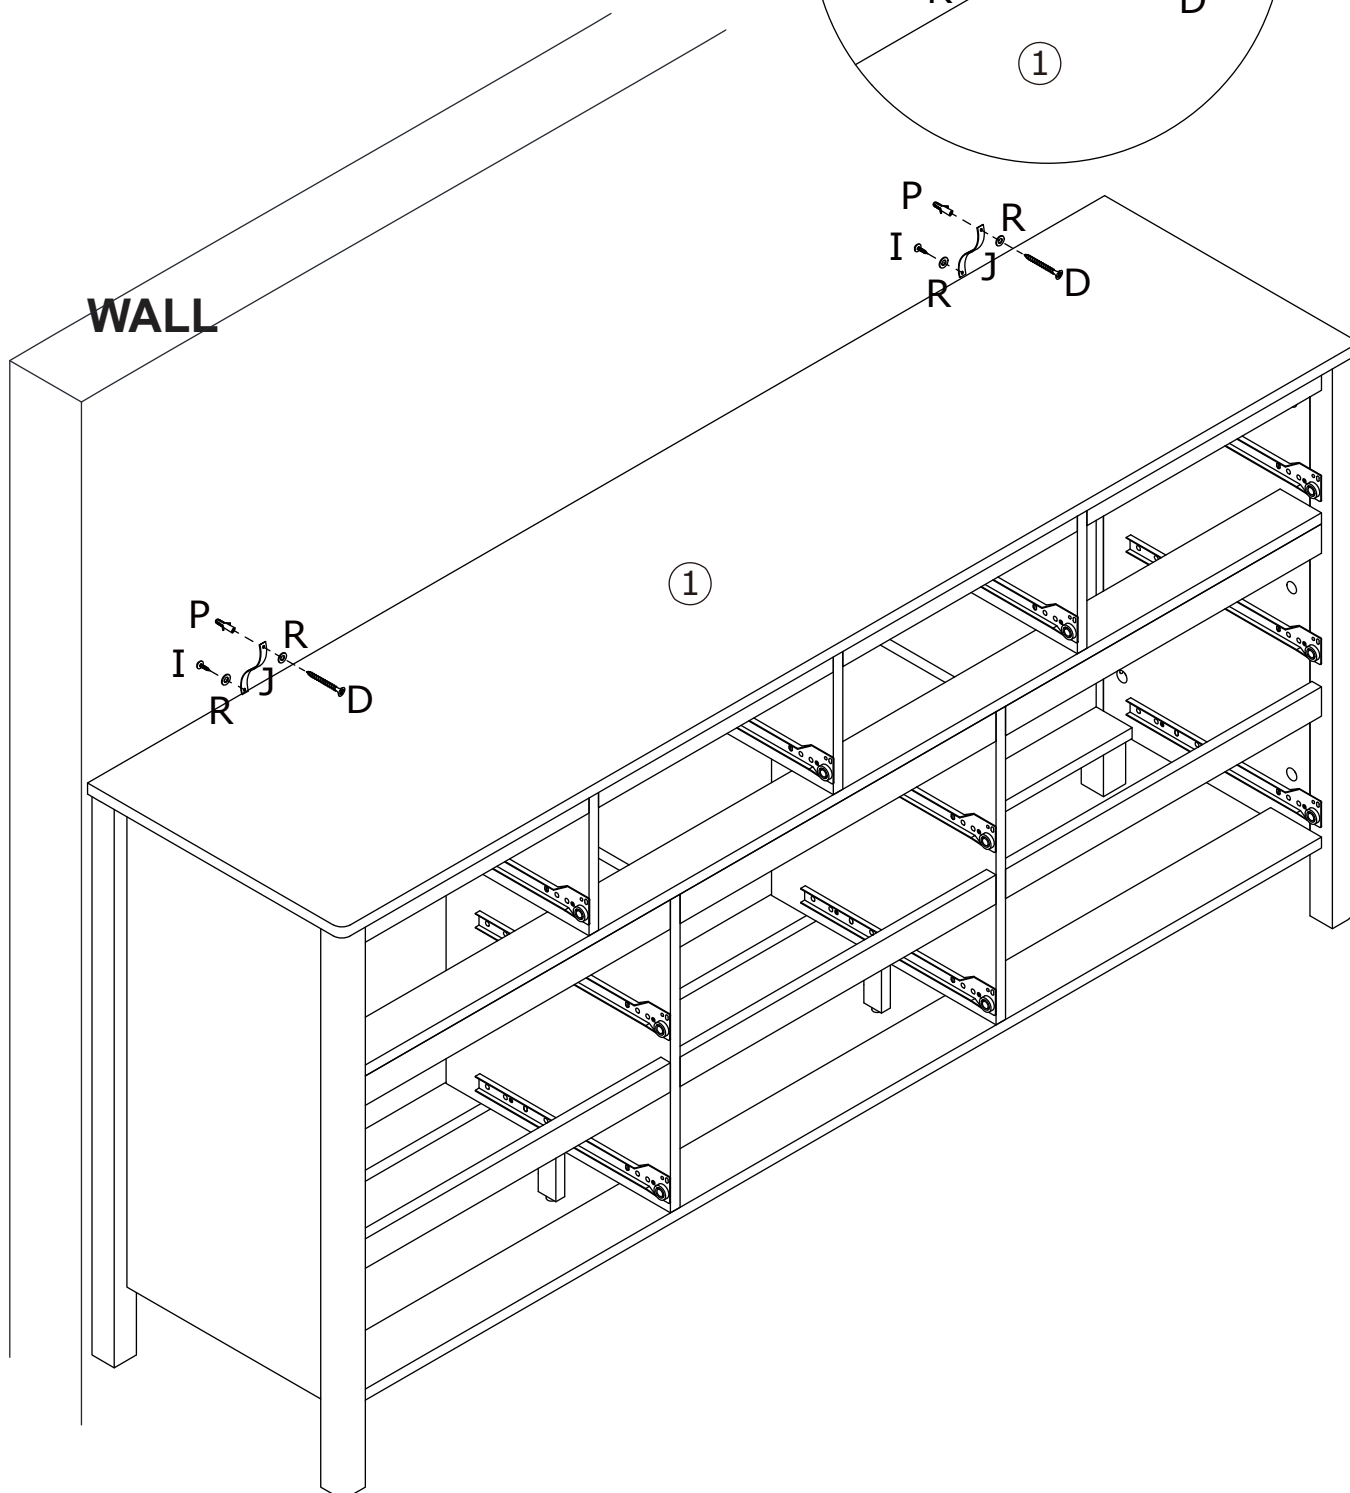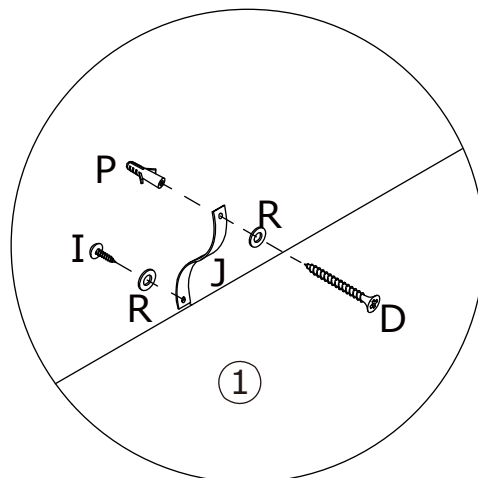

 Align rails, insert all drawers in, as shown.

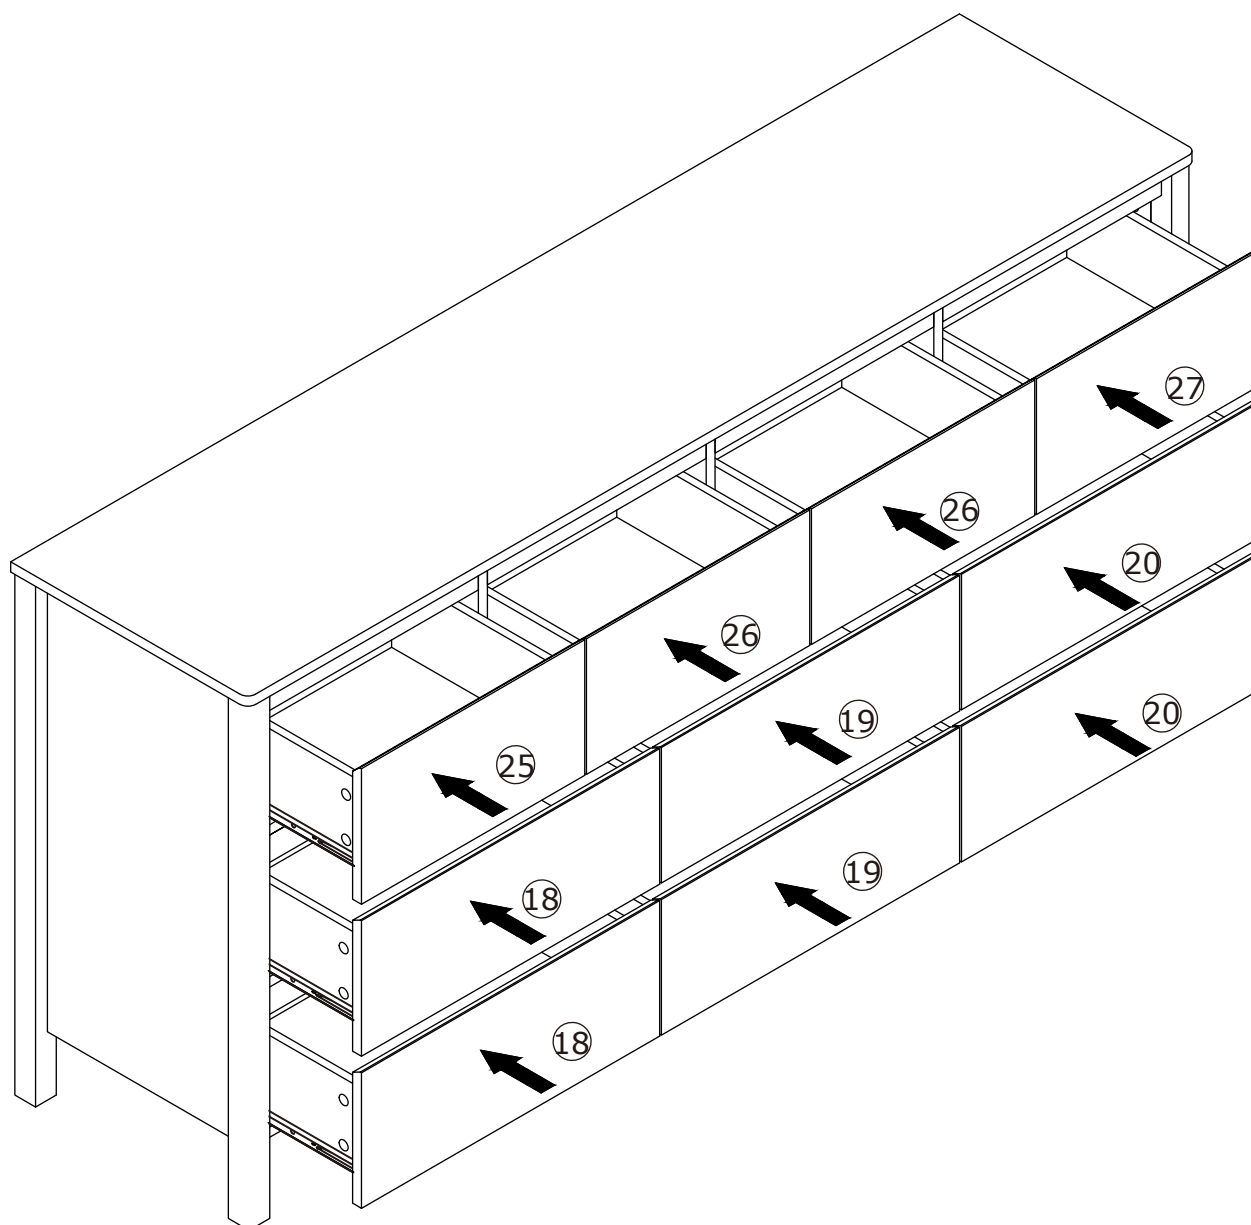

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply contact us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please contact us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.