

# **INSTALLATION**

*Product Manual*



### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.



 
### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.



### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

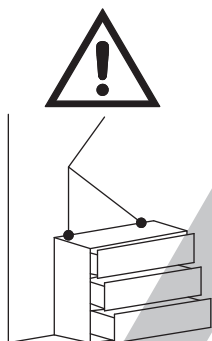

### **ANTI-TOPPLE WARNING !**

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




Please prepare the following tools

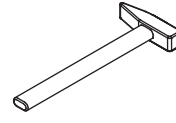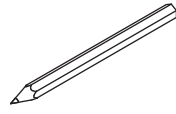

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 154+4




Ø6 x 35 mm

B x 154+4



Ø15 x 10 mm

 C x 60+4



Ø6 x 30 mm

D x 84+4



 
Ø4 x 35 mm

E x 144+4




Ø3 x 10 mm

F x 10+1

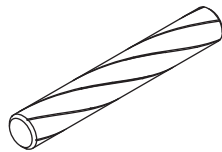


Ø6 x 50 mm

 G x 4

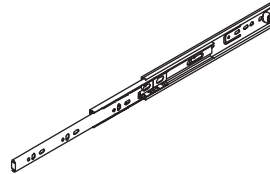


L = 400 mm

 H x 8

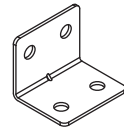

J x 8

 


Ø6 x 16 mm


K x 8+1



 L x 1

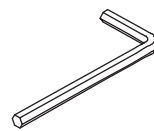


M x 60+4

 


Ø3.5 x 12 mm

 CL x 12

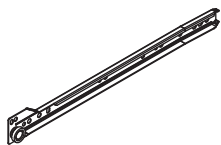


350 mm

 CR x 12

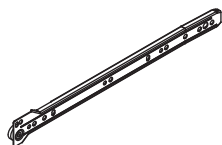


350 mm

 DL x 12

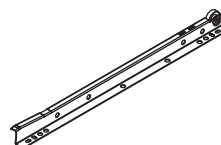


350 mm

 DR x 12

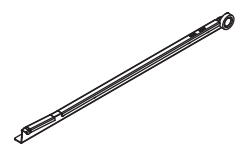

350 mm

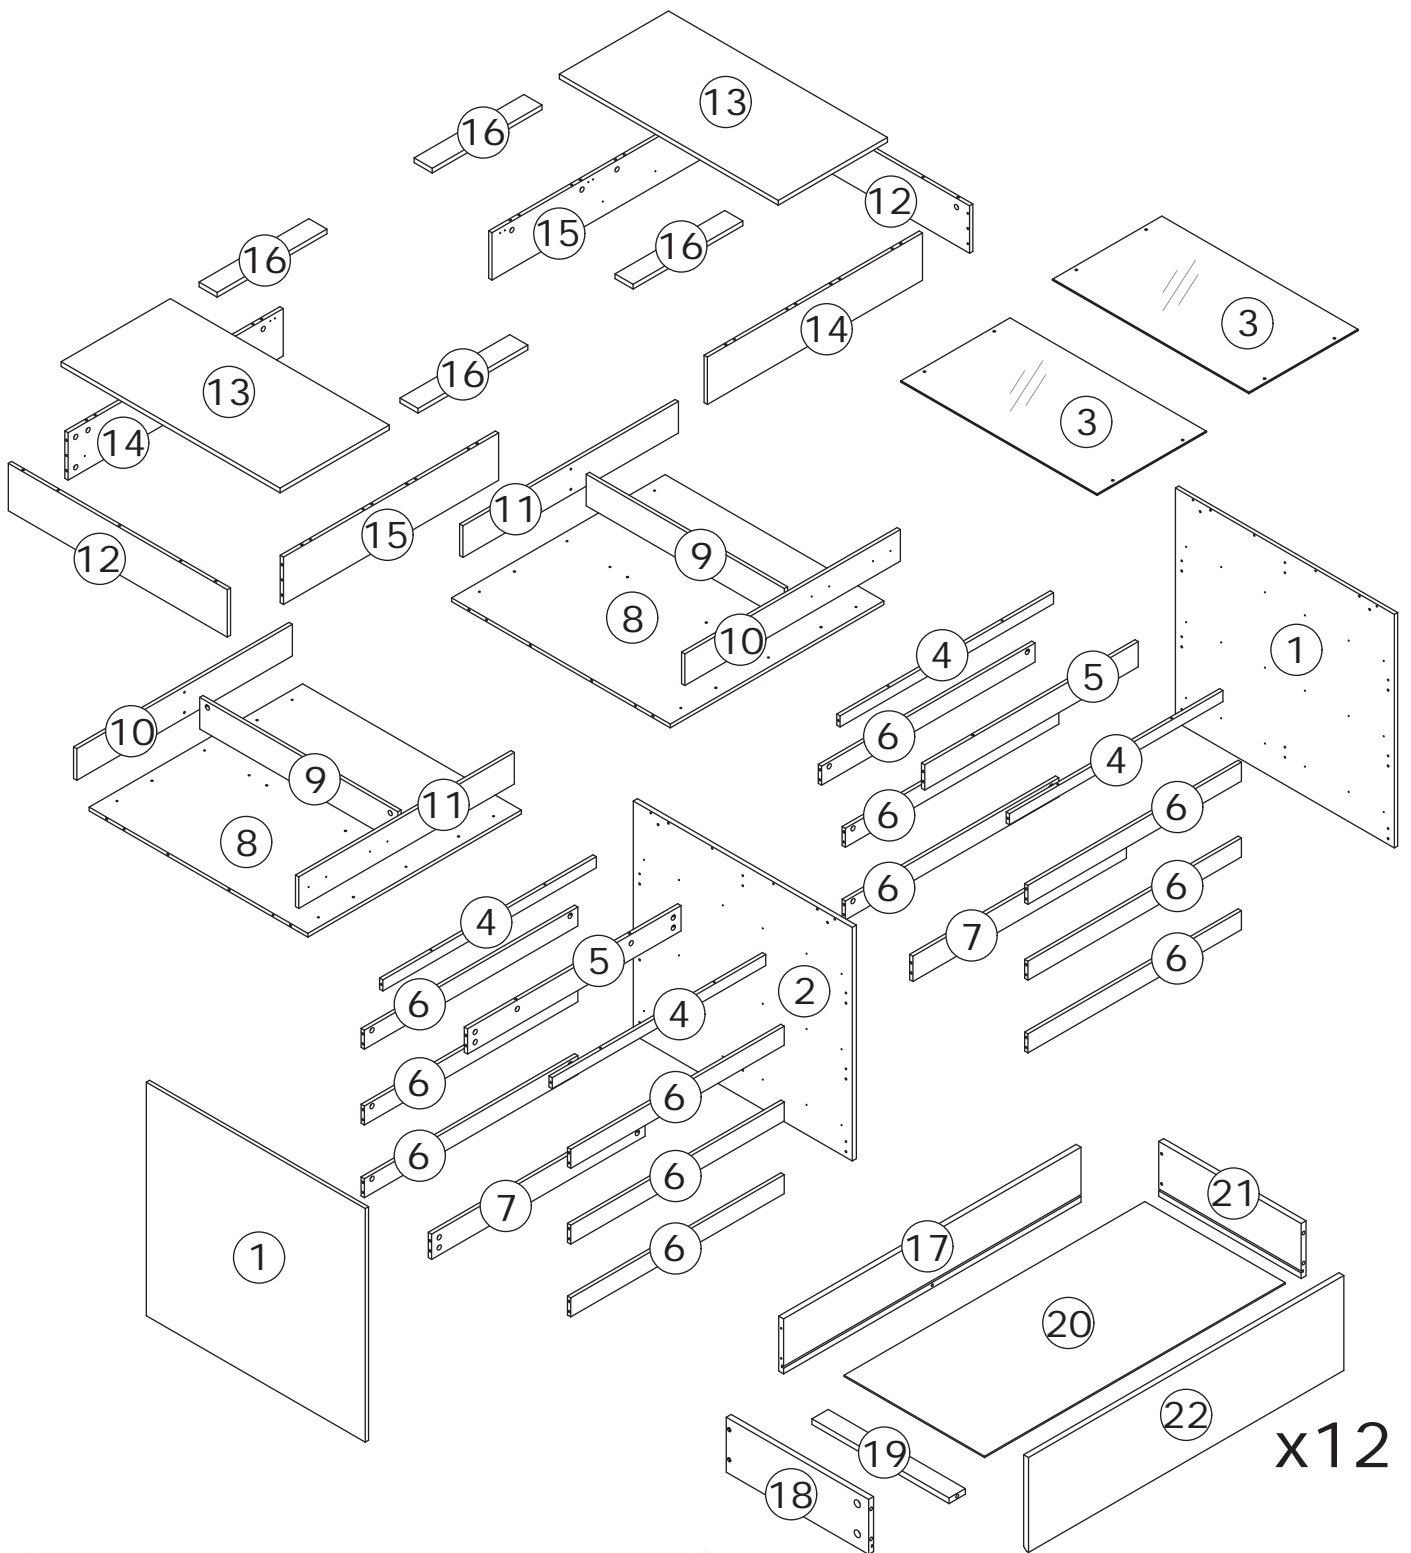 

## ⚠ WARNING



**Children have died from furniture tipover. To reduce the risk of furniture tipover:**

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



 
*This is a permanent label.  
Do not remove!*




**Slides Must Be Separated Before Assembly.  
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.  
Después de la separación, déjelo a un lado hasta que sea necesario.


Les glissières doivent être séparées avant l'assemblage.  
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

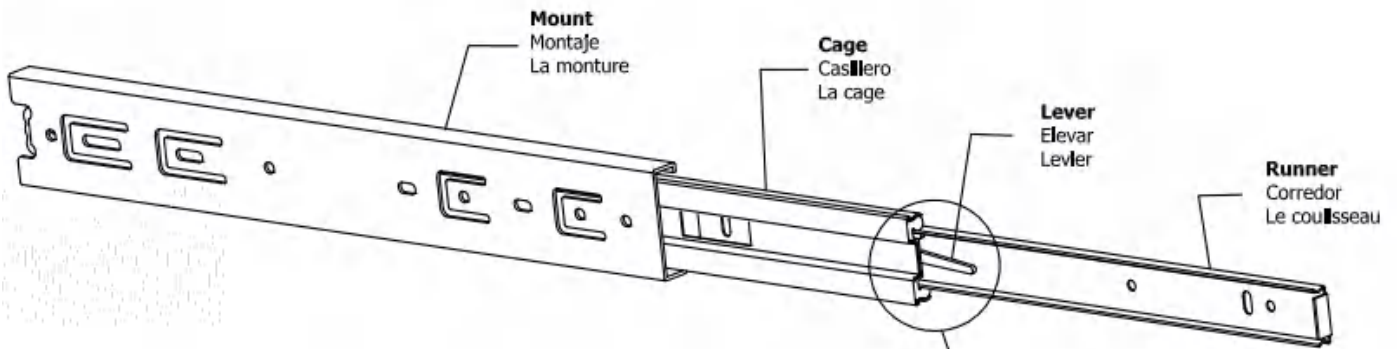

 
**STEP 1: Extend Slide**  
Extender la diapositiva  
Extendre la diapositive

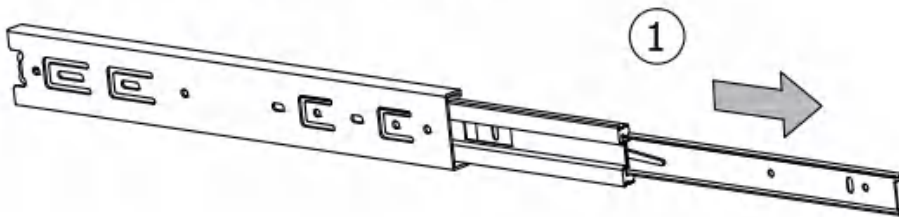




 
**STEP 2: Push Lever UP**  
Empujar hacia arriba  
Lever le levier

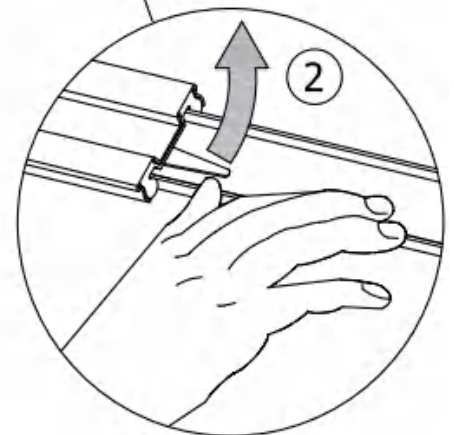


 
**STEP 3: Remove Runner**  
Quitar el corredor  
Enlever le coureur

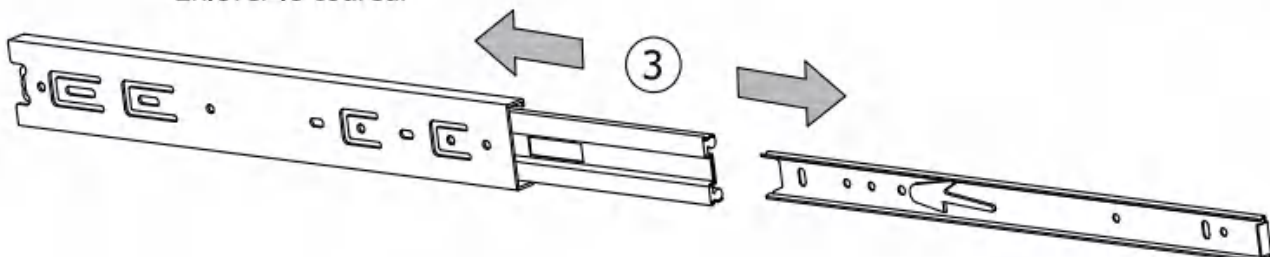








1

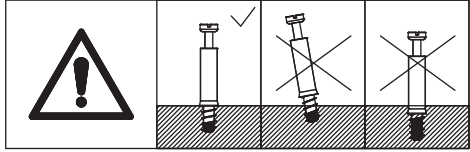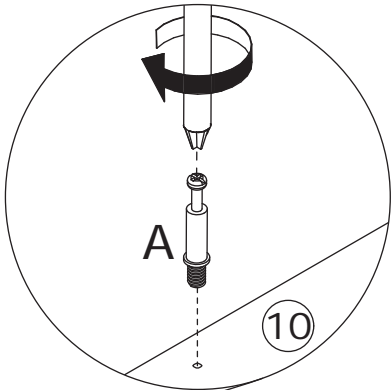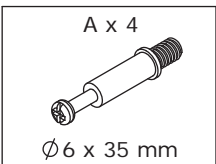    

  Screw eccentric rod(A) into board 10 and 11 at first.




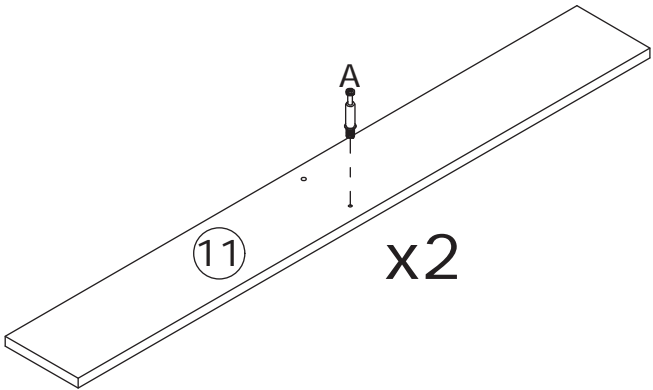
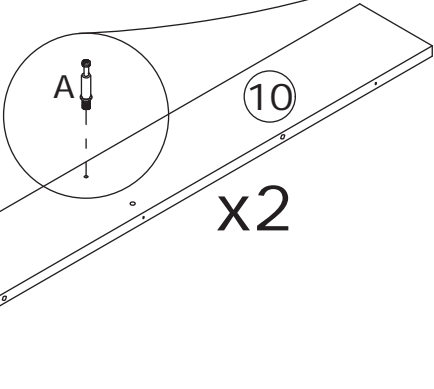


2

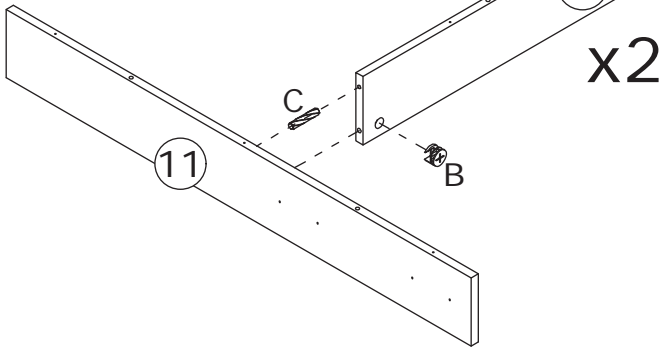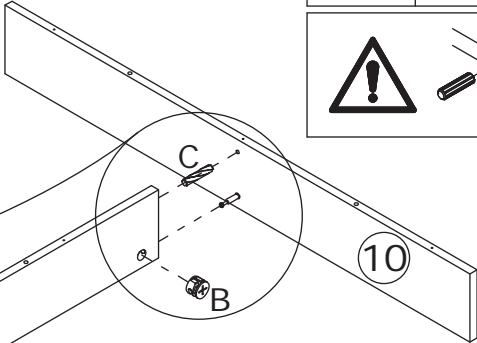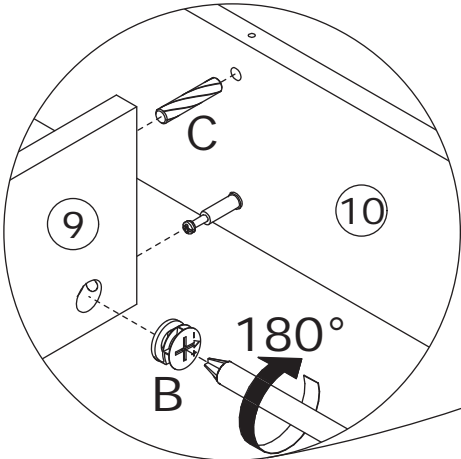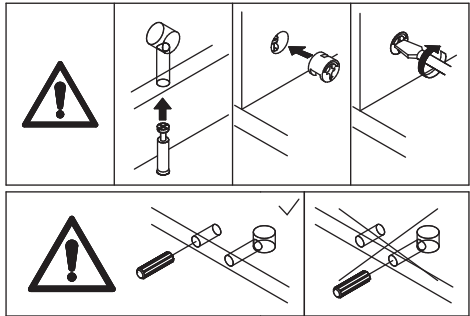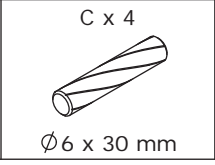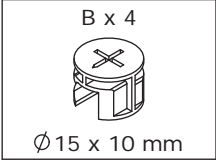       



Connect board 10 and 11 to board 9 using wooden dowel(C), add cam lock(B) into board 9 and turn clockwise to tighten as shown.

     3

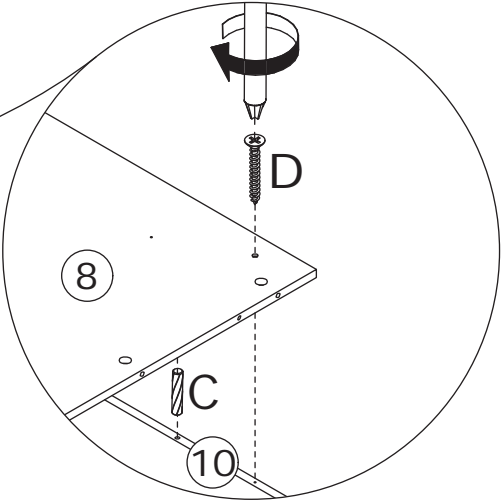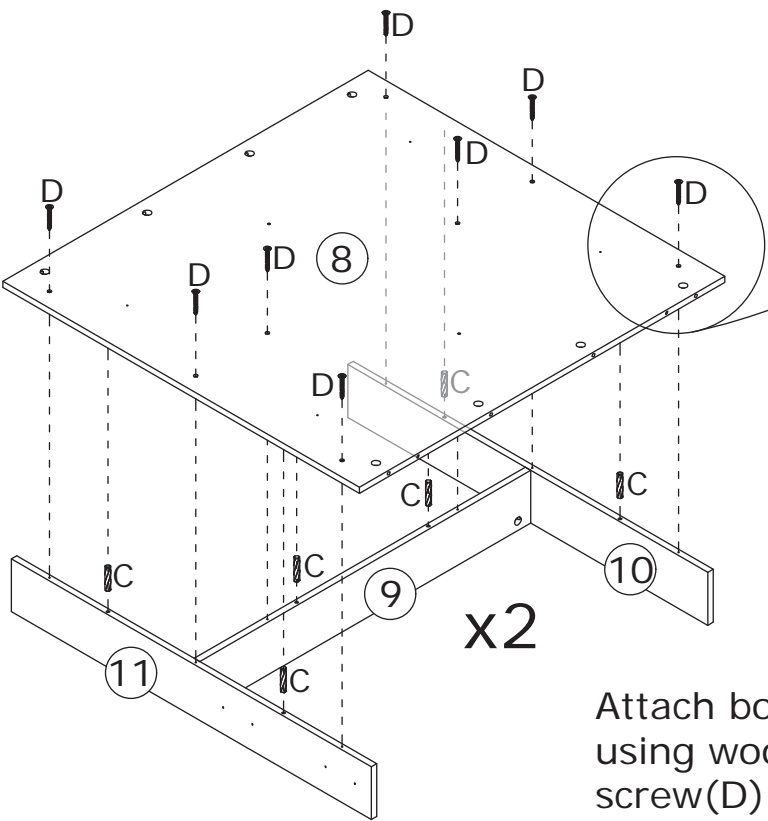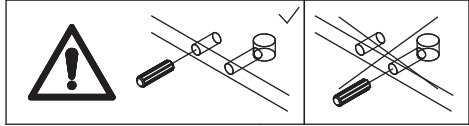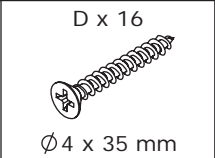
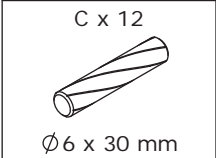


Attach board 8 to board 10, 9 and 11 using wooden dowel(C), and fix with screw(D) as shown.

 
 
4

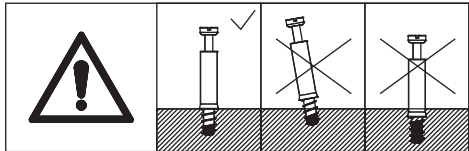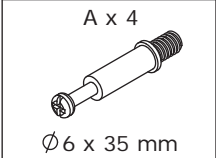



 
 
Screw eccentric rod(A) into board 8 at first.

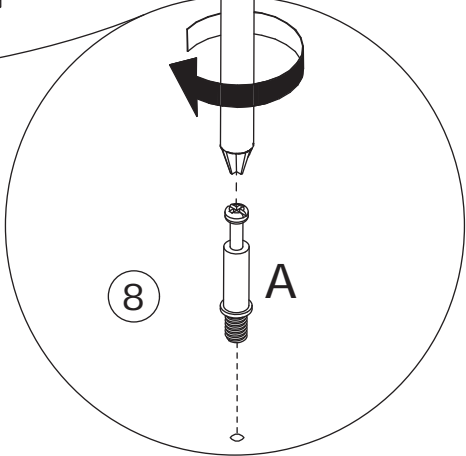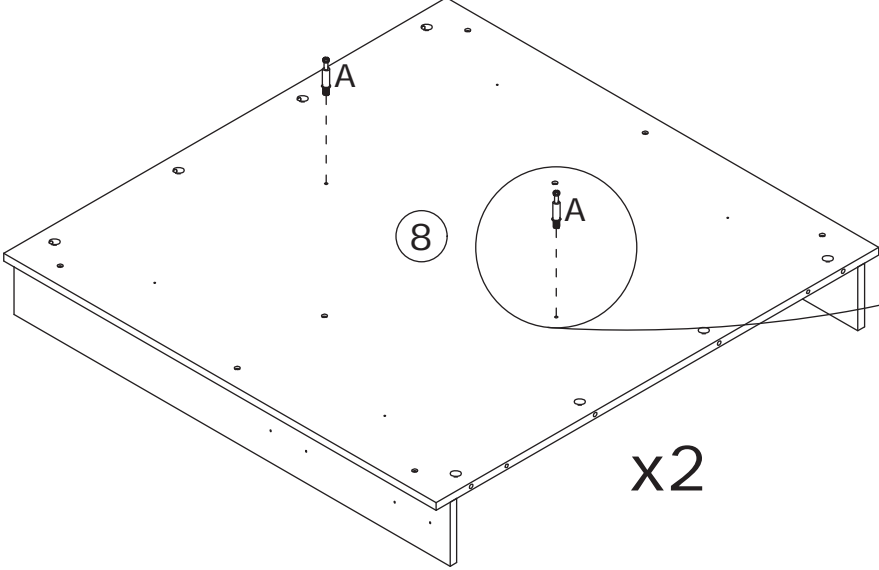

5

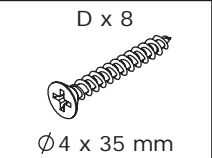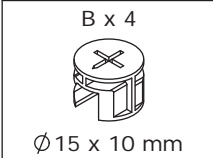  

 
 
 
 
Fix board 4 to board 8 using screw(D) as shown.

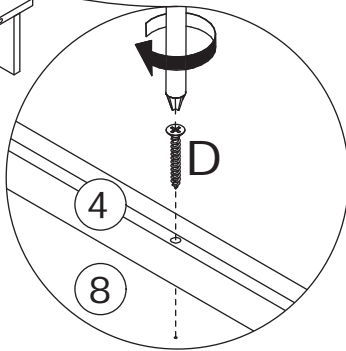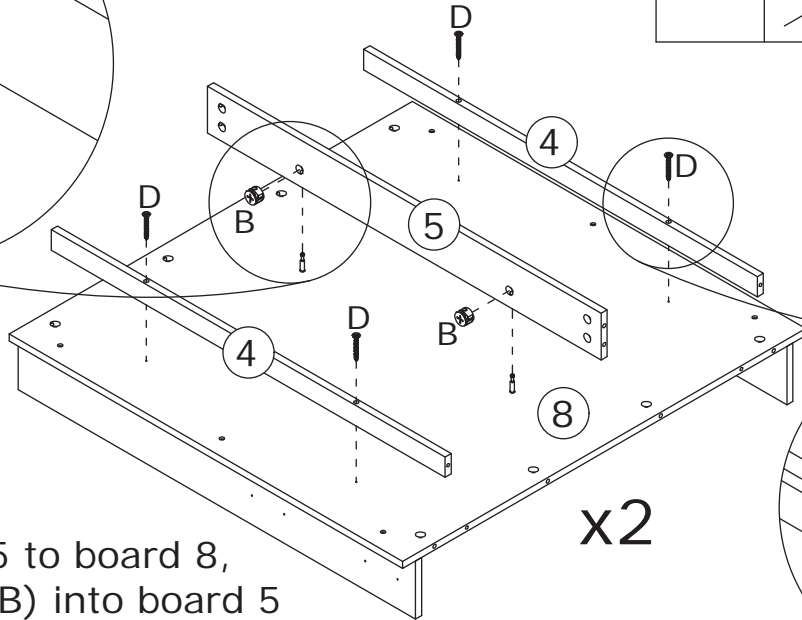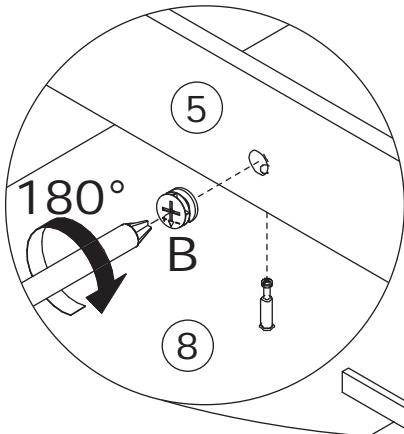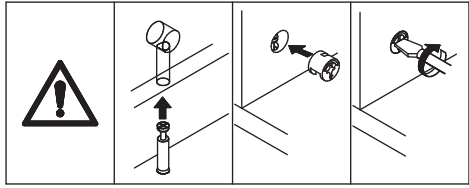






x2

Attach board 5 to board 8, add cam lock(B) into board 5 and turn clockwise to tighten as shown.

    6

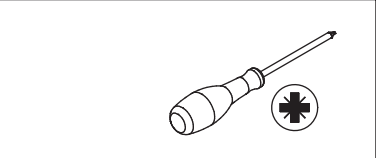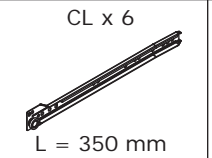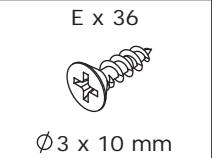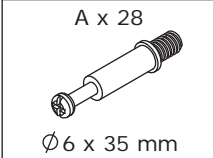

    
 
Screw eccentric rod(A) into board 1 at first.

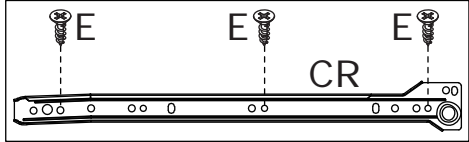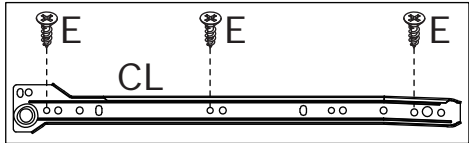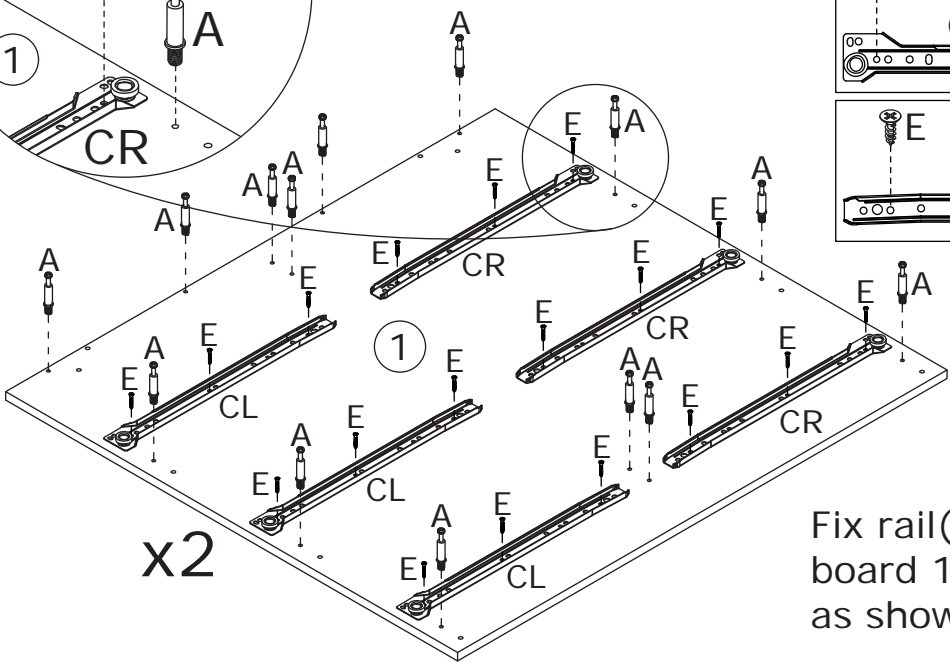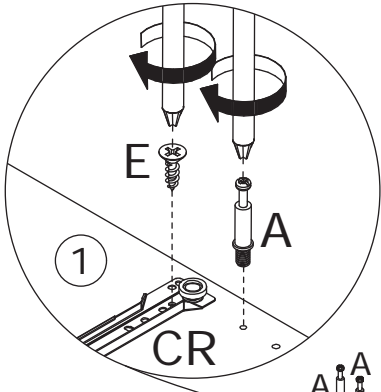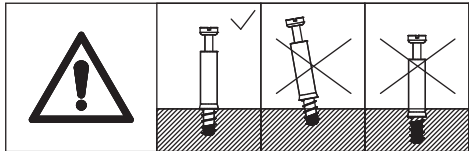



x2

Fix rail(CL) and (CR) to board 1 with screw(E) as shown.


 
 
7

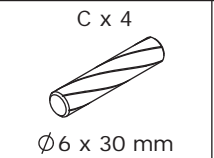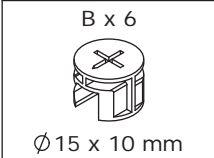

   
 
 
Attach the component (assembled in step 5) to board 1 using wooden dowel (C), add cam lock (B) into board 4, 5, 8 and turn clockwise to tighten as shown.

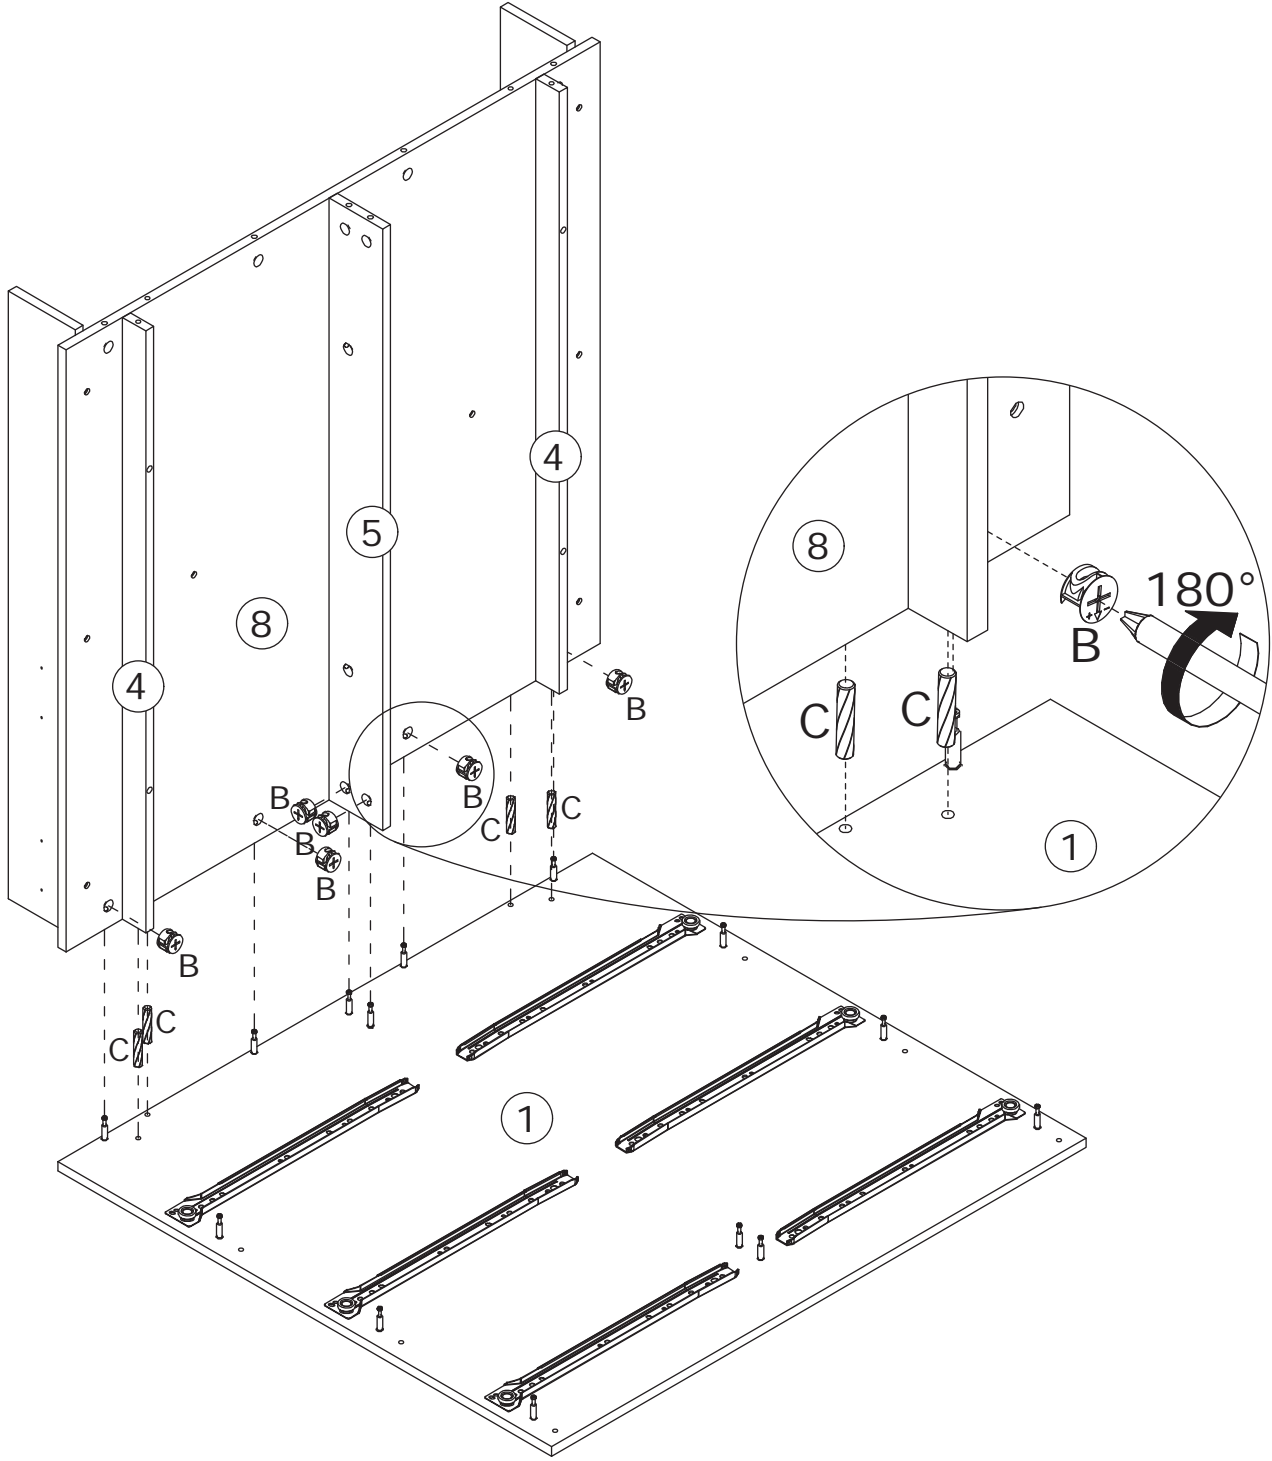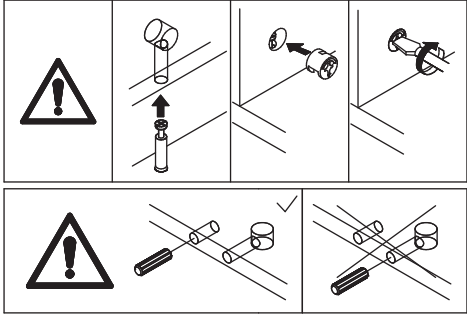

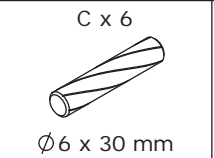
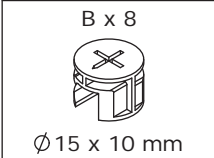



8

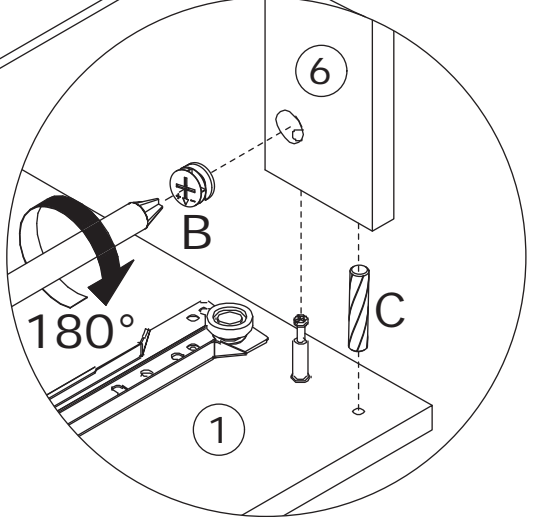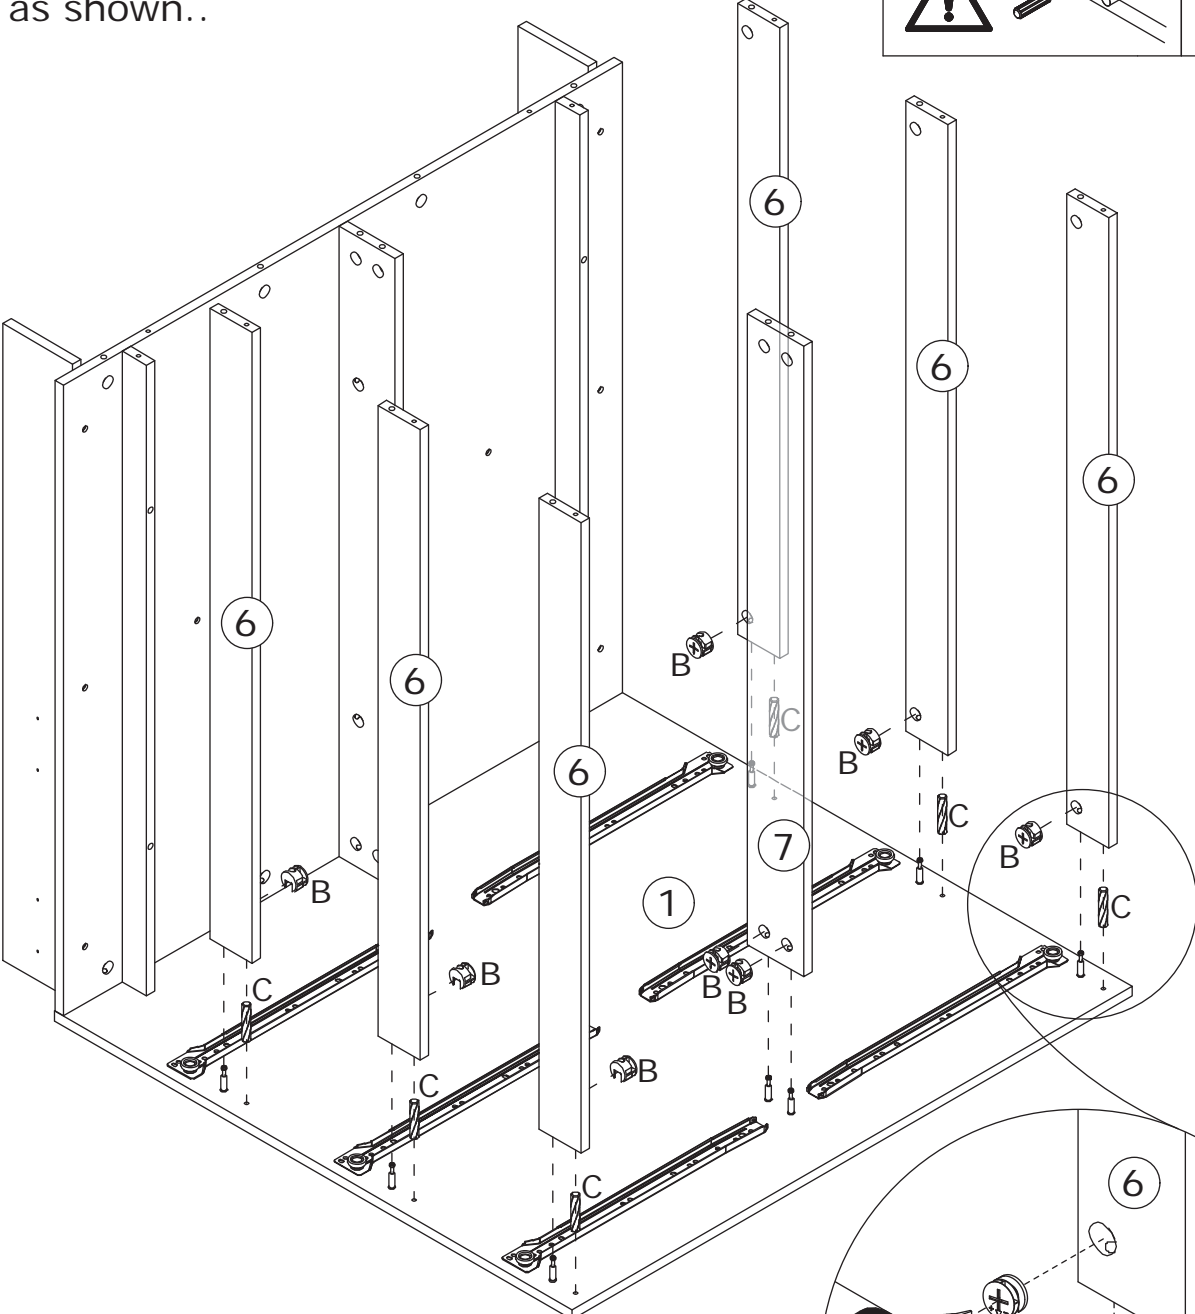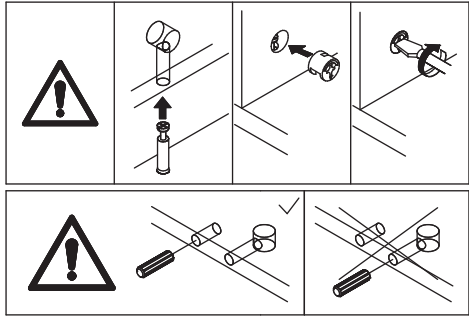   

 Attach board 6 to board 1 using wooden dowel(C), add cam lock(B) into board 6 and turn clockwise to tighten as shown. Attach board 7 to board 1, add cam lock(B) into board 7 and turn clockwise to tighten as shown..

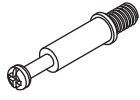



9

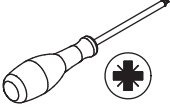A x 28  Ø6 x 35 mm	E x 36  Ø3 x 10 mm	CL x 6  L = 350 mm	CR x 6  L = 350 mm	
---	---	---	--	---

Screw eccentric rod(A) into board 2, fix rail(CL) and (CR) with screw(E) at first.


 
 
**Flip to back**, screw eccentric rod(A) into, fix rail (CL) and (CR) with screw(E) as well.

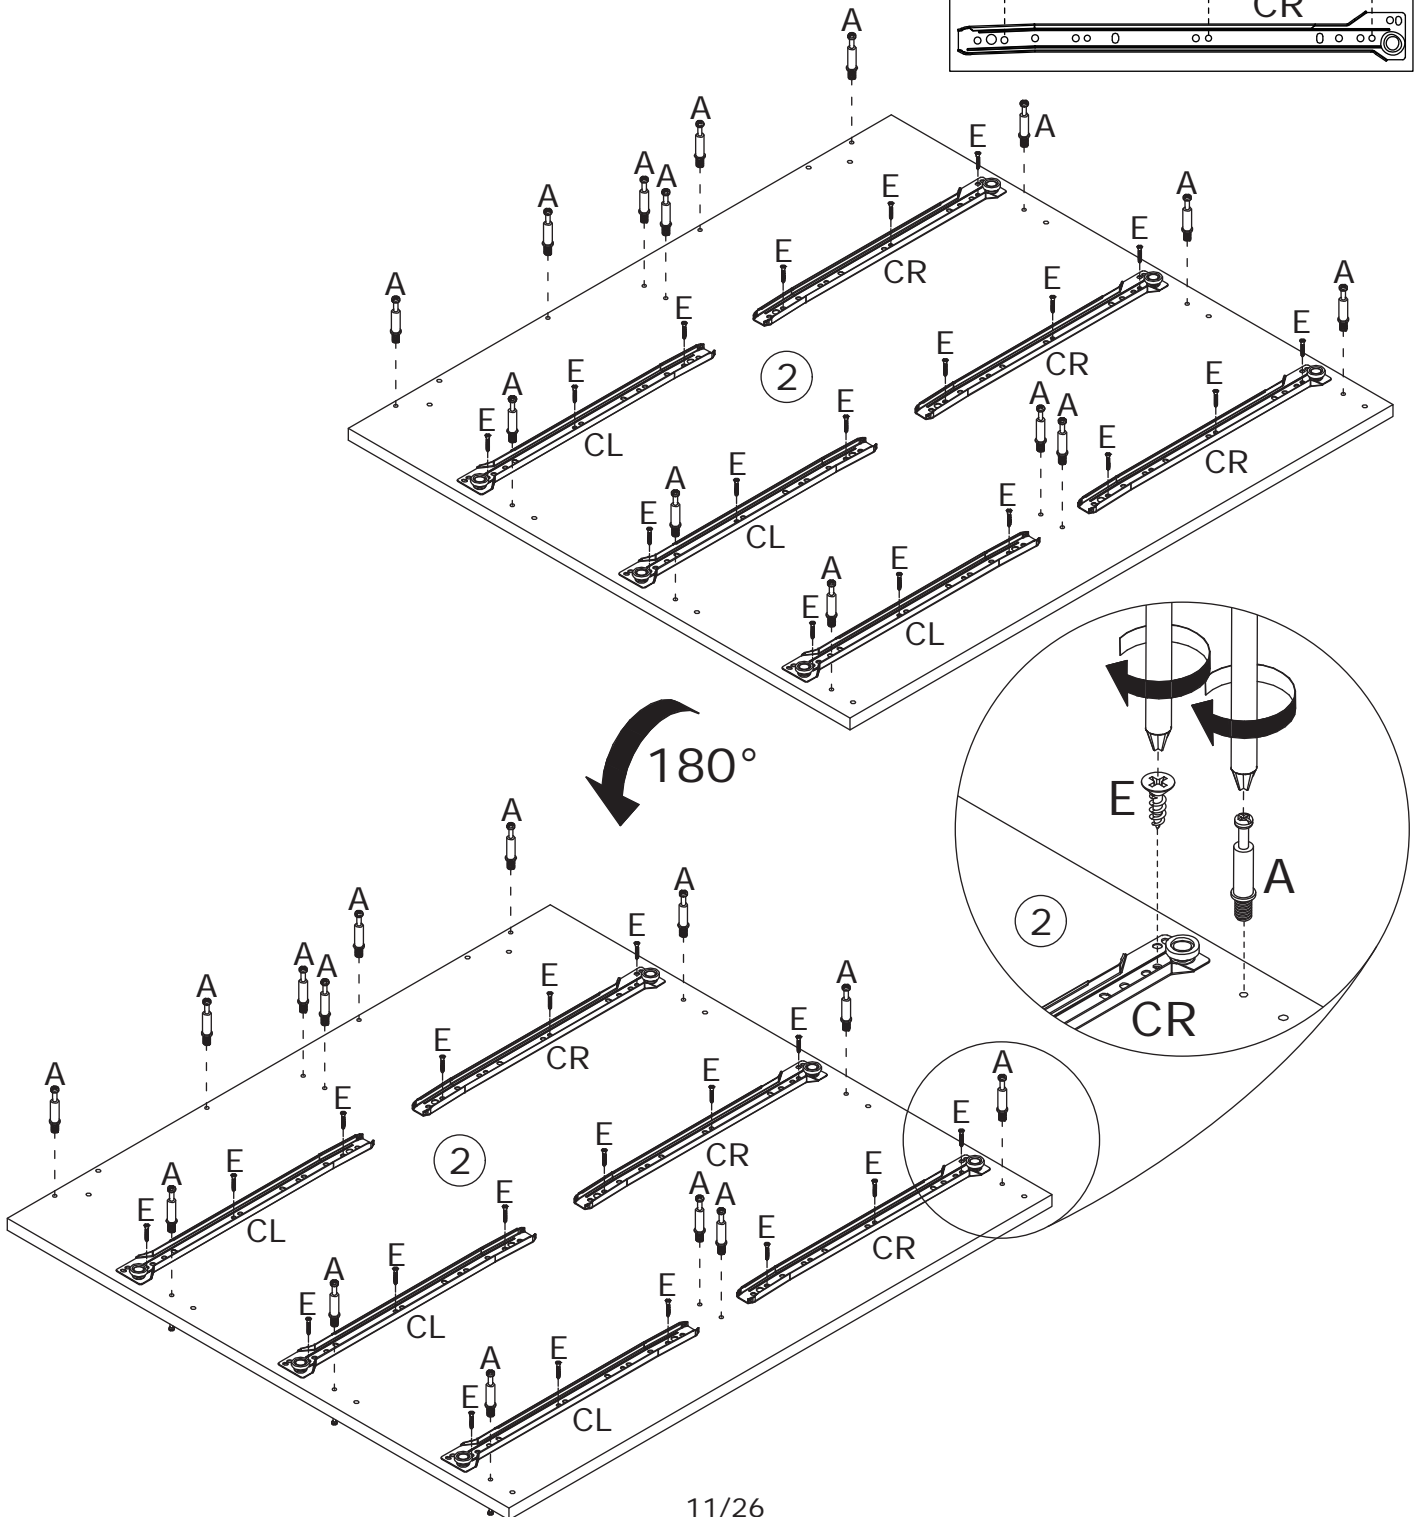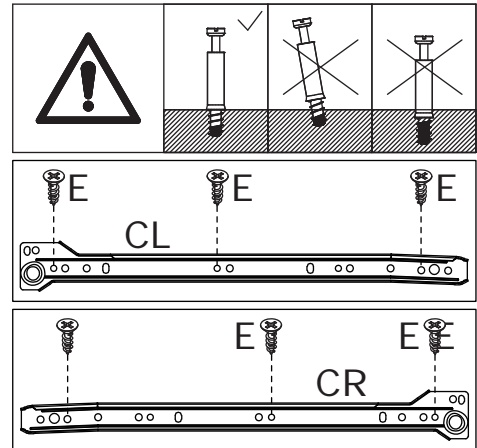

10



   Attach board 2 to the component (assembled in step 8) using long wooden dowel (F), add cam lock (B) into and turn clockwise to tighten as shown.


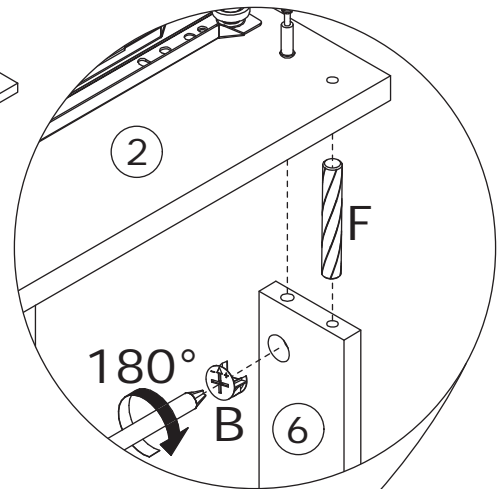
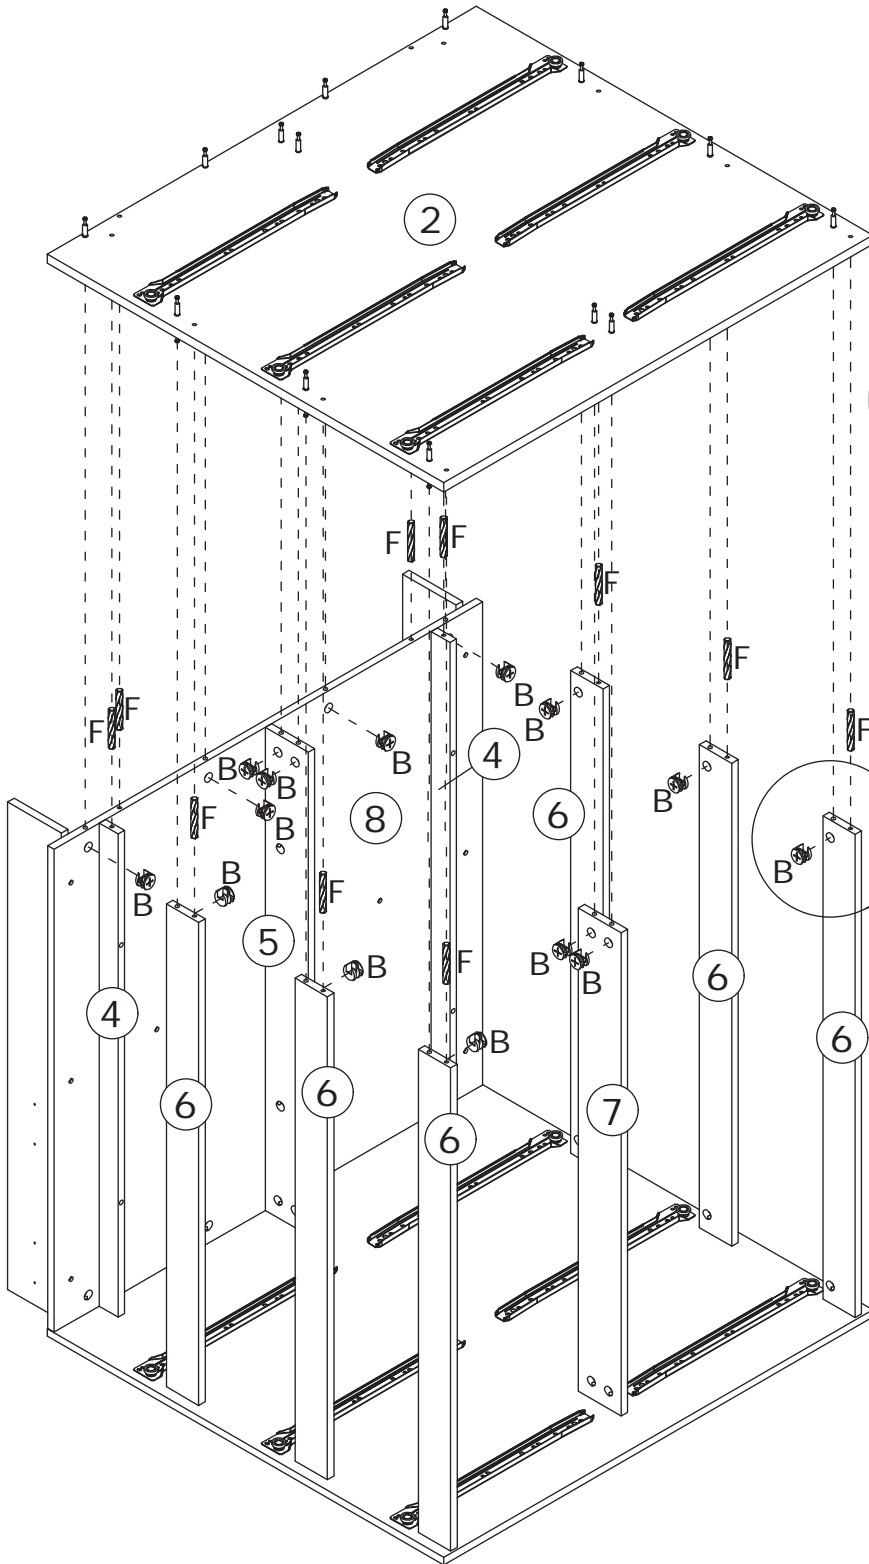
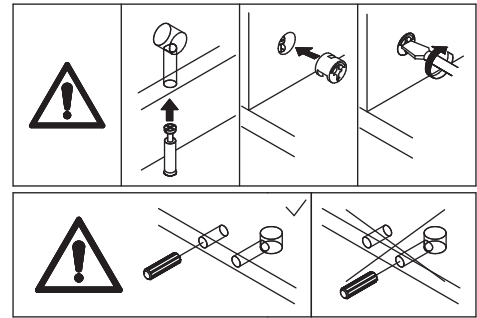


11


B x 6  
Ø 15 x 10 mm



   
 
Attach the component (assembled in step 5) to board 2, add cam lock (B) into and turn clockwise to tighten as shown.

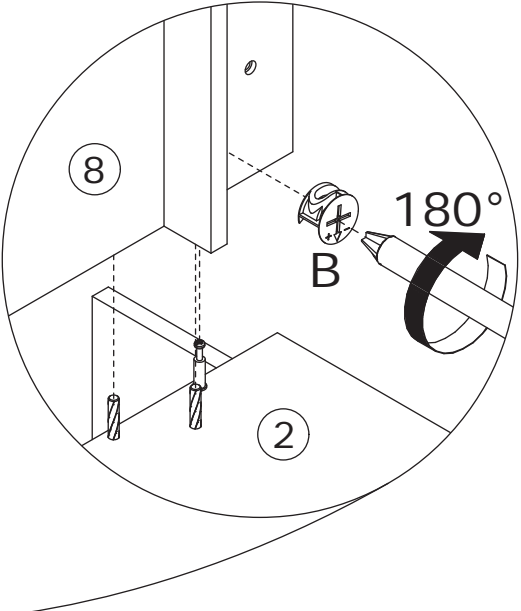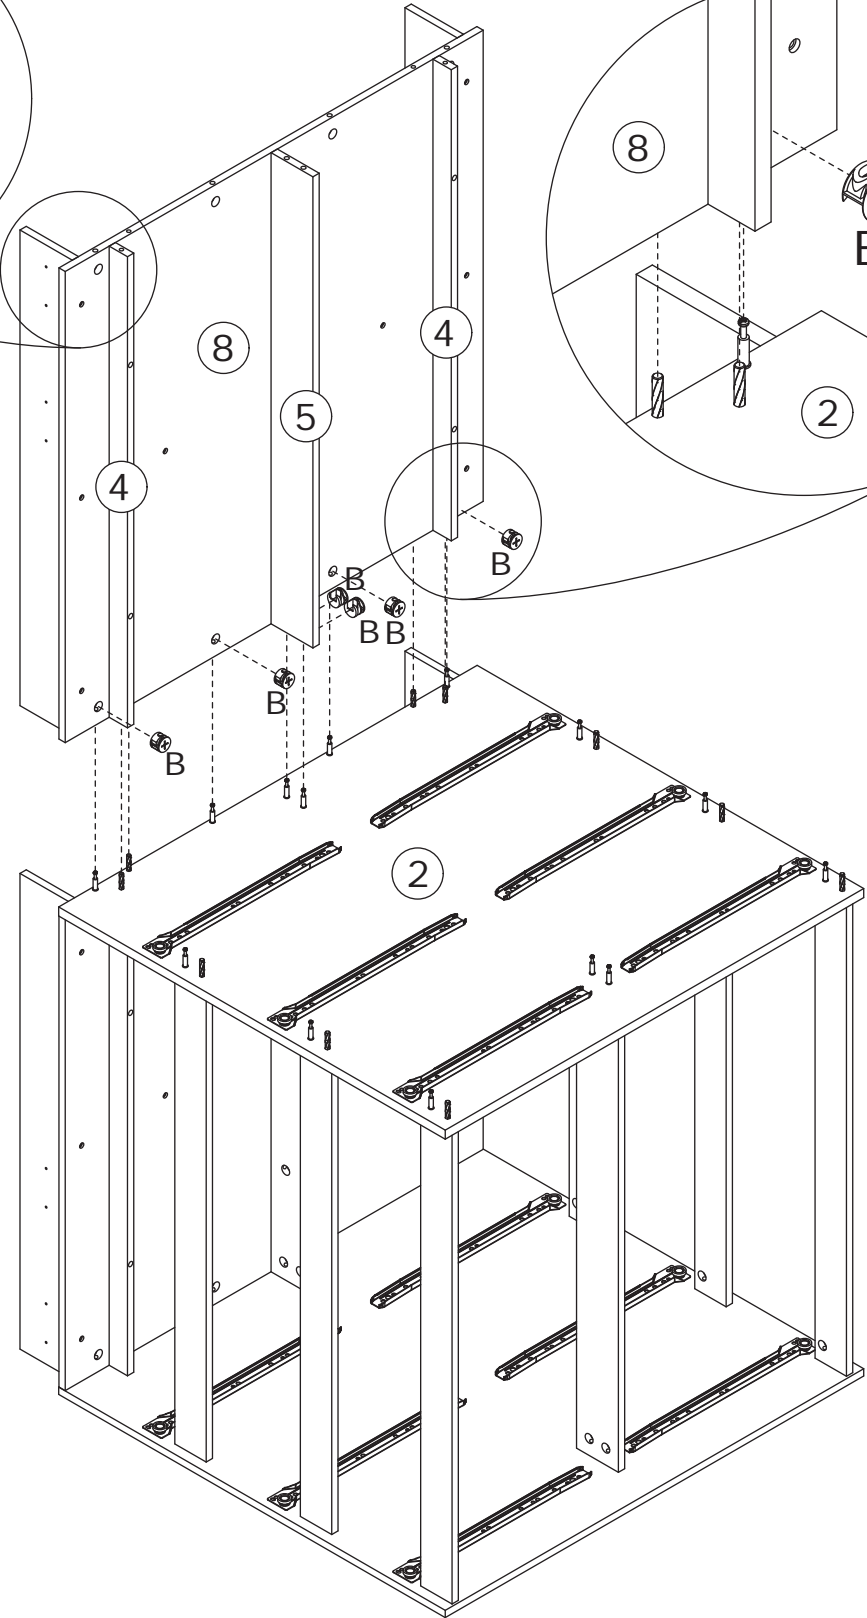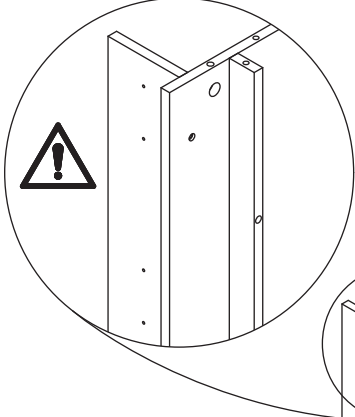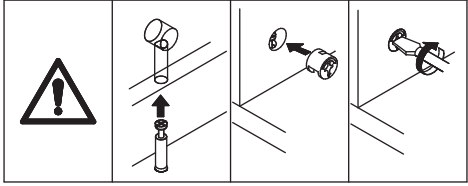


12

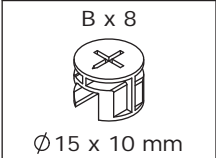 


 
 
Attach board 6 and 7 to board 2, add cam lock(B) into and turn clockwise to tighten as shown.

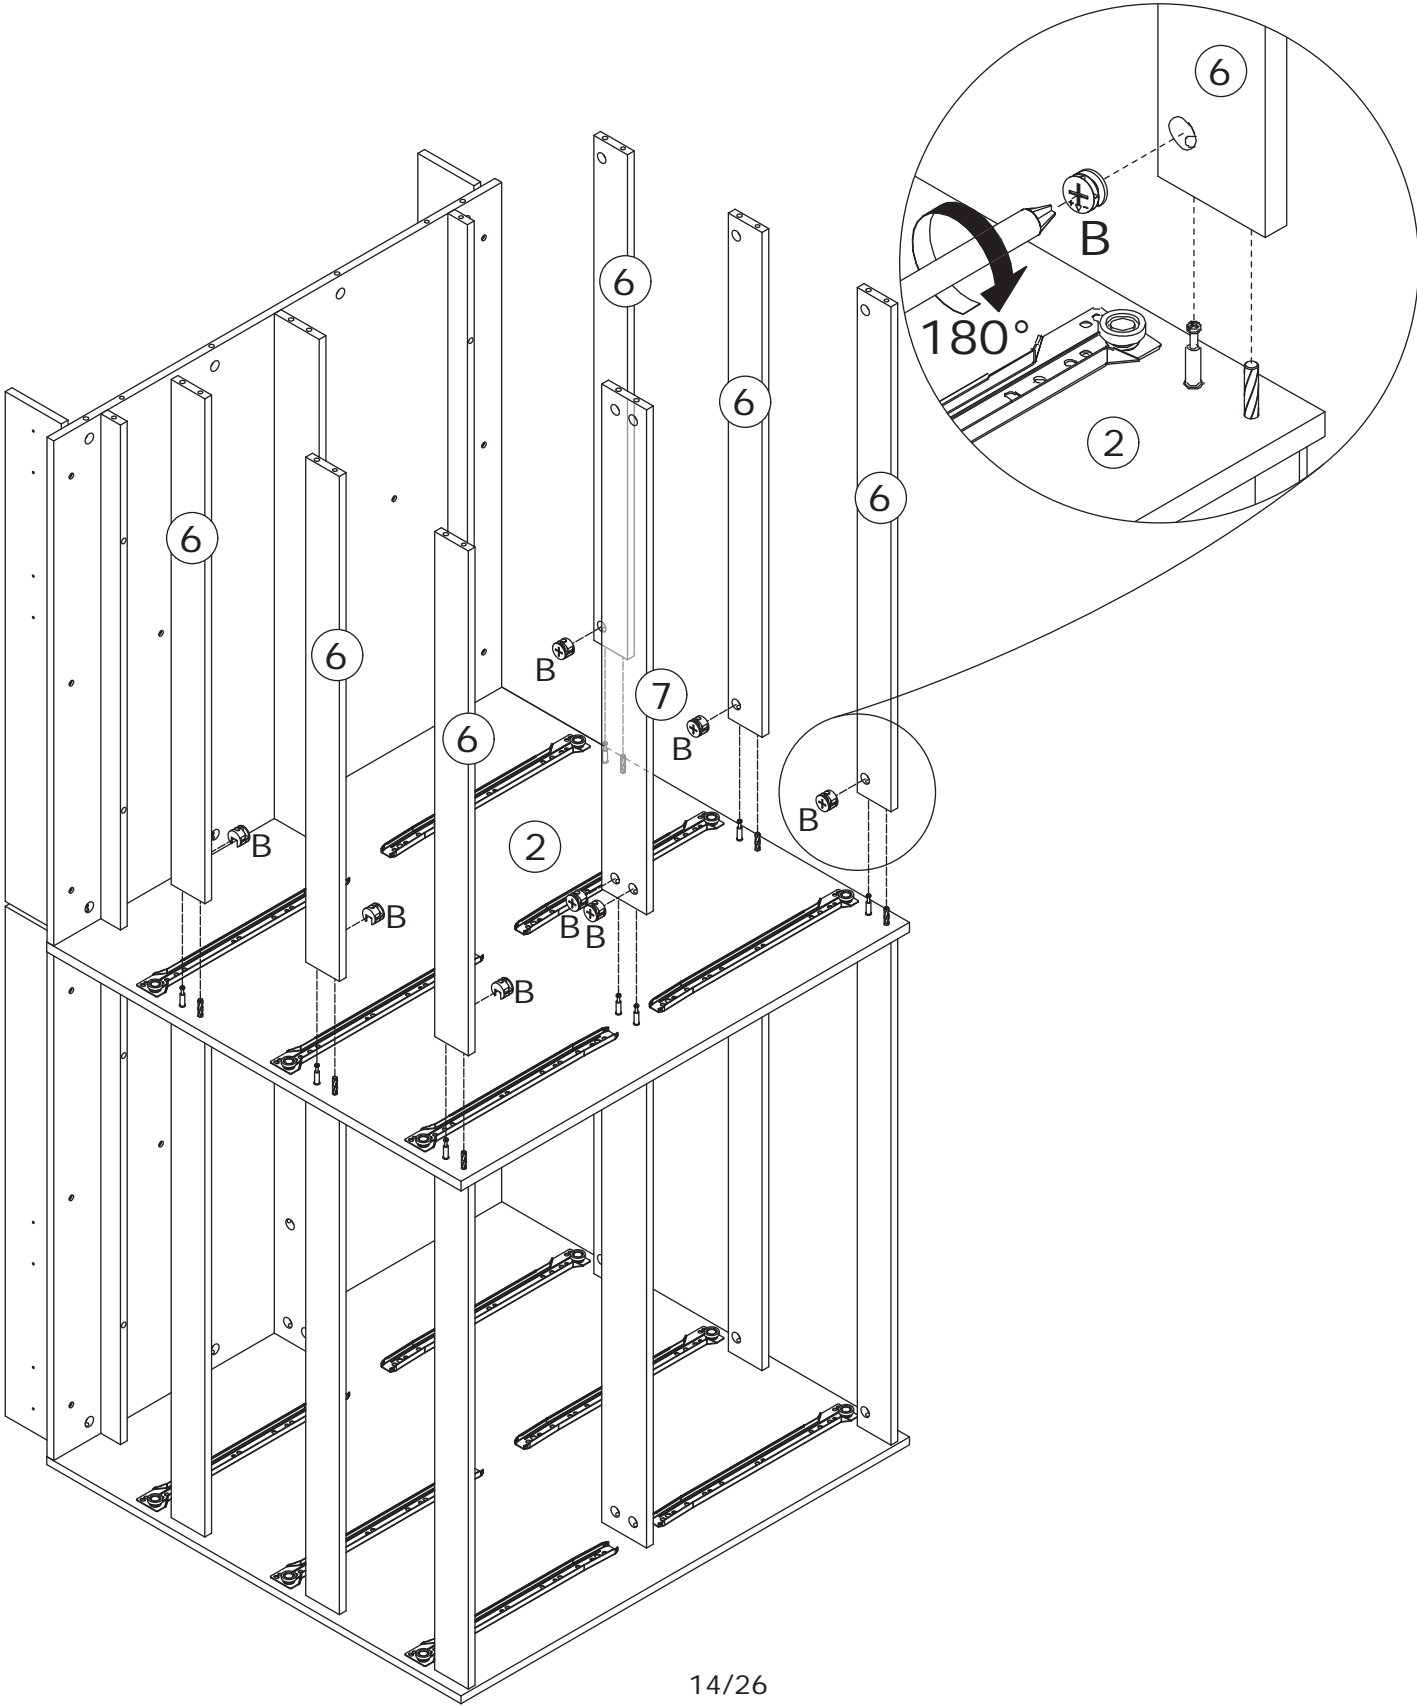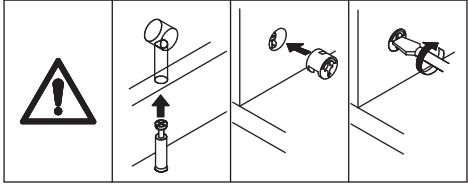



# 13

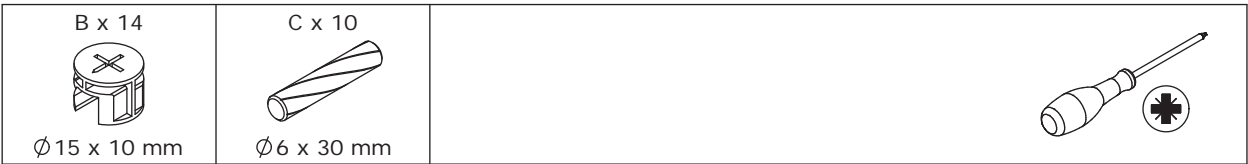 

  
 
Attach board 1 to the component using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.

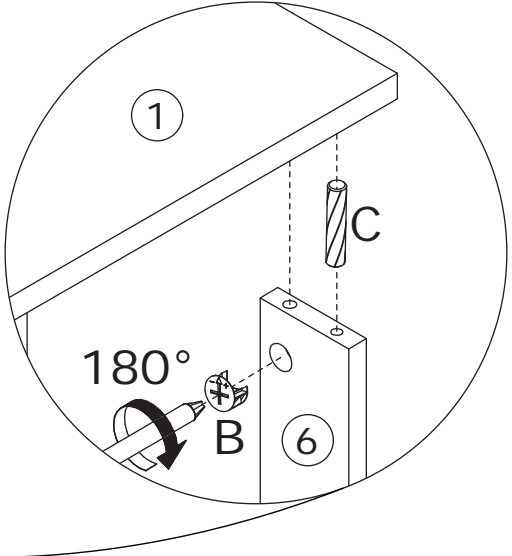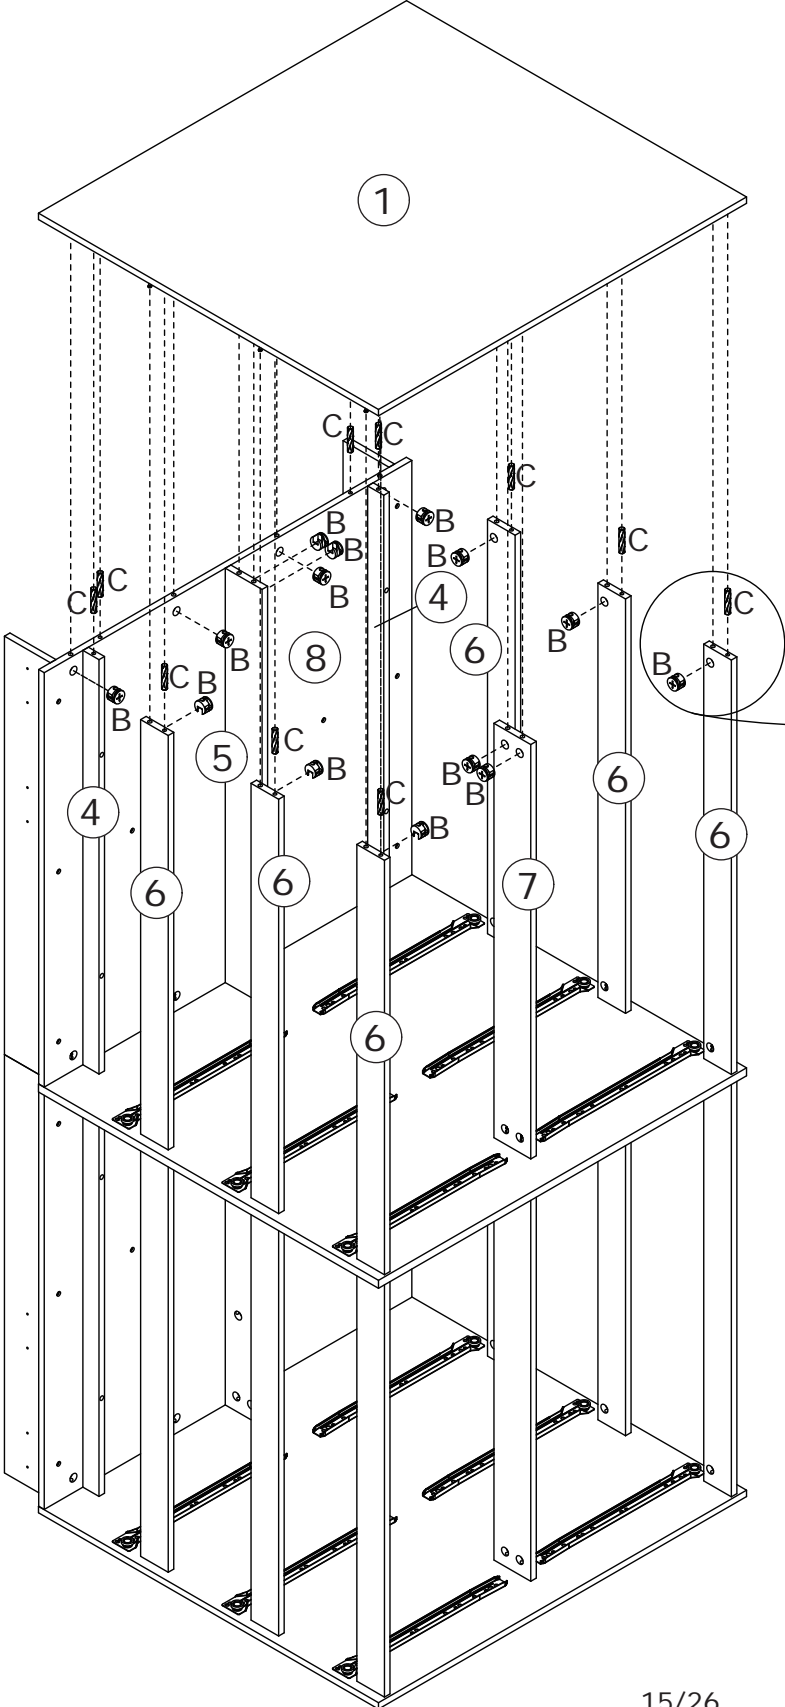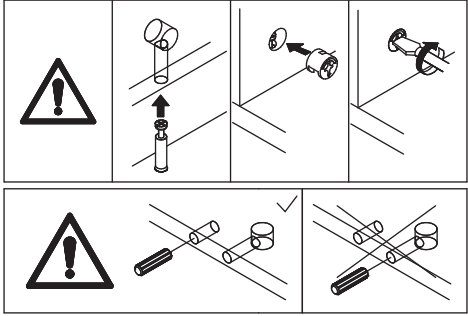




14

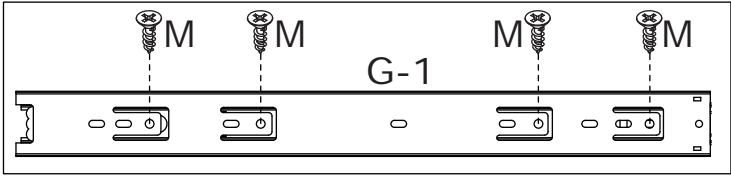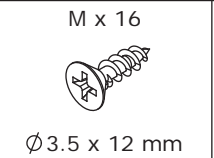  


 
 
Fix rail(G-1) to board 10 and 11 with screw(M) as shown.

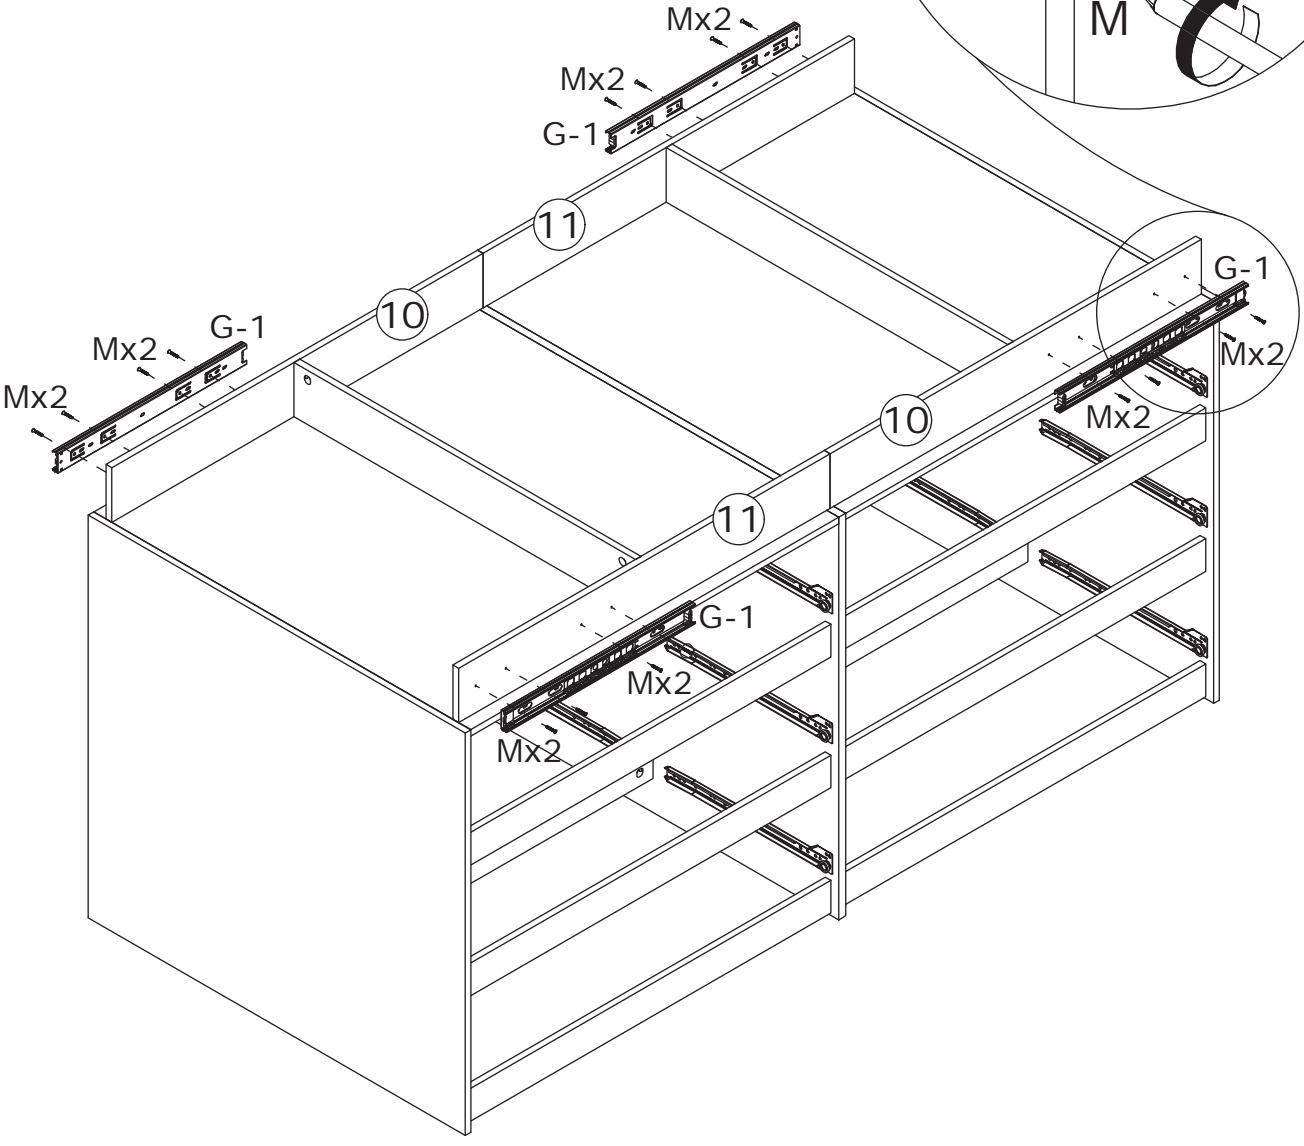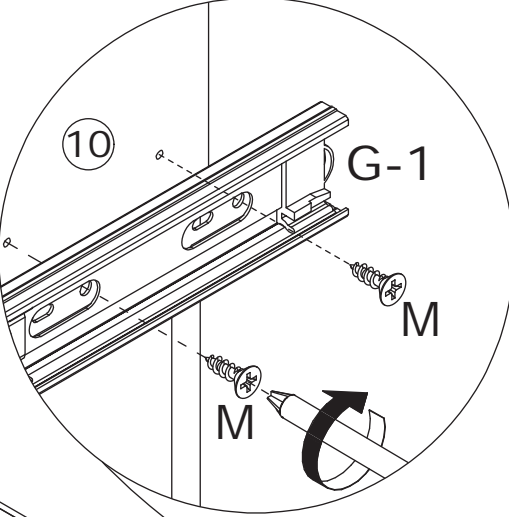



15

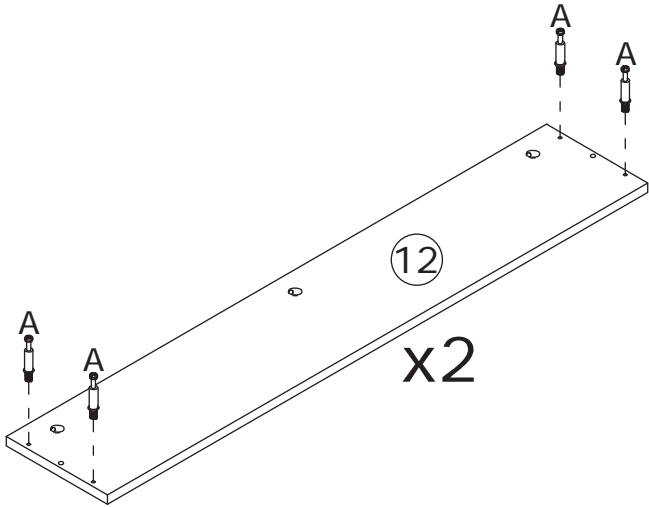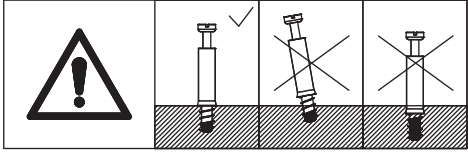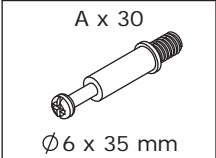   

   
Screw eccentric rod(A) into board 12, 13 and 16 at first.

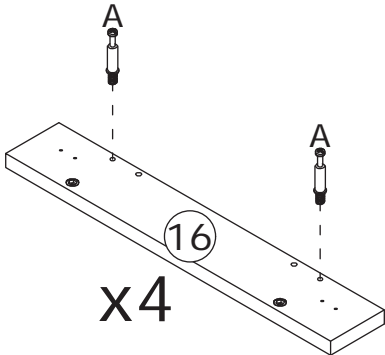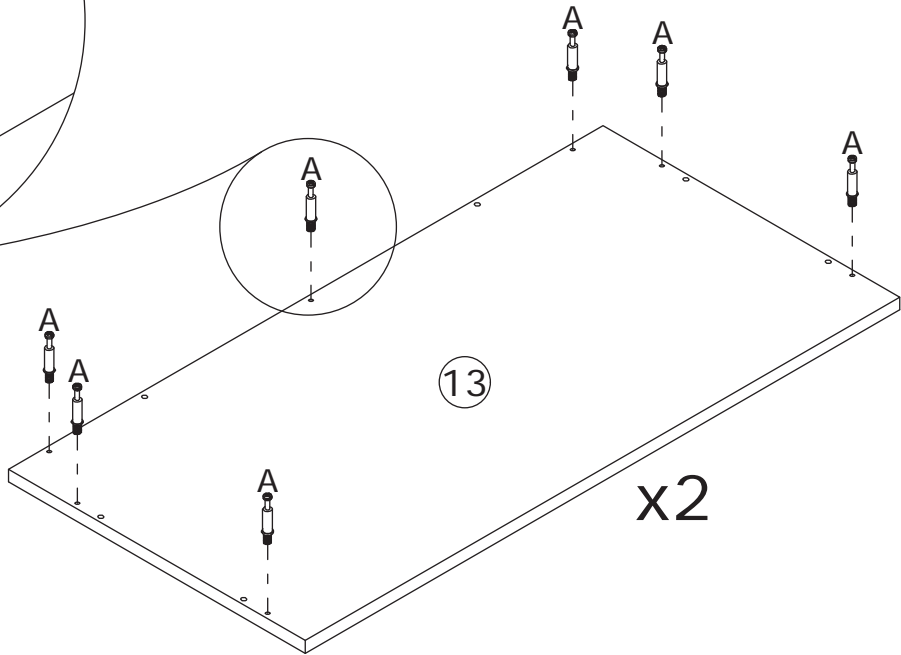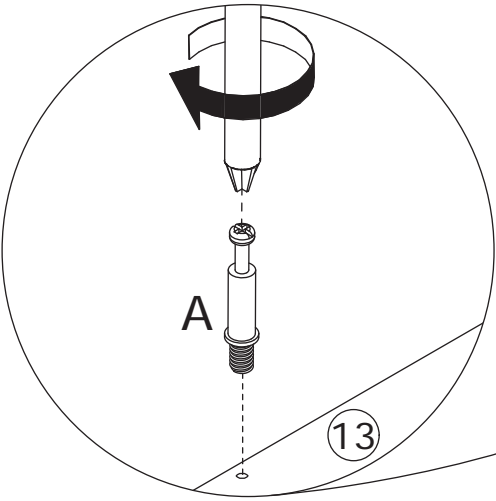







16

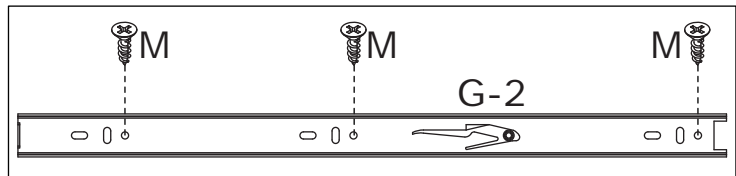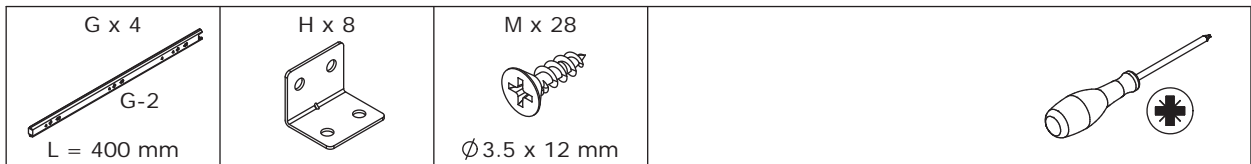  

 Fix track(G-2) and part(H) to board 14 and 15 with screw(M) as shown.

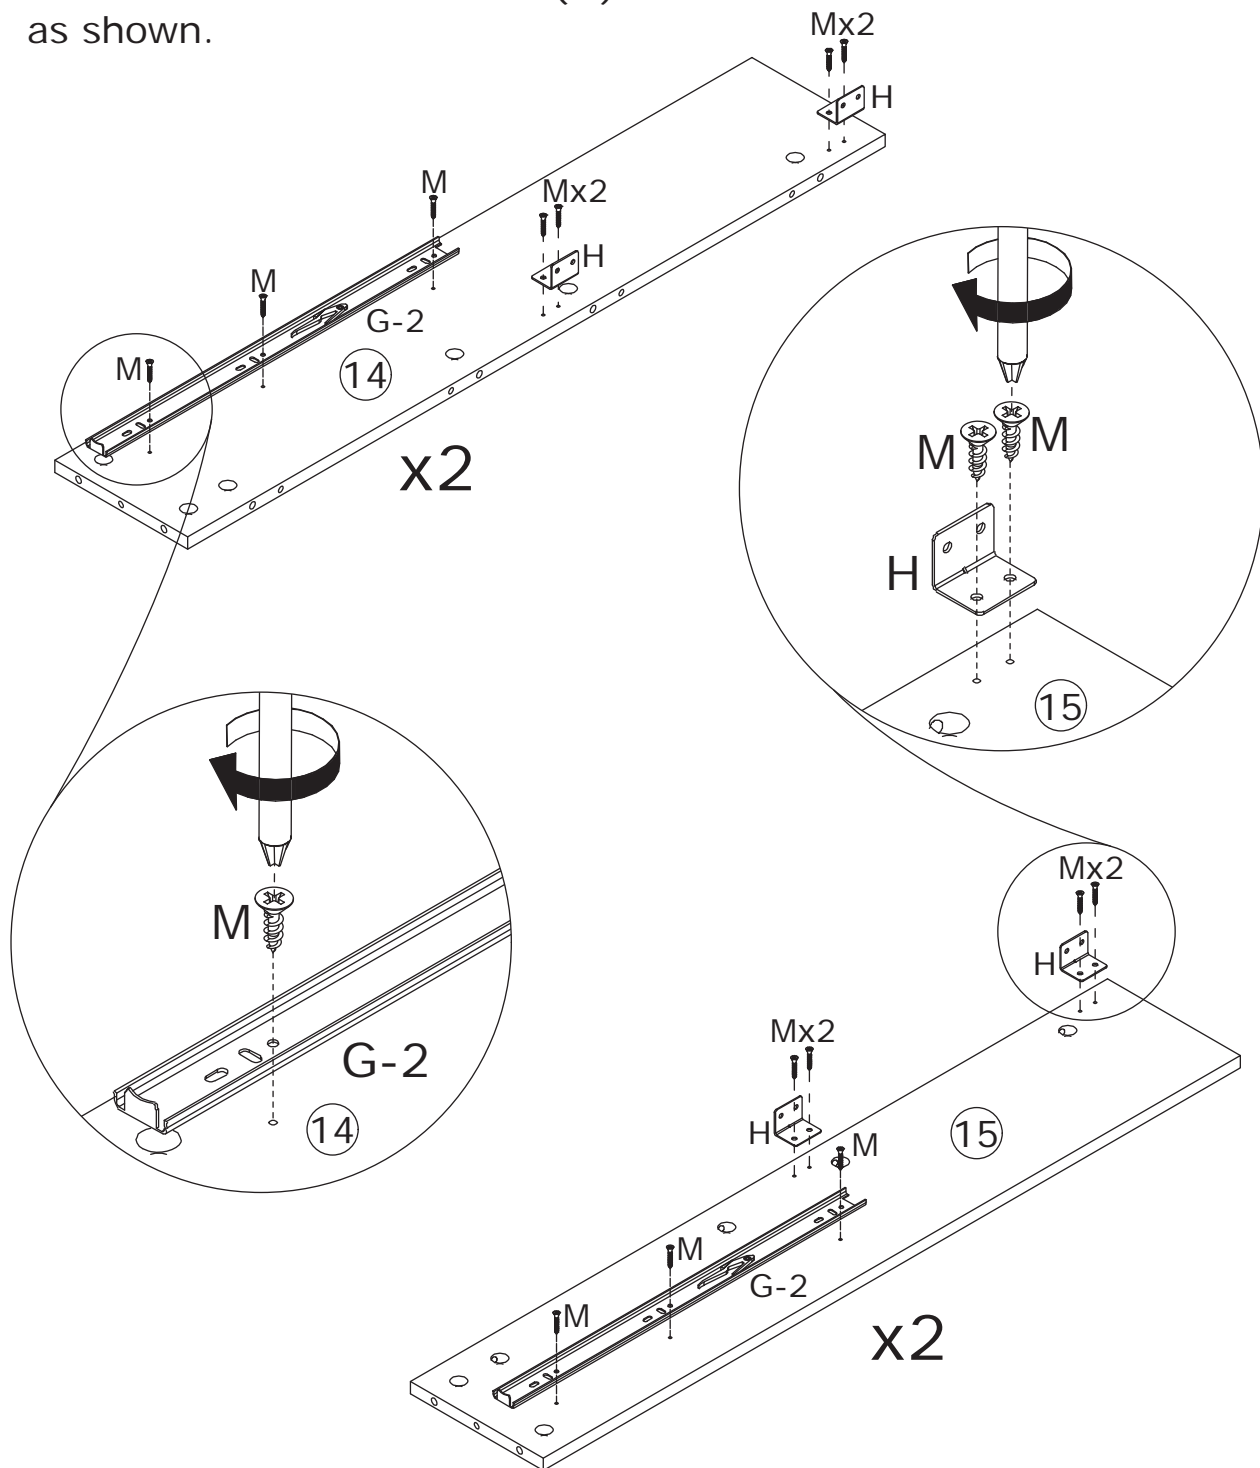


17

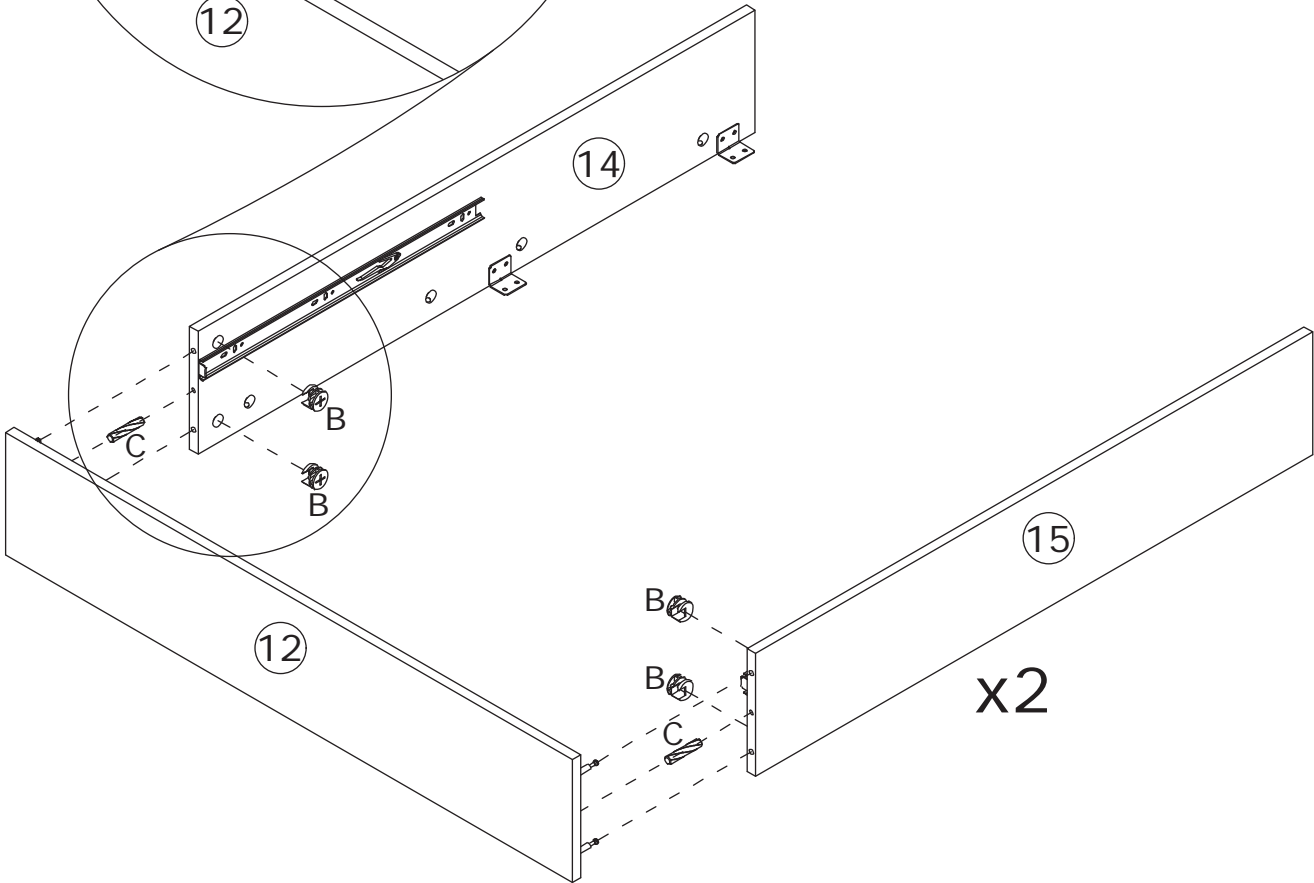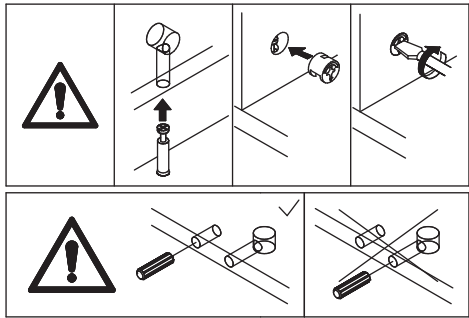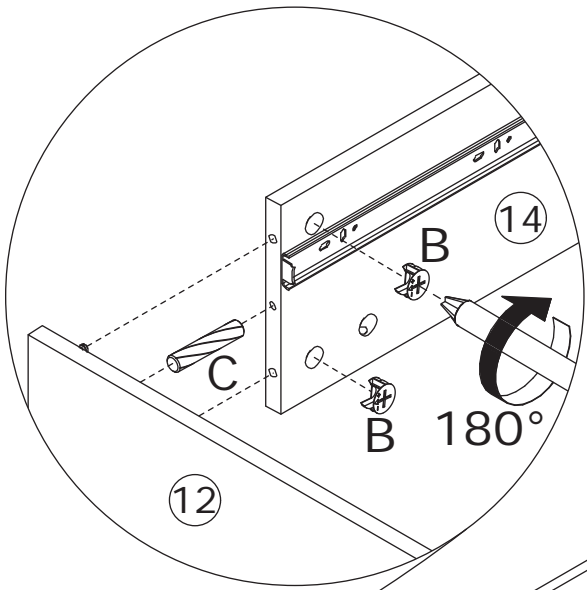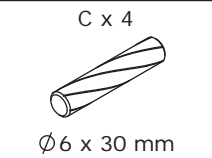     
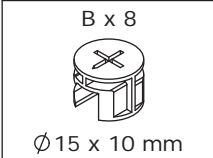 


Connect board 14 and 15 to board 12 using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.

 
18

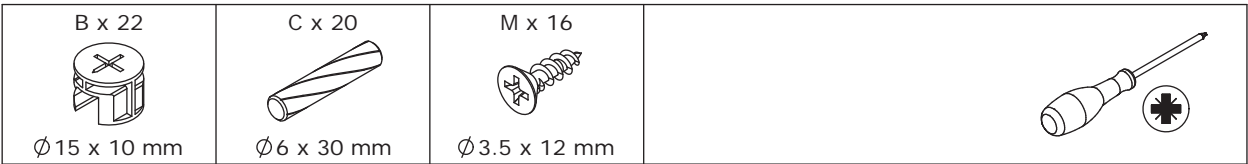

 
 
Attach board 14, 12 and 15 to board 16 and 13 using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown. Fix board 16 to part(H) with screw(M) as shown.

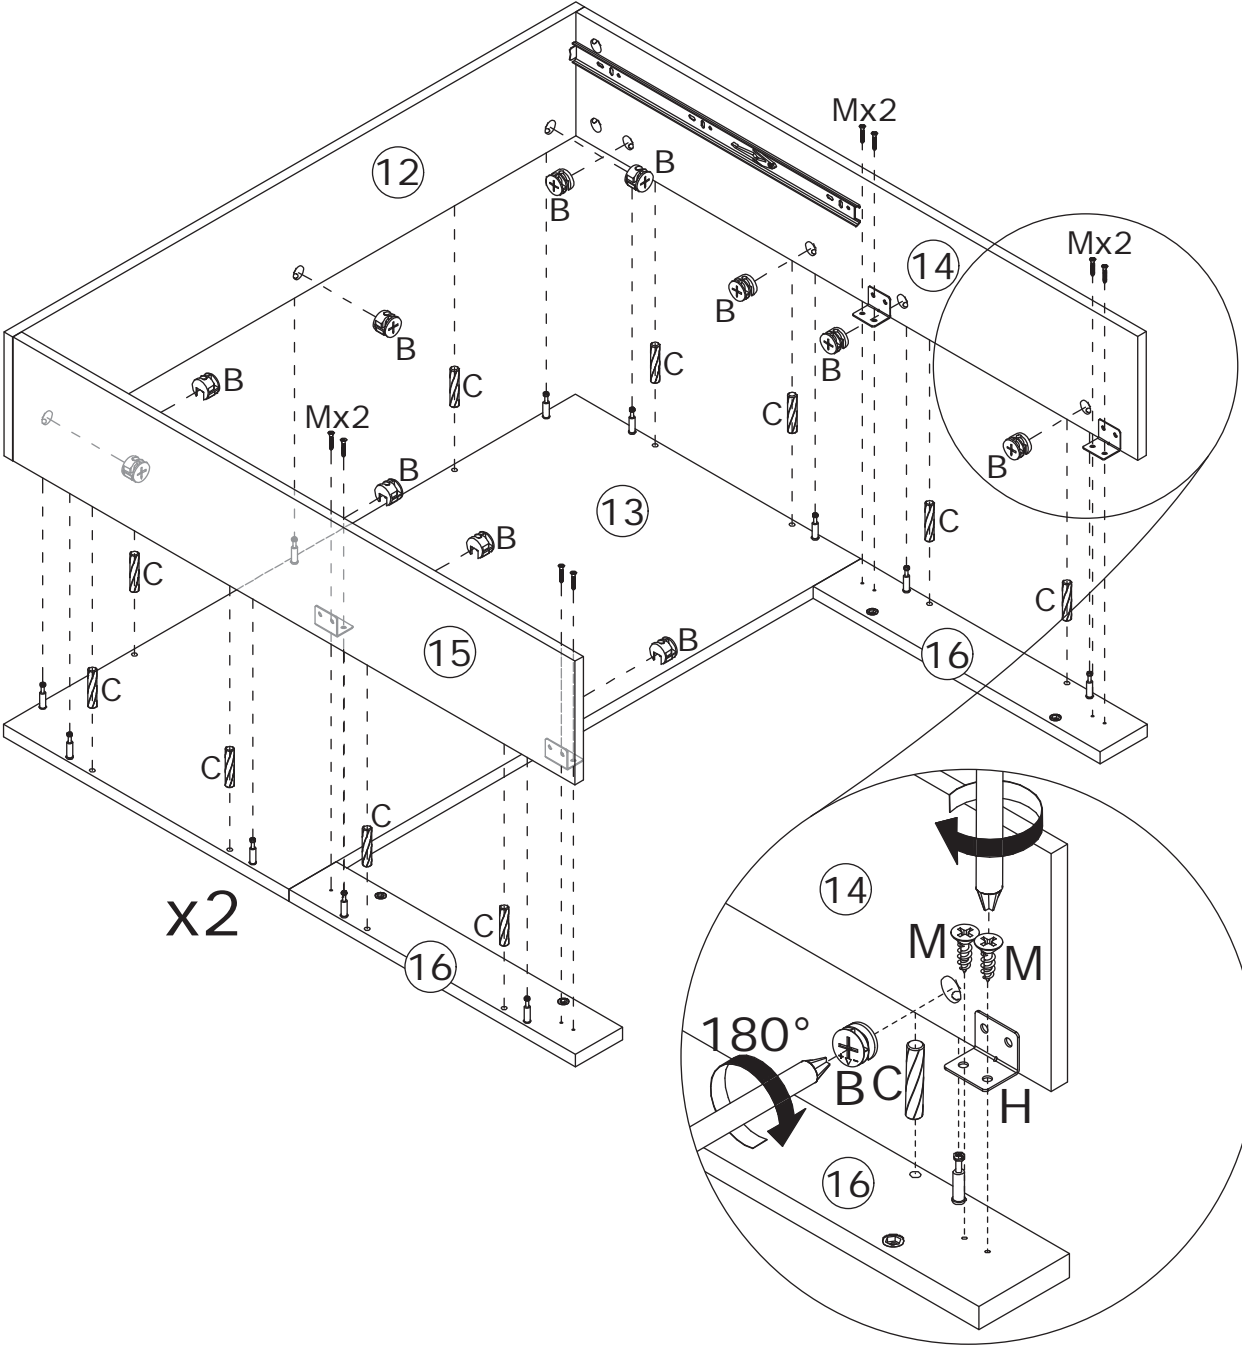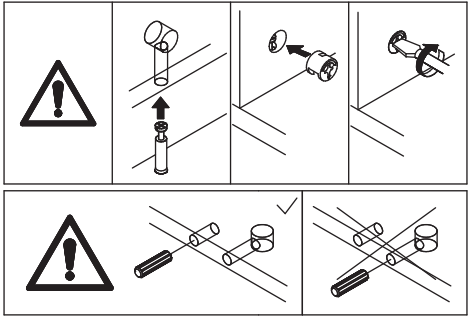


19

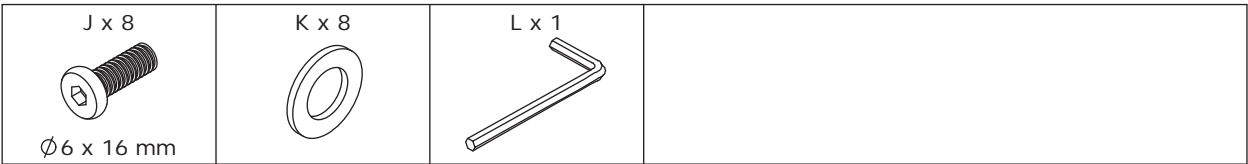 

  
Fix glass panel 3 to board 16 using washer(K) and screw(J) as shown.

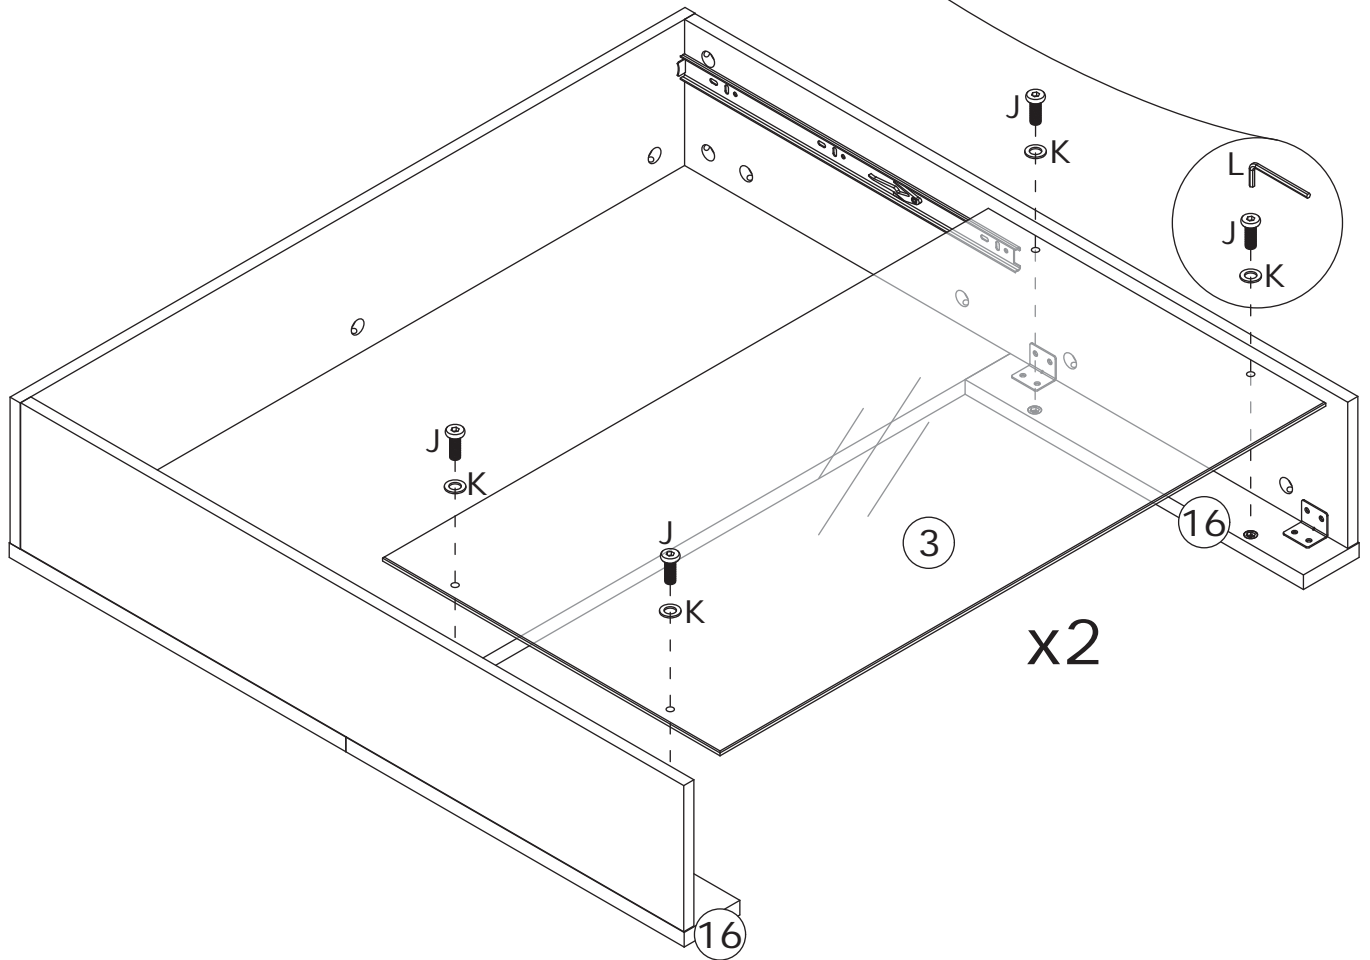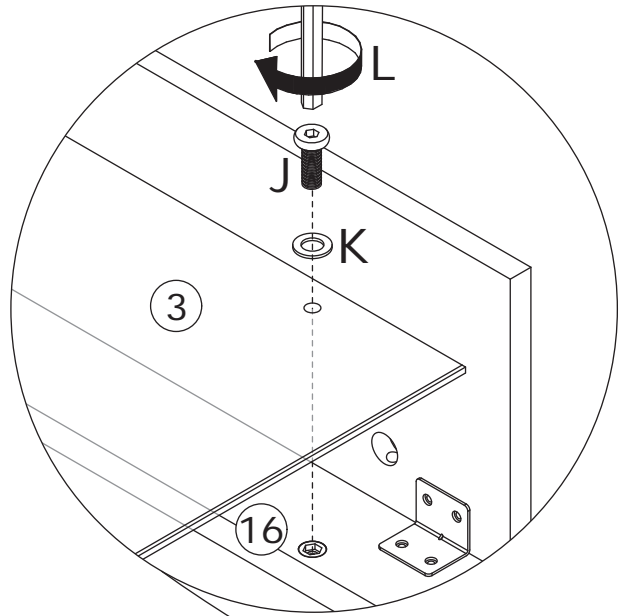




20

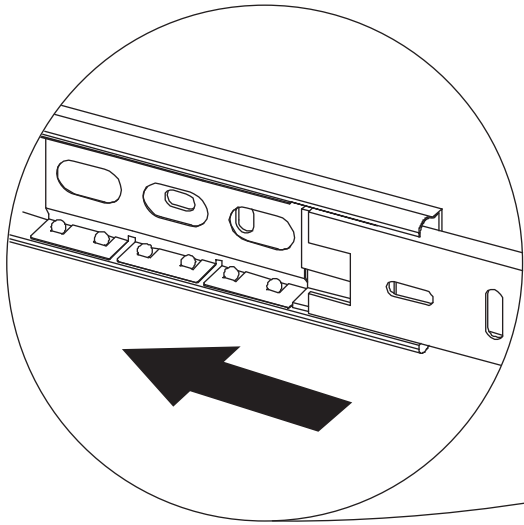 



Align rails, slide drawers.

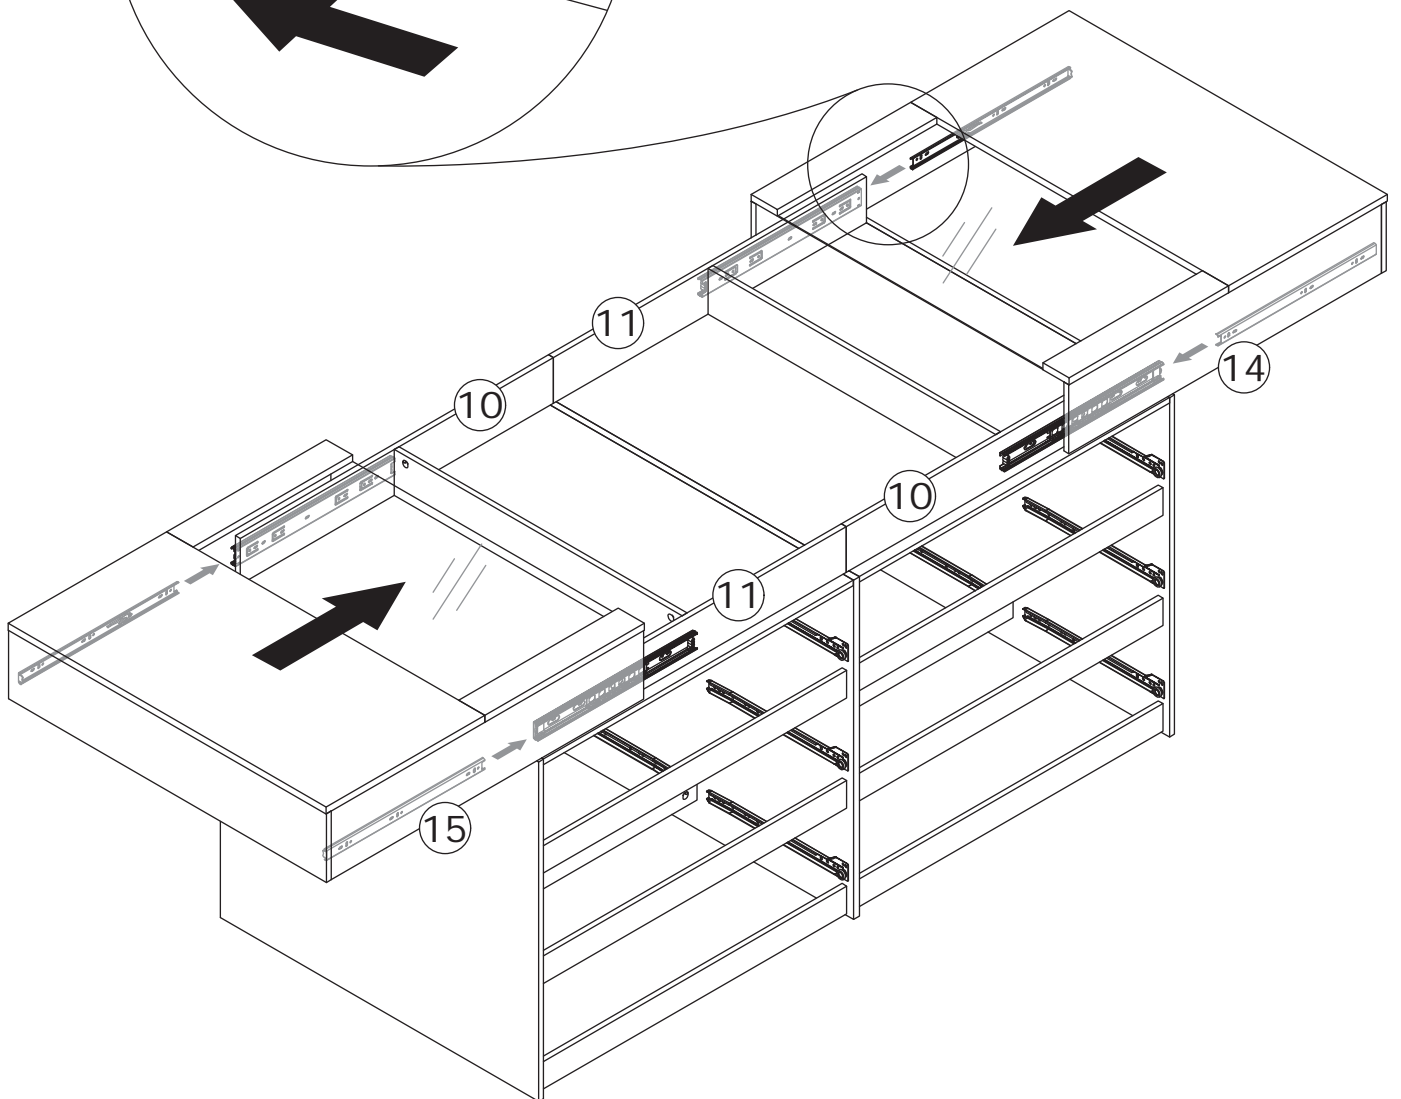 

21

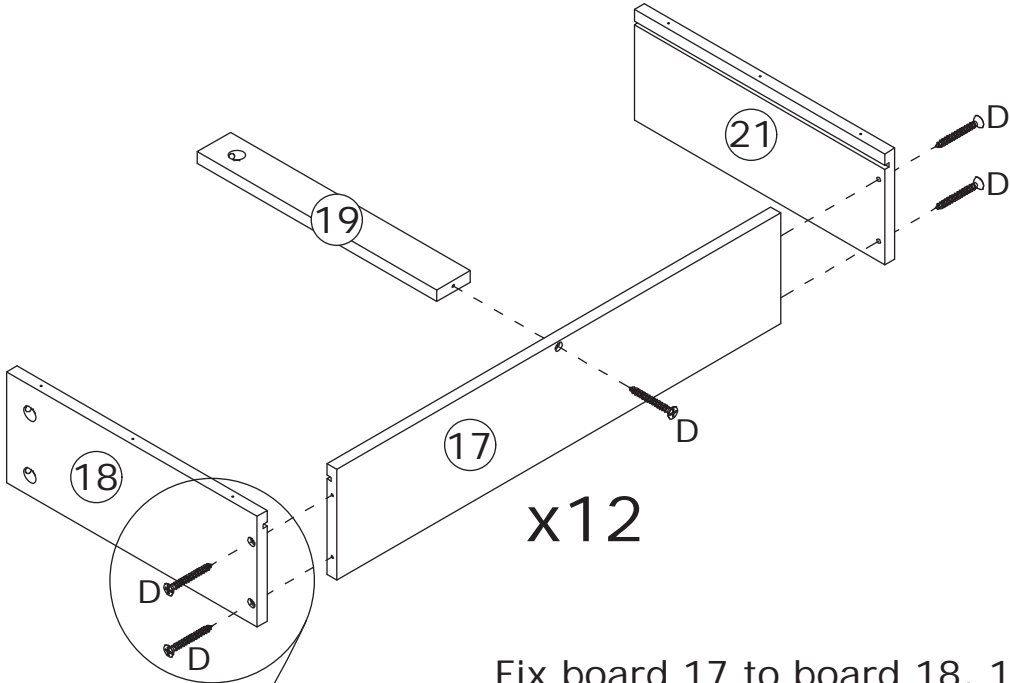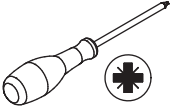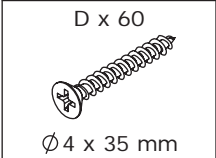  


  Fix board 17 to board 18, 19 and 21 using screw(D) as shown.  
Insert board 20 along available grooves as shown.

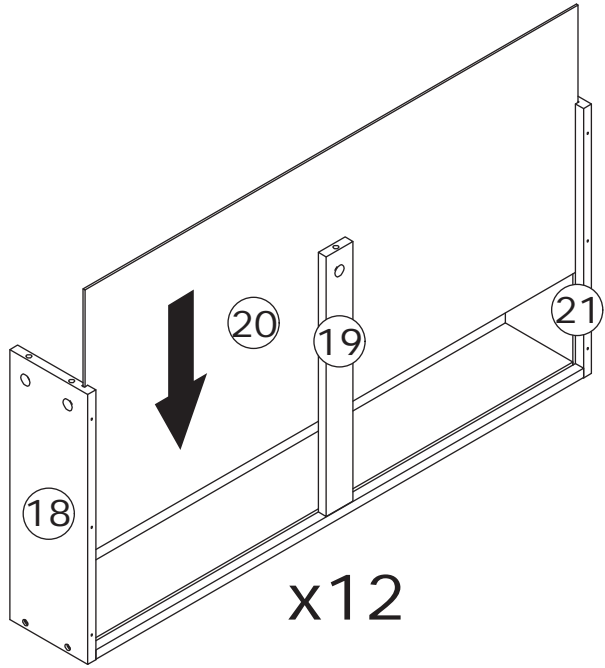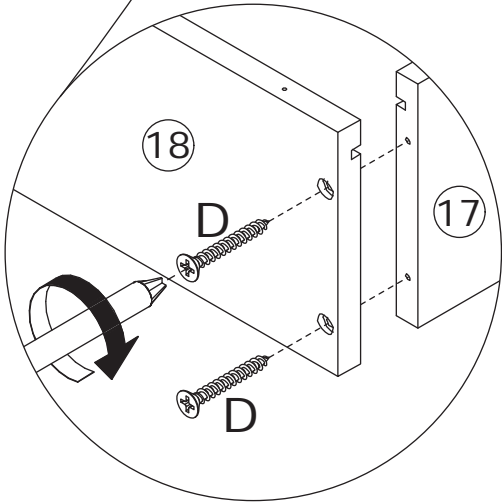

# 22

 A x 60




Ø6 x 35 mm



B x 60







 
Ø15 x 10 mm



  
Screw eccentric rod(A) into board 22 at first. Attach board 22 to the component, add cam lock(B) into and turn clockwise to tighten as shown.

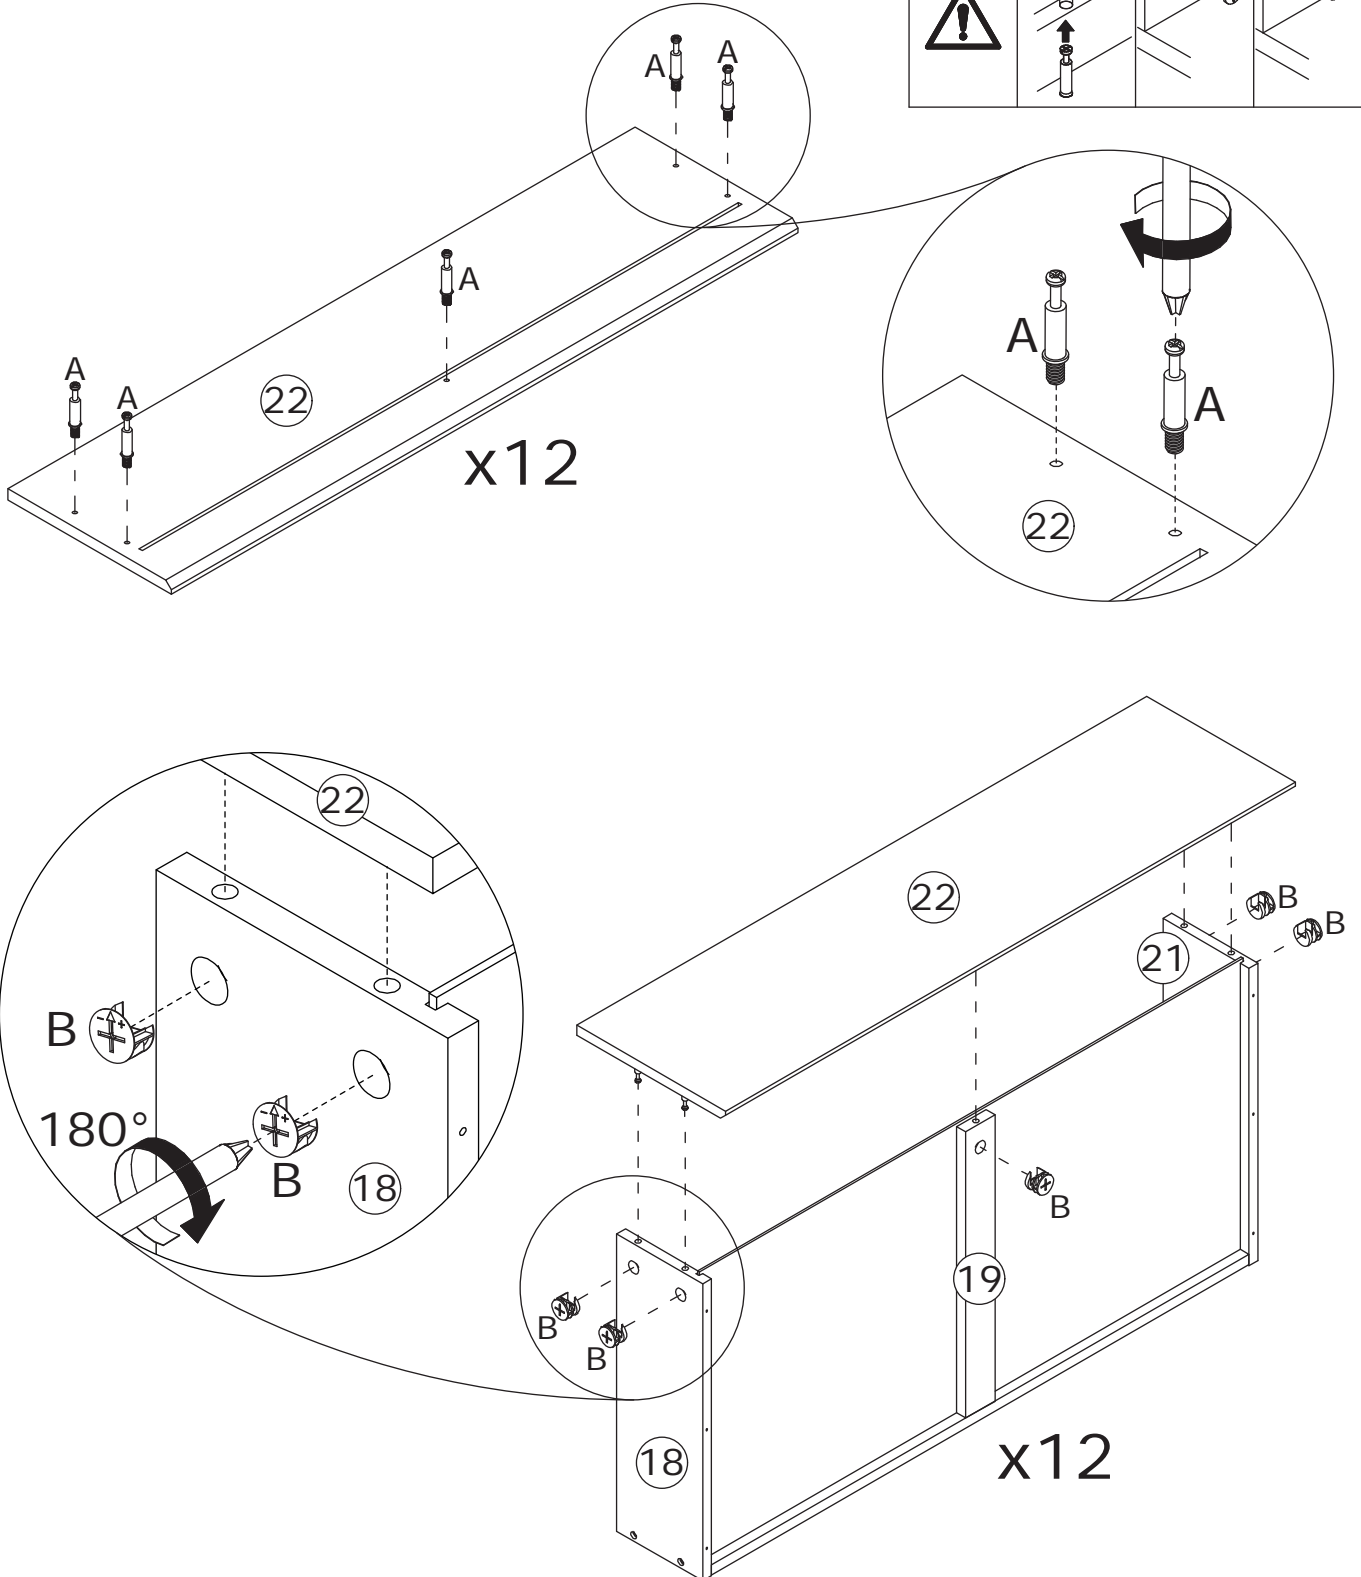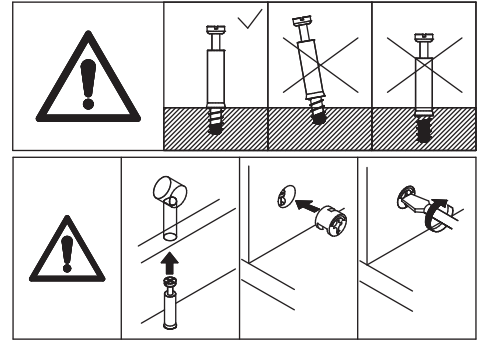

23

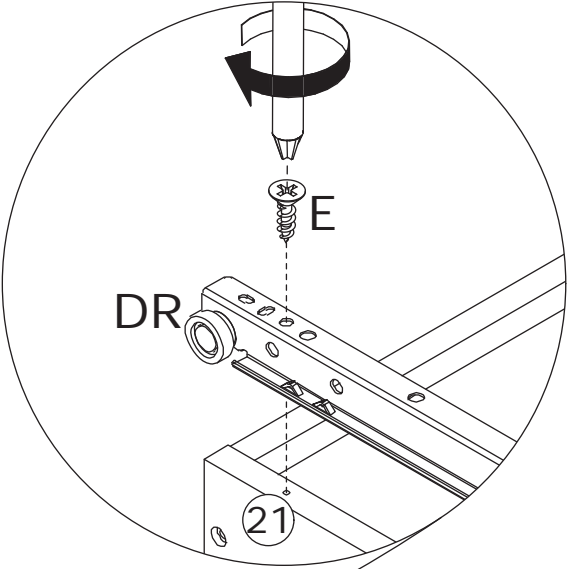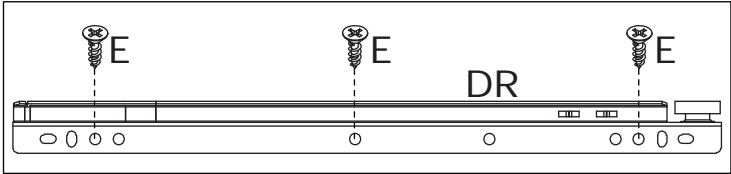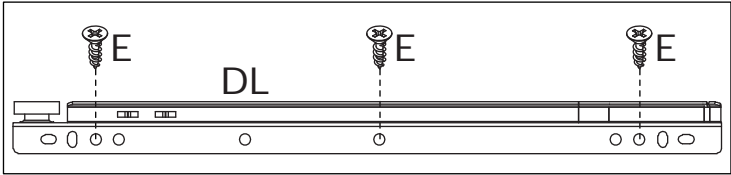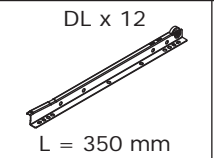    
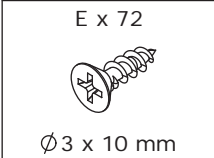 


 Fix track(DL) and (DR) to board 18 and 21 respectively with screw(E) as shown.

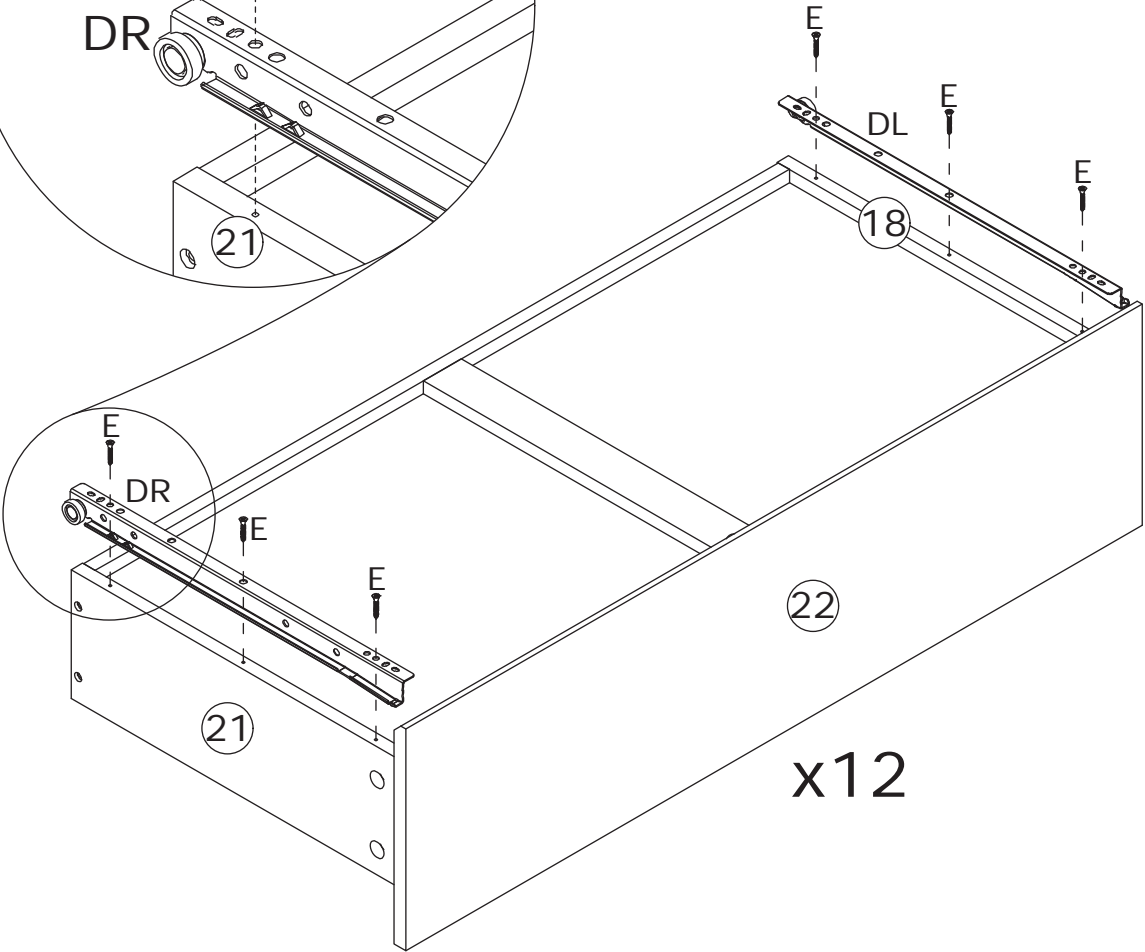

x12

  24

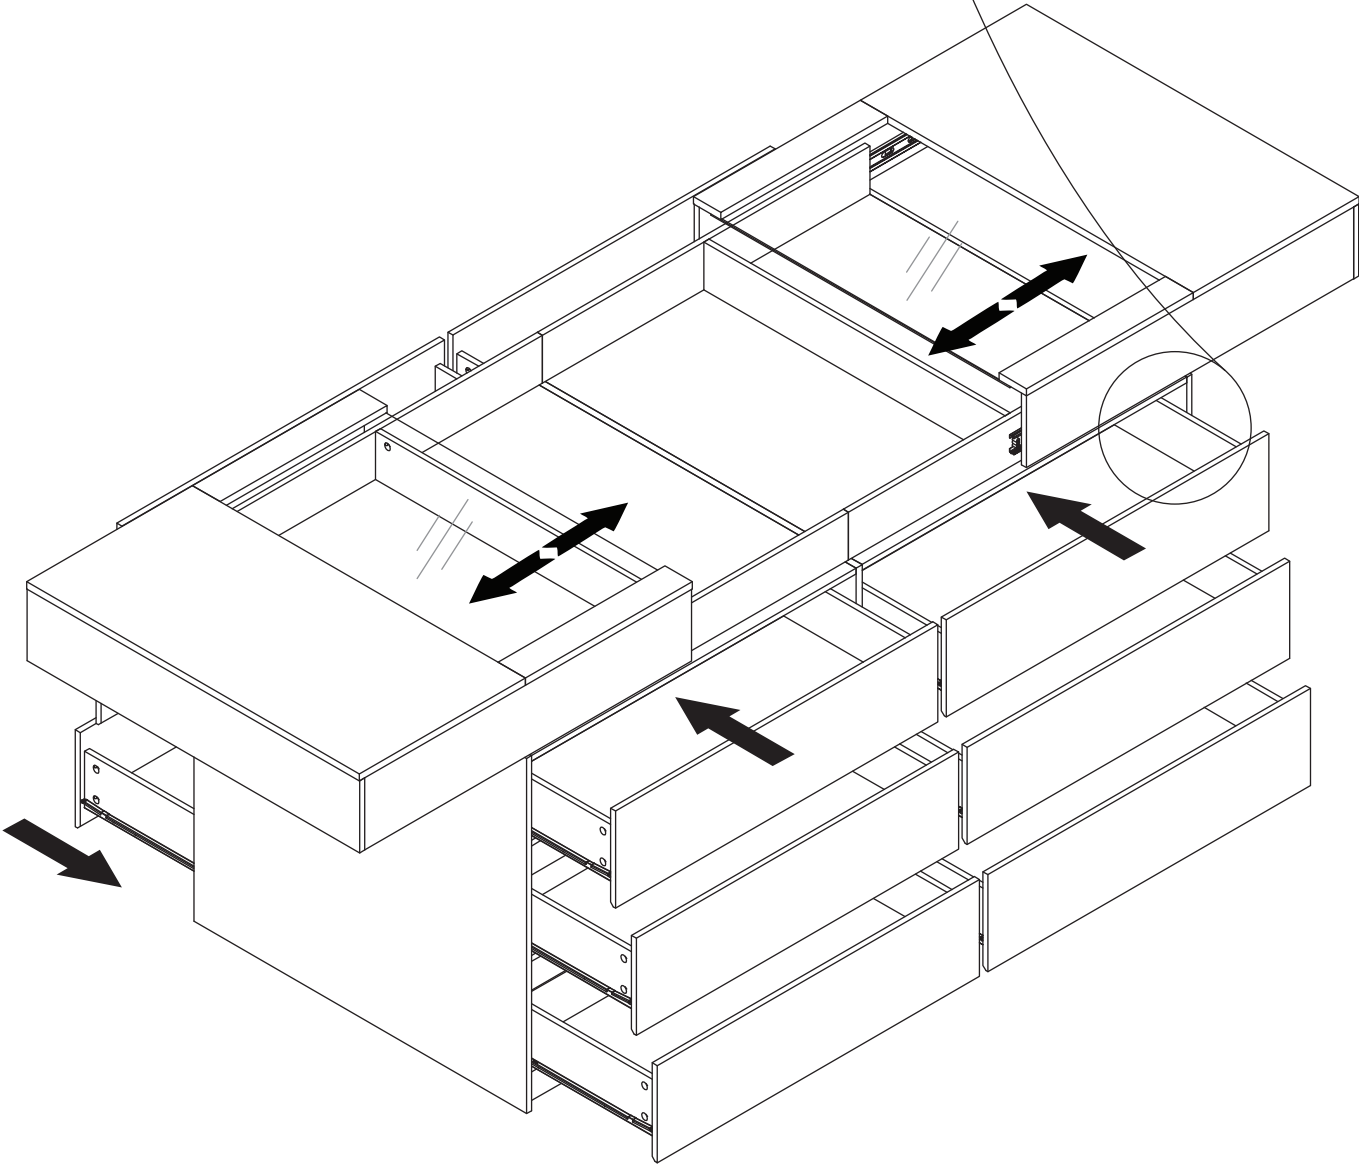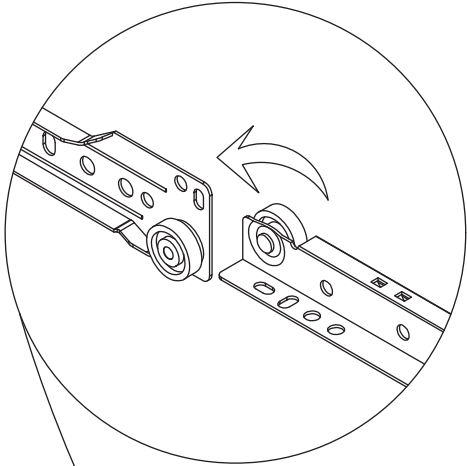

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.