

size:145x210mm 小册子



LINKchef

INSTRUCTION MANUAL


HAND BLENDER

HB-1580T



Please read carefully and keep the instruction well

DESCRIPTION:

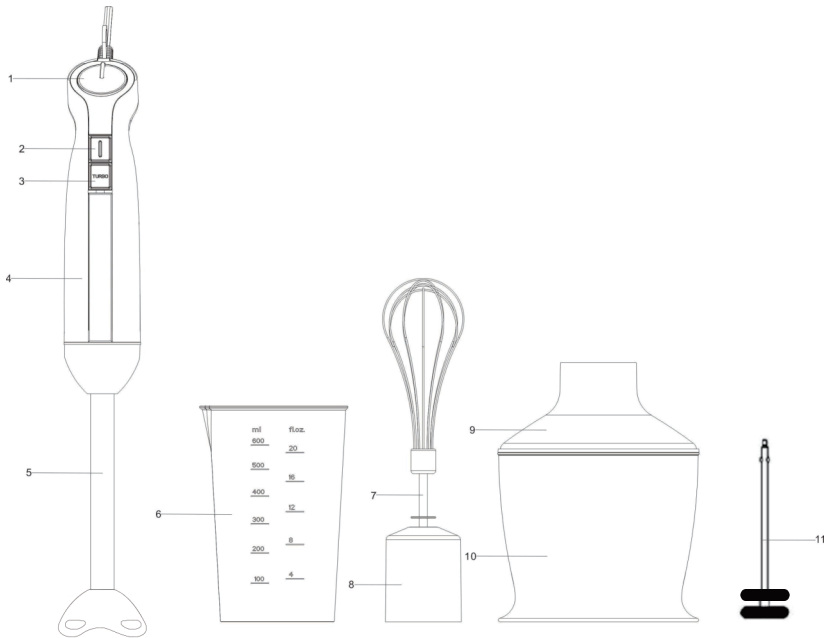


1.Speed controller	7.Whisk
2.Switch I	8.Whisk coupling unit
3.Switch II	9.Chopper lid
4.Motor unit	10.Chopper bowl
5.Blender bar	11.Milk Frother
6.Beaker	

SAFETY

When using this electrical appliances, in order to reduce the risk of fire and electric shock and/or injury to persons , basic safety precautions should be followed. Please ensure you read these instruction before you operate this product, they have been written to ensure you get the very best from your purchase.

You should respect the following safety warnings:

1. Read all instructions.
2. Before plugging into a socket, check whether your voltage corresponds to the rating label on the appliance.
3. Close supervision is necessary when any appliance is used near children. Children should not use this appliance.
4. Blades are sharp. Handle carefully.
5. Never let the appliance run unattended.
-  6. If the plug or power cable is damaged, or the appliance is faulty, do not attempt to repair, please contact with our technical assistance service.
7. The use of accessory attachments not recommended or sold by the manufacturer may result in fire, electric shock or personal injury.
8. Do not let cord hang over edge of table or counter, or touch hot surface including the stove.
9. Don't plug the appliance into the power supply until it is fully assembled and always unplug before disassembling the appliance or handle the blade.
10. Short-time operating. Use the appliance for no longer than 1minute, then take at least a 10 minutes break.
11. The appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been

given supervision or instruction concerning use of the appliance by a person responsible for their safety.

12. Do not process more than three batches without interruption. Let the appliance cool down to room temperature before you continue processing.
13. Do not use outdoors.
14. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
15. To protect against fire, electric shock and personal injury, do not immerse blender, its cord or plug, in water or other liquid.
16. This appliance is intended for household only.

INSTRUCTIONS

A, PRELIMINARY CHECKS:

1. After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged. Contact with the technical assistance service.

2. Connecting the appliance


Check that the mains power supply voltage corresponds to the value indicated on the rating label.

If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type, or change the plug by a qualified professional.

B, USING BLENDER

The hand blender is perfectly suited for preparing dips, sauces, soups, mayonnaise and baby food as well as for mixing and milk shakes.

1. Insert the blender bar into motor unit, turn clockwise to lock it into motor unit.

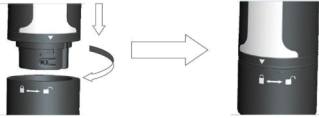

2. Put ingredients in the beaker, to prevent splattering, immerse the blade guard completely in the ingredients.

You can use the hand blender in the beaker and just as well as in any other vessel.



3. Switch the appliance on by pressing the switch I or switch II, you can adjust speed by top speed controller when pressing the switch I.



4. Blend the ingredients by moving the appliance slowly up, down and in circles.

C, USING CHOPPER

The chopper is perfectly suited for hard food, such as chopping meat, cheese, onion, herbs, garlic, carrots, walnuts, almonds, prunes etc.

CAUTION: The blades are very sharp! Be very careful when handling the blade unit.

1. Put the chopper blade unit in the chopper bowl, press down the blade unit.



2. Put the ingredients in the chopper bowl, solid ingredients should not be larger than 2cm pieces.

3. Put the chopper coupling unit onto the chopper bowl.



4. Fasten the motor unit onto the chopper bowl, Installation Reference “using blender”.



5. Switch the appliance on by pressing the switch I or switch II, when pressing the switch II is the max power .

D、 USING WHISK

The whisk is intended for whipping cream, beating egg whites and mixing sponges and ready-mix desserts.

1. Insert the whisk into the whisk coupling unit.



2. Connect the coupling unit to the motor unit, installation reference “using blender”.



3. Press the switch I to activate the hand blender, and press the switch II after approx 30 seconds to prevent ingredients splashing.



Note : Please refer to the operating instructions of the whisk for the use of the milk froth stick.

CLEANING AND MAINTENANCE

1. Before cleaning, unplug the appliance and detach the accessories.
2. Wipe the motor unit, the chopper whisk coupling unit with a moist cloth, do not immerse them in water. Other accessories can put into the water clean. Please **DON'T** put in the dishwasher!
3. If food is not easily rinsed off the blade or whisk, place a drop of dish detergent in the mixing container with water. Plug cord into outlet . Immerse the blade end portion or whisk and operate the unit for about 10 seconds. Unplug, rinse under running water, and then dry.
4. When will not use long time, keep this appliance well ventilated at the aridity of place to prevent the motor of appliance is affected with damp.

CAUTION:

The cutting edges of the blades are very sharp, cleaning it must be carefully.

TECHNICAL SPECIFICATIONS

Model NO	HB-1580T
Rated voltage	120V 60Hz
Rated power	1000W

