

Thank you for choosing this product.

Your complete satisfaction is our top priority.

Customer Service and Warranty Information

- **For Warranty Assistance:**

If you experience any issues or require additional information regarding your warranty, please do not contact the place of purchase. Instead, reach out directly to our Customer Service Team or visit our website for prompt support.

- **Warranty Coverage:**

We warrant its products to the original purchaser against defects in materials or workmanship. A defect is defined as any flaw that impairs the normal use of the product. This warranty is limited to the replacement of defective parts or components and is valid for one (1) year from the date of purchase.

- **Warranty Limitations:**

This warranty covers products used under normal household conditions. It does not apply to furniture used outdoors or damage resulting from improper assembly or disassembly, product modification, intentional damage, accidents, misuse, exposure to elements, or any labor or assembly costs.

- **Additional Terms:**

 
 
 
 
 
We reserve the right to require proof of purchase to process any warranty claim. We are not liable for any incidental or consequential damages arising from the misuse of our products.

ASSEMBLY GUIDE

1 SHAKER DOOR, 1 SOLID WOOD DOOR, 1 CLEAR GLASS DOOR, 1 FROSTED GLASS DOOR

White
Mocha
Gray
Black
Teal
Yellow

Aqua
Green
Sage
Beige
Navy Blue
Antique Blue

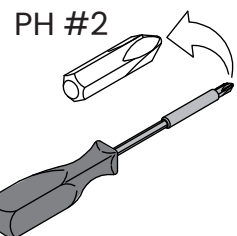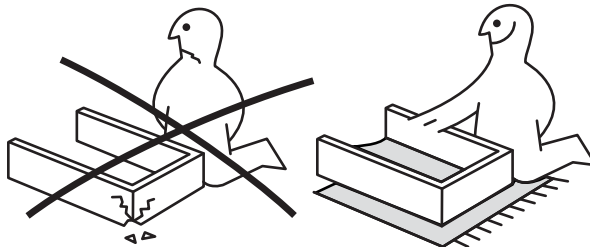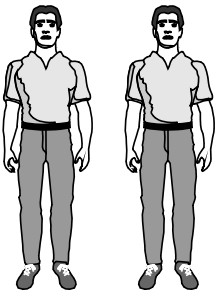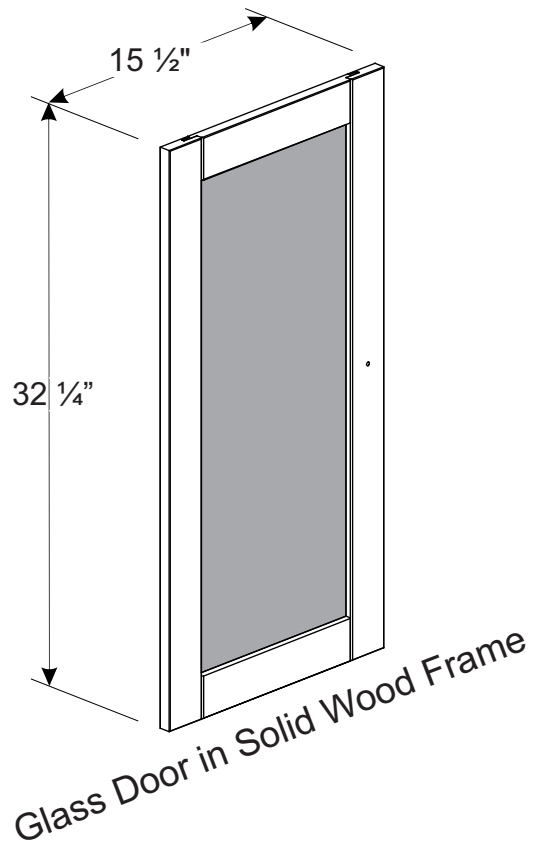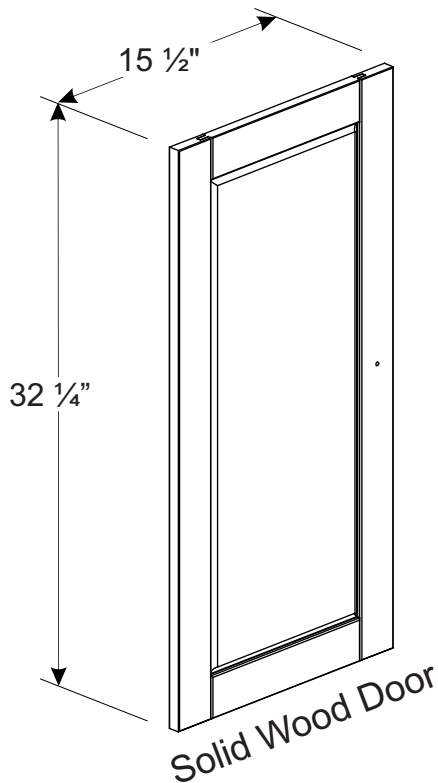





Before You Begin Assembly

- Carefully inspect the package contents. A complete parts checklist is provided below.
- If any parts are missing or damaged, please contact us for assistance.



Assembly Tips

- Assemble the item on a flat, smooth surface. We recommend placing a blanket or protective covering underneath to prevent scratches.
- Use a power drill **only at a low-speed setting** to avoid damaging components.
- Assemble the product as close as possible to its final location to minimize the need for moving it later.
- Important: The hardware pack contains small parts that may pose a choking hazard.
Keep all small items out of reach of young children.

    PARTS LAYOUT

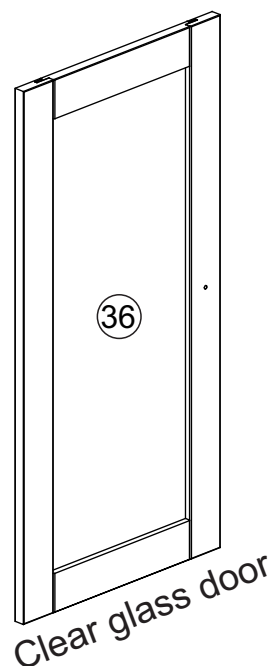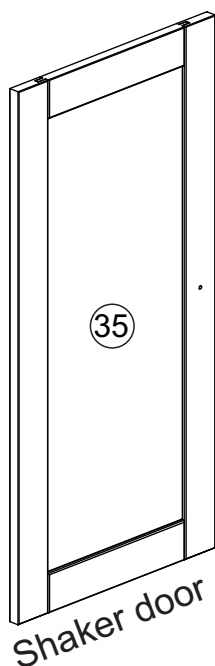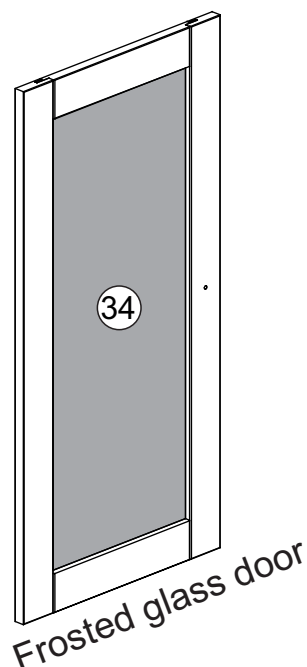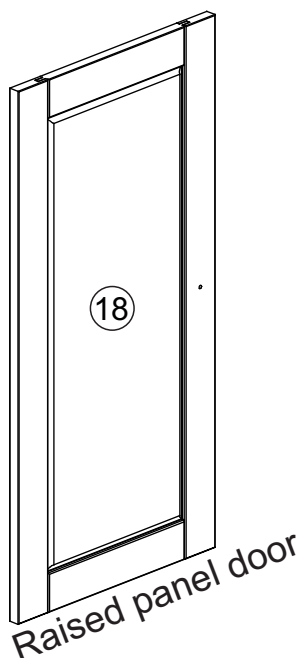

  Screws Are Illustrated at Actual Size for Accurate Reference

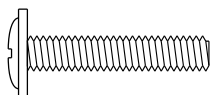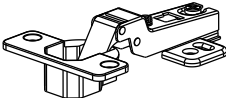A44	 3,5x14	08+1
A25	 M4x25	01+1
F10		02
H4		01

 


WARNING:
CHOKING HAZARD


Contains small parts - choking hazard.
Adult supervision is required during assembly.
Not suitable for children under 3 years of age.

01)



If the hinge (F10) is detached, attach it to the hinge plate by aligning and pushing it in until it clicks securely into place.

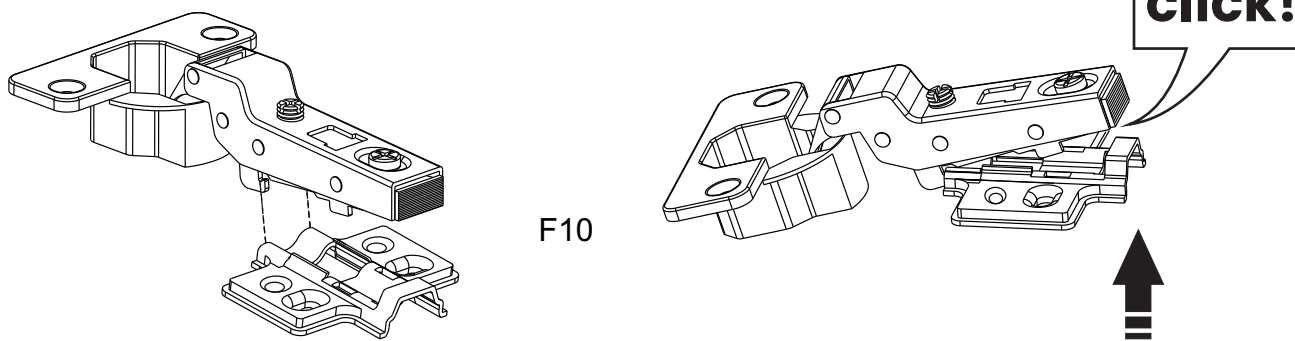

 
Set the adjustment screw to the midpoint height position before installing the hinges

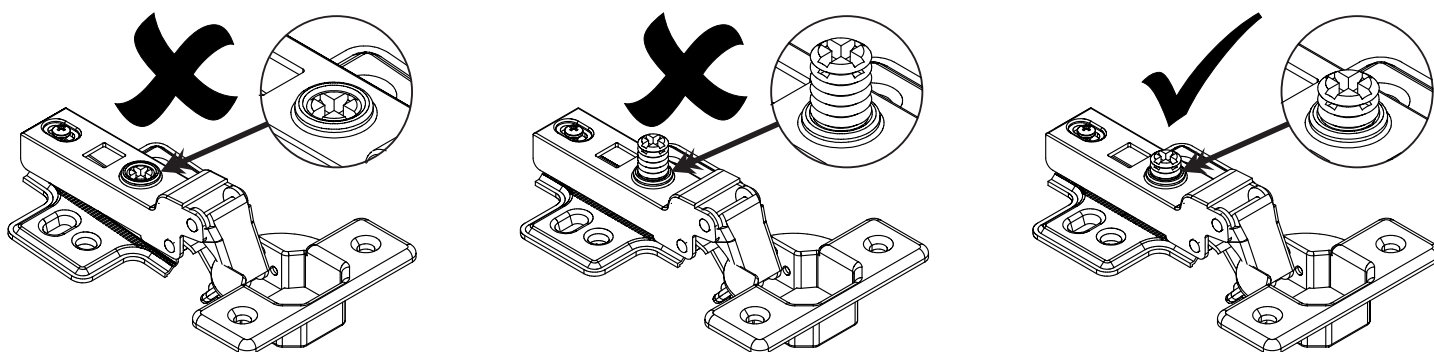

  02) Hinge Installation – Right-Side Door Mounting

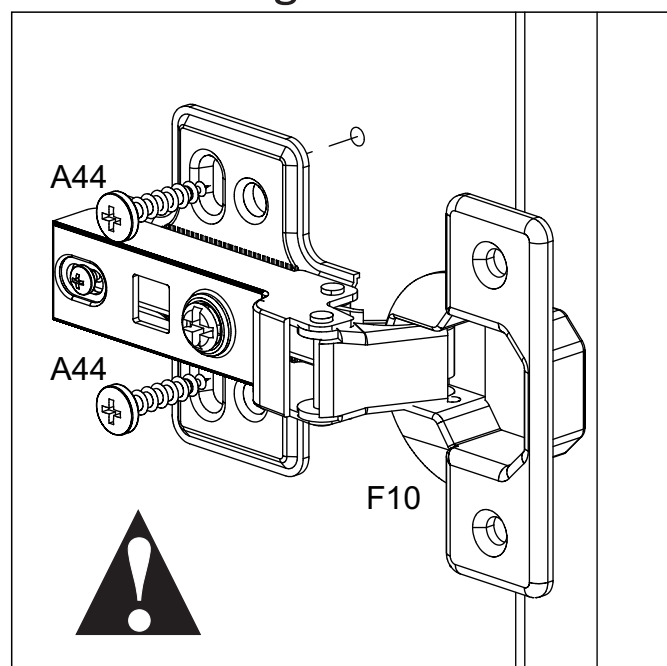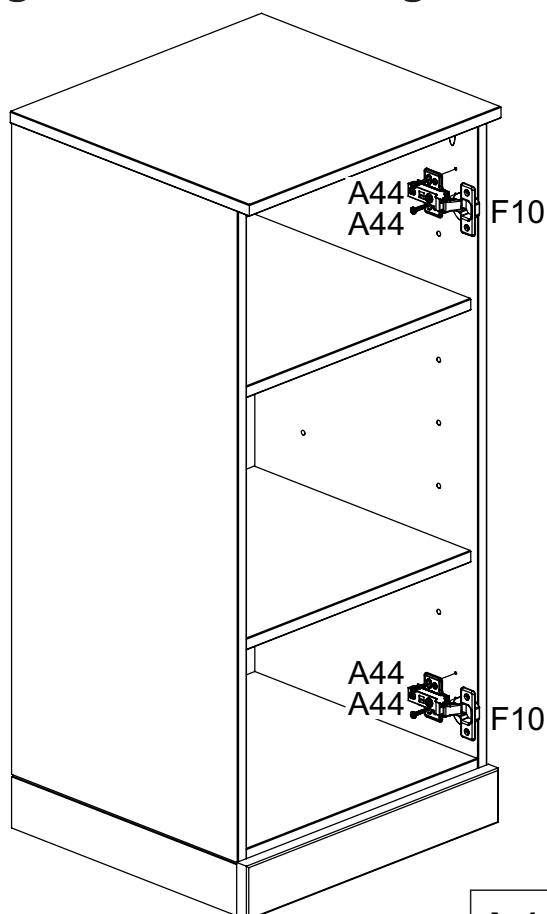

A44

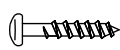 

3,5x14

 
 
 
04

 
F10





02

03) Installing the Door on the Right Side

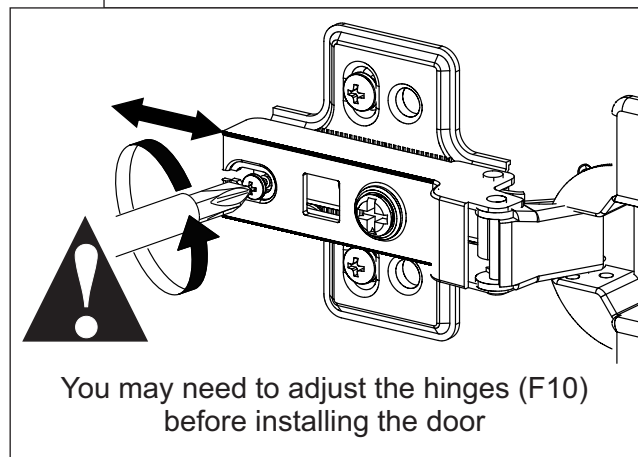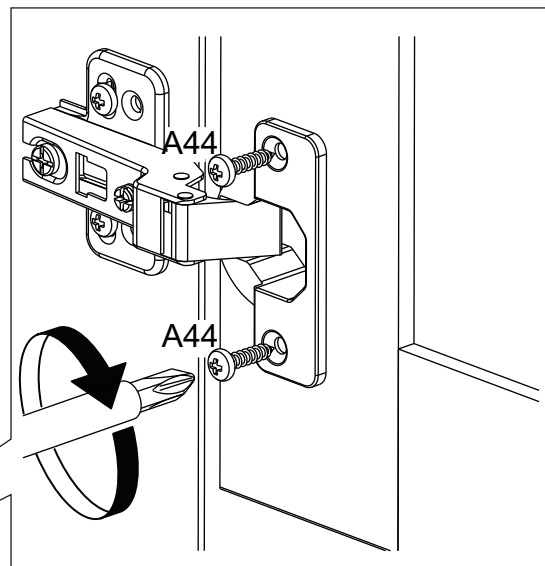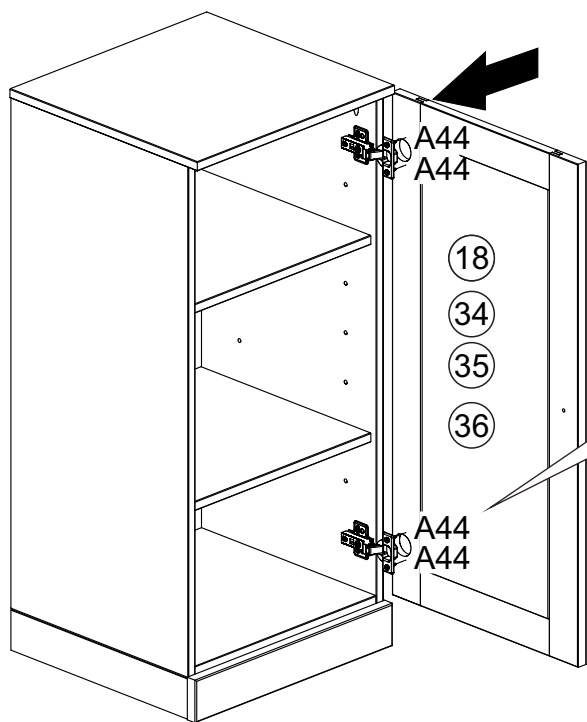




A44		04
3,5x14		

  
04) Hinge Installation – Left-Side Door Mounting

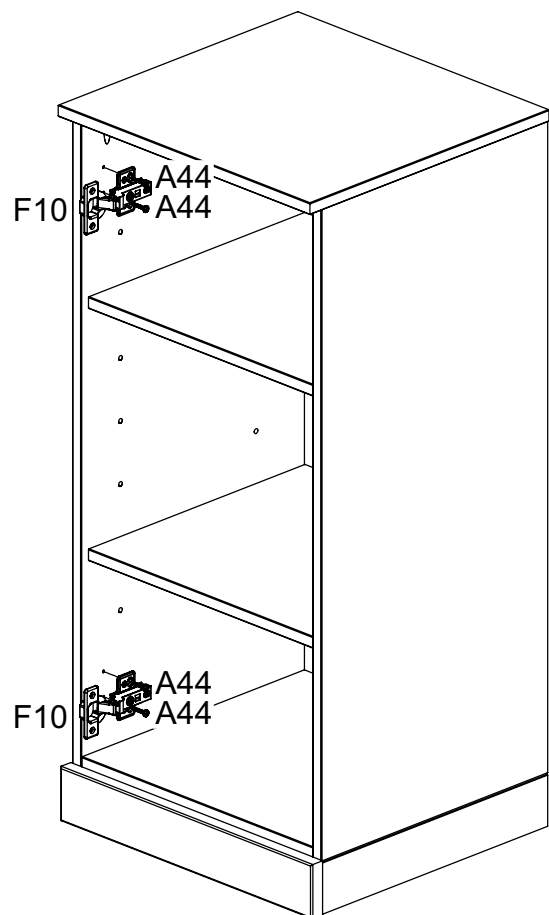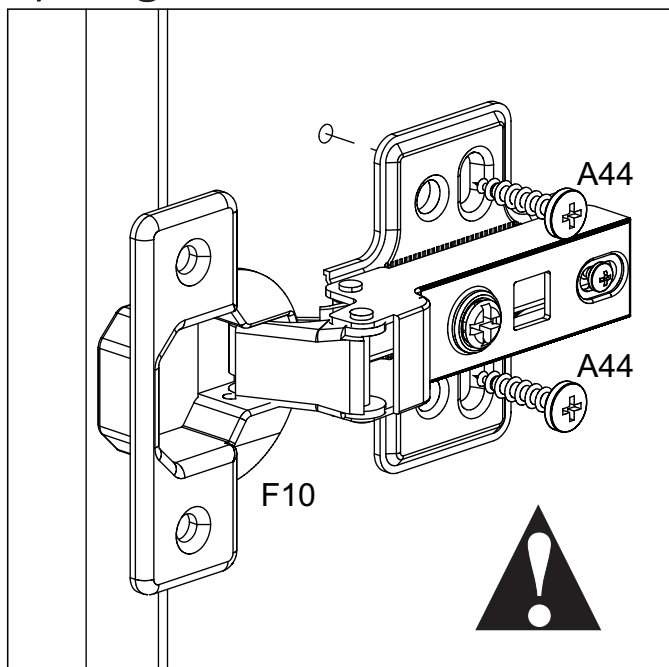





A44		04	F10		02
3.5x14					

    05) Installing the Door on the Left Side

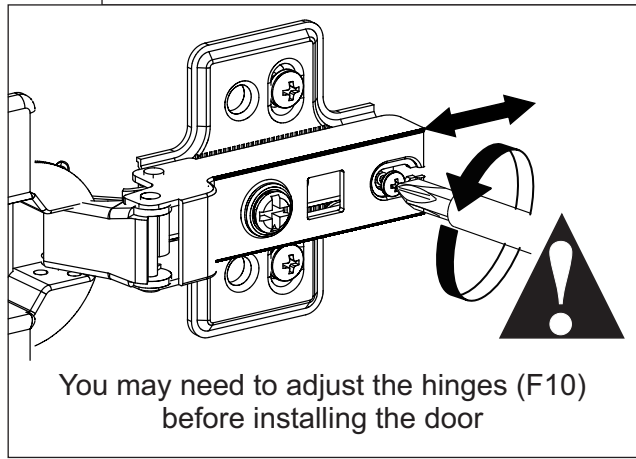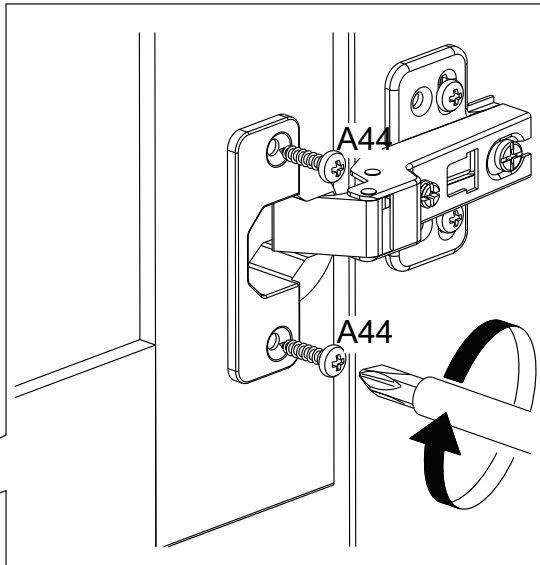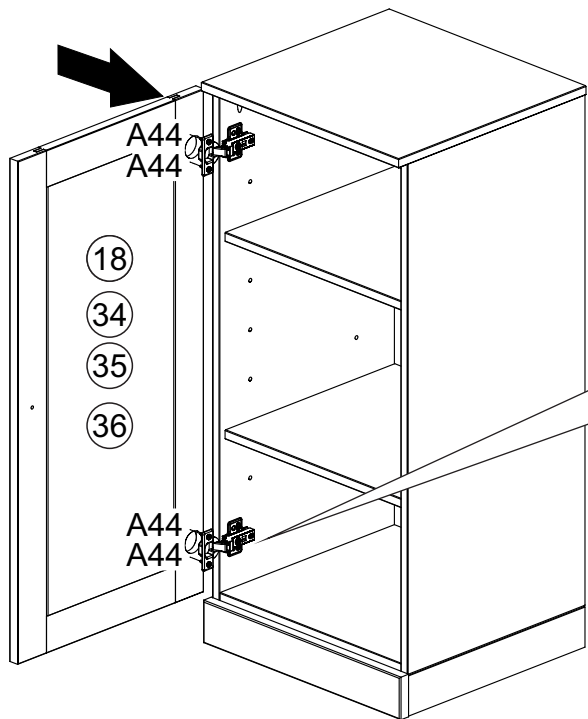

A44		04
3,5x14		

    
06) Attaching the Pull to the Door

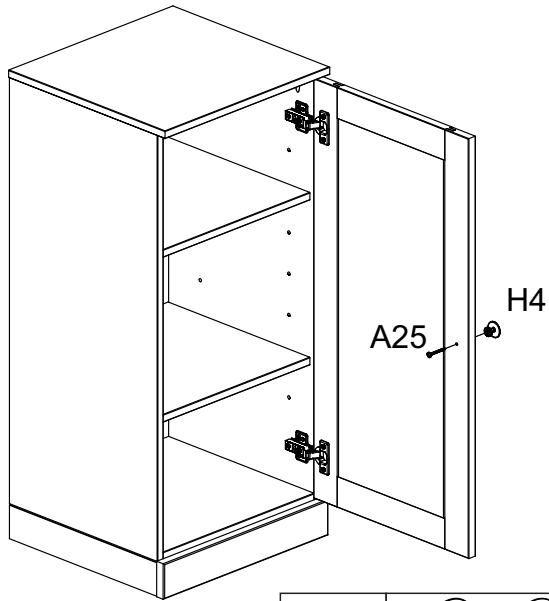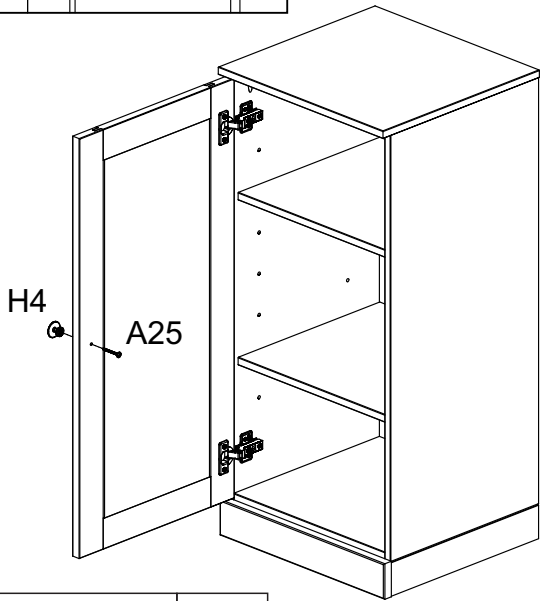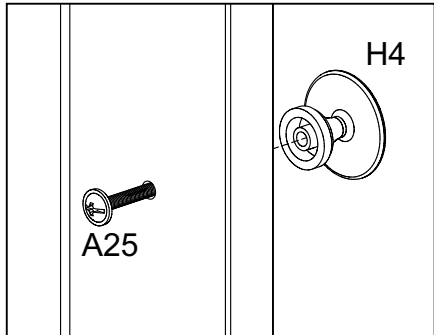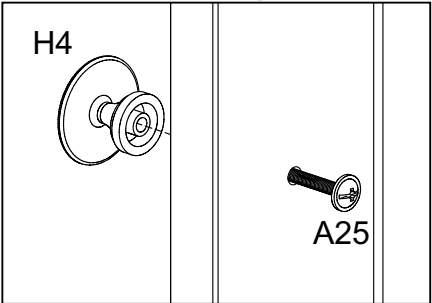


A25		01
M4x25		

H4		01
----	---	----

 07) Top and Bottom Door Installation (Requires purchase of two cabinets)




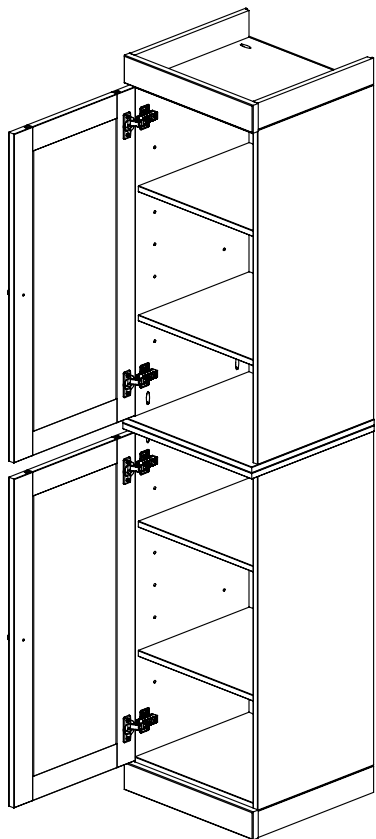


Doors installed on the leftside




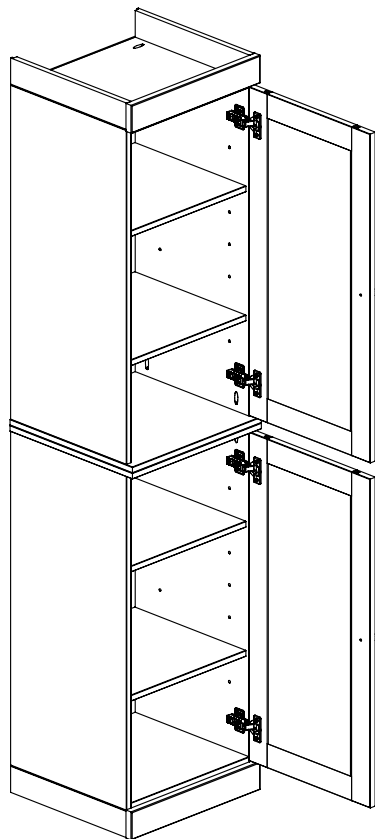 


Doors installed on the right side

    
08) Adjusting Misaligned Doors

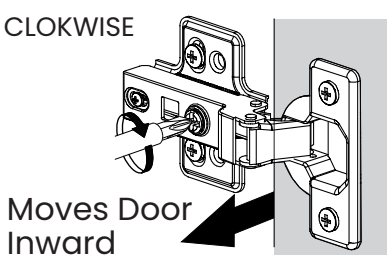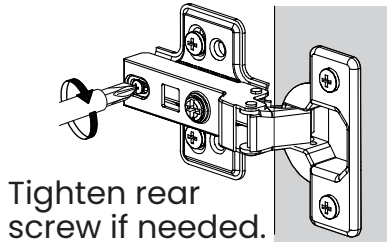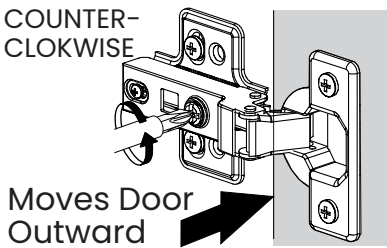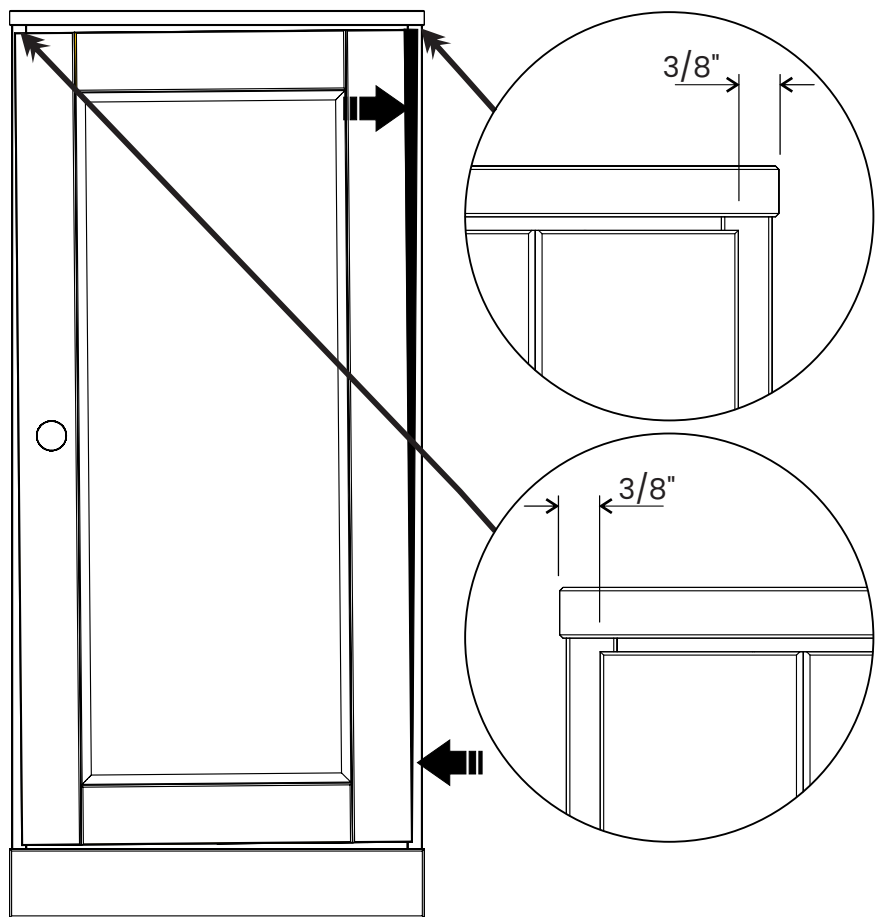

    
09) Aligning Doors with Side Panels

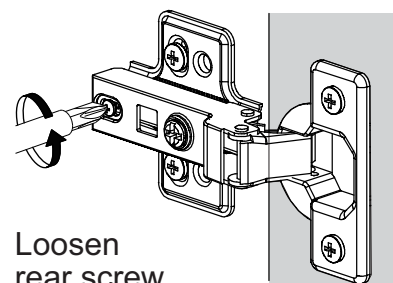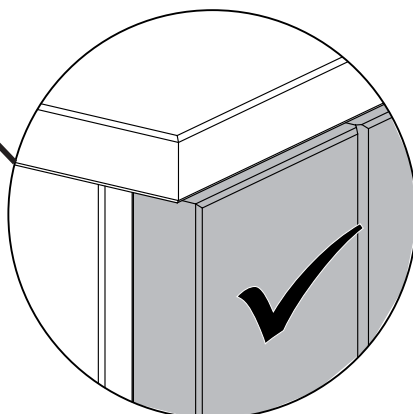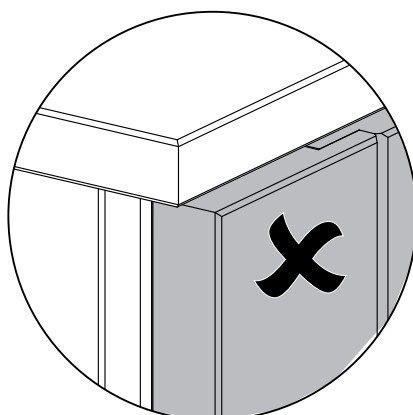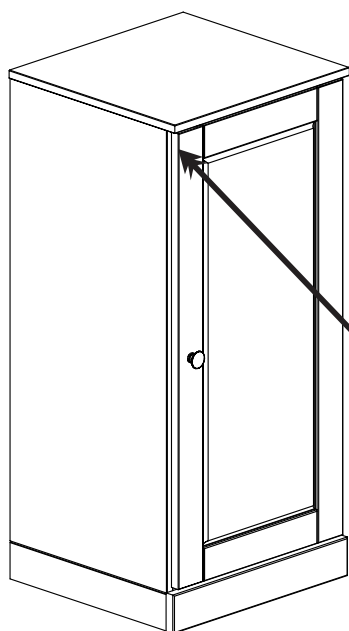

Loosen
rear screw




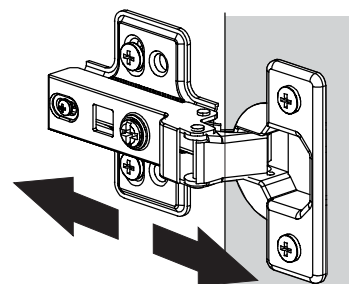 


Move Forward
or Backward

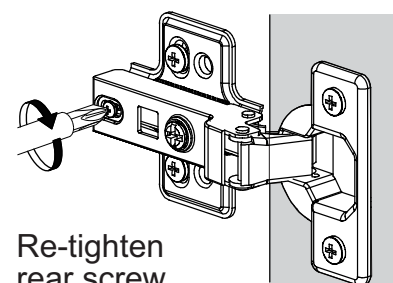 


Re-tighten
rear screw

    
10) Aligning Doors with the Top

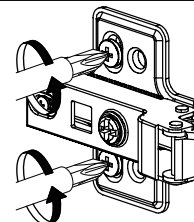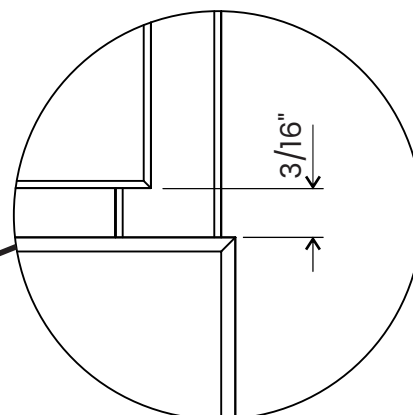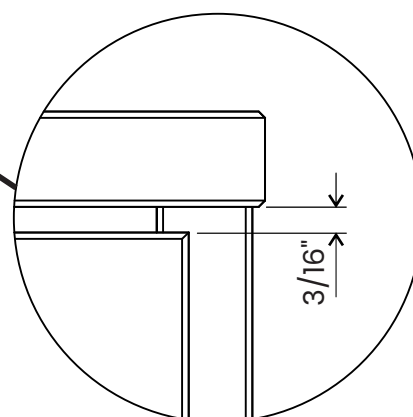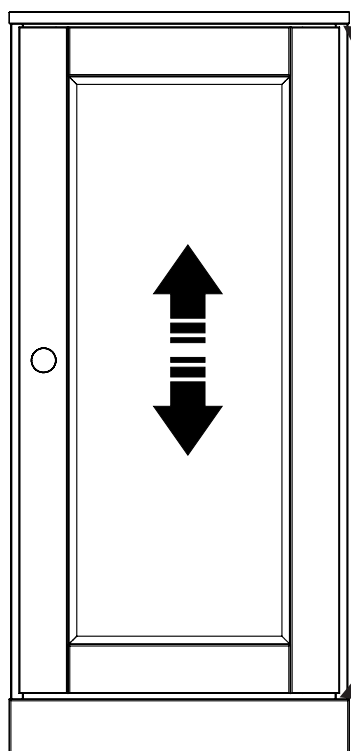

 Loosen top and bottom
screw on all hinges.

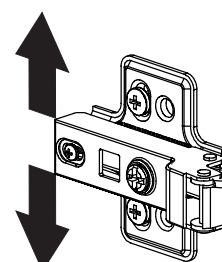

Adjust Height:
Move Up or Down

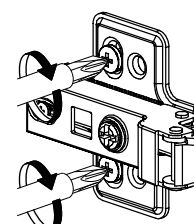 

Re-tighten screws
on all hinges.