 


MODEL RTA-3800SU

ASSEMBLY INSTRUCTIONS

(REV.1-CHK-9805-0726)

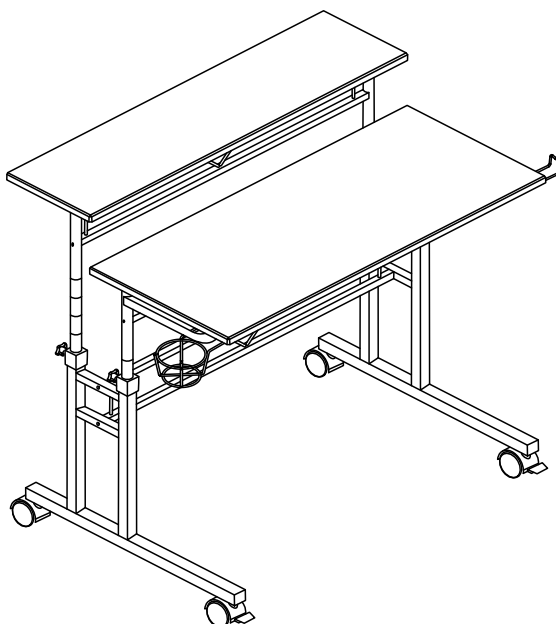

Thank you for purchasing our product!



MAIN PARTS LIST

1 Back tabletop 	2 Front tabletop 	3 Legs 	4 Back structure
5 Front structure 	6 Central structure 	7 Back lift structures 	8 Front lift structures
9 Hook 	10 Cup holder 	TOOLS (INCLUDED) 	

HARDWARE LIST

A		M6x50mm	x2	E		Non-locking caster	x2
B		M6x35mm	x10	F		Locking caster	x2
C		M6x28mm	x6	G1		Plastic cover	x4
D		M6x12mm	x6	G2		Screw knob	x4

For support with assembly questions & replacement parts please email us at: support@rtaproducts.com



Free shipping within the 48 Contiguous United States.



For international customers & AK-HI-PR orders, the customer is responsible for shipping costs plus any International local taxes or duties.

ASSEMBLY STEPS

 
 
- Use sheets or blankets to protect the product's finish during assembly.



- Some of the steps might require 2 people.






- Install the screws loosely, tighten after all are positioned, and **DO NOT** overtighten.



1

Use the spanner to install on No.3:

 
 
 
- The non-locking casters E at the back;
- The locking casters F at the front.

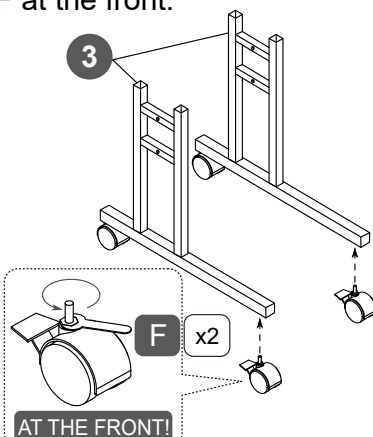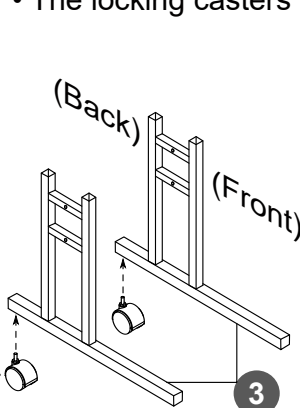

2



   - Use A to assemble No.6 between both No.3.
- Place G1 over No.3 with the threaded holes facing back.

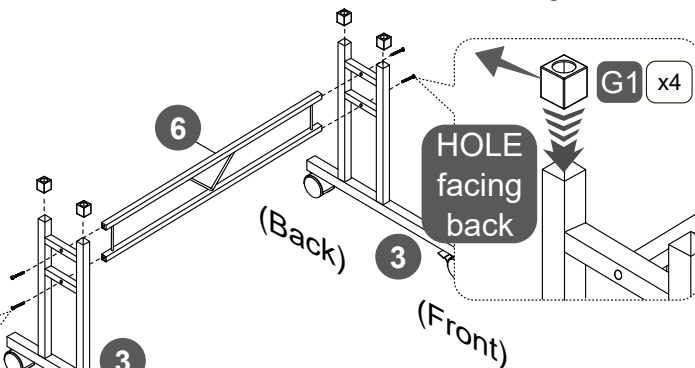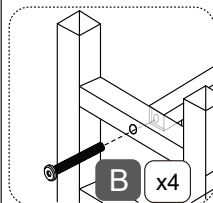



ASSEMBLY STEPS


3



  - Insert the front lift structures No.8 through the front plastic covers G1 and into the legs No.3.

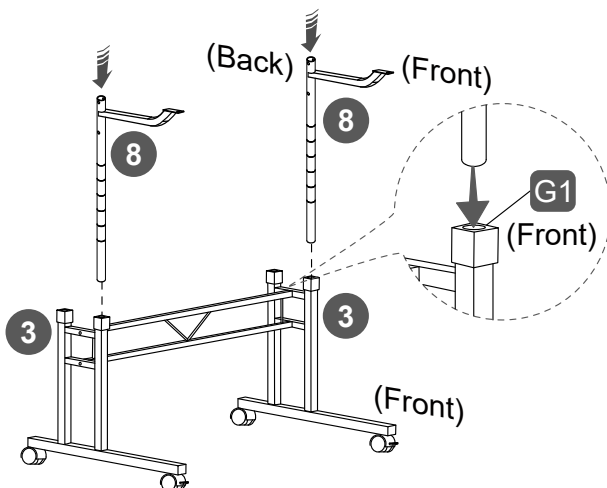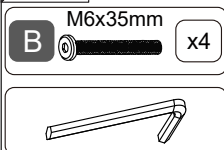

 - Use A to assemble No.5 in between both No.8.


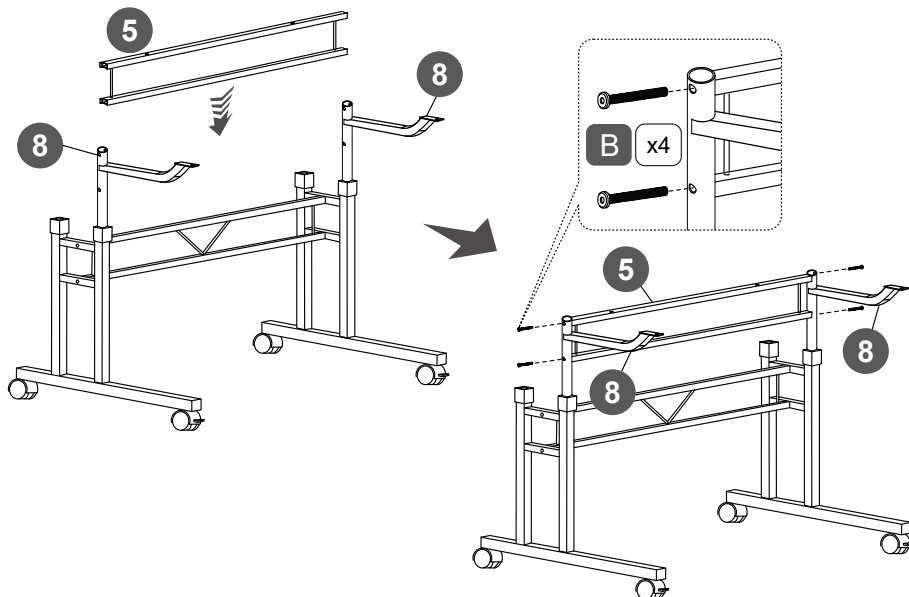


ASSEMBLY STEPS



4



  
- Place the front tabletop No.2 over the structure No. 5 and the lifts No.8.



**PAY ATTENTION TO
THE ORIENTATION**

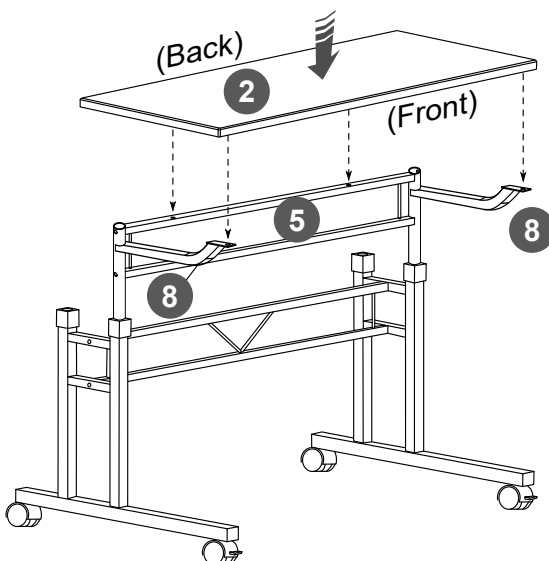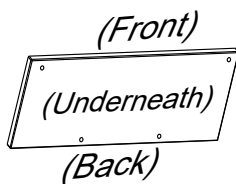  

 - Use C to secure the tabletop to No.5 at the back.
- Use D to secure the tabletop to both No.8 at the front.

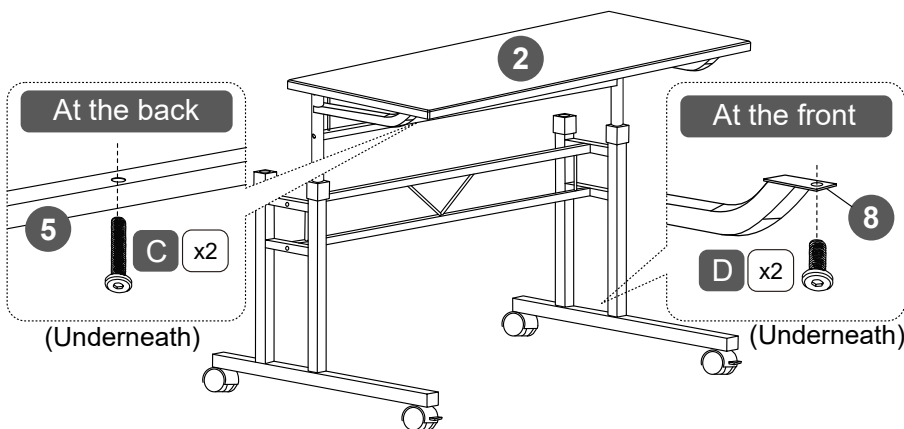


ASSEMBLY STEPS

5









 ATTENTION! Make sure to use the correct screws in the correct holes to avoid accidental damages.




Attach No.7 to No.4 using:

      
- A at the top holes;
- B at the bottom holes.

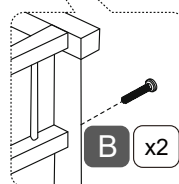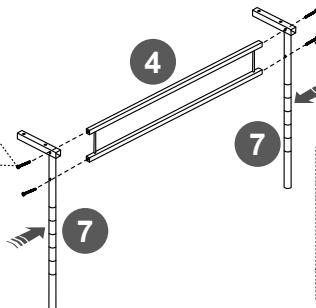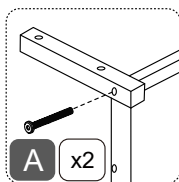

 Insert the lifts No.7 through the back plastic covers G1 and into the legs No.3.

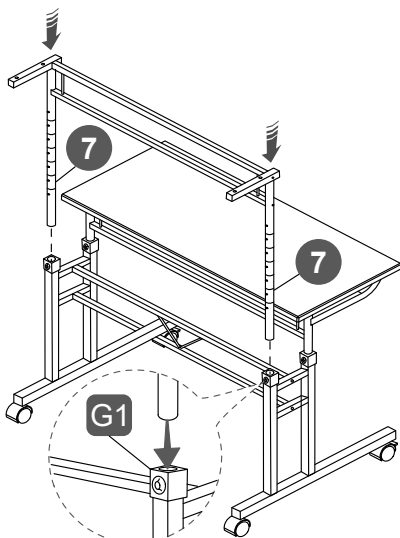

 Use C to assemble the back tabletop No.1 to the lifts No.7.




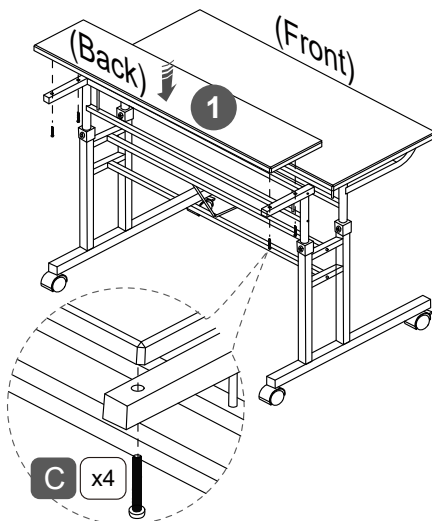


ASSEMBLY STEPS



6



    - Use D to attach the hook No.9 and the cup holder No.10 to the front tabletop No. 2 on the sides of your preference.

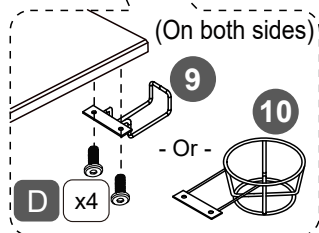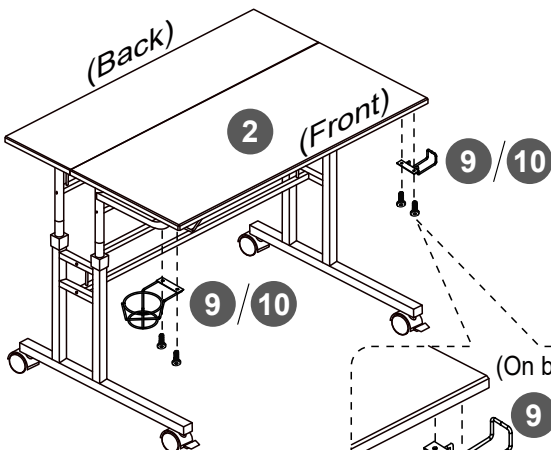


  - Finally, lift the tabletops to the height of your preference, and insert and tighten the screw knobs G2 making sure they match in between the marks on No. 7 and No.8

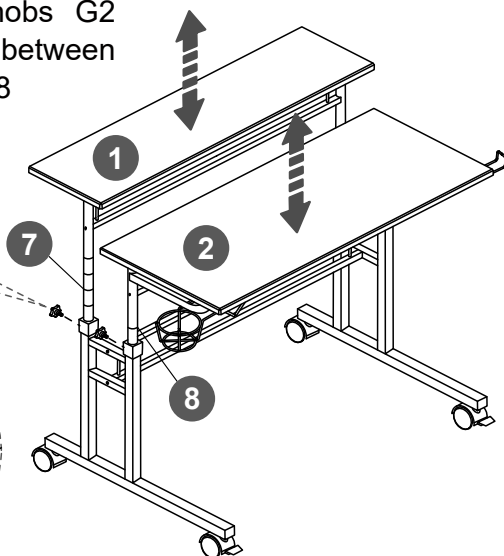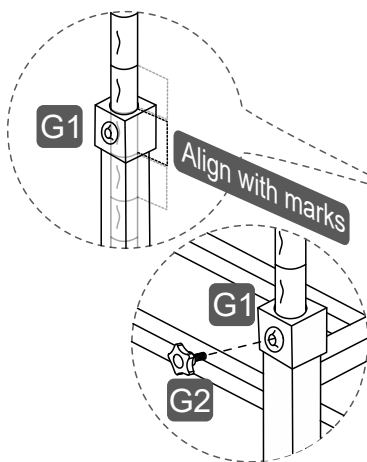


WARNINGS

 
Not paying attention to the following warnings could result in injuries.

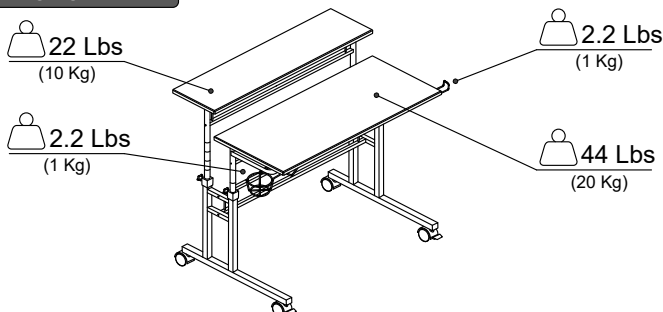WEIGHT LIMITS - DO NOT EXCEED

 - Do not sit, climb or stand on the Unit.
- Do not allow children to play over or below the unit.

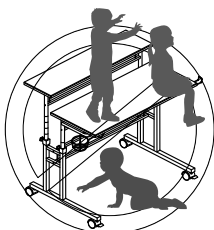

 
- Unlock the front casters before rolling the unit away.
- Remove or secure any objects that might fall off during moving.

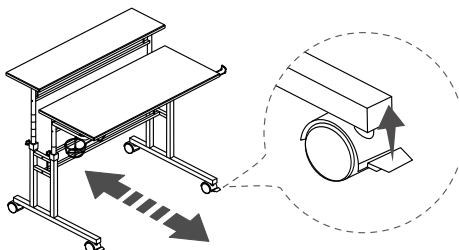**CARE AND MAINTENANCE**


- Clean with a cloth lightly dampened in a solution of mild soap and water.
- Do not use solvents or abrasive materials.



 Do not expose to direct sunlight or extreme environmental conditions.

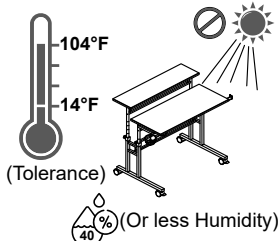

 Inspect and re-tighten any loose screws every 4 months.

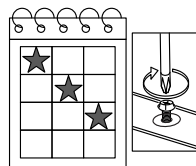**LIMITED WARRANTY**

To file a claim or request information, please email to: warranty@rtaproducts.com

