 


ACROMA[®]

www.acromahome.com

Installation Instructions

70348BLCO / 70348WHCO

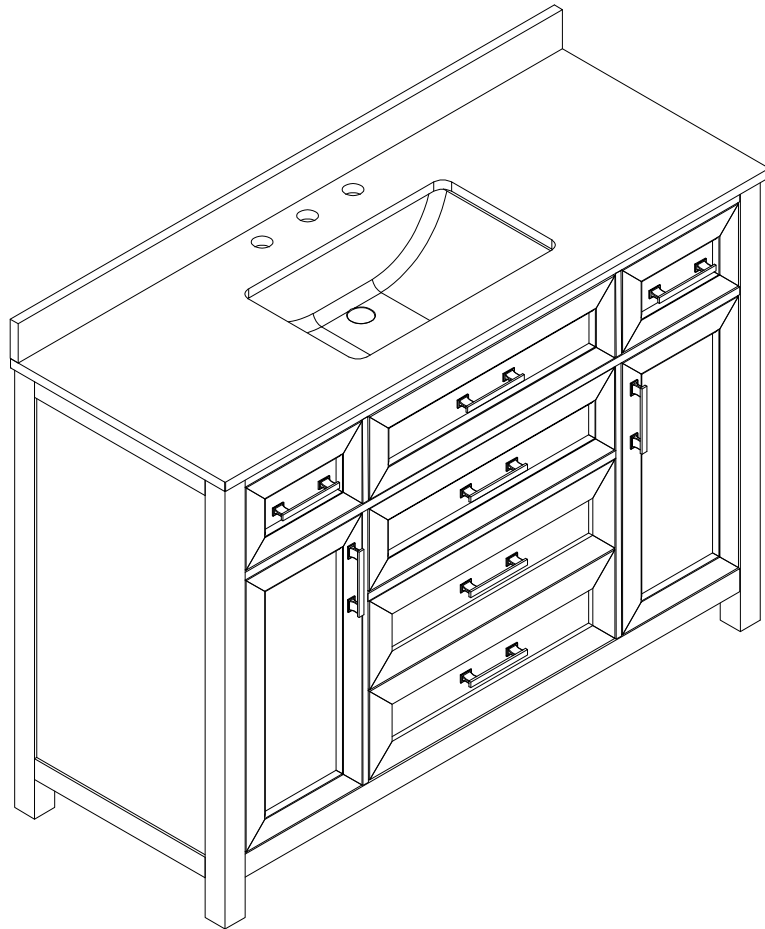 


Pre-Installation


PLANNING INSTALLATION

Read all instructions before installing.
To avoid damaging this product, place it on a soft, non-abrasive surface, such as carpet or cardboard.


TOOLS REQUIRED (NOT INCLUDED)

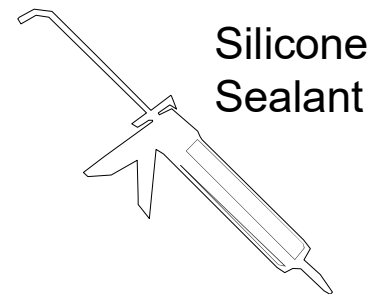


Silicone
Sealant

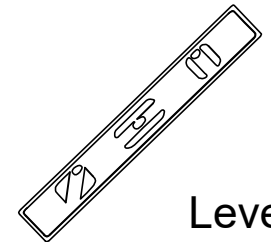 

Level

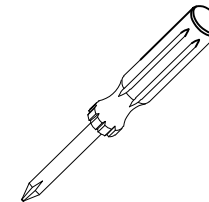 


Phillips
Screwdriver

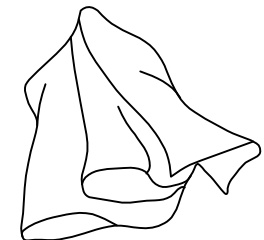 


Clean rag

ASSEMBLY GUIDE

 
HARDWARE INCLUDED

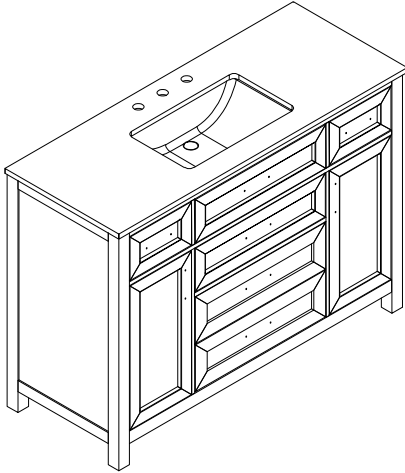


Ⓐ Fixture x 1PC

 


Ⓒ Handle x 8PCS

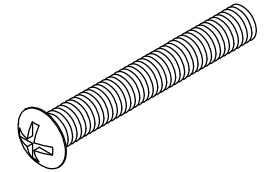 

Ⓓ Bolt 5/32"*25mm x 16PCS

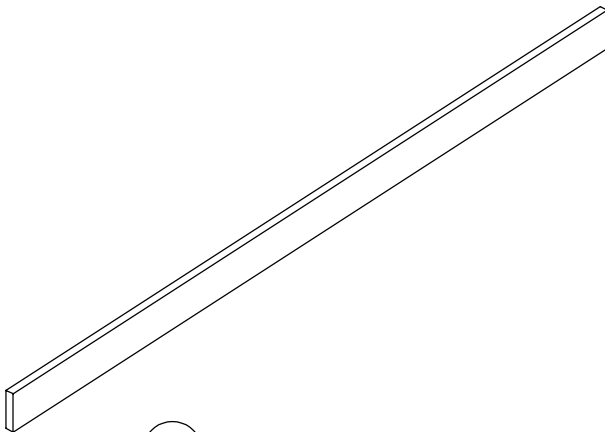 


Ⓑ Backsplash x 1PC

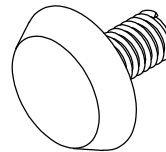 

Ⓔ Leveller x 6PCS

 
STEP 1

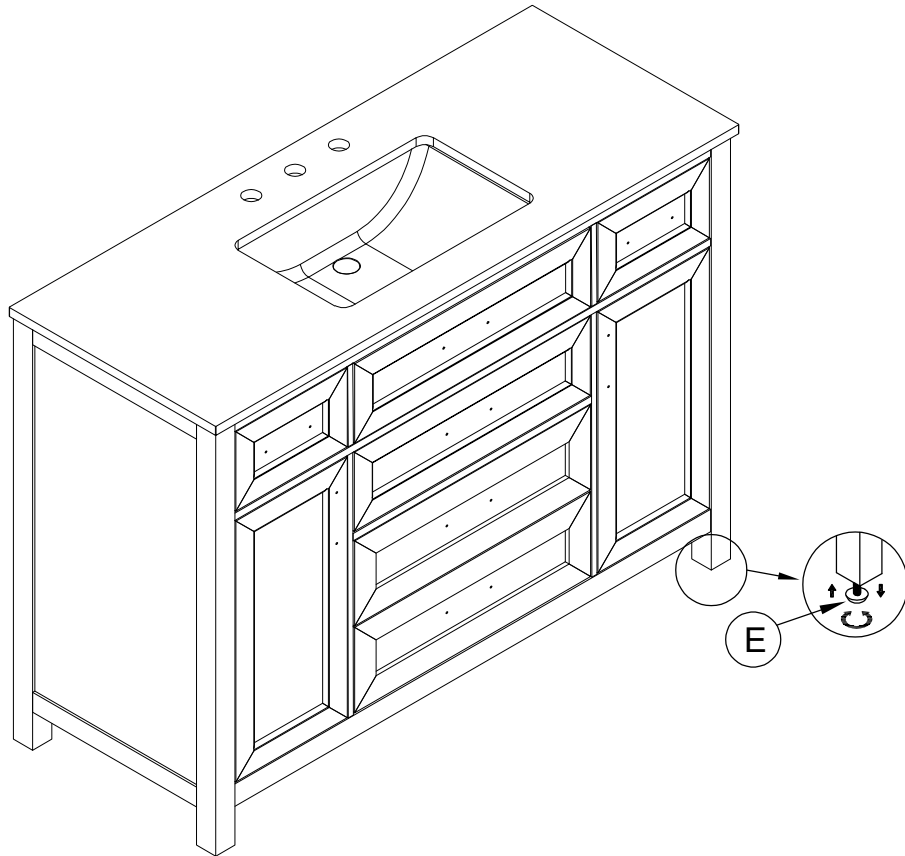


NOTE: On fixture

STEP 2

 NOTE: Shelf is adjustable

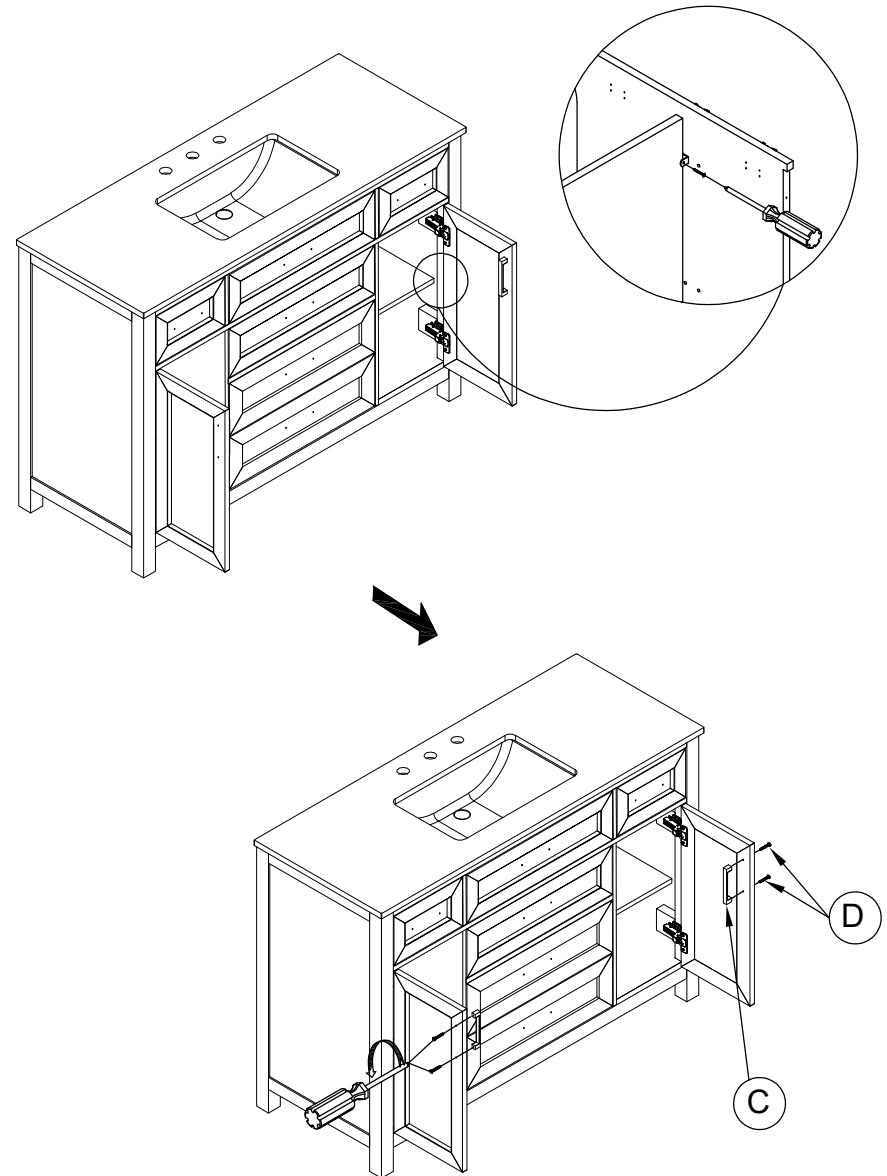

 STEP 3

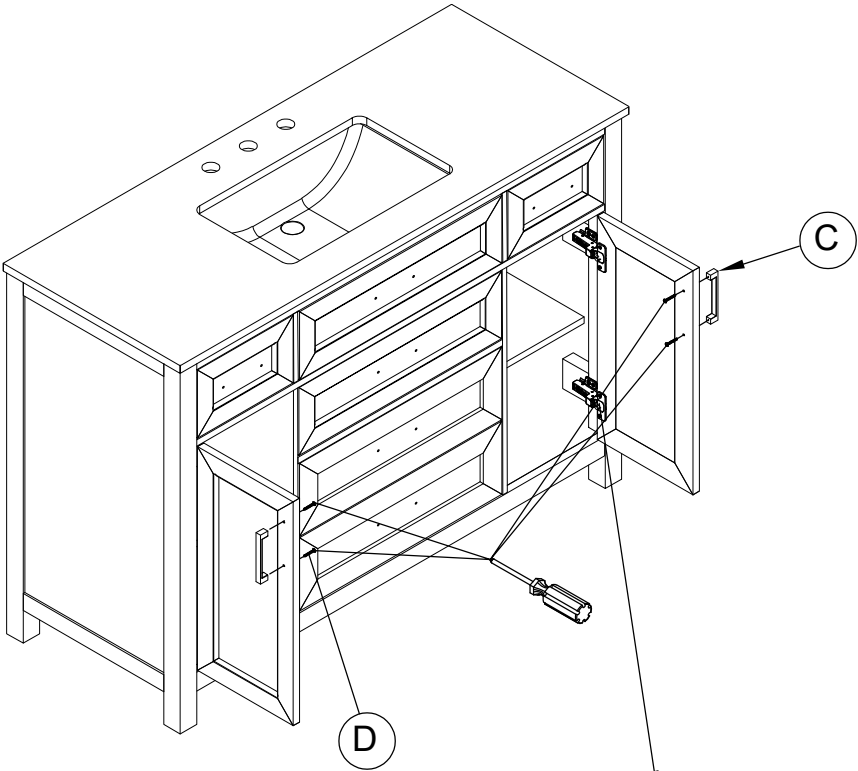


Adjust Door Height


Adjust Gaps Between
Doors and Cabinet

Adjust Gaps Between Doors

 
STEP 4

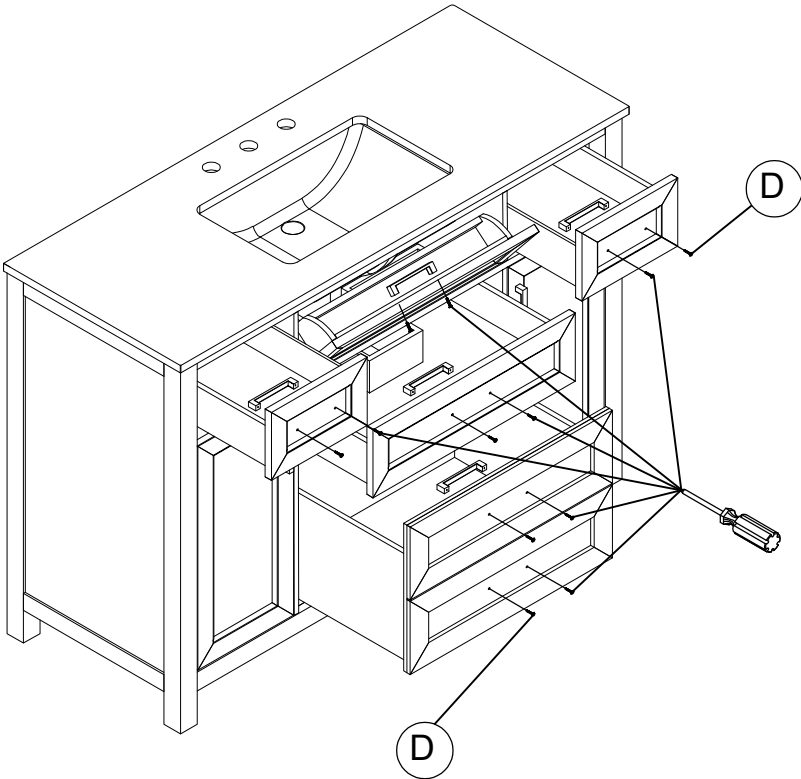


 
STEP 5

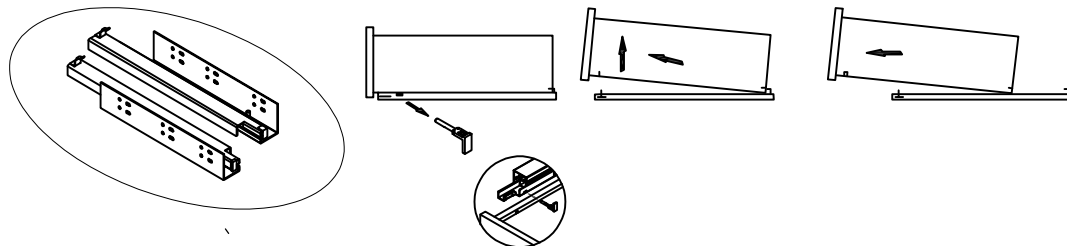

NOTE: Drawers are removable

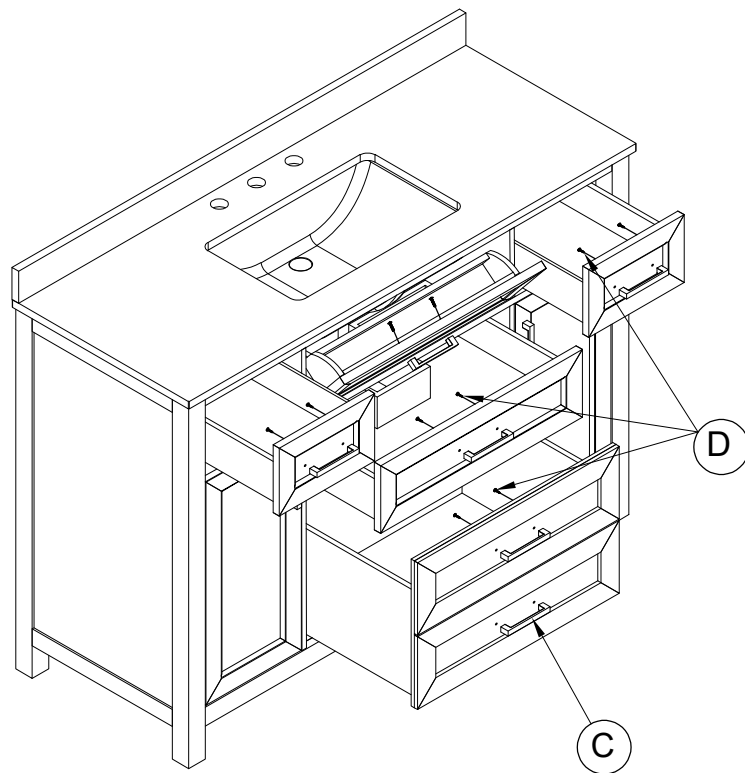 

  STEP 6

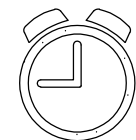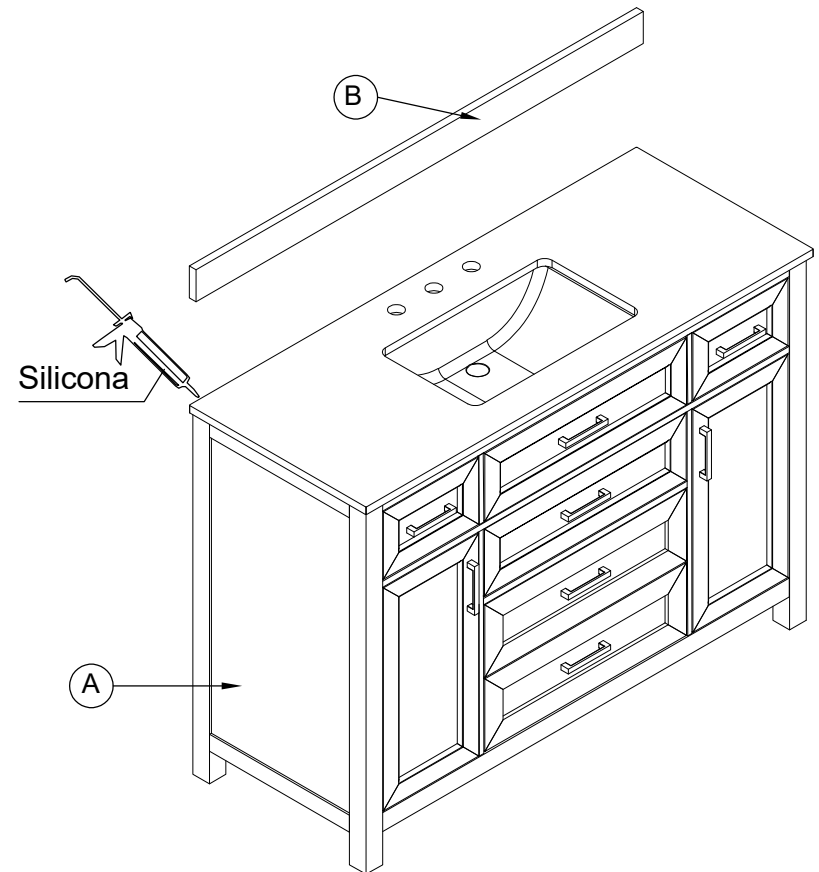

24H!

After Installed The Backsplash.
Please Wait 24Hours For Use

Thank you for choosing ACROMA®