 
 



TWO-DOOR TV CABINET

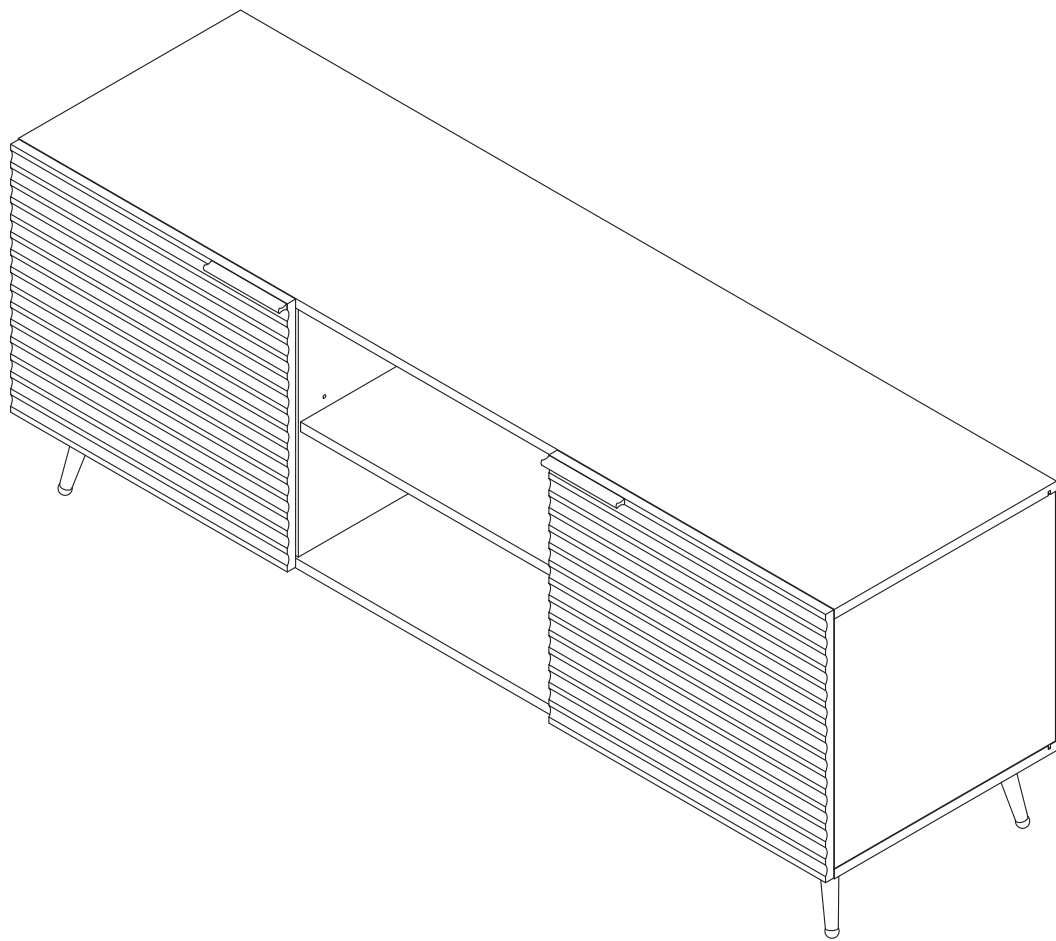

2 person

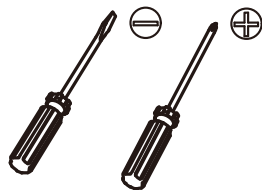


 tools require

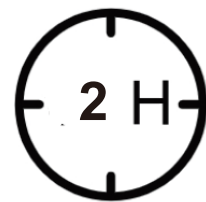

2 hours need

 Before You Start

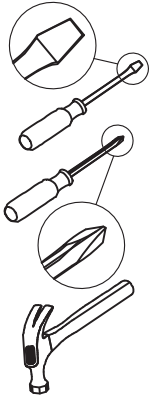

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

 
Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2







 
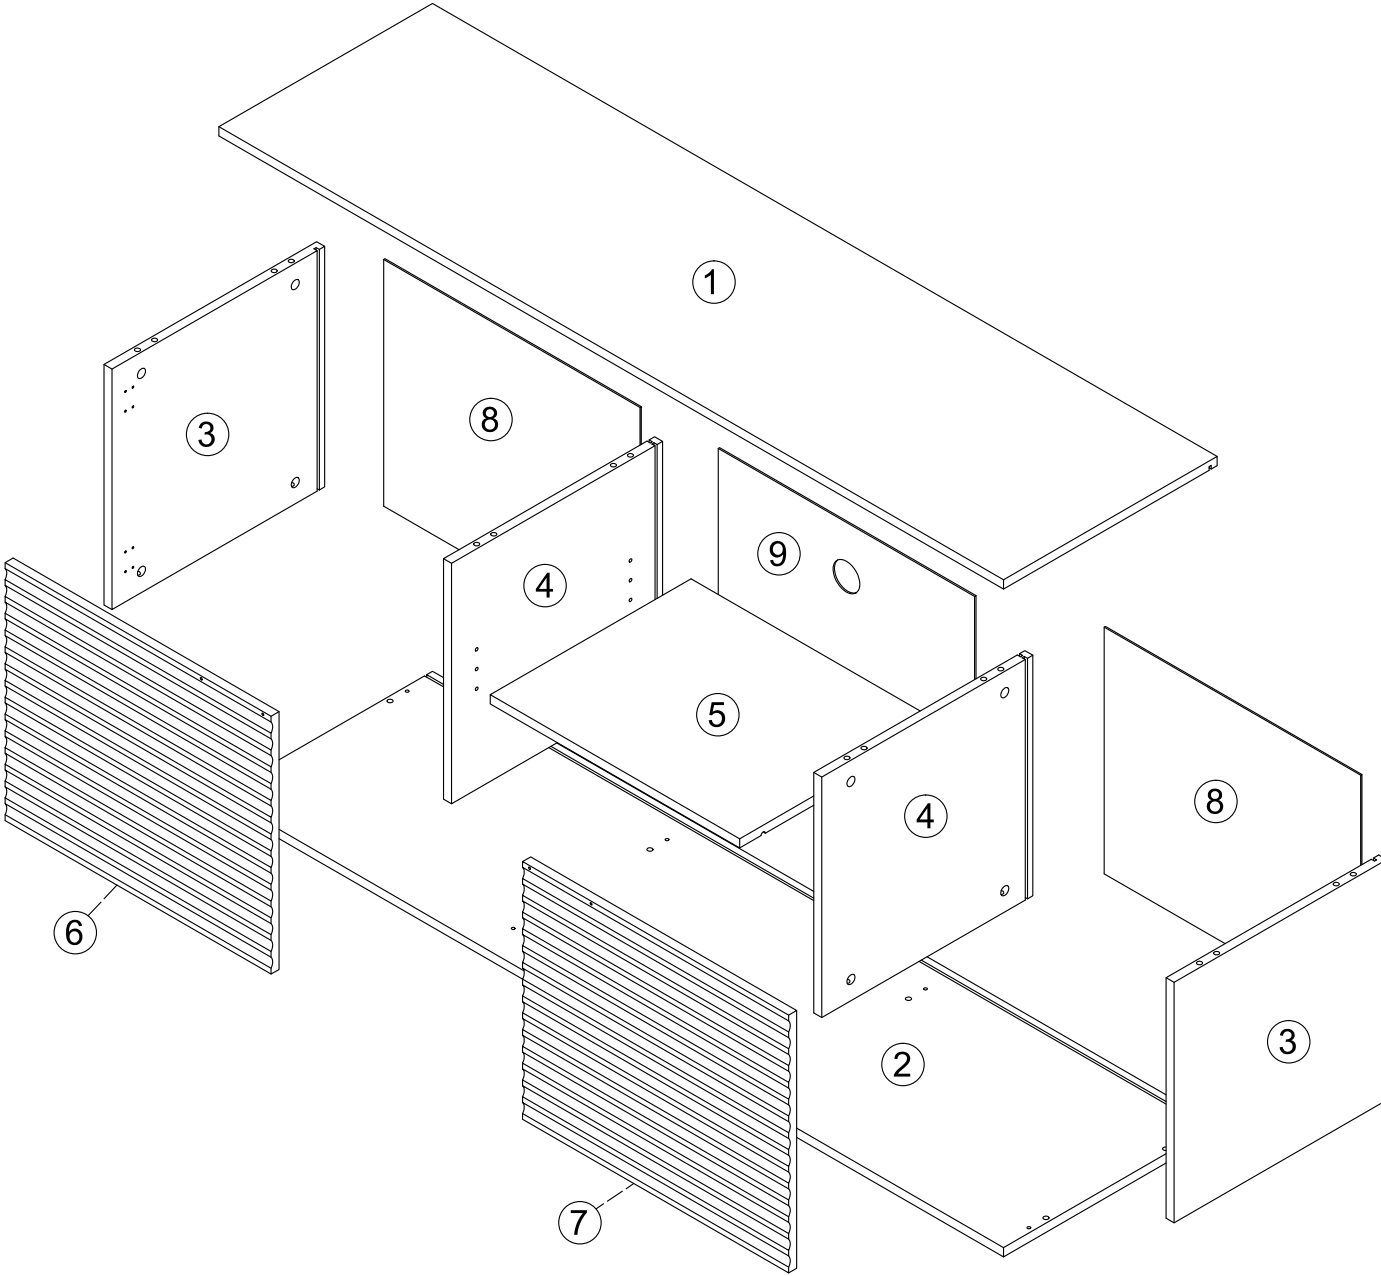 


 
 

 
 




- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




EXPLODED DRAWING:






PARTS:

 <p>A X16₊₃</p>	 <p>B X16₊₃</p>	 <p>C X16₊₃</p>
 <p>D1</p>  <p>D2 ₊₁</p>	 <p>E X20₊₄ M4x14</p>	 <p>F X4</p>
 <p>G X4₊₁</p>	 <p>M4x14 H1</p>  <p>H2</p>	 <p>I X1</p>
 <p>J X16₊₂</p>	 <p>K X1</p>	 <p>L X24₊₄ M4x11</p>
 <p>M X4</p>	 <p>N1</p>  <p>N2</p>  <p>N3</p>  <p>N4</p>	

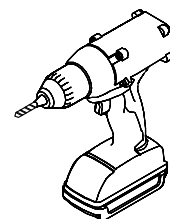 

REMARK:

   MINIFIX POSITION

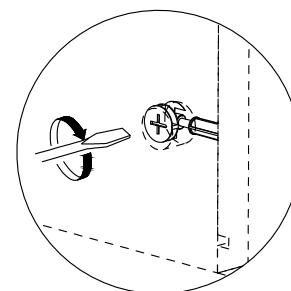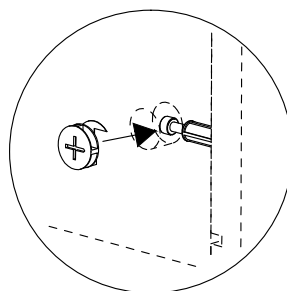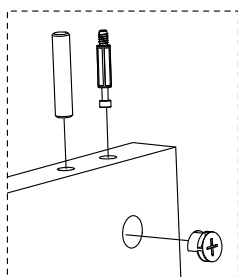


REMARK:

Please do not screw **A** too deep or too shallow.

A X16




 
1.

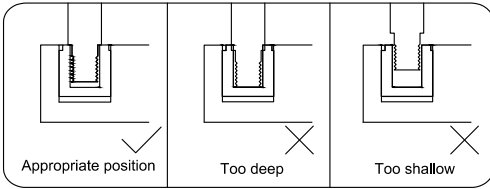


REMARK :

  Put a blanket under the board to avoid scratch or damage.

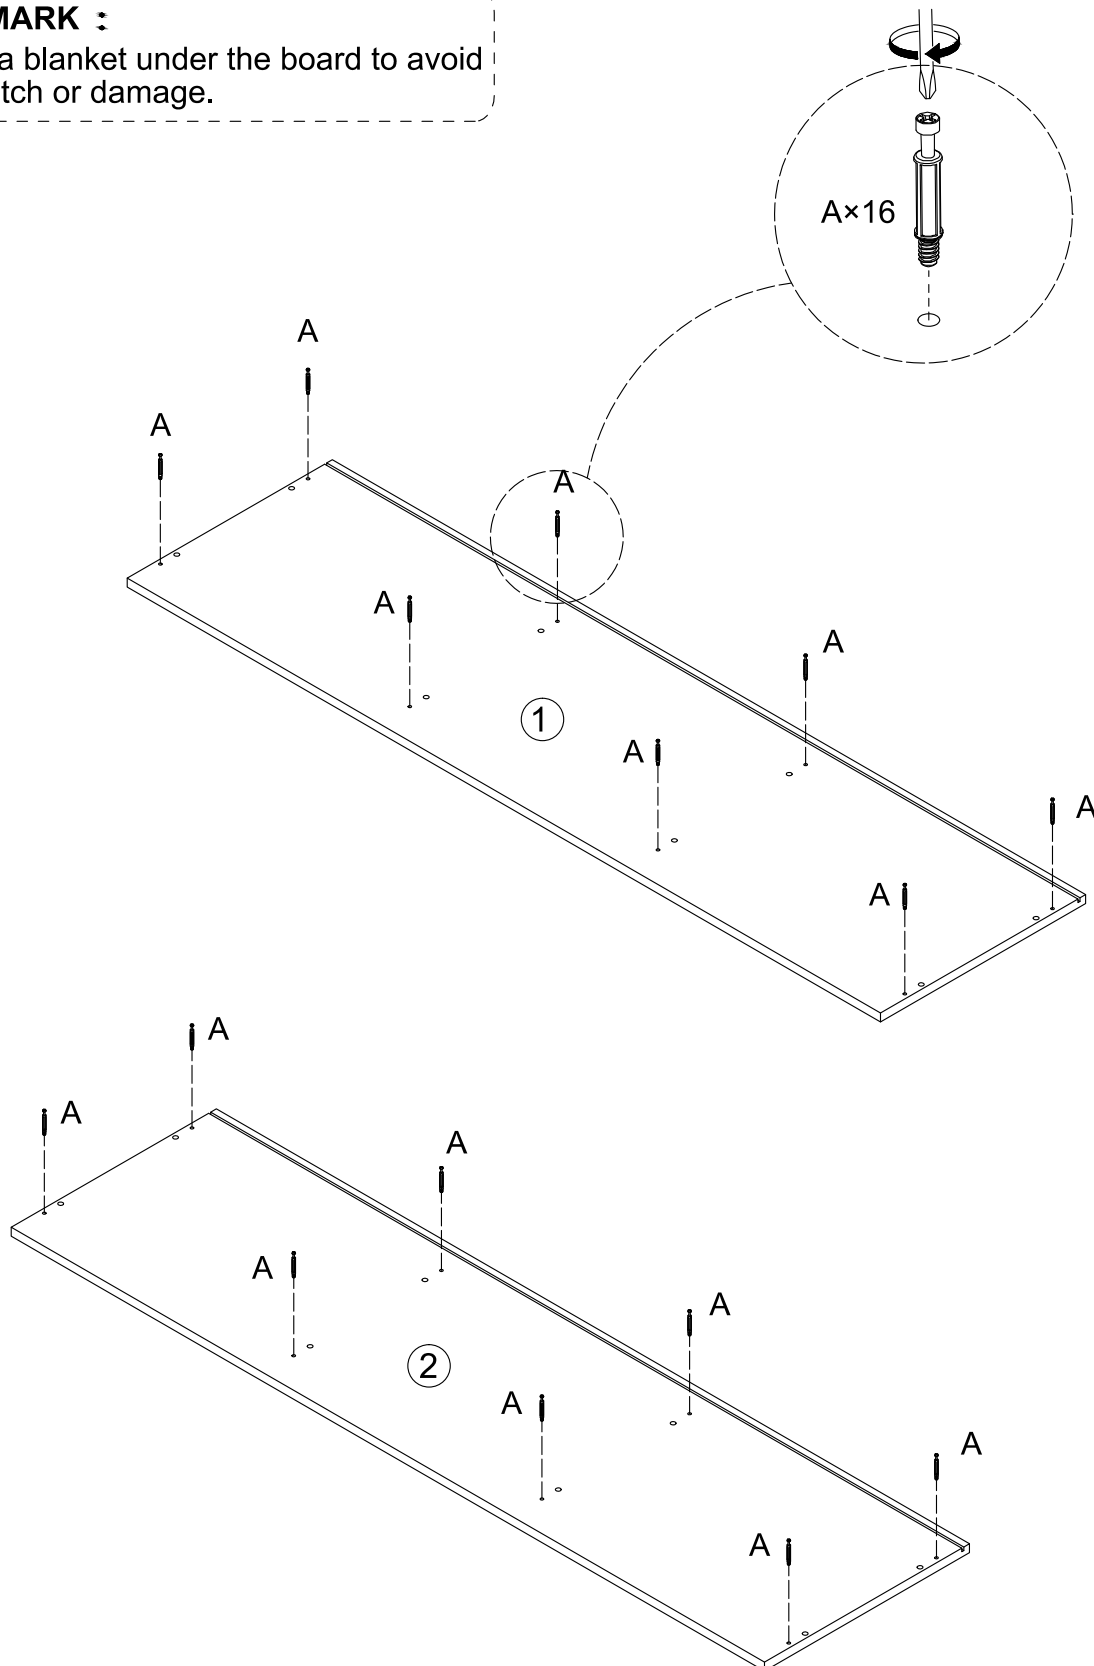


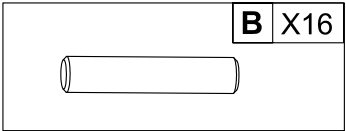


 2.

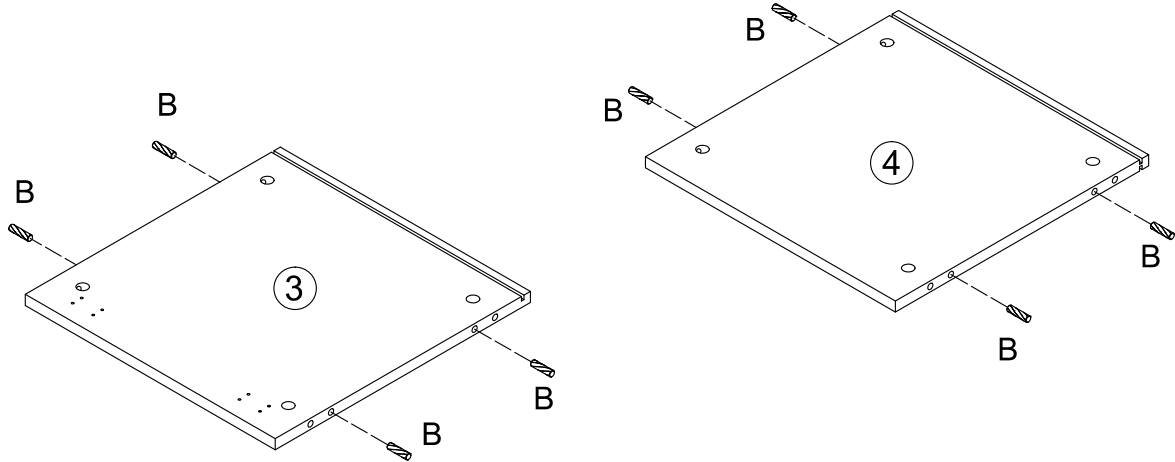


×2

  
3.

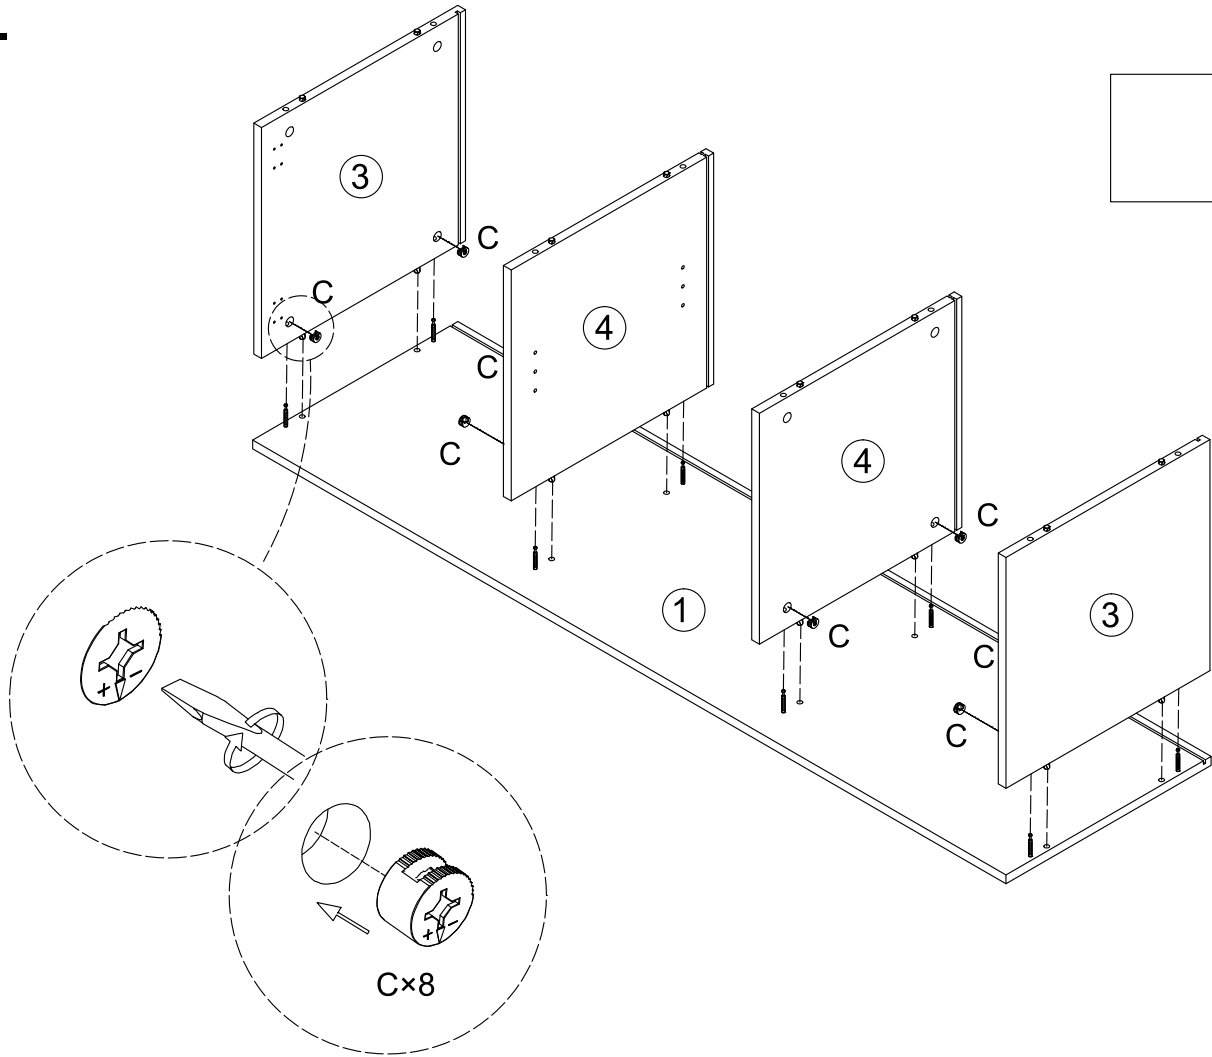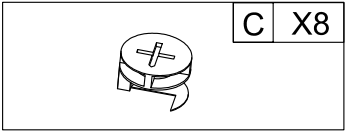



 
4.


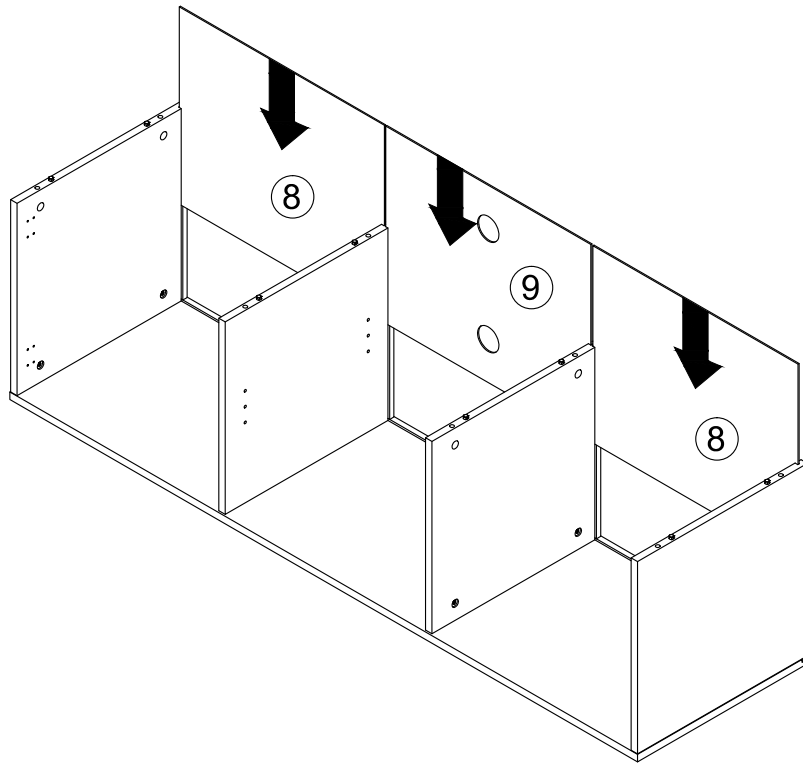


 5.

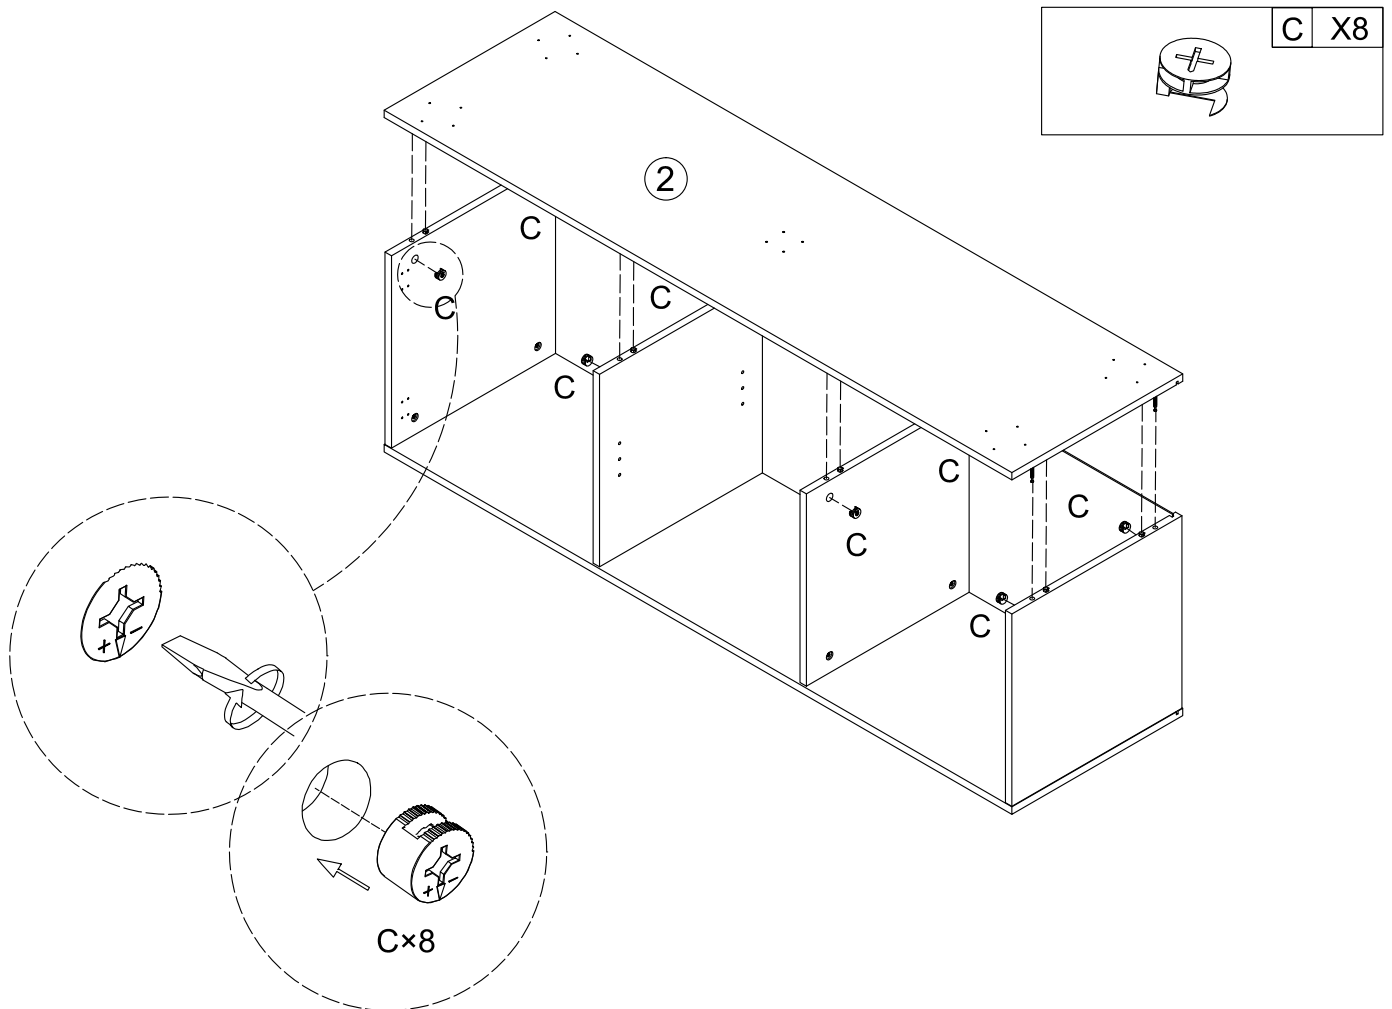


   
6.


	E X20		F X4
			I X1

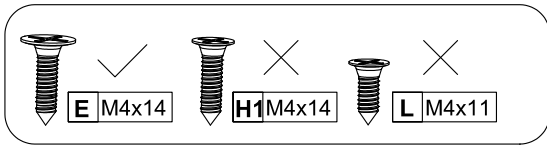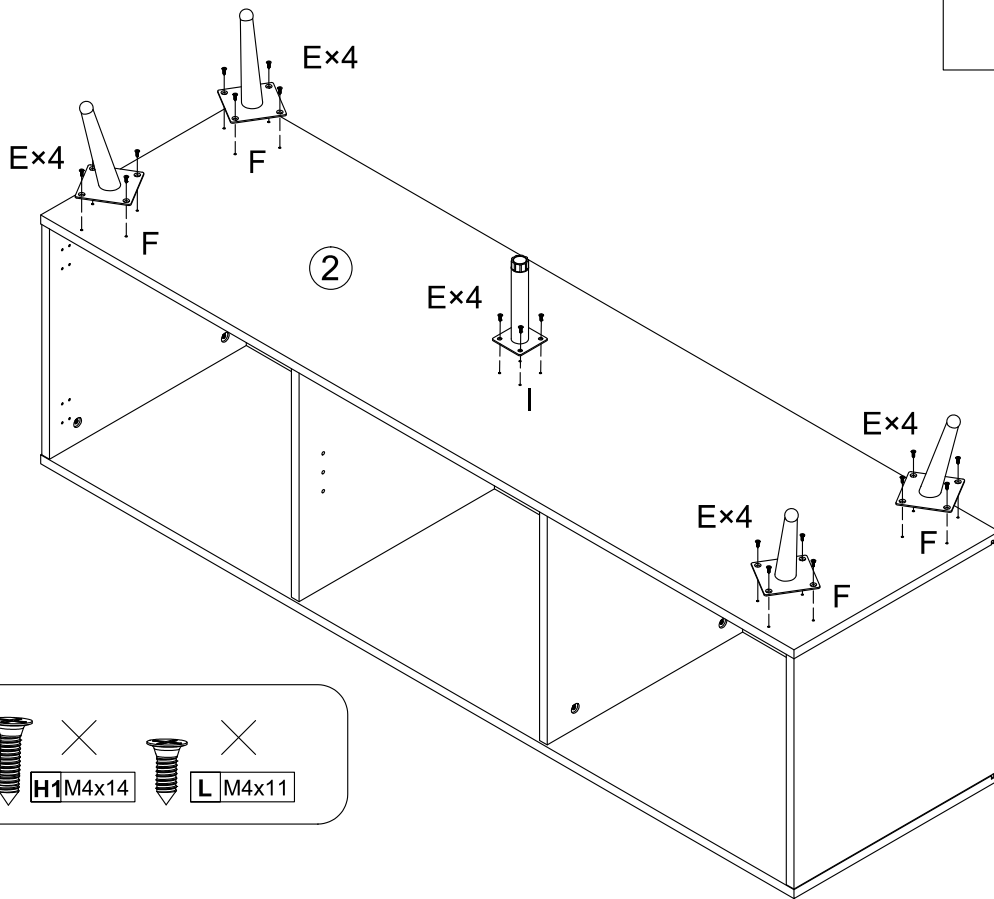  

 
7.

	J X16
---	--------------


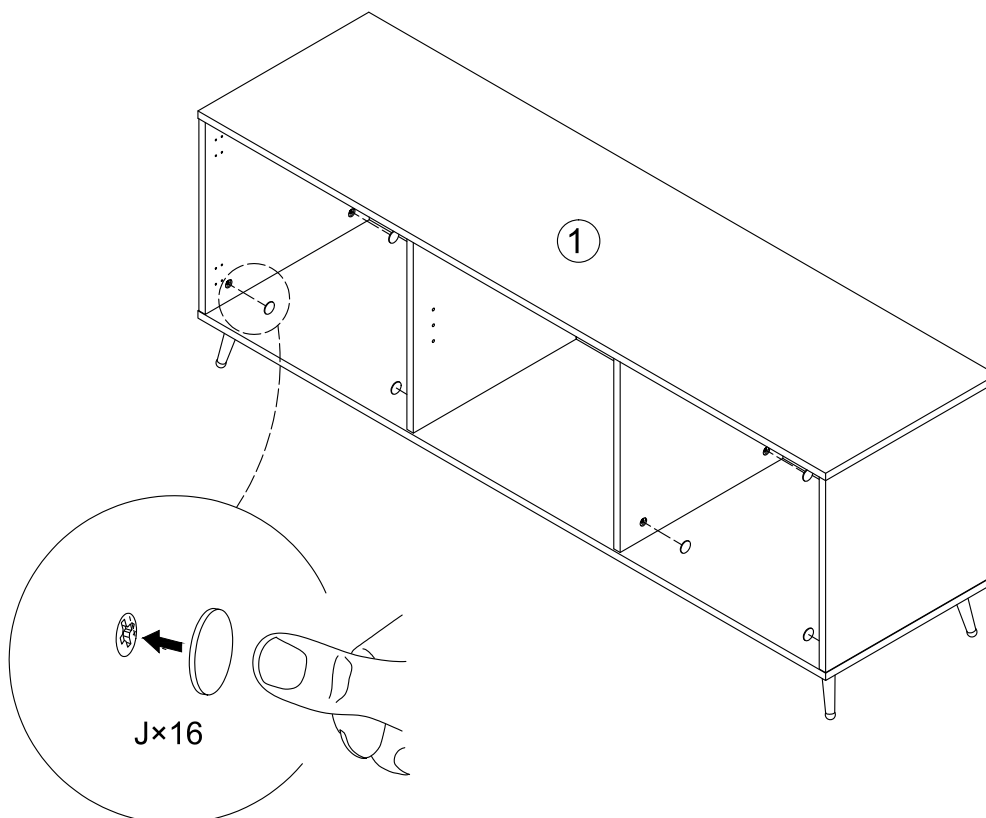 


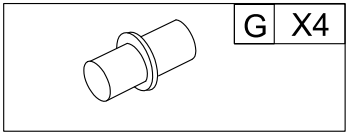 


 
8.

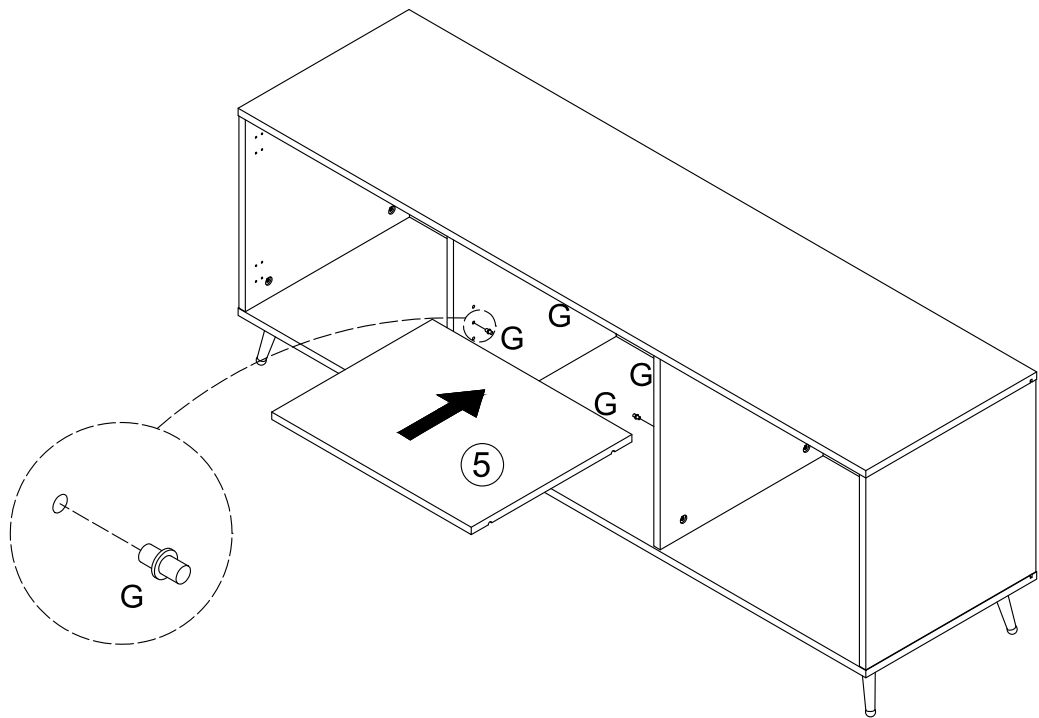

  
9.

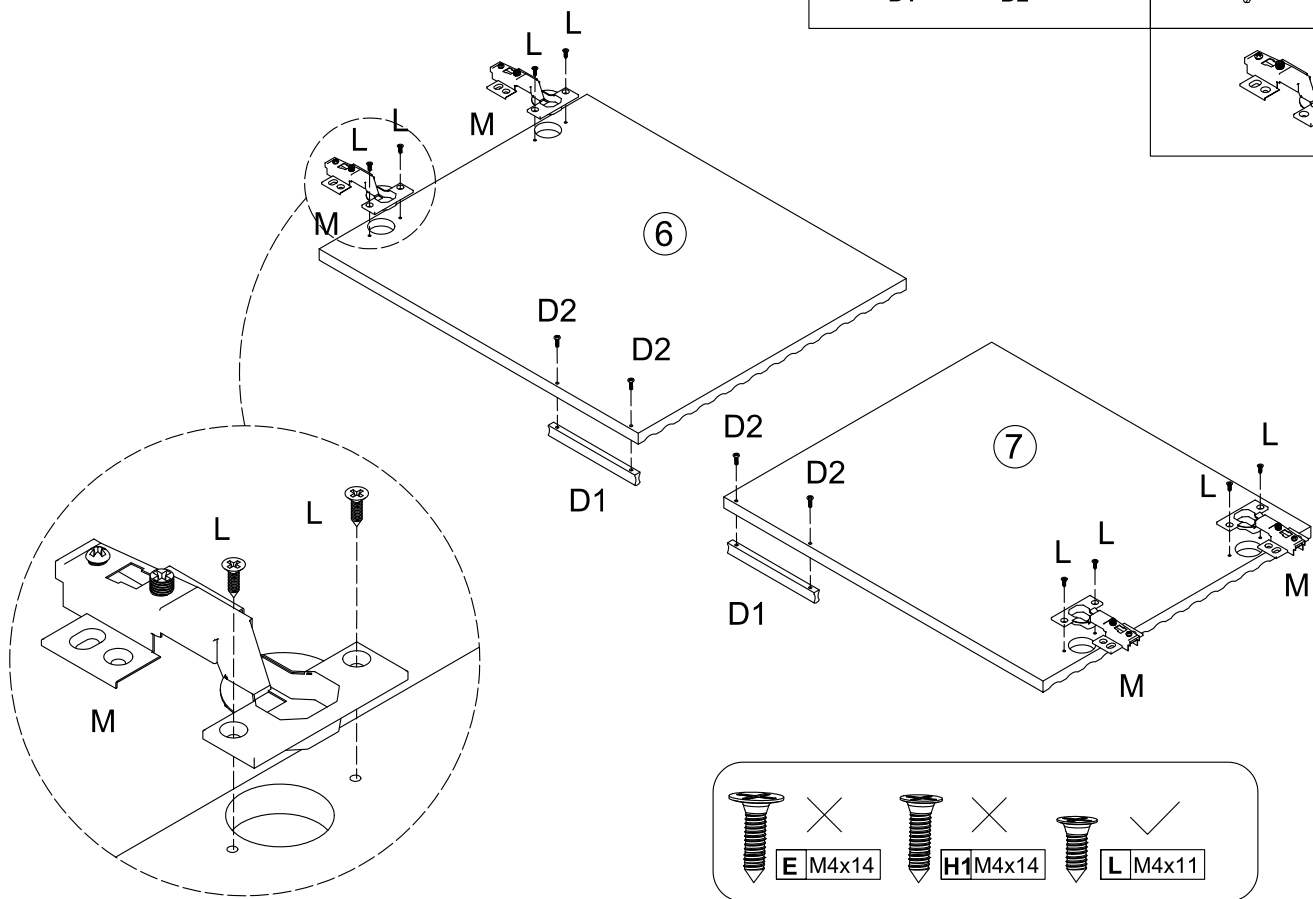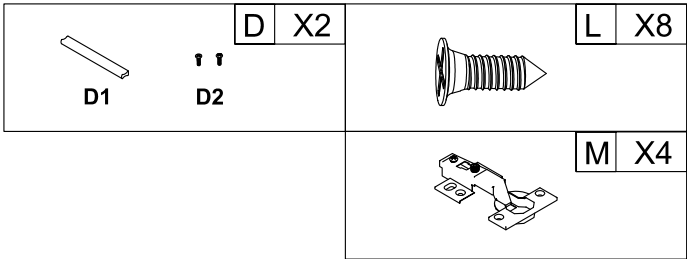


 
 
10.

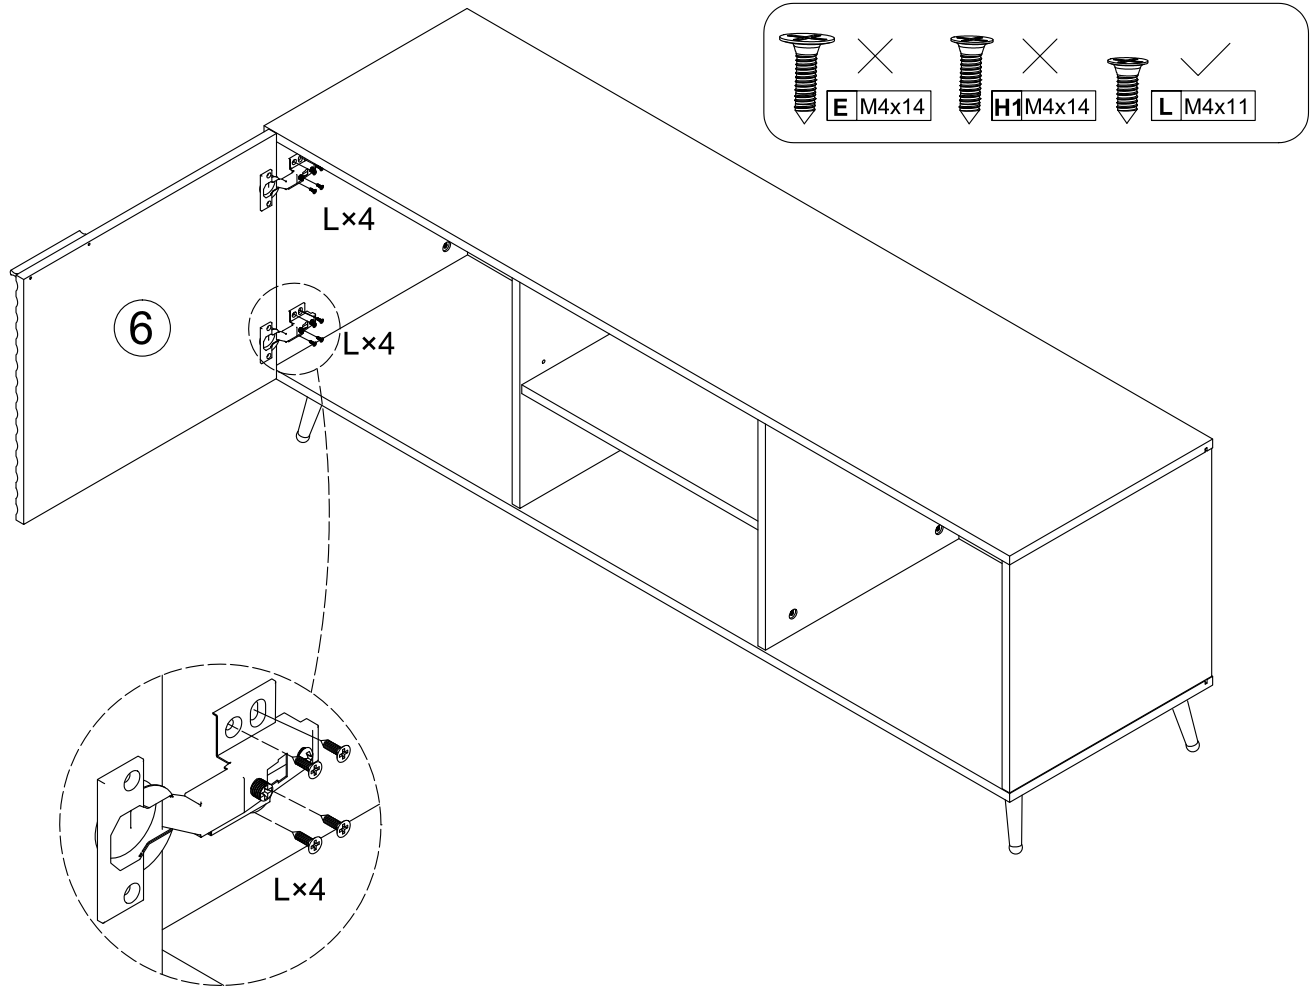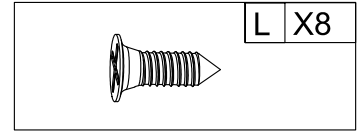

 If the door can't close, please adjust the hinges.


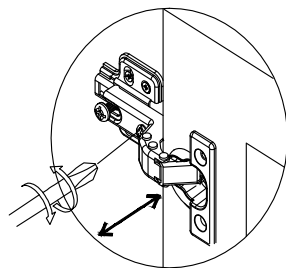


   This is used to adjust the door panel in the up and down direction.

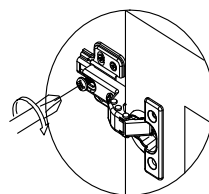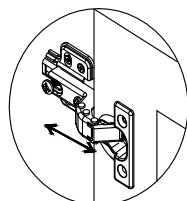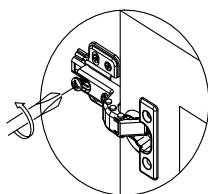


This is used to adjust the door panel in the front and back direction: Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.


 
 
11.

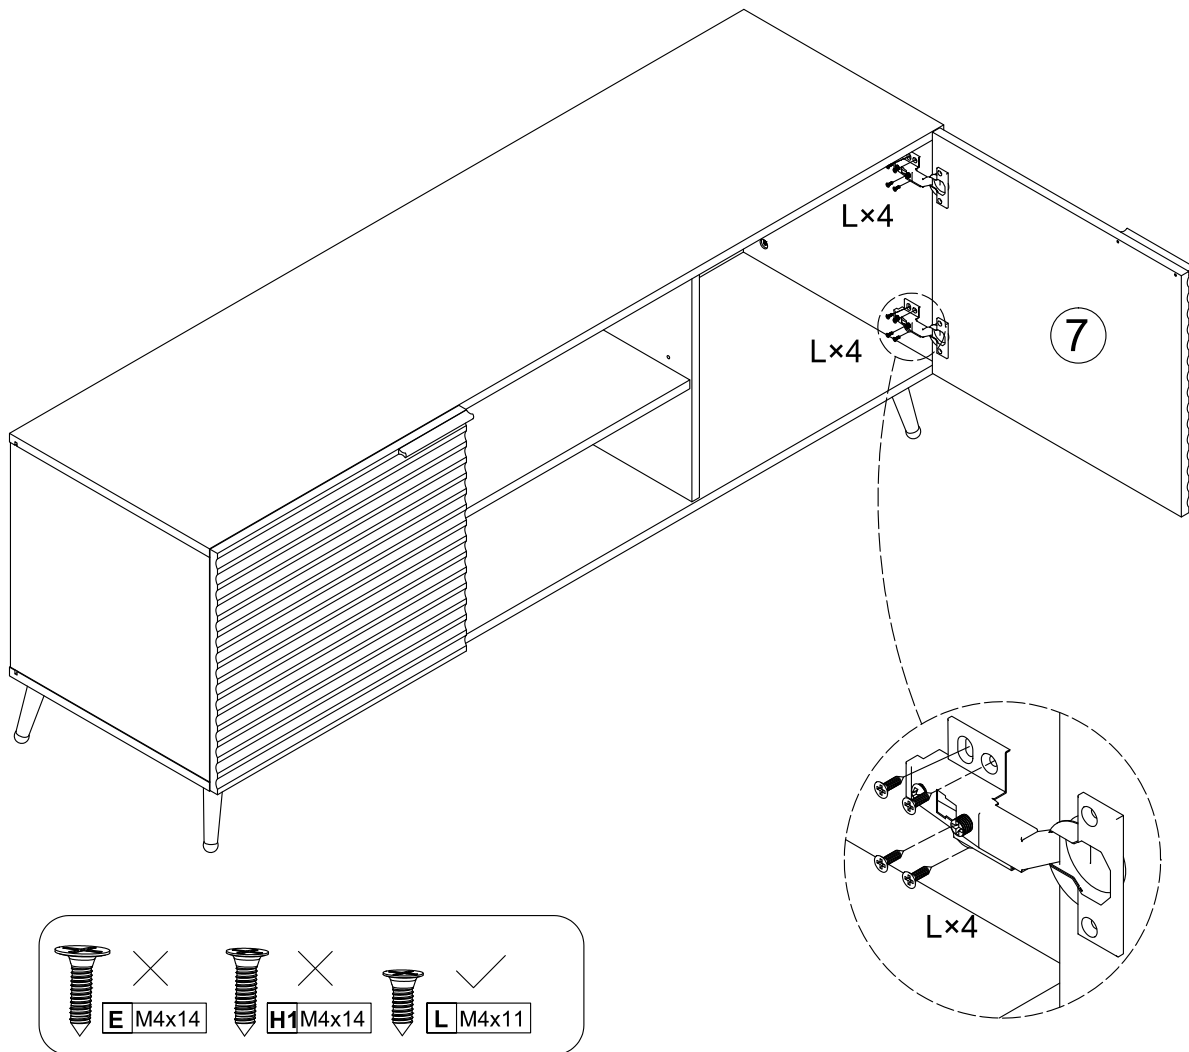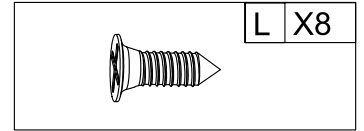

 If the door can't close, please adjust the hinges.



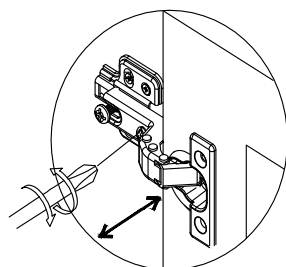


      This is used to adjust the door panel in the up and down direction.

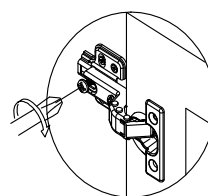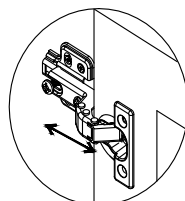
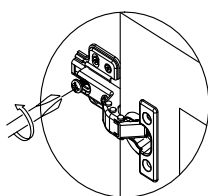




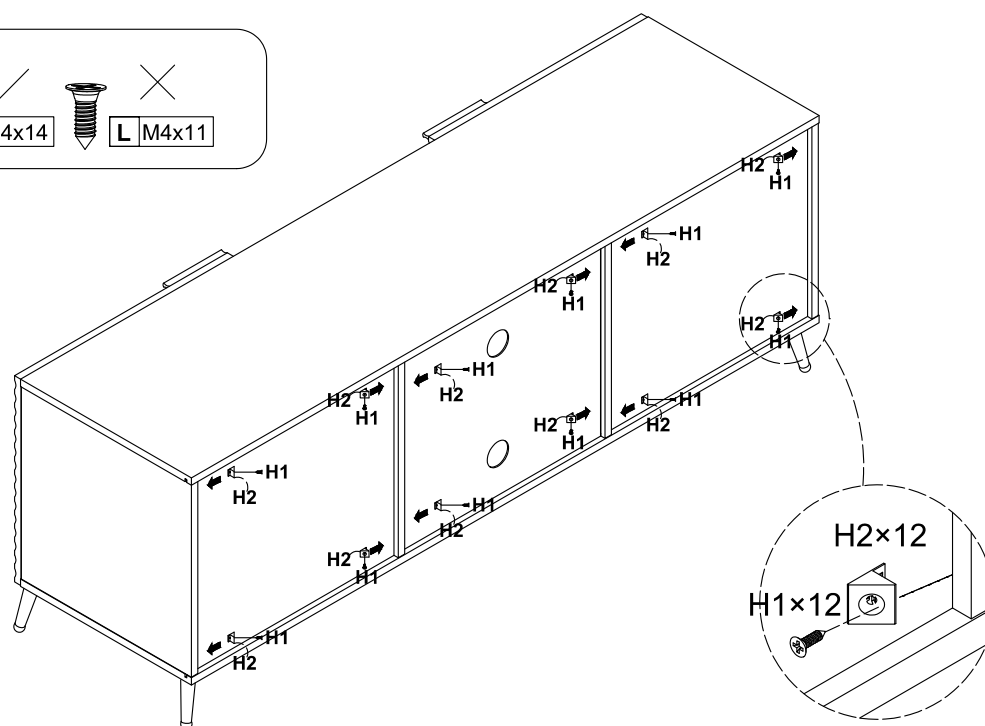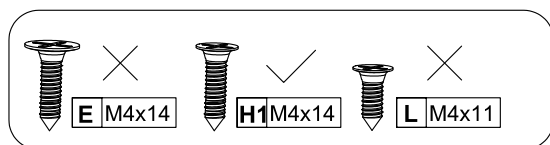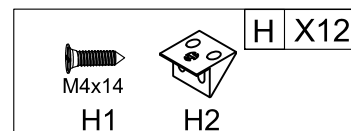

This is used to adjust the door panel in the front and back direction: Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.

  12.

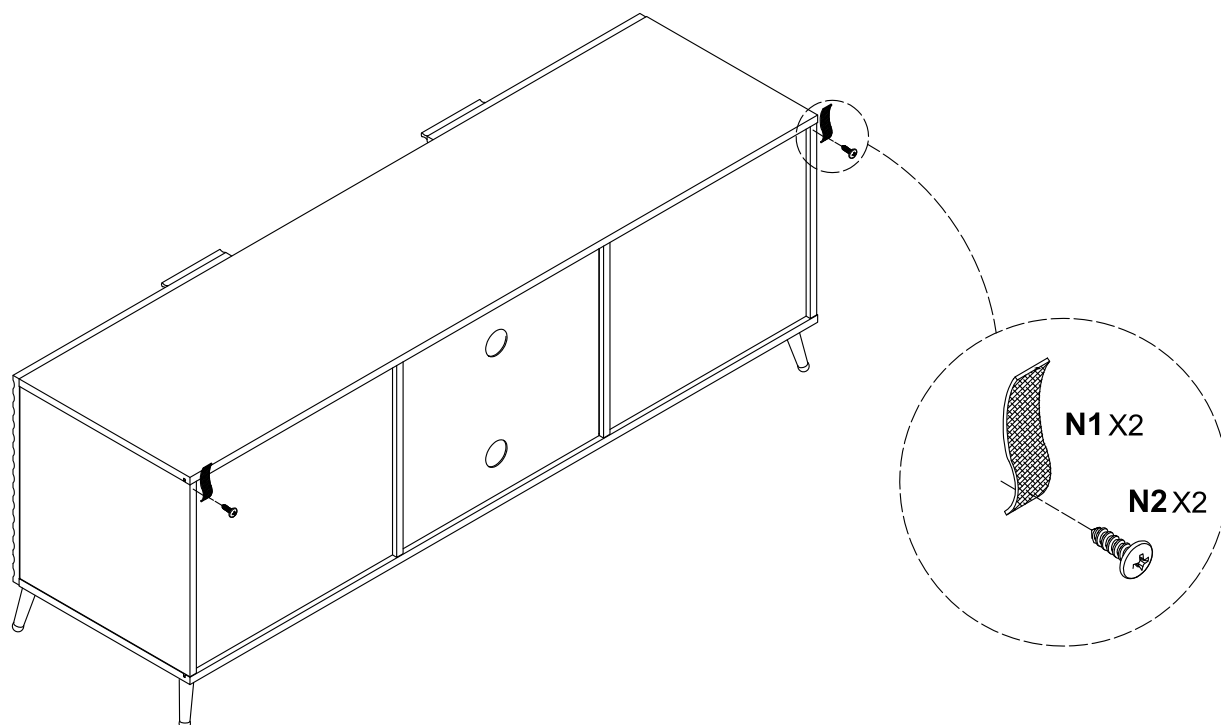
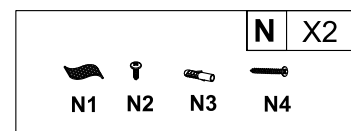


13.




			N	X2
				
N1	N2	N3	N4	

  14.

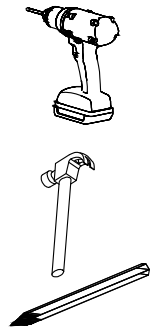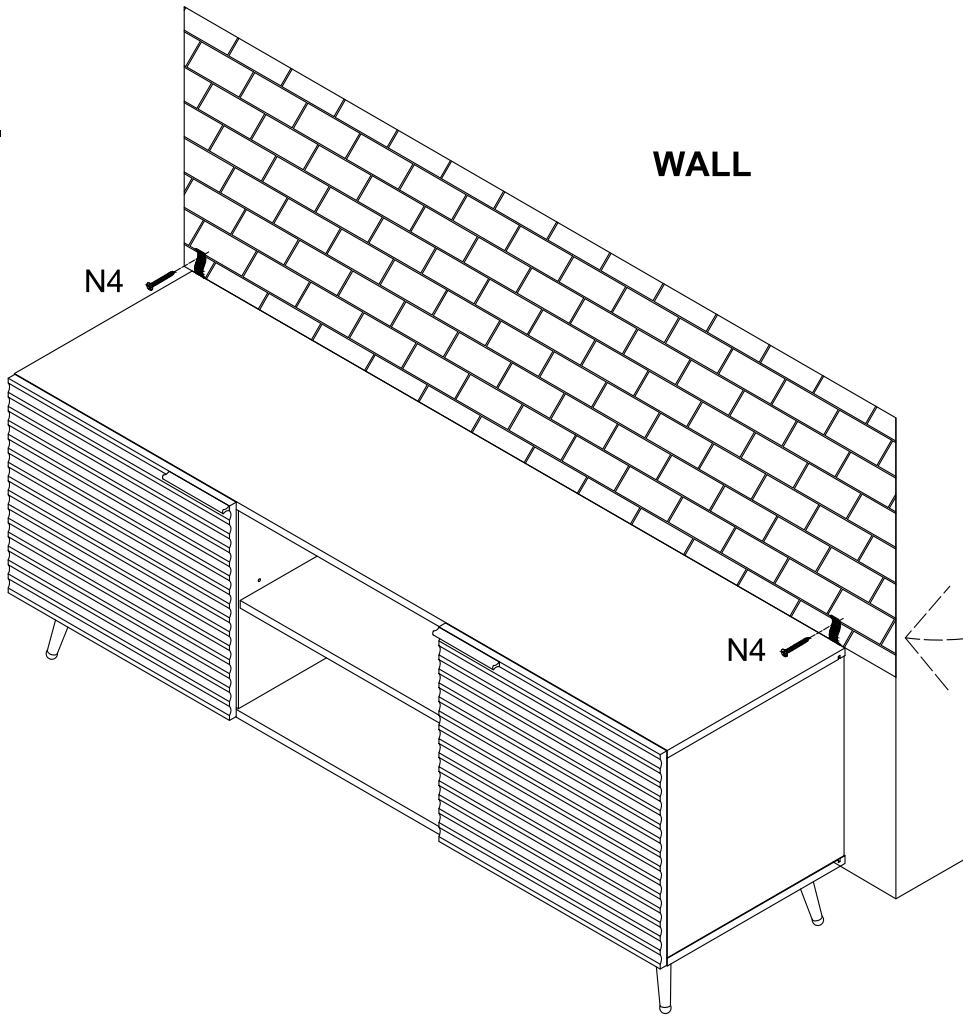


WALL



 
I x2

WALL +
drilling hole
Ø6x30mm



II x2


WALL



N-3

III x2

 15.

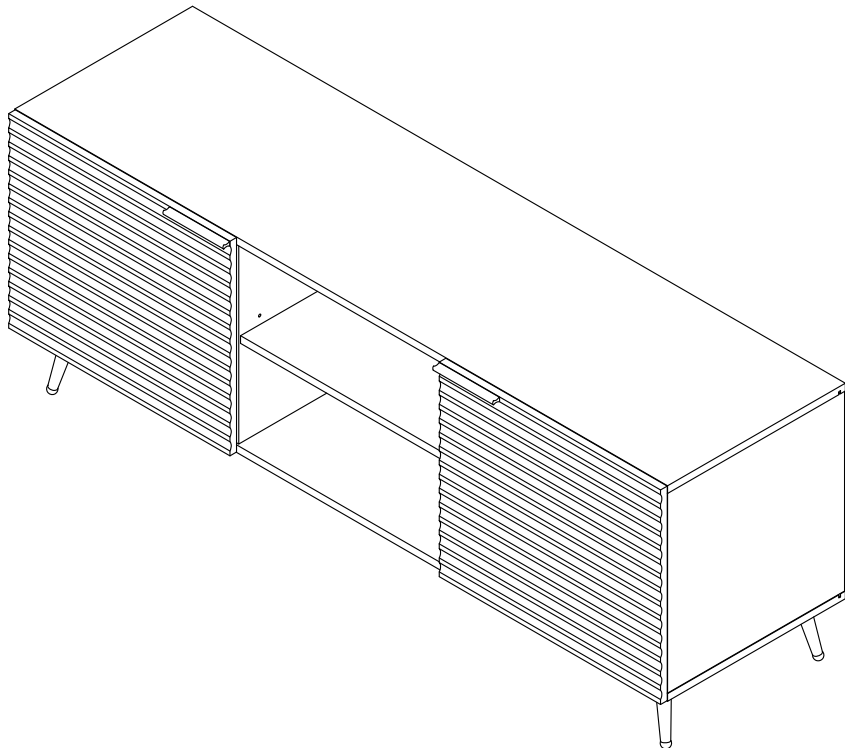

AFTER-SALE SERVICE

If you have any suggestions for our products or find that the products have quality problems, please contact us first, our after-sales team will reply you within 24 hours, and we will do our best to give you solutions until you are satisfied.